

MODEL 1100™
Autoloading Shotgun
PARTS LIST

VIEW #	PART NAME	VIEW #	PART NAME
NOTE: Parts subject to change without notice FOB Iacon, New York.			
1	Action Bar Assembly	49	Front Sight
2	Action Bar Sleeve	52	Hammer
3	Action Spring	53	Hammer Pin
4	Action Spring Hollower	54	Hammer Pin Washer
5	Action Spring Plug	55	Hammer Plunger
6	Action Spring Plug Pin	58	Hammer Spring
7	Action Spring Tube	58	Intercept Latch Release
8	Action Spring Tube Nut	59	Intercept Latch Spring
9	Action Spring Tube Nut Washer	60	Intercept Latch
10	Action Spring Tube Nut Lock Washer	61	Lock
11	Barral Assembly	62	Locking Block Assembly
12	Barral Seal	64	Magazine Tube
13	Breach Bolt	66	Magazine Follower
	Breach Bolt Assembly		Magazine Pin Locking
14	Breach Bolt Buffer	67	Magazine Spring
15	Breach Bolt Return Plunger	68	Magazine Spring Retainer
16	Breach Bolt Return Plunger Retaining Ring	69	Middle Sight
18	Butt Plate Frame	69	Operating Handle
19	Butt Plate Insert	70	Operating Handle Detent Ball
20	Butt Plate Screw (Recall Pad Not Shown)	71	Operating Handle Detent Spring
21	Carrier	73	Piston 20, 28 and 410 Ga.
22	Carrier Assembly	74	Piston Seal 20, 28 and 410 Ga.
23	Carrier Dog	74	Piston/Piston Seal Assembly 12 Ga. (Not Shown)
24	Carrier Dog Pin	75	Receiver Assembly Restrictor
25	Carrier Dog Washer	76	Receiver Plunger Retaining Pin
26	Carrier Dog Follower	76	Safety Mechanism
27	Carrier Dog Follower Spring	77	Safety Mechanism Detent Plunger
28	Carrier Latch	78	Safety Mechanism Spring
29	Carrier Latch Follower	79	Safety Mechanism Spring Retaining Pin
30	Carrier Latch Pin	80	Seal
31	Carrier Latch Spring	81	Seal Plug
32	Carrier Pivot Tube	82	Seal Spring
33	Carrier Release	83	Slide Block Buffer
35	Carrier Release Pin	84	Stock Assembly
36	Carrier Release Spring	85	Stock Bearing Plate
37	Connector, Left Restrictor	86	Trigger Restrictor
38	Connector, Right Restrictor		Trigger Assembly Restrictor
39	Disconnector	87	Trigger Pin
40	Extractor	88	Trigger Plate RH Safety Mechanism
41	Extractor Plunger		Trigger Plate LH Safety Mechanism
42	Extractor Spring		Trigger Plate Assembly RH Safety Mechanism
43	Feed Latch		Trigger Plate Assembly LH Safety Mechanism
44	Firing Pin	89	Trigger Plate Pin Bushing, Rear
45	Firing Pin Retaining Ring	90	Trigger Plate Pin Detent Spring, Front (Nose 2)
46	Firing Pin Retractor Spring		Trigger Plate Detent Spring, Rear
47	Fore-End Assembly	91	Trigger Plate Pin, Front
48	Fore-End Support Assembly	92	Trigger Plate Pin, Rear
		93	Trigger Plate Pin, Rear