

To Load the Firearm

I. TO LOAD ONE CARTRIDGE ONLY:

NOTE: The chamber should be cleaned before loading and firing the firearm the first time. Follow cleaning instructions shown on page 12.

1. Point the firearm in a safe direction.
2. Engage the safety mechanism. **RED BAND WILL NOT SHOW.**
3. Pull the operating handle fully rearward until the bolt is held open by the magazine to lower.
4. Put one cartridge of the correct caliber through the ejection port and into the chamber. See Picture 9.
5. Keep your fingers away from the ejection port and operating handle.
6. Push the bolt release to close the action.

THE FIREARM IS NOW LOADED.

II. TO LOAD THE CHAMBER AND MAGAZINE:

1. Point the firearm in a safe direction.
2. Engage the safety mechanism. **RED BAND WILL NOT SHOW.**
3. Pull the operating handle fully rearward until the action is held open by the magazine to lower.
4. Put one cartridge of the correct caliber through the ejection port and into the chamber.
5. Keep your fingers away from the ejection port and operating handle.
6. Push the bolt release to close the action.
7. Push the magazine latch forward and pull the magazine from the receiver.
8. Push one cartridge of the correct caliber one at a time into the magazine. Keep the bullets aligned toward the chamber. See Picture 10.
9. Replace the magazine into the firearm.
10. Make sure the magazine is fully latched into position.

THE CHAMBER AND MAGAZINE ARE NOW FULLY LOADED.

11. To fire the firearm, disengage the safety mechanism. **RED BAND WILL SHOW.**

THE FIREARM IS READY TO FIRE.


12. The firearm will fire each time the trigger is pulled until the magazine and chamber are empty.

WARNING: Always check the chamber and magazine before loading the firearm.


To Unload the Firearm

1. Point the firearm in a safe direction.
2. Engage the safety mechanism. **RED BAND WILL NOT SHOW.**
3. Push the magazine latch forward and pull the magazine from the firearm.
4. Pull the operating handle forward to remove the cartridge from the chamber.
5. Remove the cartridge from the magazine. See Picture 11.
6. Replace the magazine and open the action.


WARNING: Check the chamber and magazine before loading the firearm. Do not load the magazine with more than one cartridge at a time.

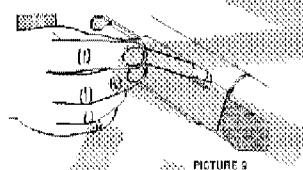

PICTURE 9

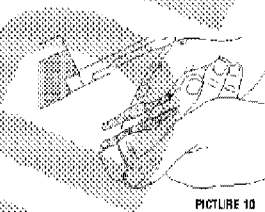

PICTURE 10

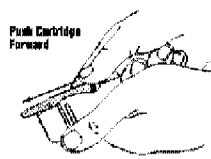

PICTURE 11