

To Adjust the Sights



All models with sights are
adjusted at the factory to hit
a target at 100 yards.


TO ADJUST THE REAR SIGHT:

For elevation (up and down adjustments) and windage (left and right adjustments), move the rear sight in the same direction as you need to move the bullet on the target. See Picture 12.

NOTE: For more information on the sights and the factory, see the REMINGTON® catalog.

TELESCOPIC SIGHTS:

The top of the receiver has holes for the installation of telescopic sights.

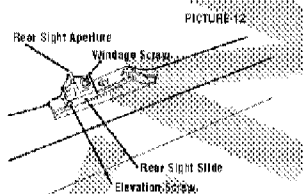

PICTURE 12

Lubrication and Maintenance

NOTE: The chamber should be cleaned before loading and firing the firearm. For this time, follow cleaning instructions shown on page 11.



Over lubrication should be avoided at all times. A thin coat of Rem® Oil is needed to provide the protection by rusting. See note below.

When the firearm is to be stored, it should be carefully cleaned and thoroughly dried. Outside surfaces should be wiped with a light coat of Rem® Oil for protection.

When the firearm is to be stored, all excess lubrication must be removed. The chamber and bore must be thoroughly wiped dry.

NOTE: Remington® Rem® Oil is available for many local dealers. Your dealer is not stocked as a firm order from Remington® Remington® distributor.

POSITION ON TARGET	ADJUSTMENTS
	a. Loosen the elevation screw on the rear sight. b. Slide the rear sight down the dovetail on the receiver. c. Tighten the elevation screw.
	a. Loosen the elevation screw on the rear sight. b. Slide the rear sight up the dovetail on the receiver. c. Tighten the elevation screw.
	a. Loosen the windage screw on the rear sight. b. Slide the rear sight aperture to the right. c. Tighten the windage screw.
	a. Loosen the windage screw on the rear sight. b. Slide the rear sight aperture to the left. c. Tighten the windage screw.

TO CLEAN THE BARREL:

WARNING: Check the chamber and magazine to make sure there are no rounds in the firearm.

1. Use the instructions and the equipment provided for good cleaning. For recommendations, see your Remington Authorized Gunsmith.
2. Select the correct caliber cleaning brush and attach the brush to the cleaning rod.
3. Put the cleaning brush into the gun cleaning solvent.
4. Push the cleaning brush through the barrel several times.

NOTE: Always clean the barrel from the breech to the chamber.

5. Remove the brush from the rod. Attach tip with correct size cleaning patch and push through the bore.
6. Repeat several times using a new cleaning patch each time until the patch is not dirty.
7. Push a clean patch saturated with Rem® Oil through the barrel.
8. Push a clean, dry patch through the barrel to remove excess lubricant.
9. Apply a thin coat of Rem® Oil to the outside of the barrel with a soft, clean cloth.

WARNING: After cleaning, inspect the barrel to be clean and dry.