

To Load the Firearm

I. TO LOAD ONE CARTRIDGE ONLY:

1. Point the firearm in a safe direction.
2. Engage the safety mechanism. **RED BAND WILL NOT SHOW.**
3. Pull the fore-end fully rearward to open the action.
4. Put one cartridge of the correct caliber through the ejection port and into the chamber. See Picture 9.
5. Push the fore-end forward to close the action.

THE FIREARM IS NOW LOADED.

II. TO LOAD THE CHAMBER AND MAGAZINE:

1. Point the firearm in a safe direction.
2. Engage the safety mechanism. **RED BAND WILL NOT SHOW.**
3. Pull the fore-end fully rearward to open the action.
4. Put one cartridge of the correct caliber through the ejection port and into the chamber.
5. Push the fore-end forward to close the action.
6. Push the magazine latch forward and pull the magazine from the receiver.
7. Push four cartridges of the correct caliber one at a time into the magazine. Keep the bullets aligned toward the chamber. See Picture 10.
8. Replace the magazine into the firearm.
9. Make sure the magazine is fully latched into position.

THE CHAMBER AND MAGAZINE ARE NOW FULLY LOADED.

10. To fire the firearm disengage the safety mechanism. **RED BAND WILL SHOW.**


THE FIREARM IS READY TO FIRE.

WARNING: Always check the chamber for the correct caliber before loading the firearm.


To Unload the Firearm

1. Point the firearm in a safe direction.
2. Engage the safety mechanism. **RED BAND WILL NOT SHOW.**
3. Push the magazine latch forward and pull the magazine from the firearm.
4. Pull the fore-end slowly rearward so the tip of the shell is even with the ejection port.
5. Lift the front of the shell outward and remove from the ejection port.
6. Remove the cartridges from the magazine. See Picture 11.
7. Replace the magazine and close the action.


WARNING: Check the chamber and magazine magazine there are no cartridges in the firearm.

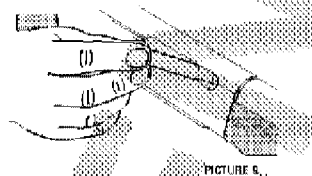

PICTURE 9

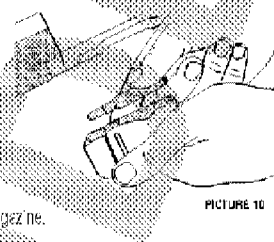

PICTURE 10

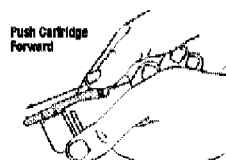

PICTURE 11