

To Adjust the Sights



All models with sights are
shipped at the factory to hit
a target at 100 yards.


TO ADJUST THE REAR SIGHT:

For elevation (up and down adjustments) and windage (left and right adjustments), move the rear sight in the same direction as you need to move the bullet on the target. See Picture 12.

NOTE: For more information on ballistics and trajectory, see the HMMG LOMP catalog.

TELESCOPIC SIGHTS:

The top of the receiver has holes for the installation of telescopic sights.

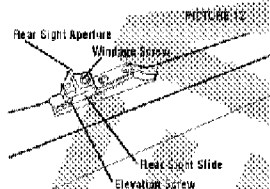

Lubrication and Maintenance

NOTE: The chamber should be cleaned before loading and firing the firearm the first time. Follow cleaning instructions shown on page 12.



Gun lubrication should be avoided as often as the coat of Rem-UMC is needed to prevent the possibility of rusting. See note below.

When the firearm is to be stored, it should be carefully cleaned and thoroughly dried. Outside surfaces should be wiped with a light coat of Rem-UMC occasionally.

When the firearm is to be used, all excess lubrication must be removed. The chamber and bore must be thoroughly wiped dry.

NOTE: Remington Rem-UMC is available from your local dealer or local dealer. Ask for Remington Rem-UMC or Remington Rem-UMC.

POSITION ON TARGET	ADJUSTMENTS
Bullets hit above the center.	- Loosen the elevation screw on the rear sight. - Slide the rear sight down (downward on the ramp). - Tighten the elevation screw.
Bullets hit below the center.	- Loosen the elevation screw on the rear sight. - Slide the rear sight up (upward on the ramp). - Tighten the elevation screw.
Bullets hit to the left.	- Loosen the windage screw on the rear sight. - Slide the rear sight aperture to the right. - Tighten the windage screw.
Bullets hit to the right.	- Loosen the windage screw on the rear sight. - Slide the rear sight aperture to the left. - Tighten the windage screw.

TO CLEAN THE BARREL:

WARNING: Check the chamber and magazine make sure there are no rounds in the firearm.

1. Use the instructions and the equipment provided for the cleaning kit. For recommendations, see your Remington Authorized Gunsmith.
2. Select the correct caliber cleaning brush and attach the brush to the cleaning rod.
3. Put the cleaning brush into the gun cleaning solvent.
4. Push the cleaning brush through the barrel several times.

NOTE: Always clean the barrel from the muzzle to the chamber.

5. Remove the brush from the rod. Attach tip with correct size cleaning patch and push through the bore.
6. Repeat several times using a new cleaning patch each time until the patch is not dirty.
7. Push a clean patch saturated with Rem-UMC through the barrel.
8. Push a clean, dry patch through the barrel so there are no grooves in the bore.
9. Apply a thin coat of Rem-UMC to the outside of the barrel with a soft, clean cloth.

WARNING: After cleaning, make sure the barrel is free of all cleaning.