


## To Unload The Firearm

1. Point the firearm in a safe direction.
2. Put the safety mechanism in the "ON" or "SAFE" position.
3. Pull the magazine catch rearward and remove the magazine from the firearm.
4. Pull the operating handle rearward to move the cartridge remaining in the chamber. Visually check the chamber to make sure it is empty.
5. Holding the magazine separate and apart from the firearm, slide the top cartridge forward and out of the magazine. Repeat until the magazine is completely empty. See Picture 10.
6. Replace the empty magazine in the rifle and pull the operating handle rearward to ensure it is locked open. Visually check the chamber to make sure it is empty.

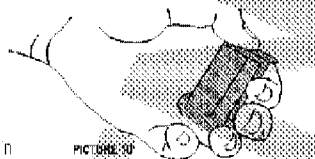

PICTURE: 90

**WARNING:** Visually check the chamber and receiver to make sure the chamber and magazine are completely empty. Make sure the safety mechanism is still in the "ON" or "SAFE" position.

WARNING: NEVER assume your rifle is unloaded to justify careless handling. Always maintain the direction of the muzzle of your rifle, even if you think it is completely unloaded.

## To Adjust Sights




All records will signify the  
 completed in the history of the  
 nation of the world.

**WARNING!** Before adjusting the sight, make sure the rifle is completely unloaded and put the safety mechanism in the "OFF" or "SAFE" position.

**TO ADJUST THE REAR SIGHT:**

For elevation (up and down adjustments) and windage (left and right adjustments), move the rear sight in the same direction as you need to move the bullet on the target.

**NOTE:** For more on ballistics and trajectory, see the REMINGTON® catalog.

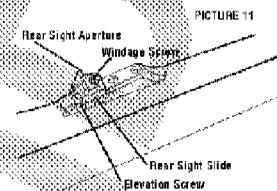

3. PICTURE 1

**TELESCOPIC SIGHTS:**

The top of the Model 597™ receiver\* has a scope rail and threaded holes for the installation of telescopic sights.

| POSITION ON TARGET                                                                                                       | ADJUSTMENTS                                                                                                                                                                                      |
|--------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  <p>Target hits above the center.</p> | <ol style="list-style-type: none"> <li>Loosen the windage screw on the rear sight.</li> <li>Slide the rear sight down (backwards) in the range.</li> <li>Tighten the elevation screw.</li> </ol> |
|  <p>Target hits below the center.</p> | <ol style="list-style-type: none"> <li>Loosen the elevation screw on the rear sight.</li> <li>Slide the rear sight up (forward) on the base.</li> <li>Tighten the elevation screw.</li> </ol>    |
|  <p>Target hits to the right.</p>     | <ol style="list-style-type: none"> <li>Loosen the windage screw on the rear sight.</li> <li>Slide the rear sight aperture to the right.</li> <li>Tighten the windage screw.</li> </ol>           |
|  <p>Target hits to the left.</p>      | <ol style="list-style-type: none"> <li>Loosen the windage screw on the rear sight.</li> <li>Slide the rear sight aperture to the left.</li> <li>Tighten the windage screw.</li> </ol>            |

## Cleaning, Lubrication and Maintenance

**WARNING:** Before drinking, make sure your rifle is properly chambered (both the chamber and the magazine) and on the safety, not in the "ON" or "SAFE" position.

[illegible]

**NOTE:** The chamber and bore should be cleaned before loading and firing the firearm the first time.