

TELESCOPIC SIGHTS:

The top of the receiver has holes for the installation of telescopic sights.

Lubrication and Maintenance

After the firearm is stored, it should be carefully cleaned and thoroughly dried. Critical surfaces should be wiped with a light coat of Rem™ Oil occasionally. When the firearm is to be reused, all excess lubrication must be removed. The firearm and bore must be thoroughly wiped dry.

NOTE: Remington® Rem™ Oil is available from your local dealer. If your dealer is not a stockist, ask him to order Rem™ Oil from the Remington Company.

To Clean the Barrel

WARNING! Check the chamber and magazine to make sure there are no cartridges in the firearm.

1. Use the equipment provided in a good cleaning kit. For recommendeds, see your REMINGTON AUTHORIZED GUNSMITH.
2. Remove the bolt assembly. See the instructions on page 9.
3. Select the correct caliber cleaning brush and attach the brush to the cleaning rod.
4. Put the cleaning brush into the gun cleaning solvent.

NOTE: Barrel should lay horizontally with the ejection port facing down during cleaning. Always clean the barrel from the chamber end to the muzzle.

5. Push the cleaning brush through the barrel several times.
6. Remove brush from rod, attach it with patch, and push the patch down.
7. Repeat several times, using a new cleaning patch each time, until the patch is so dirty.
8. Push a clean patch saturated with Rem™ Oil through the barrel.
9. Push a clean dry patch through the barrel to remove excess lubricant.
10. Apply a thin coat of Rem™ Oil to the outside of the barrel with a clean cloth.
11. After cleaning the barrel, clean the receiver and the trigger assembly.

WARNING! This firearm should be cleaned and stored in a secure place. The Remington Arms Company, Inc. is a REMINGTON-UMC COMPANY. This will assure you will be safe and secure. The Remington Arms Company, Inc. is a REMINGTON-UMC COMPANY.

To Clean the Receiver and Trigger Assembly

1. Put the safety mechanism in the "S" position.
2. Remove the bolt assembly. See instructions on page 9.
3. Turn the rifle upside down.
4. Remove the stock screws. See Picture 16.
5. Lift the stock away from the receiver and trigger assembly.

MODELS WITHOUT A FLOOR PLATE ONLY:

Remove the magazine spring and to lower from the receiver.

NOTE: Clean and lubricate the receiver and trigger assembly frequently. Do not remove the trigger assembly from the receiver.

6. Thoroughly spray the receiver inside and out with Rem™ Action Cleaner and allow to dry.
7. Thoroughly spray inside the trigger assembly at the trigger points specified in Picture 17 with Rem Action Cleaner.
8. Place the safety in the fire "F" position. Pull the trigger rearward and release multiple times.
9. Pull and hold the trigger rearward. Then, using a small pin or screwdriver depress the sear (Lubrication Point) in Picture 17 or page 13) and release multiple times.
10. Release the trigger and operate the safety from the fire "F" to the safe "S" position multiple times.

POSITION IN PICTURE	ADJUSTMENTS
 Bullets hit above the center.	a. Loosen the elevation screw on the rear sight. b. Slide the rear sight down (downward or clockwise) to the center. c. Tighten the elevation screw.
 Bullets hit below the center.	a. Loosen the elevation screw on the rear sight. b. Slide the rear sight up (upward or counter-clockwise) to the center. c. Tighten the elevation screw.
 Bullets hit to the left.	a. Loosen the windage screw on the rear sight. b. Slide the rear sight left (leftward or counter-clockwise) to the center. c. Tighten the windage screw.
 Bullets hit to the right.	a. Loosen the windage screw on the rear sight. b. Slide the rear sight right (rightward or clockwise) to the center. c. Tighten the windage screw.

PICTURE 16

 
MODEL 700™



SCREWS



SCREWS



MODEL SEVEN™

SCREWS