

Cleaning Frequency

1. Before and after long term storage.
2. When the rifle has been subjected to adverse conditions such as shooting in the rain, snow, sleet, or seawater areas.
3. When the rifle is exposed to dirty conditions such as lying on the ground outdoors, being dropped in mud, etc.

NOTE: While the Model 700™ and Model Seven™ Stainless Synthetic Rifle have been designed and manufactured to provide improved corrosion protection, only proper care will keep your firearm in good operating condition and maintain its appearance. After extensive use, the protective coating on plated parts may be worn sufficiently to reduce corrosion protection. Stalled worn parts should be replaced to assure the integrity of the corrosion protection.

WARNING: After each use, follow the lubrication and maintenance directions on the instruction booklet. If the firearm is immersed in water, it must be thoroughly cleaned and lubricated as soon as possible. In the case of a water immersion, first flush all parts with fresh water and dry, clean and lubricate the firearm. Do not use a firearm that has not been properly lubricated by a REMINGTON® BARBER® REMINGTON-GARMIN® firearm lubricant. Failure to follow this warning may lead to firearm malfunctions which could result in serious personal injury or death.


Instructions for Cleaning the Bolt Assembly

TO DISASSEMBLE THE BOLT ASSEMBLY:

1. Remove the bolt assembly from the firearm. See instructions on page 8.
2. *For Models 700 and Seven:* Put the notch on the firing pin head over a metal edge. Pull the bolt assembly away from the firing pin. Pull a coin into the slot near the back edge of the firing pin head. See Picture 18. *For Model 710™:* Rotate bolt plug clockwise 1/8th of a turn and remove the firing pin head assembly. **Note:** When the firing pin is removed from the bolt assembly, the bolt head pin can be removed and the bolt head and bolt body can be separated. Skip step 3 and go directly to step 4 and 5.
3. Hold the bolt assembly and turn the bolt plug counter-clockwise until the firing pin assembly can be removed from the bolt assembly.

CAUTION: Clean the firing pin assembly as a unit.

4. Clean all parts with gun cleaning solvent. Dry with a clean cloth.
5. Apply a thin coat of Rem® Oil.

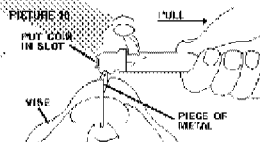

TO ASSEMBLE:

1. *For Models 700 and Seven:* Put the firing pin assembly into the rear of the bolt assembly. *For Model 710:* Assemble the bolt head to the bolt body and insert the bolt head pin. If assembled correctly, the bolt handle will be 180 degrees from the selector, as viewed from the front.
2. *For Models 700 and Seven:* Tighten the bolt plug to the bolt assembly with your hand. *For Model 710:* Put the firing pin assembly into the rear of the bolt assembly, aligning the firing pin head to the right of the small notch in the bolt body. See Picture 19.
3. *For Models 700 and Seven:* Pull the firing pin head into the slot in the firing pin head. *For Model 710:* Press the bolt plug into the bolt body and rotate counter-clockwise until the firing pin head engages the small notch in the bolt body. See Picture 20.
4. *For Models 700 and Seven:* Turn the bolt plug until the firing pin head goes into the small notch on the rear rim of the bolt. The bolt is now cocked. See Picture 21.

NOTE: *For Models 700 and Seven:* The bolt must be cocked to be assembled into the rifle.

For Model 710: If bolt assembly does not align with receiver, disassemble the bolt assembly, rotate the bolt head 180 degrees and reassemble.

5. *For Models 700 and Seven:* Assemble the bolt assembly into the rifle. See instructions on pages 8 and 9.

