>> To UNLOAD the firearm:

- 1. Point the firearm in a safe direction.
- 2. Engage the safety mechanism. The red band will not show.
- 3. Push the magazine latch forward and pull the magazine from the firearm.
- 4. Pull the operating handle rearward to remove the cartridge from the chamber.
- 5. Remove the cartridges from the magazine.
- 6. Replace the magazine and open the action.

Pump action

>> To LOAD: the chamber and magazine:

- 1. Point the firearm in a safe direction.
- 2. Engage the safety mechanism. The red band will not show.
- 3. Pull the fore-end fully rearward to open the action.
- 4. Put one cartridge of the correct caliber through the ejection port and into the chamber.
- 5. Push the fore-end forward to close the action.
- 6. Push the magazine latch forward and pull the magazine from the receiver
- 7. Push four cartridges of the correct caliber one at a time into the magezine. Keep the bullets aligned toward the chamber.
- 8. Replace the magazine into the firearm.
- 9. Make sure the magazine is fully latched into postion.
- 10. To fire the firearm disengage the safety mechanism. The red band will now be showing.

>> To UNLOAD the firearm:

- 1. Point the firearm in a safe direction.
- 2. Engage the safety mechanism. The red band will not show.
- 3. Push the magazine latch forward and pull the magazine from the firearm.
- 4. Pull the fore-end slowly rearward until the front of the shell is even with the ejection
- 5. Lift the front of the shell outward and remove from the ejection port.
- 6. Remove the cartridges from the magazine.
- 7. Replace the magazine and open the action

Lever Action

Formatted: Font: Bold, Underline Formatted: Bullets and Numbering

- Point the firearm in a safe cirection
- Engage the safety mechanism
- 3. Push cartridges of the correct callber, one at a time, into the magazine until it is fully loaded. (Note: only use round head bullets in the tube magazines, as the use of pointed bullets can cause the ignition of rounds in the magazine.

 4. Open and close the action lever and cycle a cartridge into the receiver.
- To fire the firearm disengage the safety.

Additional Features

ExtronX