

10. Reassemble the gun carefully, without forcing anything, and wipe all metal surface with Rem Oil. Wipe to remove fingerprints and leave a light oil film for rust prevention.

**ATTACHMENT C**

**Notice:**

Due to the changes in the trigger assembly now installed on your firearm, it will no longer be necessary for you to put the safety switch in the "F" position to unload the rifle. However, you still need to follow common safety rules while loading or unloading your rifle, including keeping your rifle pointed in a safe direction at all times.