


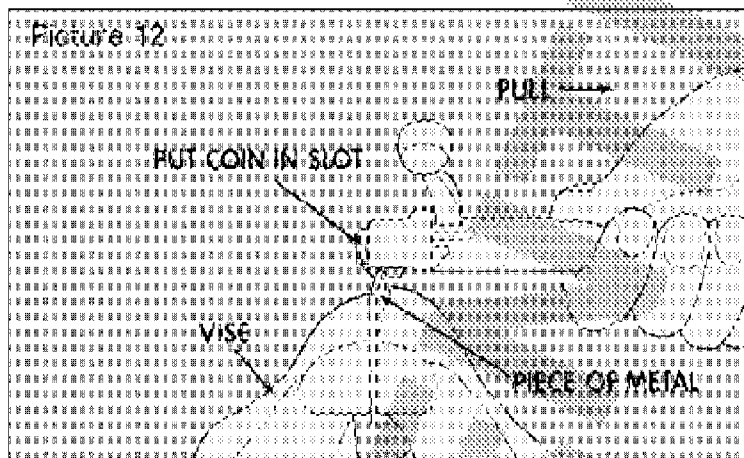

Bolt Cleaning Procedures:

CAUTION: Clean the firing pin assembly as a unit. Do not disassemble firing pin assembly.

Clean firing pin assembly and bolt body with one or two sprays of **Remington Nitro CLP**, or **Rem-Action Cleaner** (sold separately) along with Nylon Brush. Make sure to clean the bolt face, locking lugs and extractor. Wipe away residues with a soft, clean, lint free cloth. In warm weather: apply a thin coat of Rem Oil to firing pin assembly. In cold weather (below 32° F.): apply a thin coat of Remington Nitro CLP to firing pin assembly. With Nitro CLP, no other lubrication will be necessary. When using **Rem-Action Cleaner**, a SMALL amount of **Rem-Oil**, can be applied to firing pin spring.

Instructions for Bolt Re-assembly:

Screw bolt body back onto the firing pin assembly. Align the firing pin head with the SMALL notch in the rear of the bolt body. Release the Bolt Disassembly Tool or pull coin from slot if not using the Bolt Disassembly Tool. (See Diagram Below)