

TO REMOVE THE BOLT ASSEMBLY:

1. Point the firearm in a safe direction.
2. Put the safety in the "S" position. **WITHOUT TOUCHING THE TRIGGER WHILE MOVING THE SAFETY.**
3. Raise the bolt handle to open the bolt.
4. Check to be sure there is no percussion cap or percussion cap residue on the nipple and there is no charge in the barrel. See instructions on using the ramrod to check for a charge in the barrel on page 4.

WARNING: If there is a charge in the barrel, do not attempt to remove it by shooting it out if you are unsure what the charge is or if you are unsure if the charge is safe. Instead, remove the charge using the instructions on page 23.

5. Remove the bolt stop screw from the receiver. **Never attempt to remove the bolt stop screw with the bolt handle down.**
6. Slide the bolt out of the receiver.

THE TRIGGER ASSEMBLY:

Pulling the trigger fires the firearm.

The trigger is adjusted at the factory. All adjustments to the trigger must be made by the factory or a REMINGTON RECOMMENDED GUNSMITH.

WARNING: NEVER remove the trigger mechanism, or make adjustments to the trigger or trigger assembly.

WARNING: NEVER put your finger on the trigger unless you are going to fire the firearm.

THE BARREL

The inside of the barrel must be clean and free of obstructions.

1. TO CHECK THE INSIDE OF THE BARREL:

1. Point the firearm in a safe direction.
2. Put the safety in the "S" position.
3. Check to be sure there is no percussion cap or percussion cap residue on the nipple and there is no charge in the barrel. See instructions on using the ramrod to check for a charge in the barrel on page 4.