

FC	Fails to connect												
FCB	Fore-end cracked or broken												
FD	Follows-down												
FF	Fails to fire												
FFM	Fails to feed from magazine												
FFP	Fiat firing pin												
FOS	Fires on safe												
FSR	Fires when safe is released												
GCSO	Gas cyl shot off												
GRSO	Guide ring shot off												
HPA	High pressure ammo												
HUE	Hard under extractor		1										
ILOP	Int. latch out of position												
ILRM	Int. latch ret. Missing												
ILSB	Int. latch stud broken												
ILSP	Int. latch spring out of position												
JL	Jumps latch												
JO	Jars off												
LB	Light blow												
MCSO	Magazine cap shot off												
MCW	Magazine capacity wrong												
MFA	Misfires (ammo)												
MFOP	Magazine follower out of position												
MLH	Magazine loads hard												
OH	Opens hard												
PH	Pulls hard												
PSI	Proof stamp illegible												