

TORQUE SCOPE MOUNTING SCREWS				TORQUE SCOPE MOUNTING SCREWS		
GUN #	START TEST FRONT SCREW	START TEST REAR SCREW		GUN #	END TEST FRONT SCREW	END TEST REAR SCREW
A-1	30 INCH LBS.	30 INCH LBS.		A-1	10 INCH LBS.	15 INCH LBS.
A-2	30 INCH LBS.	30 INCH LBS.		A-2	0 INCH LBS.	5 INCH LBS.
A-3	30 INCH LBS.	30 INCH LBS.		A-3	14 INCH LBS.	18 INCH LBS.
A-4	30 INCH LBS.	30 INCH LBS.		A-4	115 INCH LBS.	11 INCH LBS.
A-5	30 INCH LBS.	30 INCH LBS.		A-5	19 INCH LBS.	10 INCH LBS.
A-6				A-6		
A-7				A-7		
A-8				A-8		
A-9				A-9		
A-10				A-10		
GUN #	START TEST FRONT SCREW	START TEST REAR SCREW		GUN #	END TEST FRONT SCREW	END TEST REAR SCREW
B-1				B-1		
B-2				B-2		
B-3				B-3		
B-4				B-4		
B-5				B-5		
B-6				B-6		
B-7				B-7		
B-8				B-8		
B-9				B-9		
B-10				B-10		