TLW	<u> 0010 AT</u>
Project No.	241095

EXTENDED	IAR.	OFF	<b>TFST</b>	ING
·LAILIULL	, adis-	VI I	ILUI	$\mathbf{H}\mathbf{V}$

EXTENDED JAR-OFF TESTING				
			<u> </u>	
G-WN Eironontrol No. B-24 F	Firecontrol Type:	standard	Date:	
Dry Cycles/Rounds Completed:	Stock Type	SVN.	Engagement at S	tart , 0 2 0 1
Model No. 110 Serial No	<u> 71001035</u>		_ Engagement at E	nd <u>0339</u>
Trigger Pull at Start of Test (1)	$(2) \qquad (3)$	(4)	(5)	
Average Trigger Pull at Start of Test:	<u>4,08</u> Std. D	ev. of Trigger Pi	ill at Start of Test:	
Average Trigger Pull at End of Test	(2)(3) <b>L</b>	)ev of Trigger P	ull at End of Test:	(o)
Trigger Pull at End of Test: (1) (2) (3) (4) (5) (6)  Average Trigger Pull at End of Test: 4, 93 Std. Dev. of Trigger Pull at End of Test:  Tester Initials: 5w / Jw  Additional Notes and Comments  Specifications for Extended Jar Off Test  Jar-Off Test: 6, 18, 24 & 48-inch drop onto think 85 durameter (Shore A Rubber Matt Firearm residy to fire, Safe in "Fire" position, Fresh Primad Case in Chamber, Magazine loaded to capacity with Dummy Rounds. After each drop, fire Primed Case to verify firearm will still function.  all drops (safety in "Fire" position) - one drop per orientation.  Note for Firearms with the ISS system installed – The ISS will be set in the unlocked				
position for all six orientations of the Jar-Off Test				
' <u>6 INC</u>	<u>'H EXTENDED J.</u>	ARR- OFF TES	<u>T</u>	
O <u>rientation</u> ISS	Unlocked	C	omments	
Barrel Vertical, Muzzle Up:	Pass Fail			
Barrel Vertical, Muzzle Down:	Pass Fail			
Barrel Horizontal, Left side of Stock Up:	Pass Fail _			
Barrel Horizontal, Right side of Stock Up:	Pass V Fail			
Barrel Horizontal, Bottom of Stock Up:	Pass / Fail			
Barrel Horizontal, Bottom of Stock Down:		Fired	primed	case
			Z101\DROF	Page 1 of 2 PTEST_REV3.DOC

ET07225

## TLW <u>0010AT</u> Project No. <u>341095</u>

R	_	a	L
1. 1		1.7	

## **EXTENDED JAR-OFF TESTING**

: <u>18 INC</u>	H EXTENI	DED JARR-	OFF TEST
O <u>rientation</u> ISS	Unlocked	v.,	Comments
Barrel Vertical, Muzzle Up:	Pass	Fail	
Barrel Vertical, Muzzle Down:	Pass	Fail:	
Barrel Horizontal, Left side of Stock Up:	Pass	Fail	
Barrel Horizontal, Right side of Stock Up:	Pass \square		
Barrel Horizontal, Bottom of Stock Up:	Pass	Fail	
Barrel Horizontal, Bottom of Stock Down:	Pass	Fail	transfer Fred Primed Core
4			
<u>24 INC</u>	H EXTEN	DED JARR-	· OFF TEST
Orientation ISS	Unlocked		Comments
Barrel Vertical, Muzzle Up:	Pass	Fail	
Barrel Vertical, Muzzle Down:	Pass	Fath	
Barrel Horizontal, Left side of Stock Up:	Pass	Fail	
Barrel Horizontal, Right side of Stock Up;	Pass 🗸	Fa <b>H</b>	
Barrel Horizontal, Bottom of Stock Up:	Pass /	Fail	
Barrel Horizontal, Bottom of Stock Down:	Pass /	Fail	Fired Primed Case
48 INC	<u>CH EXTEN</u>	DED JARR	- OFF TEST
O <u>rtentation</u> ISS	Unlocked		Comments
Barrel Vertical, Muzzle Up:	Pass	Fail	
Barrel Vertical, Muzzle Down:	Pass	Fail	•
Barrel Horizontal, Left side of Stock Up:	Pass		
Barrel Horizontal, Right side of Stock Up:	Pass _		
Barrel Horizontal, Bottom of Stock Up:	Pass	Fail	
Barrel Horizontal, Bottom of Stock Down:	Pass	Fail	Gun Fired - Trigger sear

Page 2 of 2 Z101\DROPTEST\_REV3.DOC