

CONFIDENTIAL

Remington Arms Company Inc.
RESEARCH & DEVELOPMENT TECHNICAL CENTER
315 WEST RING ROAD

- Carefully remove the rifle from the holding device and with the muzzle pointed in a safe direction, pull the trigger, the rifle must discharge. Extract the shell case.
- Using the plug gauges measure the minimum clearance between the rear of the trigger and the inside rear of the trigger guard.
- Measure the trigger pull, engagement and over-travel to insure that they have not changed from the beginning of the test.

Data required:

- Rifle serial number
- Measurements of Trigger pull, engagement, over-travel and trigger/trigger guard clearance before and after loading.
- Note that the rifle "fired" or did not fire when the safety was pushed to the "Fire" position.
- Note that the rifle did "fire" when the trigger was pulled.

J.R.Snedeker
TLW 0683

Page 18 of 41
Remington Confidential

05/24/06

Revision # 1.1

Subject to Protective Order - Williams v. Remington

BARBER - 5.30.06R0001482

ETE00001481