

Remington Confidential

face. Move the brass rod around to insure that you are on the bolt face and not on the edge of the ejector or extractor.

- Carefully mark the brass rod where it is even with the edge of the muzzle
- Remove the rod and measure the length.

Data Required:

- Rifle serial number
- Measurement of barrel lengths in inches.

TLW0010R - Length of Pull:

Length of Pull – the distance from the center of the butt plate (from center of top (i.e. heel) to center of bottom (i.e. toe)), to the inside curve of the trigger. Measurements are taken for information only.

Method:

- With muzzle of rifle pointed down and barrel clamped securely in holding device
- Located the center of the distance, top to bottom of the butt pad and mark pad or butt plate
- Measure to the inside curve of the trigger (at the front)

Data Required:

- Rifle serial number
- Length of Pull measurements