

<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>7015</b>
	<b>Total Rejected:</b>	<b>568</b>
	<b>Overall Reject Rate:</b>	<b>8.10</b>

<b>Proof</b>	Shot:	1506	933	1572	521	1137	234	30
	Rejected:	7	4	13	6	0	6	2
	Percent:	0.5	0.4	0.8	1.2	0.0	2.6	6.7
<b>Test</b>	Shot:	1482	753	1831	746	1005	186	5
	Rejected:	78	78	87	63	54	7	0
	Percent:	5.3	10.4	4.8	8.4	5.4	3.8	0.0
<b>Target</b>	Shot:	144	67	133	78	89	160	
	Rejected:	0	0	0	0	0	2	0
	Percent:	0.0	0.0	0.0	0.0	0.0	1.3	

CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7
AB	Action binds							
BABS	Bulge at body shoulder							
BAC	Burr at chamber	1	2		8	2		
BBMA	BBL-to-bolt misalignment							
BB	Bolt binds/catches	6	8	35	14	11		
BCOBS	Bolt catches on bolt stop							
BCOF	Bolt catches on follower							
BC	Blows cases							
BHR	Bolt hits receiver							
BHS	Bolt plug hits safety switch							
BLOP	Bar lock or disconnecter out of position							
BLSO	Barrel lug shot off							
BPO	Bolt pulls out							
BSSM	Bolt stems shell in magazine							
BWCD	Bolt won't cam down							
BWCFM	Bolt won't close over full magazine					2		
CD	Case dented							

CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7
CH	Closes hard	1	1	5	2	5	2	
CLM	Can't load magazine							
CO	Cut-off							
CR	Cuts rim							
CS	Cases swell							
CTOG	Chamber torn or gouged							
CTP	Creepy trigger pull							
CWSB	Cams wrong side of action bar							
DBB	Doesn't blow back							
DCS	Double click in safety switch							
DCT	Double click in trigger							
DCU	Doesn't close-up							
DE	Doesn't eject	3	21			2	1	
DEL	Doesn't eject live round	6			1	1		
DFB	Doesn't feed back							
DFU	Doesn't feed up							
DLO	Doesn't lock open (after last shell)							
DLU	Doesn't lock-up							
DS	Dead safe	2	2	8	2	2		
DX	Doesn't extract	1			1			
DXL	Doesn't extract live round							
EDS	Extractor drops shell	15	2	1	1	2		
ESB	Ejector sticks back	1		1		1		
ESCR	Empty shell catches receiver							
ESS	Extractor stems shell							
FA	Fires automatically							
FB	Follower binds							

CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7
FC	Fails to connect							
FCB	Fore-end cracked or broken							
FD	Follows down		1					
FF	Fails to fire	1			1			
FFP	Flat firing pin							
FOS	Fires on safe							
FPHB	Firing pin hits bbl							
FPHI	Firing pin hits inside rim							
FPO	Floor plate opens	3	20	3	7	3	3	
FPOH	Floor plate opens hard							
FSR	Fires when safe is released							
FT	Follower tips	2	1	1	2			
GCSO	Gas cyl shot off							
HBL	Heavy bolt lift		4	5	3	1		
HMSC	Heading mismatch-steps on case							
HPA	High pressure ammo							
HUR	Hard under rail			1				
JCS	Jumps cartridge							
JM	Jumps magazine	2	2					
JO	Jars off							
LB	Light blow							
MAH	Magazine assembles hard							
MCW	Magazine capacity wrong							
MFA	Misfires (ammo)							
MFOP	Magazine follower out of position							
ML	Magazine loose							
MLH	Magazine loads hard							

CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7
MRH	Magazine removes hard							
OH	Opens hard	1		7				
OR	Over-rides	15	2	3		3	1	
PH	Pulls hard							
PSI	Proof stamp illegible							
PSM	Proof stamp missing							
RBOC	Rings and bulges on case	1						
RDW	(Action) release doesn't work							
RIC	Rings in chamber	2	1		8			
RIS	Ring in sholder							
RS	Rim srem							
SBC	Stems bottom chambers	2		2				
SBE	Stems bbl extension							
SCB	Stock cracked or broken							
SCX	Shell catches							
SHI	Short indent							
SI	Stems incline	2	9	5	3	13		
SIC	Stems in chamber		1	4		2		
SL	shaves lead							
SLC	Stems left side of chamber							
SMOC	Stretch marks on case							
SOR	Stem over-ride	9		3	9	3		
SP	Stems port							
SR	Shoulder rough							
SRC	Stems right side of chamber							
SRIC	Specific rings in chamber							
SSOC	Surface scratches on case							



CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7
STC	Stems top chamber			2				
SWE	Safety switch works too easily			1		1		
SWH	Safety switch works too hard							
SWW	Safety Switch won't work							
TD	Tips down							
TU	Tips up							
TWP	Trigger won't pull							
TWR	Trigger won't retract							
UNCN-T	Uncoded							
XH	Extracts hard	2	1		1			
HI	High							
LO	Low							
LEFT	Left							
RIGHT	Right							
DG	Doesn't Group						2	
FSST	Front sight tipped							
RSTT	Rear sight tipped							
RSBR	Rear sight base raised							
FSTR	Front sight raised							
FSTL	Front sight loose							
RSTL	Rear sight loose							
MGPT-G	Missing parts at target							
UNCN-G	Uncoded nonconformity at target							
AI-P	Assembly incomplete at proof			1				
BBB	Barrel bracket cracked or broken at proof							

CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7
BC-P	Blows cases at proof							
BEB-P	Barrel extension broken at proof							
BLP-P	Blanked primer at proof							
BLSO-P	Barrel lug shot off at proof							
BP-P	Blown primer at proof							
BS-P	Barrel split at proof							
DBF-P	Damaged Bolt Face	4	1	12	5		6	2
DLOS-P	Doesn't lock over shells at proof							
ESB-P	Ejector sticks back at proof		1					
FCB-P	Fore-end cracked at proof							
FESO-P	Fore-end shot off at proof							
FF-P	Fails to fire at proof	1			1			
GCSO-P	Gas cylinder shot off at proof							
MSI-P	Magnaflux stamp illegible on bbl							
MSM-P	Magnaflux stamp missing on bbl							
PP-P	Pierced primer at proof							
SCB-P	Stock cracked or broken at proof							
UNCM-P	Uncoded proof malfunctions	2	2					

						<i>totals</i>	700 <i>totals</i>	New Gen <i>totals</i>
	595		307	7		6842	5933	909
0	9	0	71	0	0	118	38	80
	1.5		23.1	0.0		1.7	0.6	8.8
	586	14	302	7		6897	12332	909
0	75	3	1	2	0	448	367	81
	12.8	21.4	0.3	28.6		6.5	3.0	8.9
	53		23	5		752	1360	81
0	0	0	0	0	0	2	2	0
	0.0		0.0	0.0		0.3	0.1	0.0

XR-100	750	7500	7600	7615	Rimfire	totals	totals	totals
	4					4		4
						13	13	
	1					75	74	1
						2	2	



XR-100	750	7500	7600	7615	Rimfire	totals	totals	totals
	1	2				3		3
						1	1	
	4					6	2	4
						39	39	
						6	6	
						13	13	
						1	1	
			1			5	4	1

XR-100	750	7500	7600	7615	Rimfire	totals	totals	totals
	16					16		16
						8	8	
	2					26	24	2
						1	1	
	11					11		11
						11	11	
						4	4	
						32	32	
	1					8	7	1
	11					35	24	11

 
[illegible]

XR-100	750	7500	7600	7615	Rimfire	totals	totals	totals
			1			31	30	1
			68			69	1	68
	4		2			8	2	6
	1					1		1
	4					8	4	4




# Gallery Top Faults for 700's - Current month through:

8/14/2006

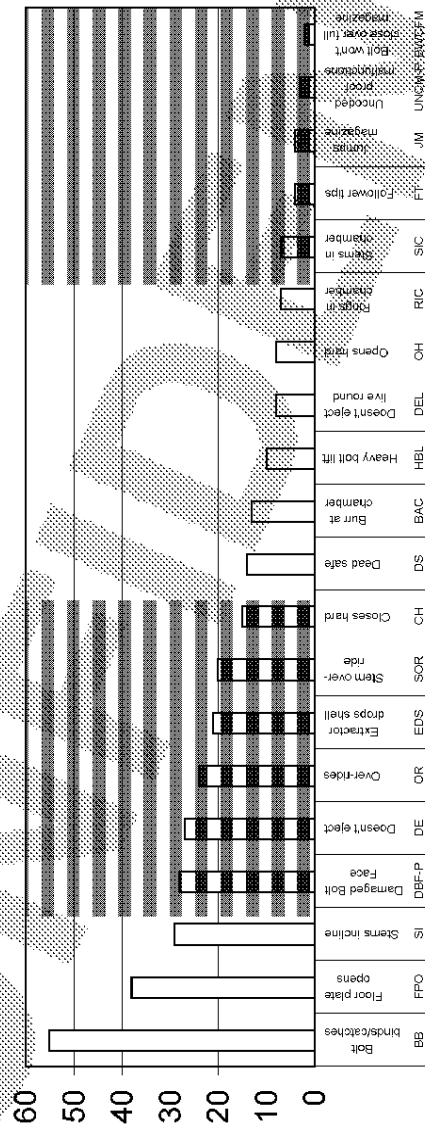


Gallery Top Faults for 750's - current month through:

 8/14/2006

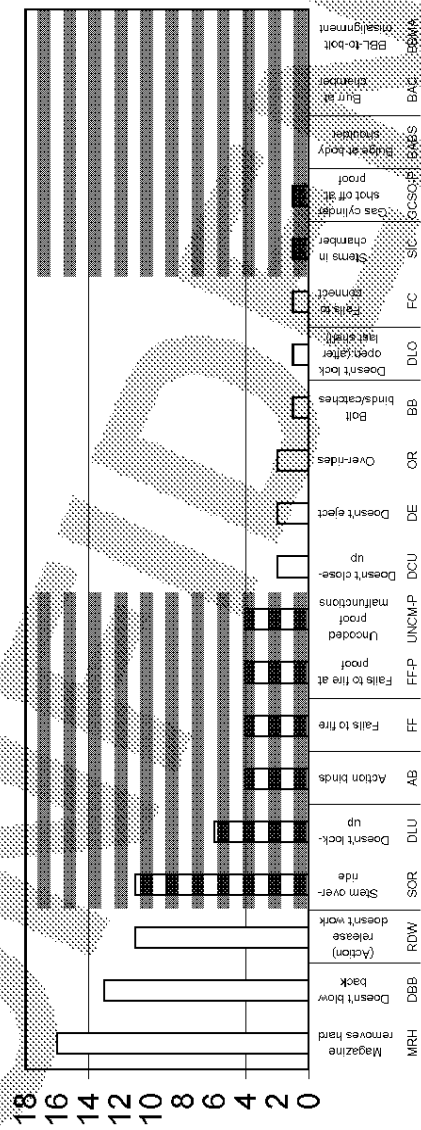


Gallery Top Faults for 7600's - Current month through:

 8/14/2006

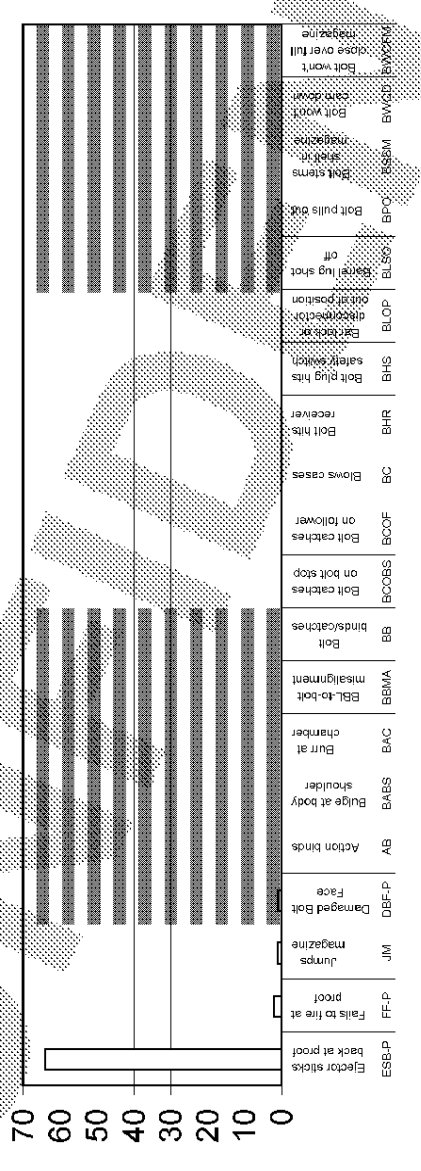

# Gallery Top Faults for 7615's - Current Month through:

 8/14/2006

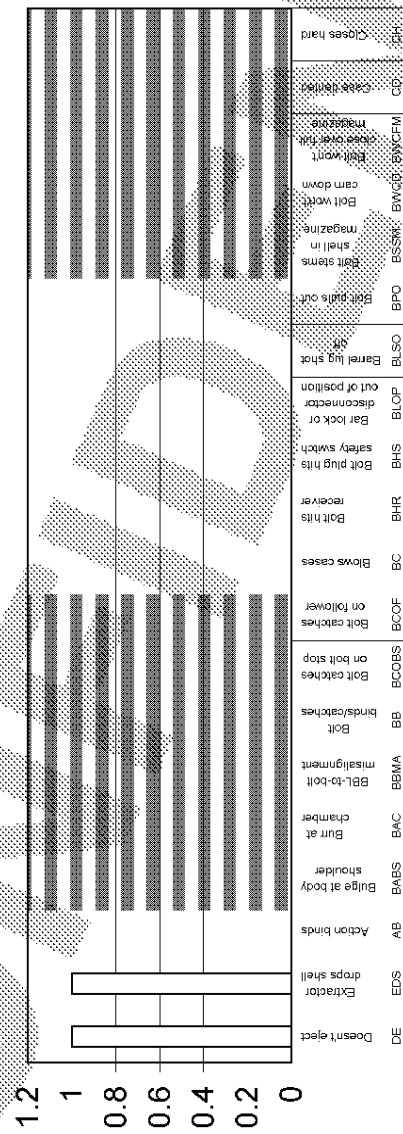

BB	Bolt binds/catches	55
FPO	Floor plate opens	38
SI	Stems incline	29
DBF-P	Damaged Bolt Face	28
DE	Doesn't eject	27
OR	Over-rides	24
EDS	Extractor drops shell	21
SOR	Stem over-ride	20
CH	Closes hard	15
DS	Dead safe	14
BAC	Burr at chamber	13
HBL	Heavy bolt lift	10
DEL	Doesn't eject live round	8
OH	Opens hard	8
RIC	Rings in chamber	7
SIC	Stems in chamber	7
FT	Follower tips	4
JM	Jumps magazine	4
UNCM-P	Uncoded proof malfunctions	3
BWCFM	Bolt won't close over full magazine	2
DX	Doesn't extract	2
ESB	Ejector sticks back	2
SBC	Stems bottom chambers	2
STC	Stems top chamber	2
SWE	Safety switch works too easily	2
DG	Doesn't Group	2
FF-P	Fails to fire at proof	2
FD	Follows-down	1
FF	Fails to fire	1
HUR	Hard under rail	1
RBOC	Rings and bulges on case	1
XH	Extracts hard	1
AI-P	Assembly incomplete at proof	1
ESB-P	Ejector sticks back at proof	1
AB	Action binds	0
BABS	Bulge at body shoulder	0
BBMA	BBL-to-bolt misalignment	0
BCOBS	Bolt catches on bolt stop	0
BCOF	Bolt catches on follower	0
BC	Blows cases	0
BHR	Bolt hits receiver	0
BHS	Bolt plug hits safety switch	0
BLOP	Bar lock or disconnecter out of position	0
BLSO	Barrel lug shot off	0
BPO	Bolt pulls out	0
BSSM	Bolt stems shell in magazine	0
BWCD	Bolt won't cam down	0
CD	Case dented	0
CLM	Can't load magazine	0
CO	Cut-off	0
CR	Cuts rim	0

CS	Cases swell	0
CTOG	Chamber torn or gouged	0
CTP	Creepy trigger pull	0
CWSB	Cams wrong side of action bar	0
DBB	Doesn't blow back	0
DCS	Double click in safety switch	0
DCT	Double click in trigger	0
DCU	Doesn't close-up	0
DFB	Doesn't feed back	0
DFU	Doesn't feed up	0
DLO	Doesn't lock open (after last shell)	0
DLU	Doesn't lock-up	0
DXL	Doesn't extract live round	0
ESCR	Empty shell catches receiver	0
ESS	Extractor stems shell	0
FA	Fires automatically	0
FB	Follower binds	0
FC	Fails to connect	0
FCB	Fore-end cracked or broken	0
FFP	Flat firing pin	0
FOS	Fires on safe	0
FPHB	Firing pin hits bbl	0
FPHI	Firing pin hits inside rim	0
FPOH	Floor plate opens hard	0
FSR	Fires when safe is released	0
GCSO	Gas cyl shot off	0
HMSC	Heading mismatch steps on case	0
HPA	High pressure ammo	0
JCS	Jumps cartridge	0
JO	Jars off	0
LB	Light blow	0
MAH	Magazine assembles hard	0
MCW	Magazine capacity wrong	0
MFA	Misfires (ammo)	0
MFOP	Magazine follower out of position	0
ML	Magazine loose	0
MLH	Magazine loads hard	0
MRH	Magazine removes hard	0
PH	Pulls hard	0
PSI	Proof stamp illegible	0
PSM	Proof stamp missing	0
RDW	(Action) release doesn't work	0
RIS	Ring in sholder	0
RS	Rim srem	0
SBE	Stems bbl extension	0
SCB	Stock cracked or broken	0
SCX	Shell catches	0
SHI	Short indent	0
SL	shaves lead	0
SLC	Stems left side of chamber	0
SMOC	Stretch marks on case	0

SP	Stems port	0
SR	Shoulder rough	0
SRC	Stems right side of chamber	0
SRIC	Specific rings in chamber	0
SSOC	Surface scratches on case	0
SWH	Safety switch works too hard	0
SWW	Safety Switch won't work	0
TD	Tips down	0
TU	Tips up	0
TWP	Trigger won't pull	0
TWR	Trigger won't retract	0
UNCN-T	Uncoded	0
		0
HI	High	0
LO	Low	0
LEFT	Left	0
RIGHT	Right	0
FSST	Front sight tipped	0
RSTT	Rear sight tipped	0
RSBR	Rear sight base raised	0
FSTR	Front sight raised	0
FSTL	Front sight loose	0
RSTL	Rear sight loose	0
MGPT-G	Missing parts at target	0
UNCN-G	Uncoded nonconformity at target	0
		0
BBB	Barrel bracket cracked or broken at proof	0
BC-P	Blows cases at proof	0
BEB-P	Barrel extension broken at proof	0
BLP-P	Blanked primer at proof	0
BLSO-P	Barrel lug shot off at proof	0
BP-P	Blown primer at proof	0
BS-P	Barrel split at proof	0
DLOS-P	Doesn't lock over shells at proof	0
FCB-P	Fore-end cracked at proof	0
FESO-P	Fore-end shot off at proof	0
GCSO-P	Gas cylinder shot off at proof	0
MSI-P	Magnaflux stamp illegible on bbl	0
MSM-P	Magnaflux stamp missing on bbl	0
PP-P	Pierced primer at proof	0
SCB-P	Stock cracked or broken at proof	0

8/14/2006

MRH	Magazine removes hard	16
DBB	Doesn't blow back	13
RDW	(Action) release doesn't work	11
SOR	Stem over-ride	11
DLU	Doesn't lock-up	6
AB	Action binds	4
FF	Fails to fire	4
FF-P	Fails to fire at proof	4
UNCM-P	Uncoded proof malfunctions	4
DCU	Doesn't close-up	2
DE	Doesn't eject	2
OR	Over-rides	2
BB	Bolt binds/catches	1
DLO	Doesn't lock open (after last shell)	1
FC	Fails to connect	1
SIC	Stems in chamber	1
GCSO-P	Gas cylinder shot off at proof	1
BABS	Bulge at body shoulder	0
BAC	Burr at chamber	0
BBMA	BBL-to-bolt misalignment	0
BCOBS	Bolt catches on bolt stop	0
BCOF	Bolt catches on follower	0
BC	Blows cases	0
BHR	Bolt hits receiver	0
BHS	Bolt plug hits safety switch	0
BLOP	Bar lock or disconnecter out of position	0
BLSO	Barrel lug shot off	0
BPO	Bolt pulls out	0
BSSM	Bolt stems shell in magazine	0
BWCD	Bolt won't cam down	0
BWCFM	Bolt won't close over full magazine	0
CD	Case dented	0
CH	Closes hard	0
CLM	Can't load magazine	0
CO	Cut-off	0
CR	Cuts rim	0
CS	Cases swell	0
CTOG	Chamber torn or gouged	0
CTP	Creepy trigger pull	0
CWSB	Cams wrong side of action bar	0
DCS	Double click in safety switch	0
DCT	Double click in trigger	0
DEL	Doesn't eject live round	0
DFB	Doesn't feed back	0
DFU	Doesn't feed up	0
DS	Dead safe	0
DX	Doesn't extract	0
DXL	Doesn't extract live round	0
EDS	Extractor drops shell	0
ESB	Ejector sticks back	0
ESCR	Empty shell catches receiver	0



ESS	Extractor stems shell	0
FA	Fires automatically	0
FB	Follower binds	0
FCB	Fore-end cracked or broken	0
FD	Follows-down	0
FFP	Flat firing pin	0
FOS	Fires on safe	0
FPHB	Firing pin hits bbl	0
FPHI	Firing pin hits inside rim	0
FPO	Floor plate opens	0
FPOH	Floor plate opens hard	0
FSR	Fires when safe is released	0
FT	Follower tips	0
GCSO	Gas cyl shot off	0
HBL	Heavy bolt lift	0
HMSC	Heading mismatch-steps on case	0
HPA	High pressure ammo	0
HUR	Hard under rail	0
JCS	Jumps cartridge	0
JM	Jumps magazine	0
JO	Jars off	0
LB	Light blow	0
MAH	Magazine assembles hard	0
MCW	Magazine capacity wrong	0
MFA	Misfires (ammo)	0
MFOP	Magazine follower out of position	0
ML	Magazine loose	0
MLH	Magazine loads hard	0
OH	Opens hard	0
PH	Pulls hard	0
PSI	Proof stamp illegible	0
PSM	Proof stamp missing	0
RBOC	Rings and bulges on case	0
RIC	Rings in chamber	0
RIS	Ring in sholder	0
RS	Rim srem	0
SBC	Stems bottom chambers	0
SBE	Stems bbl extension	0
SCB	Stock cracked or broken	0
SCX	Shell catches	0
SHI	Short indent	0
SI	Stems incline	0
SL	shaves lead	0
SLC	Stems left side of chamber	0
SMOC	Stretch marks on case	0
SP	Stems port	0
SR	Shoulder rough	0
SRC	Stems right side of chamber	0
SRIC	Specific rings in chamber	0
SSOC	Surface scratches on case	0
STC	Stems top chamber	0

SWE	Safety switch works too easily	0
SWH	Safety switch works too hard	0
SWW	Safety Switch won't work	0
TD	Tips down	0
TU	Tips up	0
TWP	Trigger won't pull	0
TWR	Trigger won't retract	0
UNCN-T	Uncoded	0
XH	Extracts hard	0
		0
HI	High	0
LO	Low	0
LEFT	Left	0
RIGHT	Right	0
DG	Doesn't Group	0
FSST	Front sight tipped	0
RSTT	Rear sight tipped	0
RSBR	Rear sight base raised	0
FSTR	Front sight raised	0
FSTL	Front sight loose	0
RSTL	Rear sight loose	0
MGPT-G	Missing parts at target	0
UNCN-G	Uncoded nonconformity at target	0
		0
AI-P	Assembly incomplete at proof	0
BBB	Barrel bracket cracked or broken at proof	0
BC-P	Blows cases at proof	0
BEB-P	Barrel extension broken at proof	0
BLP-P	Blanked primer at proof	0
BLSO-P	Barrel lug shot off at proof	0
BP-P	Blown primer at proof	0
BS-P	Barrel split at proof	0
DBF-P	Damaged Bolt Face	0
DLOS-P	Doesn't lock over shells at proof	0
ESB-P	Ejector sticks back at proof	0
FCB-P	Fore-end cracked at proof	0
FESO-P	Fore-end shot off at proof	0
MSI-P	Magnaflux stamp illegible on bbl	0
MSM-P	Magnaflux stamp missing on bbl	0
PP-P	Pierced primer at proof	0
SCB-P	Stock cracked or broken at proof	0

ESB-P	Ejector sticks back at proof	64
FF-P	Fails to fire at proof	2
JM	Jumps magazine	1
DBF-P	Damaged Bolt Face	1
AB	Action binds	0
BABS	Bulge at body shoulder	0
BAC	Burr at chamber	0
BBMA	BBL-to-bolt misalignment	0
BB	Bolt binds/catches	0
BCOBS	Bolt catches on bolt stop	0
BCOF	Bolt catches on follower	0
BC	Blows cases	0
BHR	Bolt hits receiver	0
BHS	Bolt plug hits safety switch	0
BLOP	Bar lock or disconnecter out of position	0
BLSO	Barrel lug shot off	0
BPO	Bolt pulls out	0
BSSM	Bolt stems shell in magazine	0
BWCD	Bolt won't cam down	0
BWCFM	Bolt won't close over full magazine	0
CD	Case dented	0
CH	Closes hard	0
CLM	Can't load magazine	0
CO	Cut-off	0
CR	Cuts rim	0
CS	Cases swell	0
CTOG	Chamber torn or gouged	0
CTP	Creepy trigger pull	0
CWSB	Cams wrong side of action bar	0
DBB	Doesn't blow back	0
DCS	Double click in safety switch	0
DCT	Double click in trigger	0
DCU	Doesn't close-up	0
DE	Doesn't eject	0
DEL	Doesn't eject live round	0
DFB	Doesn't feed back	0
DFU	Doesn't feed up	0
DLO	Doesn't lock open (after last shell)	0
DLU	Doesn't lock-up	0
DS	Dead safe	0
DX	Doesn't extract	0
DXL	Doesn't extract live round	0
EDS	Extractor drops shell	0
ESB	Ejector sticks back	0
ESCR	Empty shell catches receiver	0
ESS	Extractor stems shell	0
FA	Fires automatically	0
FB	Follower binds	0
FC	Fails to connect	0
FCB	Fore-end cracked or broken	0
FD	Follows-down	0

FF	Fails to fire	0
FFP	Flat firing pin	0
FOS	Fires on safe	0
FPHB	Firing pin hits bbl	0
FPHI	Firing pin hits inside rim	0
FPO	Floor plate opens	0
FPOH	Floor plate opens hard	0
FSR	Fires when safe is released	0
FT	Follower tips	0
GCSO	Gas cyl shot off	0
HBL	Heavy bolt lift	0
HMSC	Heading mismatch-steps on case	0
HPA	High pressure ammo	0
HUR	Hard under rail	0
JCS	Jumps cartridge	0
JO	Jars off	0
LB	Light blow	0
MAH	Magazine assembles hard	0
MCW	Magazine capacity wrong	0
MFA	Misfires (ammo)	0
MFOP	Magazine follower out of position	0
ML	Magazine loose	0
MLH	Magazine loads hard	0
MRH	Magazine removes hard	0
OH	Opens hard	0
OR	Over-rides	0
PH	Pulls hard	0
PSI	Proof stamp illegible	0
PSM	Proof stamp missing	0
RBOC	Rings and bulges on case	0
RDW	(Action) release doesn't work	0
RIC	Rings in chamber	0
RIS	Ring in sholder	0
RS	Rim srem	0
SBC	Stems bottom chambers	0
SBE	Stems bbl extension	0
SCB	Stock cracked or broken	0
SCX	Shell catches	0
SHI	Short indent	0
SI	Stems incline	0
SIC	Stems in chamber	0
SL	shaves lead	0
SLC	Stems left side of chamber	0
SMOC	Stretch marks on case	0
SOR	Stem over-ride	0
SP	Stems port	0
SR	Shoulder rough	0
SRC	Stems right side of chamber	0
SRIC	Specific rings in chamber	0
SSOC	Surface scratches on case	0
STC	Stems top chamber	0

SWE	Safety switch works too easily	0
SWH	Safety switch works too hard	0
SWW	Safety Switch won't work	0
TD	Tips down	0
TU	Tips up	0
TWP	Trigger won't pull	0
TWR	Trigger won't retract	0
UNCN-T	Uncoded	0
XH	Extracts hard	0
		0
HI	High	0
LO	Low	0
LEFT	Left	0
RIGHT	Right	0
DG	Doesn't Group	0
FSST	Front sight tipped	0
RSTT	Rear sight tipped	0
RSBR	Rear sight base raised	0
FSTR	Front sight raised	0
FSTL	Front sight loose	0
RSTL	Rear sight loose	0
MGPT-G	Missing parts at target	0
UNCN-G	Uncoded nonconformity at target	0
		0
AI-P	Assembly incomplete at proof	0
BBB	Barrel bracket cracked or broken at proof	0
BC-P	Blows cases at proof	0
BEB-P	Barrel extension broken at proof	0
BLP-P	Blanked primer at proof	0
BLSO-P	Barrel lug shot off at proof	0
BP-P	Blown primer at proof	0
BS-P	Barrel split at proof	0
DLOS-P	Doesn't lock over shells at proof	0
FCB-P	Fore-end cracked at proof	0
FESO-P	Fore-end shot off at proof	0
GCSO-P	Gas cylinder shot off at proof	0
MSI-P	Magnaflux stamp illegible on bbl	0
MSM-P	Magnaflux stamp missing on bbl	0
PP-P	Pierced primer at proof	0
SCB-P	Stock cracked or broken at proof	0
UNCM-P	Uncoded proof malfunctions	0

DE	Doesn't eject	1
EDS	Extractor drops shell	1
AB	Action binds	0
BABS	Bulge at body shoulder	0
BAC	Burr at chamber	0
BBMA	BBL-to-bolt misalignment	0
BB	Bolt binds/catches	0
BCOBS	Bolt catches on bolt stop	0
BCOF	Bolt catches on follower	0
BC	Blows cases	0
BHR	Bolt hits receiver	0
BHS	Bolt plug hits safety switch	0
BLOP	Bar lock or disconnecter out of position	0
BLSO	Barrel lug shot off	0
BPO	Bolt pulls out	0
BSSM	Bolt stems shell in magazine	0
BWCD	Bolt won't cam down	0
BWCFM	Bolt won't close over full magazine	0
CD	Case dented	0
CH	Closes hard	0
CLM	Can't load magazine	0
CO	Cut-off	0
CR	Cuts rim	0
CS	Cases swell	0
CTOG	Chamber torn or gouged	0
CTP	Creepy trigger pull	0
CWSB	Cams wrong side of action bar	0
DBB	Doesn't blow back	0
DCS	Double click in safety switch	0
DCT	Double click in trigger	0
DCU	Doesn't close-up	0
DEL	Doesn't eject live round	0
DFB	Doesn't feed back	0
DFU	Doesn't feed up	0
DLO	Doesn't lock open (after last shell)	0
DLU	Doesn't lock-up	0
DS	Dead safe	0
DX	Doesn't extract	0
DXL	Doesn't extract live round	0
ESB	Ejector sticks back	0
ESCR	Empty shell catches receiver	0
ESS	Extractor stems shell	0
FA	Fires automatically	0
FB	Follower binds	0
FC	Fails to connect	0
FCB	Fore-end cracked or broken	0
FD	Follows-down	0
FF	Fails to fire	0
FFP	Flat firing pin	0
FOS	Fires on safe	0
FPHB	Firing pin hits bbl	0

FPHI	Firing pin hits inside rim	0
FPO	Floor plate opens	0
FPOH	Floor plate opens hard	0
FSR	Fires when safe is released	0
FT	Follower tips	0
GCSO	Gas cyl shot off	0
HBL	Heavy bolt lift	0
HMSC	Heading mismatch-steps on case	0
HPA	High pressure ammo	0
HUR	Hard under rail	0
JCS	Jumps cartridge	0
JM	Jumps magazine	0
JO	Jars off	0
LB	Light blow	0
MAH	Magazine assembles hard	0
MCW	Magazine capacity wrong	0
MFA	Misfires (ammo)	0
MFOP	Magazine follower out of position	0
ML	Magazine loose	0
MLH	Magazine loads hard	0
MRH	Magazine removes hard	0
OH	Opens hard	0
OR	Over-rides	0
PH	Pulls hard	0
PSI	Proof stamp illegible	0
PSM	Proof stamp missing	0
RBOC	Rings and bulges on case	0
RDW	(Action) release doesn't work	0
RIC	Rings in chamber	0
RIS	Ring in sholder	0
RS	Rim srem	0
SBC	Stems bottom chambers	0
SBE	Stems bbl extension	0
SCB	Stock cracked or broken	0
SCX	Shell catches	0
SHI	Short indent	0
SI	Stems incline	0
SIC	Stems in chamber	0
SL	shaves lead	0
SLC	Stems left side of chamber	0
SMOC	Stretch marks on case	0
SOR	Stem over-ride	0
SP	Stems port	0
SR	Shoulder rough	0
SRC	Stems right side of chamber	0
SRIC	Specific rings in chamber	0
SSOC	Surface scratches on case	0
STC	Stems top chamber	0
SWE	Safety switch works too easily	0
SWH	Safety switch works too hard	0
SWW	Safety Switch won't work	0

TD	Tips down	0
TU	Tips up	0
TWP	Trigger won't pull	0
TWR	Trigger won't retract	0
UNCN-T	Uncoded	0
XH	Extracts hard	0
		0
HI	High	0
LO	Low	0
LEFT	Left	0
RIGHT	Right	0
DG	Doesn't Group	0
FSST	Front sight tipped	0
RSTT	Rear sight tipped	0
RSBR	Rear sight base raised	0
FSTR	Front sight raised	0
FSTL	Front sight loose	0
RSTL	Rear sight loose	0
MGPT-G	Missing parts at target	0
UNCN-G	Uncoded nonconformity at target	0
		0
AI-P	Assembly incomplete at proof	0
BBB	Barrel bracket cracked or broken at proof	0
BC-P	Blows cases at proof	0
BEB-P	Barrel extension broken at proof	0
BLP-P	Blanked primer at proof	0
BLSO-P	Barrel lug shot off at proof	0
BP-P	Blown primer at proof	0
BS-P	Barrel split at proof	0
DBF-P	Damaged Bolt Face	0
DLOS-P	Doesn't lock over shells at proof	0
ESB-P	Ejector sticks back at proof	0
FCB-P	Fore-end cracked at proof	0
FESO-P	Fore-end shot off at proof	0
FF-P	Fails to fire at proof	0
GCSO-P	Gas cylinder shot off at proof	0
MSI-P	Magnaflux stamp illegible on bbl	0
MSM-P	Magnaflux stamp missing on bbl	0
PP-P	Pierced primer at proof	0
SCB-P	Stock cracked or broken at proof	0
UNCM-P	Uncoded proof malfunctions	0



<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

<b>Proof</b>	Shot:							
	Rejected:	0	0	0	0	0	0	0
	Percent:							
<b>Test</b>	Shot:							
	Rejected:	0	0	0	0	0	0	0
	Percent:							
<b>Target</b>	Shot:							
	Rejected:	0	0	0	0	0	0	0
	Percent:							

CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7
AB	Action binds							
BABS	Bulge at body shoulder							
BAC	Burr at chamber							
BBMA	BBL-to-bolt misalignment							
BB	Bolt binds/catches							
BCOBS	Bolt catches on bolt stop							
BCOF	Bolt catches on follower							
BC	Blows cases							
BHR	Bolt hits receiver							
BHS	Bolt plug hits safety switch							
BLOP	Bar lock or disconnecter out of position							
BLSO	Barrel lug shot off							
BPO	Bolt pulls out							
BSSM	Bolt stems shell in magazine							
BWCD	Bolt won't cam down							

BWCFM	Bolt won't close over full magazine							
CD	Case dented							
CH	Closes hard							
CLM	Can't load magazine							
CO	Cut-off							
CR	Cuts rim							
CS	Cases swell							
CTOG	Chamber torn or gouged							
CTP	Creepy trigger pull							
CWSB	Cams wrong side of action bar							
DBB	Doesn't blow back							
DCS	Double click in safety switch							
DCT	Double click in trigger							
DCU	Doesn't close-up							
DE	Doesn't eject							
DEL	Doesn't eject live round							
DFB	Doesn't feed back							
DFU	Doesn't feed up							
DLO	Doesn't lock open (after last shell)							
DLU	Doesn't lock-up							
DS	Dead safe							
DX	Doesn't extract							
DXL	Doesn't extract live round							
EDS	Extractor drops shell							
ESB	Ejector sticks back							
ESCR	Empty shell catches receiver							
ESS	Extractor stems shell							

FA	Fires automatically								
FB	Follower binds								
FC	Fails to connect								
FCB	Fore end cracked or broken								
FD	Follows down								
FF	Fails to fire								
FFP	Flat firing pin								
FOS	Fires on safe								
FPHB	Firing pin hits bbl								
FPHI	Firing pin hits inside rim								
FPO	Floor plate opens								
FPOH	Floor plate opens hard								
FSR	Fires when safe is released								
FT	Follower tips								
GCSO	Gas cyl shot off								
HBL	Heavy bolt lift								
HMSC	Heading mismatch-steps on case								
HPA	High pressure ammo								
HUR	Hard under rail								
JCS	Jumps cartridge								
JM	Jumps magazine								
JO	Jars off								
LB	Light blow								
MAH	Magazine assembles hard								
MCW	Magazine capacity wrong								
MFA	Misfires (ammo)								
MFOP	Magazine follower out of position								

ML	Magazine loose								
MLH	Magazine loads hard								
MRH	Magazine removes hard								
OH	Opens hard								
OR	Over-rides								
PH	Pulls hard								
PSI	Proof stamp illegible								
PSM	Proof stamp missing								
RBOC	Rings and bulges on case								
RDW	(Action) release doesn't work								
RIC	Rings in chamber								
RIS	Ring in sholder								
RS	Rim srem								
SBC	Stems bottom chambers								
SBE	Stems bbl extension								
SCB	Stock cracked or broken								
SCX	Shell catches								
SHI	Short indent								
SI	Stems incline								
SIC	Stems in chamber								
SL	shaves lead								
SLC	Stems left side of chamber								
SMOC	Stretch marks on case								
SOR	Stem over-ride								
SP	Stems port								
SR	Shoulder rough								
SRC	Stems right side of chamber								

SRIC	Specific rings in chamber								
SSOC	Surface scratches on case								
STC	Stems top chamber								
SWE	Safety switch works too easily								
SWH	Safety switch works too hard								
SWW	Safety Switch won't work								
TD	Tips down								
TU	Tips up								
TWP	Trigger won't pull								
TWR	Trigger won't retract								
UNCN-T	Uncoded								
XH	Extracts hard								
HI	High								
LO	Low								
LEFT	Left								
RIGHT	Right								
DG	Doesn't Group								
FSST	Front sight tipped								
RSTT	Rear sight tipped								
RSBR	Rear sight base raised								
FSTR	Front sight raised								
FSTL	Front sight loose								
RSTL	Rear sight loose								
MGPT-G	Missing parts at target								
UNCN-G	Uncoded nonconformity at target								

AI-P	Assembly incomplete at proof							
BBB	Barrel bracket cracked or broken at proof							
BC-P	Blows cases at proof							
BEB-P	Barrel extension broken at proof							
BLP-P	Blanked primer at proof							
BLSO-P	Barrel lug shot off at proof							
BP-P	Blown primer at proof							
BS-P	Barrel split at proof							
DBF-P	Damaged Bolt Face							
DLOS-P	Doesn't lock over shells at proof							
ESB-P	Ejector sticks back at proof							
FCB-P	Fore-end cracked at proof							
FESO-P	Fore-end shot off at proof							
FF-P	Fails to fire at proof							
GCSO-P	Gas cylinder shot off at proof							
MSI-P	Magnaflux stamp illegible on bbl							
MSM-P	Magnaflux stamp missing on bbl							
PP-P	Pierced primer at proof							
SCB-P	Stock cracked or broken at proof							
UNCM-P	Uncoded proof malfunctions							

Test Date:	totals

[illegible][illegible]

A vertical strip of a grid, likely a portion of a larger grid. It contains a horizontal black line and several shaded regions (cross-hatched patterns) within the grid cells.

[illegible]













<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

<b>Proof</b>	Shot:							
	Rejected:	0	0	0	0	0	0	0
	Percent:							
<b>Test</b>	Shot:							
	Rejected:	0	0	0	0	0	0	0
	Percent:							
<b>Target</b>	Shot:							
	Rejected:	0	0	0	0	0	0	0
	Percent:							

CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7
AB	Action binds							
BABS	Bulge at body shoulder							
BAC	Burr at chamber							
BBMA	BBL-to-bolt misalignment							
BB	Bolt binds/catches							
BCOBS	Bolt catches on bolt stop							
BCOF	Bolt catches on follower							
BC	Blows cases							
BHR	Bolt hits receiver							
BHS	Bolt plug hits safety switch							
BLOP	Bar lock or disconnecter out of position							
BLSO	Barrel lug shot off							
BPO	Bolt pulls out							
BSSM	Bolt stems shell in magazine							
BWCD	Bolt won't cam down							

BWCFM	Bolt won't close over full magazine							
CD	Case dented							
CH	Closes hard							
CLM	Can't load magazine							
CO	Cut-off							
CR	Cuts rim							
CS	Cases swell							
CTOG	Chamber torn or gouged							
CTP	Creepy trigger pull							
CWSB	Cams wrong side of action bar							
DBB	Doesn't blow back							
DCS	Double click in safety switch							
DCT	Double click in trigger							
DCU	Doesn't close-up							
DE	Doesn't eject							
DEL	Doesn't eject live round							
DFB	Doesn't feed back							
DFU	Doesn't feed up							
DLO	Doesn't lock open (after last shell)							
DLU	Doesn't lock-up							
DS	Dead safe							
DX	Doesn't extract							
DXL	Doesn't extract live round							
EDS	Extractor drops shell							
ESB	Ejector sticks back							
ESCR	Empty shell catches receiver							
ESS	Extractor stems shell							

FA	Fires automatically								
FB	Follower binds								
FC	Fails to connect								
FCB	Fore end cracked or broken								
FD	Follows down								
FF	Fails to fire								
FFP	Flat firing pin								
FOS	Fires on safe								
FPHB	Firing pin hits bbl								
FPHI	Firing pin hits inside rim								
FPO	Floor plate opens								
FPOH	Floor plate opens hard								
FSR	Fires when safe is released								
FT	Follower tips								
GCSO	Gas cyl shot off								
HBL	Heavy bolt lift								
HMSC	Heading mismatch-steps on case								
HPA	High pressure ammo								
HUR	Hard under rail								
JCS	Jumps cartridge								
JM	Jumps magazine								
JO	Jars off								
LB	Light blow								
MAH	Magazine assembles hard								
MCW	Magazine capacity wrong								
MFA	Misfires (ammo)								
MFOP	Magazine follower out of position								

ML	Magazine loose								
MLH	Magazine loads hard								
MRH	Magazine removes hard								
OH	Opens hard								
OR	Over-rides								
PH	Pulls hard								
PSI	Proof stamp illegible								
PSM	Proof stamp missing								
RBOC	Rings and bulges on case								
RDW	(Action) release doesn't work								
RIC	Rings in chamber								
RIS	Ring in sholder								
RS	Rim srem								
SBC	Stems bottom chambers								
SBE	Stems bbl extension								
SCB	Stock cracked or broken								
SCX	Shell catches								
SHI	Short indent								
SI	Stems incline								
SIC	Stems in chamber								
SL	shaves lead								
SLC	Stems left side of chamber								
SMOC	Stretch marks on case								
SOR	Stem over-ride								
SP	Stems port								
SR	Shoulder rough								
SRC	Stems right side of chamber								



SRIC	Specific rings in chamber								
SSOC	Surface scratches on case								
STC	Stems top chamber								
SWE	Safety switch works too easily								
SWH	Safety switch works too hard								
SWW	Safety Switch won't work								
TD	Tips down								
TU	Tips up								
TWP	Trigger won't pull								
TWR	Trigger won't retract								
UNCN-T	Uncoded								
XH	Extracts hard								
HI	High								
LO	Low								
LEFT	Left								
RIGHT	Right								
DG	Doesn't Group								
FSST	Front sight tipped								
RSTT	Rear sight tipped								
RSBR	Rear sight base raised								
FSTR	Front sight raised								
FSTL	Front sight loose								
RSTL	Rear sight loose								
MGPT-G	Missing parts at target								
UNCN-G	Uncoded nonconformity at target								

AI-P	Assembly incomplete at proof							
BBB	Barrel bracket cracked or broken at proof							
BC-P	Blows cases at proof							
BEB-P	Barrel extension broken at proof							
BLP-P	Blanked primer at proof							
BLSO-P	Barrel lug shot off at proof							
BP-P	Blown primer at proof							
BS-P	Barrel split at proof							
DBF-P	Damaged Bolt Face							
DLOS-P	Doesn't lock over shells at proof							
ESB-P	Ejector sticks back at proof							
FCB-P	Fore-end cracked at proof							
FESO-P	Fore-end shot off at proof							
FF-P	Fails to fire at proof							
GCSO-P	Gas cylinder shot off at proof							
MSI-P	Magnaflux stamp illegible on bbl							
MSM-P	Magnaflux stamp missing on bbl							
PP-P	Pierced primer at proof							
SCB-P	Stock cracked or broken at proof							
UNCM-P	Uncoded proof malfunctions							

Test Date: \_\_\_\_\_

total/s	
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
10	10
11	11
12	12
13	13
14	14
15	15
16	16
17	17
18	18
19	19
20	20
21	21
22	22
23	23
24	24
25	25
26	26
27	27
28	28
29	29
30	30
31	31
32	32
33	33
34	34
35	35
36	36
37	37
38	38
39	39
40	40
41	41
42	42
43	43
44	44
45	45
46	46
47	47
48	48
49	49
50	50
51	51
52	52
53	53
54	54
55	55
56	56
57	57
58	58
59	59
60	60
61	61
62	62
63	63
64	64
65	65
66	66
67	67
68	68
69	69
70	70
71	71
72	72
73	73
74	74
75	75
76	76
77	77
78	78
79	79
80	80
81	81
82	82
83	83
84	84
85	85
86	86
87	87
88	88
89	89
90	90
91	91
92	92
93	93
94	94
95	95
96	96
97	97
98	98
99	99
100	100

[illegible]

000000

[illegible]













<b>Summary</b>		<b>Total Test + Proof Failures</b>		<b>852</b>				
		<b>Total Rejected:</b>		<b>96</b>				
		<b>Overall Reject Rate:</b>		<b>11.27</b>				
<b>Proof</b>	Shot:	75	220	1	232	69	76	3
	Rejected:	0	0	0	0	0	0	0
	Percent:	0.0	0.0	0.0	0.0	0.0	0.0	0.0
<b>Test</b>	Shot:	107	238	37	152	105	76	
	Rejected:	10	27	3	14	16	1	0
	Percent:	9.3	11.3	8.1	9.2	15.2	1.3	
<b>Target</b>	Shot:	10	23	4	15	10	75	
	Rejected:	0	0	0	0	0	0	0
	Percent:	0.0	0.0	0.0	0.0	0.0	0.0	
CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7
AB	Action binds							
BABS	Bulge at body shoulder							
BAC	Burr at chamber	1	1					
BBMA	BBL-to-bolt misalignment							
BB	Bolt binds/catches				1	1		
BCOBS	Bolt catches on bolt stop							
BCOF	Bolt catches on follower							
BC	Blows cases							
BHR	Bolt hits receiver							
BHS	Bolt plug hits safety switch							
BLOP	Bar lock or disconnecter out of position							
BLSO	Barrel lug shot off							
BPO	Bolt pulls out							
BSSM	Bolt stems shell in magazine							
BWCD	Bolt won't cam down							

BWCFM	Bolt won't close over full magazine							
CD	Case dented							
CH	Closes hard		1	3		5		
CLM	Can't load magazine							
CO	Cut-off							
CR	Cuts rim							
CS	Cases swell							
CTOG	Chamber torn or gouged							
CTP	Creepy trigger pull							
CWSB	Cams wrong side of action bar							
DBB	Doesn't blow back							
DCS	Double click in safety switch							
DCT	Double click in trigger							
DCU	Doesn't close-up							
DE	Doesn't eject		4			2	1	
DEL	Doesn't eject live round							
DFB	Doesn't feed back							
DFU	Doesn't feed up							
DLO	Doesn't lock open (after last shell)							
DLU	Doesn't lock-up							
DS	Dead safe				2			
DX	Doesn't extract							
DXL	Doesn't extract live round							
EDS	Extractor drops shell				1	2		
ESB	Ejector sticks back							
ESCR	Empty shell catches receiver							
ESS	Extractor stems shell							

FA	Fires automatically							
FB	Follower binds							
FC	Fails to connect							
FCB	Fore end cracked or broken							
FD	Follows down							
FF	Fails to fire							
FFP	Flat firing pin							
FOS	Fires on safe							
FPHB	Firing pin hits bbl							
FPHI	Firing pin hits inside rim							
FPO	Floor plate opens		10		1	2		
FPOH	Floor plate opens hard							
FSR	Fires when safe is released							
FT	Follower tips							
GCSO	Gas cyl shot off							
HBL	Heavy bolt lift							
HMSC	Heading mismatch-steps on case							
HPA	High pressure ammo							
HUR	Hard under rail							
JCS	Jumps cartridge							
JM	Jumps magazine							
JO	Jars off							
LB	Light blow							
MAH	Magazine assembles hard							
MCW	Magazine capacity wrong							
MFA	Misfires (ammo)							
MFOP	Magazine follower out of position							

ML	Magazine loose							
MLH	Magazine loads hard							
MRH	Magazine removes hard							
OH	Opens hard							
OR	Over-rides	3	2			1		
PH	Pulls hard							
PSI	Proof stamp illegible							
PSM	Proof stamp missing							
RBOC	Rings and bulges on case							
RDW	(Action) release doesn't work							
RIC	Rings in chamber							
RIS	Ring in sholder							
RS	Rim srem							
SBC	Stems bottom chambers							
SBE	Stems bbl extension							
SCB	Stock cracked or broken							
SCX	Shell catches							
SHI	Short indent							
SI	Stems incline	2	9			3		
SIC	Stems in chamber							
SL	shaves lead							
SLC	Stems left side of chamber							
SMOC	Stretch marks on case							
SOR	Stem over-ride	4			9			
SP	Stems port							
SR	Shoulder rough							
SRC	Stems right side of chamber							

SRIC	Specific rings in chamber								
SSOC	Surface scratches on case								
STC	Stems top chamber								
SWE	Safety switch works too easily								
SWH	Safety switch works too hard								
SWW	Safety Switch won't work								
TD	Tips down								
TU	Tips up								
TWP	Trigger won't pull								
TWR	Trigger won't retract								
UNCN-T	Uncoded								
XH	Extracts hard								
HI	High								
LO	Low								
LEFT	Left								
RIGHT	Right								
DG	Doesn't Group								
FSST	Front sight tipped								
RSTT	Rear sight tipped								
RSBR	Rear sight base raised								
FSTR	Front sight raised								
FSTL	Front sight loose								
RSTL	Rear sight loose								
MGPT-G	Missing parts at target								
UNCN-G	Uncoded nonconformity at target								

AI-P	Assembly incomplete at proof							
BBB	Barrel bracket cracked or broken at proof							
BC-P	Blows cases at proof							
BEB-P	Barrel extension broken at proof							
BLP-P	Blanked primer at proof							
BLSO-P	Barrel lug shot off at proof							
BP-P	Blown primer at proof							
BS-P	Barrel split at proof							
DBF-P	Damaged Bolt Face							
DLOS-P	Doesn't lock over shells at proof							
ESB-P	Ejector sticks back at proof							
FCB-P	Fore-end cracked at proof							
FESO-P	Fore-end shot off at proof							
FF-P	Fails to fire at proof							
GCSO-P	Gas cylinder shot off at proof							
MSI-P	Magnaflux stamp illegible on bbl							
MSM-P	Magnaflux stamp missing on bbl							
PP-P	Pierced primer at proof							
SCB-P	Stock cracked or broken at proof							
UNCM-P	Uncoded proof malfunctions							

[illegible]













<b>Summary</b>		<b>Total Test + Proof Failures</b>		<b>1139</b>				
		<b>Total Rejected:</b>		<b>85</b>				
		<b>Overall Reject Rate:</b>		<b>7.46</b>				
<b>Proof</b>	Shot:	304	118	226	57	305	15	1
	Rejected:	1	0	1	0	0	0	0
	Percent:	0.3	0.0	0.4	0.0	0.0	0.0	0.0
<b>Test</b>	Shot:	351	136	69	301	193		
	Rejected:	18	18	4	6	11	0	0
	Percent:	5.1	13.2	5.8	2.0	5.7		
<b>Target</b>	Shot:	33	13	7	30	21		
	Rejected:	0	0	0	0	0	0	0
	Percent:	0.0	0.0	0.0	0.0	0.0		
CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7
AB	Action binds							
BABS	Bulge at body shoulder							
BAC	Burr at chamber							
BBMA	BBL-to-bolt misalignment							
BB	Bolt binds/catches		2	1	2	4		
BCOBS	Bolt catches on bolt stop							
BCOF	Bolt catches on follower							
BC	Blows cases							
BHR	Bolt hits receiver							
BHS	Bolt plug hits safety switch							
BLOP	Bar lock or disconnecter out of position							
BLSO	Barrel lug shot off							
BPO	Bolt pulls out							
BSSM	Bolt stems shell in magazine							
BWCD	Bolt won't cam down							

BWCFM	Bolt won't close over full magazine							
CD	Case dented							
CH	Closes hard							
CLM	Can't load magazine							
CO	Cut-off							
CR	Cuts rim							
CS	Cases swell							
CTOG	Chamber torn or gouged							
CTP	Creepy trigger pull							
CWSB	Cams wrong side of action bar							
DBB	Doesn't blow back							
DCS	Double click in safety switch							
DCT	Double click in trigger							
DCU	Doesn't close-up							
DE	Doesn't eject		7					
DEL	Doesn't eject live round							
DFB	Doesn't feed back							
DFU	Doesn't feed up							
DLO	Doesn't lock open (after last shell)							
DLU	Doesn't lock-up							
DS	Dead safe							
DX	Doesn't extract							
DXL	Doesn't extract live round							
EDS	Extractor drops shell	10	1					
ESB	Ejector sticks back			1				
ESCR	Empty shell catches receiver							
ESS	Extractor stems shell							

FA	Fires automatically							
FB	Follower binds							
FC	Fails to connect							
FCB	Fore end cracked or broken							
FD	Follows down							
FF	Fails to fire							
FFP	Flat firing pin							
FOS	Fires on safe							
FPHB	Firing pin hits bbl							
FPHI	Firing pin hits inside rim							
FPO	Floor plate opens		6		4			
FPOH	Floor plate opens hard							
FSR	Fires when safe is released							
FT	Follower tips		1					
GCSO	Gas cyl shot off							
HBL	Heavy bolt lift							
HMSC	Heading mismatch-steps on case							
HPA	High pressure ammo							
HUR	Hard under rail							
JCS	Jumps cartridge							
JM	Jumps magazine							
JO	Jars off							
LB	Light blow							
MAH	Magazine assembles hard							
MCW	Magazine capacity wrong							
MFA	Misfires (ammo)							
MFOP	Magazine follower out of position							

ML	Magazine loose							
MLH	Magazine loads hard							
MRH	Magazine removes hard							
OH	Opens hard	1						
OR	Over-rides	7				2		
PH	Pulls hard							
PSI	Proof stamp illegible							
PSM	Proof stamp missing							
RBOC	Rings and bulges on case							
RDW	(Action) release doesn't work							
RIC	Rings in chamber							
RIS	Ring in sholder							
RS	Rim srem							
SBC	Stems bottom chambers							
SBE	Stems bbl extension							
SCB	Stock cracked or broken							
SCX	Shell catches							
SHI	Short indent							
SI	Stems incline			2		5		
SIC	Stems in chamber		1					
SL	shaves lead							
SLC	Stems left side of chamber							
SMOC	Stretch marks on case							
SOR	Stem over-ride							
SP	Stems port							
SR	Shoulder rough							
SRC	Stems right side of chamber							



SRIC	Specific rings in chamber								
SSOC	Surface scratches on case								
STC	Stems top chamber								
SWE	Safety switch works too easily								
SWH	Safety switch works too hard								
SWW	Safety Switch won't work								
TD	Tips down								
TU	Tips up								
TWP	Trigger won't pull								
TWR	Trigger won't retract								
UNCN-T	Uncoded								
XH	Extracts hard								
HI	High								
LO	Low								
LEFT	Left								
RIGHT	Right								
DG	Doesn't Group								
FSST	Front sight tipped								
RSTT	Rear sight tipped								
RSBR	Rear sight base raised								
FSTR	Front sight raised								
FSTL	Front sight loose								
RSTL	Rear sight loose								
MGPT-G	Missing parts at target								
UNCN-G	Uncoded nonconformity at target								

AI-P	Assembly incomplete at proof							
BBB	Barrel bracket cracked or broken at proof							
BC-P	Blows cases at proof							
BEB-P	Barrel extension broken at proof							
BLP-P	Blanked primer at proof							
BLSO-P	Barrel lug shot off at proof							
BP-P	Blown primer at proof							
BS-P	Barrel split at proof							
DBF-P	Damaged Bolt Face			1				
DLOS-P	Doesn't lock over shells at proof							
ESB-P	Ejector sticks back at proof							
FCB-P	Fore-end cracked at proof							
FESO-P	Fore-end shot off at proof							
FF-P	Fails to fire at proof	1						
GCSO-P	Gas cylinder shot off at proof							
MSI-P	Magnaflux stamp illegible on bbl							
MSM-P	Magnaflux stamp missing on bbl							
PP-P	Pierced primer at proof							
SCB-P	Stock cracked or broken at proof							
UNCM-P	Uncoded proof malfunctions							

Test Date:	totals

[illegible]













<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>889</b>
	<b>Total Rejected:</b>	<b>62</b>
	<b>Overall Reject Rate:</b>	<b>6.97</b>

**Proof**

Shot:	44	96	403	36	153		
Rejected:	0	0	0	1	0	0	0
Percent:	0.0	0.0	0.0	2.8	0.0		

**Test**

Shot:	26	56	435	24	132		
Rejected:	0	11	20	2	5	0	0
Percent:	0.0	19.6	4.6	8.3	3.8		

**Target**

Shot:	3	6	43	3	13		
Rejected:	0	0	0	0	0	0	0
Percent:	0.0	0.0	0.0	0.0	0.0		

CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7
AB	Action binds							
BABS	Bulge at body shoulder							
BAC	Burr at chamber					1		
BBMA	BBL-to-bolt misalignment							
BB	Bolt binds/catches			3				
BCOBS	Bolt catches on bolt stop							
BCOF	Bolt catches on follower							
BC	Blows cases							
BHR	Bolt hits receiver							
BHS	Bolt plug hits safety switch							
BLOP	Bar lock or disconnecter out of position							
BLSO	Barrel lug shot off							
BPO	Bolt pulls out							
BSSM	Bolt stems shell in magazine							
BWCD	Bolt won't cam down							

BWCFM	Bolt won't close over full magazine							
CD	Case dented							
CH	Closes hard							
CLM	Can't load magazine							
CO	Cut-off							
CR	Cuts rim							
CS	Cases swell							
CTOG	Chamber torn or gouged							
CTP	Creepy trigger pull							
CWSB	Cams wrong side of action bar							
DBB	Doesn't blow back							
DCS	Double click in safety switch							
DCT	Double click in trigger							
DCU	Doesn't close-up							
DE	Doesn't eject		9					
DEL	Doesn't eject live round							
DFB	Doesn't feed back							
DFU	Doesn't feed up							
DLO	Doesn't lock open (after last shell)							
DLU	Doesn't lock-up							
DS	Dead safe							
DX	Doesn't extract							
DXL	Doesn't extract live round							
EDS	Extractor drops shell							
ESB	Ejector sticks back							
ESCR	Empty shell catches receiver							
ESS	Extractor stems shell							

FA	Fires automatically							
FB	Follower binds							
FC	Fails to connect							
FCB	Fore end cracked or broken							
FD	Follows down							
FF	Fails to fire							
FFP	Flat firing pin							
FOS	Fires on safe							
FPHB	Firing pin hits bbl							
FPHI	Firing pin hits inside rim							
FPO	Floor plate opens		2	2	2			
FPOH	Floor plate opens hard							
FSR	Fires when safe is released							
FT	Follower tips							
GCSO	Gas cyl shot off							
HBL	Heavy bolt lift							
HMSC	Heading mismatch-steps on case							
HPA	High pressure ammo							
HUR	Hard under rail							
JCS	Jumps cartridge							
JM	Jumps magazine							
JO	Jars off							
LB	Light blow							
MAH	Magazine assembles hard							
MCW	Magazine capacity wrong							
MFA	Misfires (ammo)							
MFOP	Magazine follower out of position							

ML	Magazine loose							
MLH	Magazine loads hard							
MRH	Magazine removes hard							
OH	Opens hard			7				
OR	Over-rides							
PH	Pulls hard							
PSI	Proof stamp illegible							
PSM	Proof stamp missing							
RBOC	Rings and bulges on case							
RDW	(Action) release doesn't work							
RIC	Rings in chamber							
RIS	Ring in sholder							
RS	Rim srem							
SBC	Stems bottom chambers							
SBE	Stems bbl extension							
SCB	Stock cracked or broken							
SCX	Shell catches							
SHI	Short indent							
SI	Stems incline					2		
SIC	Stems in chamber			4		2		
SL	shaves lead							
SLC	Stems left side of chamber							
SMOC	Stretch marks on case							
SOR	Stem over-ride			3				
SP	Stems port							
SR	Shoulder rough							
SRC	Stems right side of chamber							

SRIC	Specific rings in chamber								
SSOC	Surface scratches on case								
STC	Stems top chamber								
SWE	Safety switch works too easily			1					
SWH	Safety switch works too hard								
SWW	Safety Switch won't work								
TD	Tips down								
TU	Tips up								
TWP	Trigger won't pull								
TWR	Trigger won't retract								
UNCN-T	Uncoded								
XH	Extracts hard								
HI	High								
LO	Low								
LEFT	Left								
RIGHT	Right								
DG	Doesn't Group								
FSST	Front sight tipped								
RSTT	Rear sight tipped								
RSBR	Rear sight base raised								
FSTR	Front sight raised								
FSTL	Front sight loose								
RSTL	Rear sight loose								
MGPT-G	Missing parts at target								
UNCN-G	Uncoded nonconformity at target								

AI-P	Assembly incomplete at proof							
BBB	Barrel bracket cracked or broken at proof							
BC-P	Blows cases at proof							
BEB-P	Barrel extension broken at proof							
BLP-P	Blanked primer at proof							
BLSO-P	Barrel lug shot off at proof							
BP-P	Blown primer at proof							
BS-P	Barrel split at proof							
DBF-P	Damaged Bolt Face				1			
DLOS-P	Doesn't lock over shells at proof							
ESB-P	Ejector sticks back at proof							
FCB-P	Fore-end cracked at proof							
FESO-P	Fore-end shot off at proof							
FF-P	Fails to fire at proof							
GCSO-P	Gas cylinder shot off at proof							
MSI-P	Magnaflux stamp illegible on bbl							
MSM-P	Magnaflux stamp missing on bbl							
PP-P	Pierced primer at proof							
SCB-P	Stock cracked or broken at proof							
UNCM-P	Uncoded proof malfunctions							

Test Date:

**totals**[illegible]













<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>943</b>
	<b>Total Rejected:</b>	<b>77</b>
	<b>Overall Reject Rate:</b>	<b>8.17</b>

<b>Proof</b>	Shot:	260	80	212	25	126	37	15
	Rejected:	2	2	3	0	0	6	0
	Percent:	0.8	2.5	1.4	0.0	0.0	16.2	0.0
<b>Test</b>	Shot:	289	33	234	16	150	45	
	Rejected:	15	1	8	2	8	1	0
	Percent:	5.2	3.0	3.4	12.5	5.3	2.2	
<b>Target</b>	Shot:	27	3	23	10	15	24	
	Rejected:	0	0	0	0	0	0	0
	Percent:	0.0	0.0	0.0	0.0	0.0	0.0	

CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7
AB	Action binds							
BABS	Bulge at body shoulder							
BAC	Burr at chamber							
BBMA	BBL-to-bolt misalignment							
BB	Bolt binds/catches	1	1	2	1			
BCOBS	Bolt catches on bolt stop							
BCOF	Bolt catches on follower							
BC	Blows cases							
BHR	Bolt hits receiver							
BHS	Bolt plug hits safety switch							
BLOP	Bar lock or disconnecter out of position							
BLSO	Barrel lug shot off							
BPO	Bolt pulls out							
BSSM	Bolt stems shell in magazine							
BWCD	Bolt won't cam down							

BWCFM	Bolt won't close over full magazine					2		
CD	Case dented							
CH	Closes hard	1		1	1			
CLM	Can't load magazine							
CO	Cut-off							
CR	Cuts rim							
CS	Cases swell							
CTOG	Chamber torn or gouged							
CTP	Creepy trigger pull							
CWSB	Cams wrong side of action bar							
DBB	Doesn't blow back							
DCS	Double click in safety switch							
DCT	Double click in trigger							
DCU	Doesn't close-up							
DE	Doesn't eject							
DEL	Doesn't eject live round	2						
DFB	Doesn't feed back							
DFU	Doesn't feed up							
DLO	Doesn't lock open (after last shell)							
DLU	Doesn't lock-up							
DS	Dead safe							
DX	Doesn't extract	1						
DXL	Doesn't extract live round							
EDS	Extractor drops shell							
ESB	Ejector sticks back							
ESCR	Empty shell catches receiver							
ESS	Extractor stems shell							

FA	Fires automatically							
FB	Follower binds							
FC	Fails to connect							
FCB	Fore end cracked or broken							
FD	Follows down							
FF	Fails to fire							
FFP	Flat firing pin							
FOS	Fires on safe							
FPHB	Firing pin hits bbl							
FPHI	Firing pin hits inside rim							
FPO	Floor plate opens	1		1			1	
FPOH	Floor plate opens hard							
FSR	Fires when safe is released							
FT	Follower tips	1						
GCSO	Gas cyl shot off							
HBL	Heavy bolt lift							
HMSC	Heading mismatch-steps on case							
HPA	High pressure ammo							
HUR	Hard under rail							
JCS	Jumps cartridge							
JM	Jumps magazine	2						
JO	Jars off							
LB	Light blow							
MAH	Magazine assembles hard							
MCW	Magazine capacity wrong							
MFA	Misfires (ammo)							
MFOP	Magazine follower out of position							

ML	Magazine loose							
MLH	Magazine loads hard							
MRH	Magazine removes hard							
OH	Opens hard							
OR	Over-rides	1		2				
PH	Pulls hard							
PSI	Proof stamp illegible							
PSM	Proof stamp missing							
RBOC	Rings and bulges on case	1						
RDW	(Action) release doesn't work							
RIC	Rings in chamber	1						
RIS	Ring in sholder							
RS	Rim srem							
SBC	Stems bottom chambers	1						
SBE	Stems bbl extension							
SCB	Stock cracked or broken							
SCX	Shell catches							
SHI	Short indent							
SI	Stems incline					3		
SIC	Stems in chamber							
SL	shaves lead							
SLC	Stems left side of chamber							
SMOC	Stretch marks on case							
SOR	Stem over-ride	2				2		
SP	Stems port							
SR	Shoulder rough							
SRC	Stems right side of chamber							



SRIC	Specific rings in chamber							
SSOC	Surface scratches on case							
STC	Stems top chamber			2				
SWE	Safety switch works too easily					1		
SWH	Safety switch works too hard							
SWW	Safety Switch won't work							
TD	Tips down							
TU	Tips up							
TWP	Trigger won't pull							
TWR	Trigger won't retract							
UNCN-T	Uncoded							
XH	Extracts hard							
HI	High							
LO	Low							
LEFT	Left							
RIGHT	Right							
DG	Doesn't Group							
FSST	Front sight tipped							
RSTT	Rear sight tipped							
RSBR	Rear sight base raised							
FSTR	Front sight raised							
FSTL	Front sight loose							
RSTL	Rear sight loose							
MGPT-G	Missing parts at target							
UNCN-G	Uncoded nonconformity at target							

AI-P	Assembly incomplete at proof							
BBB	Barrel bracket cracked or broken at proof							
BC-P	Blows cases at proof							
BEB-P	Barrel extension broken at proof							
BLP-P	Blanked primer at proof							
BLSO-P	Barrel lug shot off at proof							
BP-P	Blown primer at proof							
BS-P	Barrel split at proof							
DBF-P	Damaged Bolt Face	2	1	3			6	
DLOS-P	Doesn't lock over shells at proof							
ESB-P	Ejector sticks back at proof		1					
FCB-P	Fore-end cracked at proof							
FESO-P	Fore-end shot off at proof							
FF-P	Fails to fire at proof							
GCSO-P	Gas cylinder shot off at proof							
MSI-P	Magnaflux stamp illegible on bbl							
MSM-P	Magnaflux stamp missing on bbl							
PP-P	Pierced primer at proof							
SCB-P	Stock cracked or broken at proof							
UNCM-P	Uncoded proof malfunctions							

Test Date:	totals

[illegible]













<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

<b>Proof</b>	Shot:							
	Rejected:	0	0	0	0	0	0	0
	Percent:							
<b>Test</b>	Shot:							
	Rejected:	0	0	0	0	0	0	0
	Percent:							
<b>Target</b>	Shot:							
	Rejected:	0	0	0	0	0	0	0
	Percent:							

CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7
AB	Action binds							
BABS	Bulge at body shoulder							
BAC	Burr at chamber							
BBMA	BBL-to-bolt misalignment							
BB	Bolt binds/catches							
BCOBS	Bolt catches on bolt stop							
BCOF	Bolt catches on follower							
BC	Blows cases							
BHR	Bolt hits receiver							
BHS	Bolt plug hits safety switch							
BLOP	Bar lock or disconnecter out of position							
BLSO	Barrel lug shot off							
BPO	Bolt pulls out							
BSSM	Bolt stems shell in magazine							
BWCD	Bolt won't cam down							

BWCFM	Bolt won't close over full magazine							
CD	Case dented							
CH	Closes hard							
CLM	Can't load magazine							
CO	Cut-off							
CR	Cuts rim							
CS	Cases swell							
CTOG	Chamber torn or gouged							
CTP	Creepy trigger pull							
CWSB	Cams wrong side of action bar							
DBB	Doesn't blow back							
DCS	Double click in safety switch							
DCT	Double click in trigger							
DCU	Doesn't close-up							
DE	Doesn't eject							
DEL	Doesn't eject live round							
DFB	Doesn't feed back							
DFU	Doesn't feed up							
DLO	Doesn't lock open (after last shell)							
DLU	Doesn't lock-up							
DS	Dead safe							
DX	Doesn't extract							
DXL	Doesn't extract live round							
EDS	Extractor drops shell							
ESB	Ejector sticks back							
ESCR	Empty shell catches receiver							
ESS	Extractor stems shell							

FA	Fires automatically								
FB	Follower binds								
FC	Fails to connect								
FCB	Fore end cracked or broken								
FD	Follows down								
FF	Fails to fire								
FFP	Flat firing pin								
FOS	Fires on safe								
FPHB	Firing pin hits bbl								
FPHI	Firing pin hits inside rim								
FPO	Floor plate opens								
FPOH	Floor plate opens hard								
FSR	Fires when safe is released								
FT	Follower tips								
GCSO	Gas cyl shot off								
HBL	Heavy bolt lift								
HMSC	Heading mismatch-steps on case								
HPA	High pressure ammo								
HUR	Hard under rail								
JCS	Jumps cartridge								
JM	Jumps magazine								
JO	Jars off								
LB	Light blow								
MAH	Magazine assembles hard								
MCW	Magazine capacity wrong								
MFA	Misfires (ammo)								
MFOP	Magazine follower out of position								

ML	Magazine loose								
MLH	Magazine loads hard								
MRH	Magazine removes hard								
OH	Opens hard								
OR	Over-rides								
PH	Pulls hard								
PSI	Proof stamp illegible								
PSM	Proof stamp missing								
RBOC	Rings and bulges on case								
RDW	(Action) release doesn't work								
RIC	Rings in chamber								
RIS	Ring in sholder								
RS	Rim srem								
SBC	Stems bottom chambers								
SBE	Stems bbl extension								
SCB	Stock cracked or broken								
SCX	Shell catches								
SHI	Short indent								
SI	Stems incline								
SIC	Stems in chamber								
SL	shaves lead								
SLC	Stems left side of chamber								
SMOC	Stretch marks on case								
SOR	Stem over-ride								
SP	Stems port								
SR	Shoulder rough								
SRC	Stems right side of chamber								

SRIC	Specific rings in chamber								
SSOC	Surface scratches on case								
STC	Stems top chamber								
SWE	Safety switch works too easily								
SWH	Safety switch works too hard								
SWW	Safety Switch won't work								
TD	Tips down								
TU	Tips up								
TWP	Trigger won't pull								
TWR	Trigger won't retract								
UNCN-T	Uncoded								
XH	Extracts hard								
HI	High								
LO	Low								
LEFT	Left								
RIGHT	Right								
DG	Doesn't Group								
FSST	Front sight tipped								
RSTT	Rear sight tipped								
RSBR	Rear sight base raised								
FSTR	Front sight raised								
FSTL	Front sight loose								
RSTL	Rear sight loose								
MGPT-G	Missing parts at target								
UNCN-G	Uncoded nonconformity at target								

AI-P	Assembly incomplete at proof							
BBB	Barrel bracket cracked or broken at proof							
BC-P	Blows cases at proof							
BEB-P	Barrel extension broken at proof							
BLP-P	Blanked primer at proof							
BLSO-P	Barrel lug shot off at proof							
BP-P	Blown primer at proof							
BS-P	Barrel split at proof							
DBF-P	Damaged Bolt Face							
DLOS-P	Doesn't lock over shells at proof							
ESB-P	Ejector sticks back at proof							
FCB-P	Fore-end cracked at proof							
FESO-P	Fore-end shot off at proof							
FF-P	Fails to fire at proof							
GCSO-P	Gas cylinder shot off at proof							
MSI-P	Magnaflux stamp illegible on bbl							
MSM-P	Magnaflux stamp missing on bbl							
PP-P	Pierced primer at proof							
SCB-P	Stock cracked or broken at proof							
UNCM-P	Uncoded proof malfunctions							

Test Date:	totals

[illegible][illegible][illegible]













<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

<b>Proof</b>	Shot:							
	Rejected:	0	0	0	0	0	0	0
	Percent:							
<b>Test</b>	Shot:							
	Rejected:	0	0	0	0	0	0	0
	Percent:							
<b>Target</b>	Shot:							
	Rejected:	0	0	0	0	0	0	0
	Percent:							

CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7
AB	Action binds							
BABS	Bulge at body shoulder							
BAC	Burr at chamber							
BBMA	BBL-to-bolt misalignment							
BB	Bolt binds/catches							
BCOBS	Bolt catches on bolt stop							
BCOF	Bolt catches on follower							
BC	Blows cases							
BHR	Bolt hits receiver							
BHS	Bolt plug hits safety switch							
BLOP	Bar lock or disconnecter out of position							
BLSO	Barrel lug shot off							
BPO	Bolt pulls out							
BSSM	Bolt stems shell in magazine							
BWCD	Bolt won't cam down							

BWCFM	Bolt won't close over full magazine							
CD	Case dented							
CH	Closes hard							
CLM	Can't load magazine							
CO	Cut-off							
CR	Cuts rim							
CS	Cases swell							
CTOG	Chamber torn or gouged							
CTP	Creepy trigger pull							
CWSB	Cams wrong side of action bar							
DBB	Doesn't blow back							
DCS	Double click in safety switch							
DCT	Double click in trigger							
DCU	Doesn't close-up							
DE	Doesn't eject							
DEL	Doesn't eject live round							
DFB	Doesn't feed back							
DFU	Doesn't feed up							
DLO	Doesn't lock open (after last shell)							
DLU	Doesn't lock-up							
DS	Dead safe							
DX	Doesn't extract							
DXL	Doesn't extract live round							
EDS	Extractor drops shell							
ESB	Ejector sticks back							
ESCR	Empty shell catches receiver							
ESS	Extractor stems shell							

FA	Fires automatically								
FB	Follower binds								
FC	Fails to connect								
FCB	Fore end cracked or broken								
FD	Follows down								
FF	Fails to fire								
FFP	Flat firing pin								
FOS	Fires on safe								
FPHB	Firing pin hits bbl								
FPHI	Firing pin hits inside rim								
FPO	Floor plate opens								
FPOH	Floor plate opens hard								
FSR	Fires when safe is released								
FT	Follower tips								
GCSO	Gas cyl shot off								
HBL	Heavy bolt lift								
HMSC	Heading mismatch-steps on case								
HPA	High pressure ammo								
HUR	Hard under rail								
JCS	Jumps cartridge								
JM	Jumps magazine								
JO	Jars off								
LB	Light blow								
MAH	Magazine assembles hard								
MCW	Magazine capacity wrong								
MFA	Misfires (ammo)								
MFOP	Magazine follower out of position								

ML	Magazine loose								
MLH	Magazine loads hard								
MRH	Magazine removes hard								
OH	Opens hard								
OR	Over-rides								
PH	Pulls hard								
PSI	Proof stamp illegible								
PSM	Proof stamp missing								
RBOC	Rings and bulges on case								
RDW	(Action) release doesn't work								
RIC	Rings in chamber								
RIS	Ring in sholder								
RS	Rim srem								
SBC	Stems bottom chambers								
SBE	Stems bbl extension								
SCB	Stock cracked or broken								
SCX	Shell catches								
SHI	Short indent								
SI	Stems incline								
SIC	Stems in chamber								
SL	shaves lead								
SLC	Stems left side of chamber								
SMOC	Stretch marks on case								
SOR	Stem over-ride								
SP	Stems port								
SR	Shoulder rough								
SRC	Stems right side of chamber								



SRIC	Specific rings in chamber								
SSOC	Surface scratches on case								
STC	Stems top chamber								
SWE	Safety switch works too easily								
SWH	Safety switch works too hard								
SWW	Safety Switch won't work								
TD	Tips down								
TU	Tips up								
TWP	Trigger won't pull								
TWR	Trigger won't retract								
UNCN-T	Uncoded								
XH	Extracts hard								
HI	High								
LO	Low								
LEFT	Left								
RIGHT	Right								
DG	Doesn't Group								
FSST	Front sight tipped								
RSTT	Rear sight tipped								
RSBR	Rear sight base raised								
FSTR	Front sight raised								
FSTL	Front sight loose								
RSTL	Rear sight loose								
MGPT-G	Missing parts at target								
UNCN-G	Uncoded nonconformity at target								

AI-P	Assembly incomplete at proof							
BBB	Barrel bracket cracked or broken at proof							
BC-P	Blows cases at proof							
BEB-P	Barrel extension broken at proof							
BLP-P	Blanked primer at proof							
BLSO-P	Barrel lug shot off at proof							
BP-P	Blown primer at proof							
BS-P	Barrel split at proof							
DBF-P	Damaged Bolt Face							
DLOS-P	Doesn't lock over shells at proof							
ESB-P	Ejector sticks back at proof							
FCB-P	Fore-end cracked at proof							
FESO-P	Fore-end shot off at proof							
FF-P	Fails to fire at proof							
GCSO-P	Gas cylinder shot off at proof							
MSI-P	Magnaflux stamp illegible on bbl							
MSM-P	Magnaflux stamp missing on bbl							
PP-P	Pierced primer at proof							
SCB-P	Stock cracked or broken at proof							
UNCM-P	Uncoded proof malfunctions							

Test Date:	totals

[illegible][illegible]

A vertical strip of a grid, likely representing a portion of a larger image. It features a black line and several rectangular regions filled with a cross-hatch pattern.

[illegible]













<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>954</b>
	<b>Total Rejected:</b>	<b>88</b>
	<b>Overall Reject Rate:</b>	<b>9.22</b>

<b>Proof</b>	Shot:	455	27	80	38		34	9
	Rejected:	2	0	4	5	0	0	2
	Percent:	0.4	0.0	5.0	13.2		0.0	22.2
<b>Test</b>	Shot:	511	40	117	35	12	28	5
	Rejected:	27	5	14	1	1	3	0
	Percent:	5.3	12.5	12.0	2.9	8.3	10.7	0.0
<b>Target</b>	Shot:	56	4	7	3		25	
	Rejected:	0	0	0	0	0	0	0
	Percent:	0.0	0.0	0.0	0.0		0.0	

CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7
AB	Action binds							
BABS	Bulge at body shoulder							
BAC	Burr at chamber		1					
BBMA	BBL-to-bolt misalignment							
BB	Bolt binds/catches	3		8				
BCOBS	Bolt catches on bolt stop							
BCOF	Bolt catches on follower							
BC	Blows cases							
BHR	Bolt hits receiver							
BHS	Bolt plug hits safety switch							
BLOP	Bar lock or disconnecter out of position							
BLSO	Barrel lug shot off							
BPO	Bolt pulls out							
BSSM	Bolt stems shell in magazine							
BWCD	Bolt won't cam down							

BWCFM	Bolt won't close over full magazine							
CD	Case dented							
CH	Closes hard			1			2	
CLM	Can't load magazine							
CO	Cut-off							
CR	Cuts rim							
CS	Cases swell							
CTOG	Chamber torn or gouged							
CTP	Creepy trigger pull							
CWSB	Cams wrong side of action bar							
DBB	Doesn't blow back							
DCS	Double click in safety switch							
DCT	Double click in trigger							
DCU	Doesn't close-up							
DE	Doesn't eject	3	1					
DEL	Doesn't eject live round	4			1	1		
DFB	Doesn't feed back							
DFU	Doesn't feed up							
DLO	Doesn't lock open (after last shell)							
DLU	Doesn't lock-up							
DS	Dead safe	2		1				
DX	Doesn't extract							
DXL	Doesn't extract live round							
EDS	Extractor drops shell	5						
ESB	Ejector sticks back							
ESCR	Empty shell catches receiver							
ESS	Extractor stems shell							

FA	Fires automatically							
FB	Follower binds							
FC	Fails to connect							
FCB	Fore end cracked or broken							
FD	Follows down							
FF	Fails to fire	1						
FFP	Flat firing pin							
FOS	Fires on safe							
FPHB	Firing pin hits bbl							
FPHI	Firing pin hits inside rim							
FPO	Floor plate opens	2				1		
FPOH	Floor plate opens hard							
FSR	Fires when safe is released							
FT	Follower tips							
GCSO	Gas cyl shot off							
HBL	Heavy bolt lift		1	4				
HMSC	Heading mismatch-steps on case							
HPA	High pressure ammo							
HUR	Hard under rail							
JCS	Jumps cartridge							
JM	Jumps magazine		2					
JO	Jars off							
LB	Light blow							
MAH	Magazine assembles hard							
MCW	Magazine capacity wrong							
MFA	Misfires (ammo)							
MFOP	Magazine follower out of position							

ML	Magazine loose								
MLH	Magazine loads hard								
MRH	Magazine removes hard								
OH	Opens hard								
OR	Over-rides	4							
PH	Pulls hard								
PSI	Proof stamp illegible								
PSM	Proof stamp missing								
RBOC	Rings and bulges on case								
RDW	(Action) release doesn't work								
RIC	Rings in chamber	1							
RIS	Ring in sholder								
RS	Rim srem								
SBC	Stems bottom chambers	1							
SBE	Stems bbl extension								
SCB	Stock cracked or broken								
SCX	Shell catches								
SHI	Short indent								
SI	Stems incline								
SIC	Stems in chamber								
SL	shaves lead								
SLC	Stems left side of chamber								
SMOC	Stretch marks on case								
SOR	Stem over-ride								
SP	Stems port								
SR	Shoulder rough								
SRC	Stems right side of chamber								

SRIC	Specific rings in chamber							
SSOC	Surface scratches on case							
STC	Stems top chamber							
SWE	Safety switch works too easily							
SWH	Safety switch works too hard							
SWW	Safety Switch won't work							
TD	Tips down							
TU	Tips up							
TWP	Trigger won't pull							
TWR	Trigger won't retract							
UNCN-T	Uncoded							
XH	Extracts hard	1						
HI	High							
LO	Low							
LEFT	Left							
RIGHT	Right							
DG	Doesn't Group							
FSST	Front sight tipped							
RSTT	Rear sight tipped							
RSBR	Rear sight base raised							
FSTR	Front sight raised							
FSTL	Front sight loose							
RSTL	Rear sight loose							
MGPT-G	Missing parts at target							
UNCN-G	Uncoded nonconformity at target							

AI-P	Assembly incomplete at proof							
BBB	Barrel bracket cracked or broken at proof							
BC-P	Blows cases at proof							
BEB-P	Barrel extension broken at proof							
BLP-P	Blanked primer at proof							
BLSO-P	Barrel lug shot off at proof							
BP-P	Blown primer at proof							
BS-P	Barrel split at proof							
DBF-P	Damaged Bolt Face	2		4	4			2
DLOS-P	Doesn't lock over shells at proof							
ESB-P	Ejector sticks back at proof							
FCB-P	Fore-end cracked at proof							
FESO-P	Fore-end shot off at proof							
FF-P	Fails to fire at proof				1			
GCSO-P	Gas cylinder shot off at proof							
MSI-P	Magnaflux stamp illegible on bbl							
MSM-P	Magnaflux stamp missing on bbl							
PP-P	Pierced primer at proof							
SCB-P	Stock cracked or broken at proof							
UNCM-P	Uncoded proof malfunctions							

[illegible]













<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>730</b>
	<b>Total Rejected:</b>	<b>52</b>
	<b>Overall Reject Rate:</b>	<b>7.12</b>

**Proof**

Shot:	101	93	283	2	145	2	1
Rejected:	0	0	3	0	0	0	0
Percent:	0.0	0.0	1.1	0.0	0.0	0.0	0.0

**Test**

Shot:	39	50	349	43	131	13	
Rejected:	1	3	13	12	4	2	0
Percent:	2.6	6.0	3.7	27.9	3.1	15.4	

**Target**

Shot:	3	4	23	3	13	12	
Rejected:	0	0	0	0	0	2	0
Percent:	0.0	0.0	0.0	0.0	0.0	16.7	

CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7
AB	Action binds							
BABS	Bulge at body shoulder							
BAC	Burr at chamber				7	1		
BBMA	BBL-to-bolt misalignment							
BB	Bolt binds/catches			3	3	1		
BCOBS	Bolt catches on bolt stop							
BCOF	Bolt catches on follower							
BC	Blows cases							
BHR	Bolt hits receiver							
BHS	Bolt plug hits safety switch							
BLOP	Bar lock or disconnecter out of position							
BLSO	Barrel lug shot off							
BPO	Bolt pulls out							
BSSM	Bolt stems shell in magazine							
BWCD	Bolt won't cam down							

BWCFM	Bolt won't close over full magazine							
CD	Case dented							
CH	Closes hard							
CLM	Can't load magazine							
CO	Cut-off							
CR	Cuts rim							
CS	Cases swell							
CTOG	Chamber torn or gouged							
CTP	Creepy trigger pull							
CWSB	Cams wrong side of action bar							
DBB	Doesn't blow back							
DCS	Double click in safety switch							
DCT	Double click in trigger							
DCU	Doesn't close-up							
DE	Doesn't eject							
DEL	Doesn't eject live round							
DFB	Doesn't feed back							
DFU	Doesn't feed up							
DLO	Doesn't lock open (after last shell)							
DLU	Doesn't lock-up							
DS	Dead safe		1	4		1		
DX	Doesn't extract							
DXL	Doesn't extract live round							
EDS	Extractor drops shell		1					
ESB	Ejector sticks back	1						
ESCR	Empty shell catches receiver							
ESS	Extractor stems shell							

FA	Fires automatically							
FB	Follower binds							
FC	Fails to connect							
FCB	Fore end cracked or broken							
FD	Follows down							
FF	Fails to fire							
FFP	Flat firing pin							
FOS	Fires on safe							
FPHB	Firing pin hits bbl							
FPHI	Firing pin hits inside rim							
FPO	Floor plate opens		1				1	
FPOH	Floor plate opens hard							
FSR	Fires when safe is released							
FT	Follower tips			1				
GCSO	Gas cyl shot off							
HBL	Heavy bolt lift					1		
HMSC	Heading mismatch-steps on case							
HPA	High pressure ammo							
HUR	Hard under rail			1				
JCS	Jumps cartridge							
JM	Jumps magazine							
JO	Jars off							
LB	Light blow							
MAH	Magazine assembles hard							
MCW	Magazine capacity wrong							
MFA	Misfires (ammo)							
MFOP	Magazine follower out of position							

ML	Magazine loose							
MLH	Magazine loads hard							
MRH	Magazine removes hard							
OH	Opens hard							
OR	Over-rides			1			1	
PH	Pulls hard							
PSI	Proof stamp illegible							
PSM	Proof stamp missing							
RBOC	Rings and bulges on case							
RDW	(Action) release doesn't work							
RIC	Rings in chamber				2			
RIS	Ring in sholder							
RS	Rim srem							
SBC	Stems bottom chambers							
SBE	Stems bbl extension							
SCB	Stock cracked or broken							
SCX	Shell catches							
SHI	Short indent							
SI	Stems incline			3				
SIC	Stems in chamber							
SL	shaves lead							
SLC	Stems left side of chamber							
SMOC	Stretch marks on case							
SOR	Stem over-ride							
SP	Stems port							
SR	Shoulder rough							
SRC	Stems right side of chamber							



SRIC	Specific rings in chamber								
SSOC	Surface scratches on case								
STC	Stems top chamber								
SWE	Safety switch works too easily								
SWH	Safety switch works too hard								
SWW	Safety Switch won't work								
TD	Tips down								
TU	Tips up								
TWP	Trigger won't pull								
TWR	Trigger won't retract								
UNCN-T	Uncoded								
XH	Extracts hard								
HI	High								
LO	Low								
LEFT	Left								
RIGHT	Right								
DG	Doesn't Group						2		
FSST	Front sight tipped								
RSTT	Rear sight tipped								
RSBR	Rear sight base raised								
FSTR	Front sight raised								
FSTL	Front sight loose								
RSTL	Rear sight loose								
MGPT-G	Missing parts at target								
UNCN-G	Uncoded nonconformity at target								

AI-P	Assembly incomplete at proof			1				
BBB	Barrel bracket cracked or broken at proof							
BC-P	Blows cases at proof							
BEB-P	Barrel extension broken at proof							
BLP-P	Blanked primer at proof							
BLSO-P	Barrel lug shot off at proof							
BP-P	Blown primer at proof							
BS-P	Barrel split at proof							
DBF-P	Damaged Bolt Face			2				
DLOS-P	Doesn't lock over shells at proof							
ESB-P	Ejector sticks back at proof							
FCB-P	Fore-end cracked at proof							
FESO-P	Fore-end shot off at proof							
FF-P	Fails to fire at proof							
GCSO-P	Gas cylinder shot off at proof							
MSI-P	Magnaflux stamp illegible on bbl							
MSM-P	Magnaflux stamp missing on bbl							
PP-P	Pierced primer at proof							
SCB-P	Stock cracked or broken at proof							
UNCM-P	Uncoded proof malfunctions							

Test Date: \_\_\_\_\_

[illegible]













<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>767</b>
	<b>Total Rejected:</b>	<b>55</b>
	<b>Overall Reject Rate:</b>	<b>7.17</b>

**Proof**

Shot:	183	223	185	57	55	2	
Rejected:	1	2	0	0	0	0	0
Percent:	0.5	0.9	0.0	0.0	0.0	0.0	

**Test**

Shot:	69	185	304	48	70		
Rejected:	3	9	12	7	3	0	0
Percent:	4.3	4.9	3.9	14.6	4.3		

**Target**

Shot:	6	13	14	3	2		
Rejected:	0	0	0	0	0	0	0
Percent:	0.0	0.0	0.0	0.0	0.0		

CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL& ADL	700 SS	700 CDL	700 POLICE	MODEL 7
AB	Action binds							
BABS	Bulge at body shoulder							
BAC	Burr at chamber				1			
BBMA	BBL-to-bolt misalignment							
BB	Bolt binds/catches	2	4	8	1	3		
BCOBS	Bolt catches on bolt stop							
BCOF	Bolt catches on follower							
BC	Blows cases							
BHR	Bolt hits receiver							
BHS	Bolt plug hits safety switch							
BLOP	Bar lock or disconnecter out of position							
BLSO	Barrel lug shot off							
BPO	Bolt pulls out							
BSSM	Bolt stems shell in magazine							
BWCD	Bolt won't cam down							

BWCFM	Bolt won't close over full magazine							
CD	Case dented							
CH	Closes hard							
CLM	Can't load magazine							
CO	Cut-off							
CR	Cuts rim							
CS	Cases swell							
CTOG	Chamber torn or gouged							
CTP	Creepy trigger pull							
CWSB	Cams wrong side of action bar							
DBB	Doesn't blow back							
DCS	Double click in safety switch							
DCT	Double click in trigger							
DCU	Doesn't close-up							
DE	Doesn't eject							
DEL	Doesn't eject live round							
DFB	Doesn't feed back							
DFU	Doesn't feed up							
DLO	Doesn't lock open (after last shell)							
DLU	Doesn't lock-up							
DS	Dead safe		1	2				
DX	Doesn't extract				1			
DXL	Doesn't extract live round							
EDS	Extractor drops shell			1				
ESB	Ejector sticks back							
ESCR	Empty shell catches receiver							
ESS	Extractor stems shell							

FA	Fires automatically							
FB	Follower binds							
FC	Fails to connect							
FCB	Fore end cracked or broken							
FD	Follows down		1					
FF	Fails to fire							
FFP	Flat firing pin							
FOS	Fires on safe							
FPHB	Firing pin hits bbl							
FPHI	Firing pin hits inside rim							
FPO	Floor plate opens		1					
FPOH	Floor plate opens hard							
FSR	Fires when safe is released							
FT	Follower tips	1						
GCSO	Gas cyl shot off							
HBL	Heavy bolt lift		2	1	1			
HMSC	Heading mismatch-steps on case							
HPA	High pressure ammo							
HUR	Hard under rail							
JCS	Jumps cartridge							
JM	Jumps magazine							
JO	Jars off							
LB	Light blow							
MAH	Magazine assembles hard							
MCW	Magazine capacity wrong							
MFA	Misfires (ammo)							
MFOP	Magazine follower out of position							

ML	Magazine loose								
MLH	Magazine loads hard								
MRH	Magazine removes hard								
OH	Opens hard								
OR	Over-rides								
PH	Pulls hard								
PSI	Proof stamp illegible								
PSM	Proof stamp missing								
RBOC	Rings and bulges on case								
RDW	(Action) release doesn't work								
RIC	Rings in chamber				3				
RIS	Ring in sholder								
RS	Rim srem								
SBC	Stems bottom chambers								
SBE	Stems bbl extension								
SCB	Stock cracked or broken								
SCX	Shell catches								
SHI	Short indent								
SI	Stems incline								
SIC	Stems in chamber								
SL	shaves lead								
SLC	Stems left side of chamber								
SMOC	Stretch marks on case								
SOR	Stem over-ride								
SP	Stems port								
SR	Shoulder rough								
SRC	Stems right side of chamber								

SRIC	Specific rings in chamber								
SSOC	Surface scratches on case								
STC	Stems top chamber								
SWE	Safety switch works too easily								
SWH	Safety switch works too hard								
SWW	Safety Switch won't work								
TD	Tips down								
TU	Tips up								
TWP	Trigger won't pull								
TWR	Trigger won't retract								
UNCN-T	Uncoded								
XH	Extracts hard								
HI	High								
LO	Low								
LEFT	Left								
RIGHT	Right								
DG	Doesn't Group								
FSST	Front sight tipped								
RSTT	Rear sight tipped								
RSBR	Rear sight base raised								
FSTR	Front sight raised								
FSTL	Front sight loose								
RSTL	Rear sight loose								
MGPT-G	Missing parts at target								
UNCN-G	Uncoded nonconformity at target								

AI-P	Assembly incomplete at proof							
BBB	Barrel bracket cracked or broken at proof							
BC-P	Blows cases at proof							
BEB-P	Barrel extension broken at proof							
BLP-P	Blanked primer at proof							
BLSO-P	Barrel lug shot off at proof							
BP-P	Blown primer at proof							
BS-P	Barrel split at proof							
DBF-P	Damaged Bolt Face							
DLOS-P	Doesn't lock over shells at proof							
ESB-P	Ejector sticks back at proof							
FCB-P	Fore-end cracked at proof							
FESO-P	Fore-end shot off at proof							
FF-P	Fails to fire at proof							
GCSO-P	Gas cylinder shot off at proof							
MSI-P	Magnaflux stamp illegible on bbl							
MSM-P	Magnaflux stamp missing on bbl							
PP-P	Pierced primer at proof							
SCB-P	Stock cracked or broken at proof							
UNCM-P	Uncoded proof malfunctions	1	2					

[illegible]













<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>741</b>
	<b>Total Rejected:</b>	<b>53</b>
	<b>Overall Reject Rate:</b>	<b>7.15</b>

**Proof**

Shot:	84	76	182	74	284	68	1
Rejected:	1	0	2	0	0	0	0
Percent:	1.2	0.0	1.1	0.0	0.0	0.0	0.0

**Test**

Shot:	70	15	286	127	212	24	
Rejected:	4	4	13	19	6	0	0
Percent:	5.7	26.7	4.5	15.0	2.8	0.0	

**Target**

Shot:	6	1	12	11	15	24	
Rejected:	0	0	0	0	0	0	0
Percent:	0.0	0.0	0.0	0.0	0.0	0.0	

CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7
AB	Action binds							
BABS	Bulge at body shoulder							
BAC	Burr at chamber							
BBMA	BBL-to-bolt misalignment							
BB	Bolt binds/catches		1	10	6	2		
BCOBS	Bolt catches on bolt stop							
BCOF	Bolt catches on follower							
BC	Blows cases							
BHR	Bolt hits receiver							
BHS	Bolt plug hits safety switch							
BLOP	Bar lock or disconnecter out of position							
BLSO	Barrel lug shot off							
BPO	Bolt pulls out							
BSSM	Bolt stems shell in magazine							
BWCD	Bolt won't cam down							

BWCFM	Bolt won't close over full magazine							
CD	Case dented							
CH	Closes hard				1			
CLM	Can't load magazine							
CO	Cut-off							
CR	Cuts rim							
CS	Cases swell							
CTOG	Chamber torn or gouged							
CTP	Creepy trigger pull							
CWSB	Cams wrong side of action bar							
DBB	Doesn't blow back							
DCS	Double click in safety switch							
DCT	Double click in trigger							
DCU	Doesn't close-up							
DE	Doesn't eject							
DEL	Doesn't eject live round							
DFB	Doesn't feed back							
DFU	Doesn't feed up							
DLO	Doesn't lock open (after last shell)							
DLU	Doesn't lock-up							
DS	Dead safe			1		1		
DX	Doesn't extract							
DXL	Doesn't extract live round							
EDS	Extractor drops shell							
ESB	Ejector sticks back					1		
ESCR	Empty shell catches receiver							
ESS	Extractor stems shell							

FA	Fires automatically							
FB	Follower binds							
FC	Fails to connect							
FCB	Fore end cracked or broken							
FD	Follows down							
FF	Fails to fire				1			
FFP	Flat firing pin							
FOS	Fires on safe							
FPHB	Firing pin hits bbl							
FPHI	Firing pin hits inside rim							
FPO	Floor plate opens					1		
FPOH	Floor plate opens hard							
FSR	Fires when safe is released							
FT	Follower tips				2			
GCSO	Gas cyl shot off							
HBL	Heavy bolt lift		1		2			
HMSC	Heading mismatch-steps on case							
HPA	High pressure ammo							
HUR	Hard under rail							
JCS	Jumps cartridge							
JM	Jumps magazine							
JO	Jars off							
LB	Light blow							
MAH	Magazine assembles hard							
MCW	Magazine capacity wrong							
MFA	Misfires (ammo)							
MFOP	Magazine follower out of position							

ML	Magazine loose							
MLH	Magazine loads hard							
MRH	Magazine removes hard							
OH	Opens hard							
OR	Over-rides							
PH	Pulls hard							
PSI	Proof stamp illegible							
PSM	Proof stamp missing							
RBOC	Rings and bulges on case							
RDW	(Action) release doesn't work							
RIC	Rings in chamber		1		3			
RIS	Ring in sholder							
RS	Rim srem							
SBC	Stems bottom chambers			2				
SBE	Stems bbl extension							
SCB	Stock cracked or broken							
SCX	Shell catches							
SHI	Short indent							
SI	Stems incline				3			
SIC	Stems in chamber							
SL	shaves lead							
SLC	Stems left side of chamber							
SMOC	Stretch marks on case							
SOR	Stem over-ride	3				1		
SP	Stems port							
SR	Shoulder rough							
SRC	Stems right side of chamber							



SRIC	Specific rings in chamber							
SSOC	Surface scratches on case							
STC	Stems top chamber							
SWE	Safety switch works too easily							
SWH	Safety switch works too hard							
SWW	Safety Switch won't work							
TD	Tips down							
TU	Tips up							
TWP	Trigger won't pull							
TWR	Trigger won't retract							
UNCN-T	Uncoded							
XH	Extracts hard	1	1	1				
HI	High							
LO	Low							
LEFT	Left							
RIGHT	Right							
DG	Doesn't Group							
FSST	Front sight tipped							
RSTT	Rear sight tipped							
RSBR	Rear sight base raised							
FSTR	Front sight raised							
FSTL	Front sight loose							
RSTL	Rear sight loose							
MGPT-G	Missing parts at target							
UNCN-G	Uncoded nonconformity at target							

AI-P	Assembly incomplete at proof							
BBB	Barrel bracket cracked or broken at proof							
BC-P	Blows cases at proof							
BEB-P	Barrel extension broken at proof							
BLP-P	Blanked primer at proof							
BLSO-P	Barrel lug shot off at proof							
BP-P	Blown primer at proof							
BS-P	Barrel split at proof							
DBF-P	Damaged Bolt face			2				
DLOS-P	Doesn't lock over shells at proof							
ESB-P	Ejector sticks back at proof							
FCB-P	Fore-end cracked at proof							
FESO-P	Fore-end shot off at proof							
FF-P	Fails to fire at proof							
GCSO-P	Gas cylinder shot off at proof							
MSI-P	Magnaflux stamp illegible on bbl							
MSM-P	Magnaflux stamp missing on bbl							
PP-P	Pierced primer at proof							
SCB-P	Stock cracked or broken at proof							
UNCM-P	Uncoded proof malfunctions	1						

Test Date:	totals

[illegible]













<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

<b>Proof</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						
<b>Test</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						
<b>Target</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						

CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7
AB	Action binds							
BABS	Bulge at body shoulder							
BAC	Burr at chamber							
BBMA	BBL-to-bolt misalignment							
BB	Bolt binds/catches							
BCOBS	Bolt catches on bolt stop							
BCOF	Bolt catches on follower							
BC	Blows cases							
BHR	Bolt hits receiver							
BHS	Bolt plug hits safety switch							
BLOP	Bar lock or disconnecter out of position							
BLSO	Barrel lug shot off							
BPO	Bolt pulls out							
BSSM	Bolt stems shell in magazine							
BWCD	Bolt won't cam down							

BWCFM	Bolt won't close over full magazine							
CD	Case dented							
CH	Closes hard							
CLM	Can't load magazine							
CO	Cut-off							
CR	Cuts rim							
CS	Cases swell							
CTOG	Chamber torn or gouged							
CTP	Creepy trigger pull							
CWSB	Cams wrong side of action bar							
DBB	Doesn't blow back							
DCS	Double click in safety switch							
DCT	Double click in trigger							
DCU	Doesn't close-up							
DE	Doesn't eject							
DEL	Doesn't eject live round							
DFB	Doesn't feed back							
DFU	Doesn't feed up							
DLO	Doesn't lock open (after last shell)							
DLU	Doesn't lock-up							
DS	Dead safe							
DX	Doesn't extract							
DXL	Doesn't extract live round							
EDS	Extractor drops shell							
ESB	Ejector sticks back							
ESCR	Empty shell catches receiver							
ESS	Extractor stems shell							

FA	Fires automatically								
FB	Follower binds								
FC	Fails to connect								
FCB	Fore end cracked or broken								
FD	Follows down								
FF	Fails to fire								
FFP	Flat firing pin								
FOS	Fires on safe								
FPHB	Firing pin hits bbl								
FPHI	Firing pin hits inside rim								
FPO	Floor plate opens								
FPOH	Floor plate opens hard								
FSR	Fires when safe is released								
FT	Follower tips								
GCSO	Gas cyl shot off								
HBL	Heavy bolt lift								
HMSC	Heading mismatch-steps on case								
HPA	High pressure ammo								
HUR	Hard under rail								
JCS	Jumps cartridge								
JM	Jumps magazine								
JO	Jars off								
LB	Light blow								
MAH	Magazine assembles hard								
MCW	Magazine capacity wrong								
MFA	Misfires (ammo)								
MFOP	Magazine follower out of position								

ML	Magazine loose								
MLH	Magazine loads hard								
MRH	Magazine removes hard								
OH	Opens hard								
OR	Over-rides								
PH	Pulls hard								
PSI	Proof stamp illegible								
PSM	Proof stamp missing								
RBOC	Rings and bulges on case								
RDW	(Action) release doesn't work								
RIC	Rings in chamber								
RIS	Ring in sholder								
RS	Rim srem								
SBC	Stems bottom chambers								
SBE	Stems bbl extension								
SCB	Stock cracked or broken								
SCX	Shell catches								
SHI	Short indent								
SI	Stems incline								
SIC	Stems in chamber								
SL	shaves lead								
SLC	Stems left side of chamber								
SMOC	Stretch marks on case								
SOR	Stem over-ride								
SP	Stems port								
SR	Shoulder rough								
SRC	Stems right side of chamber								

SRIC	Specific rings in chamber								
SSOC	Surface scratches on case								
STC	Stems top chamber								
SWE	Safety switch works too easily								
SWH	Safety switch works too hard								
SWW	Safety Switch won't work								
TD	Tips down								
TU	Tips up								
TWP	Trigger won't pull								
TWR	Trigger won't retract								
UNCN-T	Uncoded								
XH	Extracts hard								
HI	High								
LO	Low								
LEFT	Left								
RIGHT	Right								
DG	Doesn't Group								
FSST	Front sight tipped								
RSTT	Rear sight tipped								
RSBR	Rear sight base raised								
FSTR	Front sight raised								
FSTL	Front sight loose								
RSTL	Rear sight loose								
MGPT-G	Missing parts at target								
UNCN-G	Uncoded nonconformity at target								

AI-P	Assembly incomplete at proof							
BBB	Barrel bracket cracked or broken at proof							
BC-P	Blows cases at proof							
BEB-P	Barrel extension broken at proof							
BLP-P	Blanked primer at proof							
BLSO-P	Barrel lug shot off at proof							
BP-P	Blown primer at proof							
BS-P	Barrel split at proof							
DBF-P	Damaged Bolt Face							
DLOS-P	Doesn't lock over shells at proof							
ESB-P	Ejector sticks back at proof							
FCB-P	Fore-end cracked at proof							
FESO-P	Fore-end shot off at proof							
FF-P	Fails to fire at proof							
GCSO-P	Gas cylinder shot off at proof							
MSI-P	Magnaflux stamp illegible on bbl							
MSM-P	Magnaflux stamp missing on bbl							
PP-P	Pierced primer at proof							
SCB-P	Stock cracked or broken at proof							
UNCM-P	Uncoded proof malfunctions							

Test Date:	totals

[illegible][illegible][illegible][illegible]













<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

<b>Proof</b>	Shot:							
	Rejected:	0	0	0	0	0	0	0
	Percent:							
<b>Test</b>	Shot:							
	Rejected:	0	0	0	0	0	0	0
	Percent:							
<b>Target</b>	Shot:							
	Rejected:	0	0	0	0	0	0	0
	Percent:							

CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7
AB	Action binds							
BABS	Bulge at body shoulder							
BAC	Burr at chamber							
BBMA	BBL-to-bolt misalignment							
BB	Bolt binds/catches							
BCOBS	Bolt catches on bolt stop							
BCOF	Bolt catches on follower							
BC	Blows cases							
BHR	Bolt hits receiver							
BHS	Bolt plug hits safety switch							
BLOP	Bar lock or disconnecter out of position							
BLSO	Barrel lug shot off							
BPO	Bolt pulls out							
BSSM	Bolt stems shell in magazine							
BWCD	Bolt won't cam down							

BWCFM	Bolt won't close over full magazine							
CD	Case dented							
CH	Closes hard							
CLM	Can't load magazine							
CO	Cut-off							
CR	Cuts rim							
CS	Cases swell							
CTOG	Chamber torn or gouged							
CTP	Creepy trigger pull							
CWSB	Cams wrong side of action bar							
DBB	Doesn't blow back							
DCS	Double click in safety switch							
DCT	Double click in trigger							
DCU	Doesn't close-up							
DE	Doesn't eject							
DEL	Doesn't eject live round							
DFB	Doesn't feed back							
DFU	Doesn't feed up							
DLO	Doesn't lock open (after last shell)							
DLU	Doesn't lock-up							
DS	Dead safe							
DX	Doesn't extract							
DXL	Doesn't extract live round							
EDS	Extractor drops shell							
ESB	Ejector sticks back							
ESCR	Empty shell catches receiver							
ESS	Extractor stems shell							

FA	Fires automatically								
FB	Follower binds								
FC	Fails to connect								
FCB	Fore end cracked or broken								
FD	Follows down								
FF	Fails to fire								
FFP	Flat firing pin								
FOS	Fires on safe								
FPHB	Firing pin hits bbl								
FPHI	Firing pin hits inside rim								
FPO	Floor plate opens								
FPOH	Floor plate opens hard								
FSR	Fires when safe is released								
FT	Follower tips								
GCSO	Gas cyl shot off								
HBL	Heavy bolt lift								
HMSC	Heading mismatch-steps on case								
HPA	High pressure ammo								
HUR	Hard under rail								
JCS	Jumps cartridge								
JM	Jumps magazine								
JO	Jars off								
LB	Light blow								
MAH	Magazine assembles hard								
MCW	Magazine capacity wrong								
MFA	Misfires (ammo)								
MFOP	Magazine follower out of position								

ML	Magazine loose								
MLH	Magazine loads hard								
MRH	Magazine removes hard								
OH	Opens hard								
OR	Over-rides								
PH	Pulls hard								
PSI	Proof stamp illegible								
PSM	Proof stamp missing								
RBOC	Rings and bulges on case								
RDW	(Action) release doesn't work								
RIC	Rings in chamber								
RIS	Ring in sholder								
RS	Rim srem								
SBC	Stems bottom chambers								
SBE	Stems bbl extension								
SCB	Stock cracked or broken								
SCX	Shell catches								
SHI	Short indent								
SI	Stems incline								
SIC	Stems in chamber								
SL	shaves lead								
SLC	Stems left side of chamber								
SMOC	Stretch marks on case								
SOR	Stem over-ride								
SP	Stems port								
SR	Shoulder rough								
SRC	Stems right side of chamber								



SRIC	Specific rings in chamber								
SSOC	Surface scratches on case								
STC	Stems top chamber								
SWE	Safety switch works too easily								
SWH	Safety switch works too hard								
SWW	Safety Switch won't work								
TD	Tips down								
TU	Tips up								
TWP	Trigger won't pull								
TWR	Trigger won't retract								
UNCN-T	Uncoded								
XH	Extracts hard								
HI	High								
LO	Low								
LEFT	Left								
RIGHT	Right								
DG	Doesn't Group								
FSST	Front sight tipped								
RSTT	Rear sight tipped								
RSBR	Rear sight base raised								
FSTR	Front sight raised								
FSTL	Front sight loose								
RSTL	Rear sight loose								
MGPT-G	Missing parts at target								
UNCN-G	Uncoded nonconformity at target								

AI-P	Assembly incomplete at proof							
BBB	Barrel bracket cracked or broken at proof							
BC-P	Blows cases at proof							
BEB-P	Barrel extension broken at proof							
BLP-P	Blanked primer at proof							
BLSO-P	Barrel lug shot off at proof							
BP-P	Blown primer at proof							
BS-P	Barrel split at proof							
DBF-P	Damaged Bolt Face							
DLOS-P	Doesn't lock over shells at proof							
ESB-P	Ejector sticks back at proof							
FCB-P	Fore-end cracked at proof							
FESO-P	Fore-end shot off at proof							
FF-P	Fails to fire at proof							
GCSO-P	Gas cylinder shot off at proof							
MSI-P	Magnaflux stamp illegible on bbl							
MSM-P	Magnaflux stamp missing on bbl							
PP-P	Pierced primer at proof							
SCB-P	Stock cracked or broken at proof							
UNCM-P	Uncoded proof malfunctions							

Test Date:	totals

[illegible][illegible]

A vertical strip of a grid, likely representing a portion of a larger image. It features a black line and several shaded regions with a cross-hatch pattern.

[illegible]













<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

<b>Proof</b>	Shot:							
	Rejected:	0	0	0	0	0	0	0
	Percent:							
<b>Test</b>	Shot:							
	Rejected:	0	0	0	0	0	0	0
	Percent:							
<b>Target</b>	Shot:							
	Rejected:	0	0	0	0	0	0	0
	Percent:							

CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7
AB	Action binds							
BABS	Bulge at body shoulder							
BAC	Burr at chamber							
BBMA	BBL-to-bolt misalignment							
BB	Bolt binds/catches							
BCOBS	Bolt catches on bolt stop							
BCOF	Bolt catches on follower							
BC	Blows cases							
BHR	Bolt hits receiver							
BHS	Bolt plug hits safety switch							
BLOP	Bar lock or disconnecter out of position							
BLSO	Barrel lug shot off							
BPO	Bolt pulls out							
BSSM	Bolt stems shell in magazine							
BWCD	Bolt won't cam down							

BWCFM	Bolt won't close over full magazine							
CD	Case dented							
CH	Closes hard							
CLM	Can't load magazine							
CO	Cut-off							
CR	Cuts rim							
CS	Cases swell							
CTOG	Chamber torn or gouged							
CTP	Creepy trigger pull							
CWSB	Cams wrong side of action bar							
DBB	Doesn't blow back							
DCS	Double click in safety switch							
DCT	Double click in trigger							
DCU	Doesn't close-up							
DE	Doesn't eject							
DEL	Doesn't eject live round							
DFB	Doesn't feed back							
DFU	Doesn't feed up							
DLO	Doesn't lock open (after last shell)							
DLU	Doesn't lock-up							
DS	Dead safe							
DX	Doesn't extract							
DXL	Doesn't extract live round							
EDS	Extractor drops shell							
ESB	Ejector sticks back							
ESCR	Empty shell catches receiver							
ESS	Extractor stems shell							

FA	Fires automatically								
FB	Follower binds								
FC	Fails to connect								
FCB	Fore end cracked or broken								
FD	Follows down								
FF	Fails to fire								
FFP	Flat firing pin								
FOS	Fires on safe								
FPHB	Firing pin hits bbl								
FPHI	Firing pin hits inside rim								
FPO	Floor plate opens								
FPOH	Floor plate opens hard								
FSR	Fires when safe is released								
FT	Follower tips								
GCSO	Gas cyl shot off								
HBL	Heavy bolt lift								
HMSC	Heading mismatch-steps on case								
HPA	High pressure ammo								
HUR	Hard under rail								
JCS	Jumps cartridge								
JM	Jumps magazine								
JO	Jars off								
LB	Light blow								
MAH	Magazine assembles hard								
MCW	Magazine capacity wrong								
MFA	Misfires (ammo)								
MFOP	Magazine follower out of position								

ML	Magazine loose								
MLH	Magazine loads hard								
MRH	Magazine removes hard								
OH	Opens hard								
OR	Over-rides								
PH	Pulls hard								
PSI	Proof stamp illegible								
PSM	Proof stamp missing								
RBOC	Rings and bulges on case								
RDW	(Action) release doesn't work								
RIC	Rings in chamber								
RIS	Ring in sholder								
RS	Rim srem								
SBC	Stems bottom chambers								
SBE	Stems bbl extension								
SCB	Stock cracked or broken								
SCX	Shell catches								
SHI	Short indent								
SI	Stems incline								
SIC	Stems in chamber								
SL	shaves lead								
SLC	Stems left side of chamber								
SMOC	Stretch marks on case								
SOR	Stem over-ride								
SP	Stems port								
SR	Shoulder rough								
SRC	Stems right side of chamber								

SRIC	Specific rings in chamber								
SSOC	Surface scratches on case								
STC	Stems top chamber								
SWE	Safety switch works too easily								
SWH	Safety switch works too hard								
SWW	Safety Switch won't work								
TD	Tips down								
TU	Tips up								
TWP	Trigger won't pull								
TWR	Trigger won't retract								
UNCN-T	Uncoded								
XH	Extracts hard								
HI	High								
LO	Low								
LEFT	Left								
RIGHT	Right								
DG	Doesn't Group								
FSST	Front sight tipped								
RSTT	Rear sight tipped								
RSBR	Rear sight base raised								
FSTR	Front sight raised								
FSTL	Front sight loose								
RSTL	Rear sight loose								
MGPT-G	Missing parts at target								
UNCN-G	Uncoded nonconformity at target								

AI-P	Assembly incomplete at proof							
BBB	Barrel bracket cracked or broken at proof							
BC-P	Blows cases at proof							
BEB-P	Barrel extension broken at proof							
BLP-P	Blanked primer at proof							
BLSO-P	Barrel lug shot off at proof							
BP-P	Blown primer at proof							
BS-P	Barrel split at proof							
DBF-P	Damaged Bolt Face							
DLOS-P	Doesn't lock over shells at proof							
ESB-P	Ejector sticks back at proof							
FCB-P	Fore-end cracked at proof							
FESO-P	Fore-end shot off at proof							
FF-P	Fails to fire at proof							
GCSO-P	Gas cylinder shot off at proof							
MSI-P	Magnaflux stamp illegible on bbl							
MSM-P	Magnaflux stamp missing on bbl							
PP-P	Pierced primer at proof							
SCB-P	Stock cracked or broken at proof							
UNCM-P	Uncoded proof malfunctions							

Test Date:	totals

[illegible][illegible][illegible]













<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

<b>Proof</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						
<b>Test</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						
<b>Target</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						

CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7
AB	Action binds							
BABS	Bulge at body shoulder							
BAC	Burr at chamber							
BBMA	BBL-to-bolt misalignment							
BB	Bolt binds/catches							
BCOBS	Bolt catches on bolt stop							
BCOF	Bolt catches on follower							
BC	Blows cases							
BHR	Bolt hits receiver							
BHS	Bolt plug hits safety switch							
BLOP	Bar lock or disconnecter out of position							
BLSO	Barrel lug shot off							
BPO	Bolt pulls out							
BSSM	Bolt stems shell in magazine							
BWCD	Bolt won't cam down							

BWCFM	Bolt won't close over full magazine							
CD	Case dented							
CH	Closes hard							
CLM	Can't load magazine							
CO	Cut-off							
CR	Cuts rim							
CS	Cases swell							
CTOG	Chamber torn or gouged							
CTP	Creepy trigger pull							
CWSB	Cams wrong side of action bar							
DBB	Doesn't blow back							
DCS	Double click in safety switch							
DCT	Double click in trigger							
DCU	Doesn't close-up							
DE	Doesn't eject							
DEL	Doesn't eject live round							
DFB	Doesn't feed back							
DFU	Doesn't feed up							
DLO	Doesn't lock open (after last shell)							
DLU	Doesn't lock-up							
DS	Dead safe							
DX	Doesn't extract							
DXL	Doesn't extract live round							
EDS	Extractor drops shell							
ESB	Ejector sticks back							
ESCR	Empty shell catches receiver							
ESS	Extractor stems shell							

FA	Fires automatically								
FB	Follower binds								
FC	Fails to connect								
FCB	Fore end cracked or broken								
FD	Follows down								
FF	Fails to fire								
FFP	Flat firing pin								
FOS	Fires on safe								
FPHB	Firing pin hits bbl								
FPHI	Firing pin hits inside rim								
FPO	Floor plate opens								
FPOH	Floor plate opens hard								
FSR	Fires when safe is released								
FT	Follower tips								
GCSO	Gas cyl shot off								
HBL	Heavy bolt lift								
HMSC	Heading mismatch-steps on case								
HPA	High pressure ammo								
HUR	Hard under rail								
JCS	Jumps cartridge								
JM	Jumps magazine								
JO	Jars off								
LB	Light blow								
MAH	Magazine assembles hard								
MCW	Magazine capacity wrong								
MFA	Misfires (ammo)								
MFOP	Magazine follower out of position								

ML	Magazine loose								
MLH	Magazine loads hard								
MRH	Magazine removes hard								
OH	Opens hard								
OR	Over-rides								
PH	Pulls hard								
PSI	Proof stamp illegible								
PSM	Proof stamp missing								
RBOC	Rings and bulges on case								
RDW	(Action) release doesn't work								
RIC	Rings in chamber								
RIS	Ring in sholder								
RS	Rim srem								
SBC	Stems bottom chambers								
SBE	Stems bbl extension								
SCB	Stock cracked or broken								
SCX	Shell catches								
SHI	Short indent								
SI	Stems incline								
SIC	Stems in chamber								
SL	shaves lead								
SLC	Stems left side of chamber								
SMOC	Stretch marks on case								
SOR	Stem over-ride								
SP	Stems port								
SR	Shoulder rough								
SRC	Stems right side of chamber								



SRIC	Specific rings in chamber								
SSOC	Surface scratches on case								
STC	Stems top chamber								
SWE	Safety switch works too easily								
SWH	Safety switch works too hard								
SWW	Safety Switch won't work								
TD	Tips down								
TU	Tips up								
TWP	Trigger won't pull								
TWR	Trigger won't retract								
UNCN-T	Uncoded								
XH	Extracts hard								
HI	High								
LO	Low								
LEFT	Left								
RIGHT	Right								
DG	Doesn't Group								
FSST	Front sight tipped								
RSTT	Rear sight tipped								
RSBR	Rear sight base raised								
FSTR	Front sight raised								
FSTL	Front sight loose								
RSTL	Rear sight loose								
MGPT-G	Missing parts at target								
UNCN-G	Uncoded nonconformity at target								

AI-P	Assembly incomplete at proof							
BBB	Barrel bracket cracked or broken at proof							
BC-P	Blows cases at proof							
BEB-P	Barrel extension broken at proof							
BLP-P	Blanked primer at proof							
BLSO-P	Barrel lug shot off at proof							
BP-P	Blown primer at proof							
BS-P	Barrel split at proof							
DBF-P	Damaged Bolt Face							
DLOS-P	Doesn't lock over shells at proof							
ESB-P	Ejector sticks back at proof							
FCB-P	Fore-end cracked at proof							
FESO-P	Fore-end shot off at proof							
FF-P	Fails to fire at proof							
GCSO-P	Gas cylinder shot off at proof							
MSI-P	Magnaflux stamp illegible on bbl							
MSM-P	Magnaflux stamp missing on bbl							
PP-P	Pierced primer at proof							
SCB-P	Stock cracked or broken at proof							
UNCM-P	Uncoded proof malfunctions							

Test Date:	totals

[illegible][illegible][illegible]













<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

<b>Proof</b>	Shot:							
	Rejected:	0	0	0	0	0	0	0
	Percent:							
<b>Test</b>	Shot:							
	Rejected:	0	0	0	0	0	0	0
	Percent:							
<b>Target</b>	Shot:							
	Rejected:	0	0	0	0	0	0	0
	Percent:							

CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7
AB	Action binds							
BABS	Bulge at body shoulder							
BAC	Burr at chamber							
BBMA	BBL-to-bolt misalignment							
BB	Bolt binds/catches							
BCOBS	Bolt catches on bolt stop							
BCOF	Bolt catches on follower							
BC	Blows cases							
BHR	Bolt hits receiver							
BHS	Bolt plug hits safety switch							
BLOP	Bar lock or disconnecter out of position							
BLSO	Barrel lug shot off							
BPO	Bolt pulls out							
BSSM	Bolt stems shell in magazine							
BWCD	Bolt won't cam down							

BWCFM	Bolt won't close over full magazine							
CD	Case dented							
CH	Closes hard							
CLM	Can't load magazine							
CO	Cut-off							
CR	Cuts rim							
CS	Cases swell							
CTOG	Chamber torn or gouged							
CTP	Creepy trigger pull							
CWSB	Cams wrong side of action bar							
DBB	Doesn't blow back							
DCS	Double click in safety switch							
DCT	Double click in trigger							
DCU	Doesn't close-up							
DE	Doesn't eject							
DEL	Doesn't eject live round							
DFB	Doesn't feed back							
DFU	Doesn't feed up							
DLO	Doesn't lock open (after last shell)							
DLU	Doesn't lock-up							
DS	Dead safe							
DX	Doesn't extract							
DXL	Doesn't extract live round							
EDS	Extractor drops shell							
ESB	Ejector sticks back							
ESCR	Empty shell catches receiver							
ESS	Extractor stems shell							

FA	Fires automatically								
FB	Follower binds								
FC	Fails to connect								
FCB	Fore end cracked or broken								
FD	Follows down								
FF	Fails to fire								
FFP	Flat firing pin								
FOS	Fires on safe								
FPHB	Firing pin hits bbl								
FPHI	Firing pin hits inside rim								
FPO	Floor plate opens								
FPOH	Floor plate opens hard								
FSR	Fires when safe is released								
FT	Follower tips								
GCSO	Gas cyl shot off								
HBL	Heavy bolt lift								
HMSC	Heading mismatch-steps on case								
HPA	High pressure ammo								
HUR	Hard under rail								
JCS	Jumps cartridge								
JM	Jumps magazine								
JO	Jars off								
LB	Light blow								
MAH	Magazine assembles hard								
MCW	Magazine capacity wrong								
MFA	Misfires (ammo)								
MFOP	Magazine follower out of position								

ML	Magazine loose								
MLH	Magazine loads hard								
MRH	Magazine removes hard								
OH	Opens hard								
OR	Over-rides								
PH	Pulls hard								
PSI	Proof stamp illegible								
PSM	Proof stamp missing								
RBOC	Rings and bulges on case								
RDW	(Action) release doesn't work								
RIC	Rings in chamber								
RIS	Ring in sholder								
RS	Rim srem								
SBC	Stems bottom chambers								
SBE	Stems bbl extension								
SCB	Stock cracked or broken								
SCX	Shell catches								
SHI	Short indent								
SI	Stems incline								
SIC	Stems in chamber								
SL	shaves lead								
SLC	Stems left side of chamber								
SMOC	Stretch marks on case								
SOR	Stem over-ride								
SP	Stems port								
SR	Shoulder rough								
SRC	Stems right side of chamber								

SRIC	Specific rings in chamber								
SSOC	Surface scratches on case								
STC	Stems top chamber								
SWE	Safety switch works too easily								
SWH	Safety switch works too hard								
SWW	Safety Switch won't work								
TD	Tips down								
TU	Tips up								
TWP	Trigger won't pull								
TWR	Trigger won't retract								
UNCN-T	Uncoded								
XH	Extracts hard								
HI	High								
LO	Low								
LEFT	Left								
RIGHT	Right								
DG	Doesn't Group								
FSST	Front sight tipped								
RSTT	Rear sight tipped								
RSBR	Rear sight base raised								
FSTR	Front sight raised								
FSTL	Front sight loose								
RSTL	Rear sight loose								
MGPT-G	Missing parts at target								
UNCN-G	Uncoded nonconformity at target								

AI-P	Assembly incomplete at proof							
BBB	Barrel bracket cracked or broken at proof							
BC-P	Blows cases at proof							
BEB-P	Barrel extension broken at proof							
BLP-P	Blanked primer at proof							
BLSO-P	Barrel lug shot off at proof							
BP-P	Blown primer at proof							
BS-P	Barrel split at proof							
DBF-P	Damaged Bolt Face							
DLOS-P	Doesn't lock over shells at proof							
ESB-P	Ejector sticks back at proof							
FCB-P	Fore-end cracked at proof							
FESO-P	Fore-end shot off at proof							
FF-P	Fails to fire at proof							
GCSO-P	Gas cylinder shot off at proof							
MSI-P	Magnaflux stamp illegible on bbl							
MSM-P	Magnaflux stamp missing on bbl							
PP-P	Pierced primer at proof							
SCB-P	Stock cracked or broken at proof							
UNCM-P	Uncoded proof malfunctions							

Test Date:	totals

[illegible][illegible][illegible]













<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

<b>Proof</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						
<b>Test</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						
<b>Target</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						

CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7
AB	Action binds							
BABS	Bulge at body shoulder							
BAC	Burr at chamber							
BBMA	BBL-to-bolt misalignment							
BB	Bolt binds/catches							
BCOBS	Bolt catches on bolt stop							
BCOF	Bolt catches on follower							
BC	Blows cases							
BHR	Bolt hits receiver							
BHS	Bolt plug hits safety switch							
BLOP	Bar lock or disconnecter out of position							
BLSO	Barrel lug shot off							
BPO	Bolt pulls out							
BSSM	Bolt stems shell in magazine							
BWCD	Bolt won't cam down							

BWCFM	Bolt won't close over full magazine							
CD	Case dented							
CH	Closes hard							
CLM	Can't load magazine							
CO	Cut-off							
CR	Cuts rim							
CS	Cases swell							
CTOG	Chamber torn or gouged							
CTP	Creepy trigger pull							
CWSB	Cams wrong side of action bar							
DBB	Doesn't blow back							
DCS	Double click in safety switch							
DCT	Double click in trigger							
DCU	Doesn't close-up							
DE	Doesn't eject							
DEL	Doesn't eject live round							
DFB	Doesn't feed back							
DFU	Doesn't feed up							
DLO	Doesn't lock open (after last shell)							
DLU	Doesn't lock-up							
DS	Dead safe							
DX	Doesn't extract							
DXL	Doesn't extract live round							
EDS	Extractor drops shell							
ESB	Ejector sticks back							
ESCR	Empty shell catches receiver							
ESS	Extractor stems shell							

FA	Fires automatically								
FB	Follower binds								
FC	Fails to connect								
FCB	Fore end cracked or broken								
FD	Follows down								
FF	Fails to fire								
FFP	Flat firing pin								
FOS	Fires on safe								
FPHB	Firing pin hits bbl								
FPHI	Firing pin hits inside rim								
FPO	Floor plate opens								
FPOH	Floor plate opens hard								
FSR	Fires when safe is released								
FT	Follower tips								
GCSO	Gas cyl shot off								
HBL	Heavy bolt lift								
HMSC	Heading mismatch-steps on case								
HPA	High pressure ammo								
HUR	Hard under rail								
JCS	Jumps cartridge								
JM	Jumps magazine								
JO	Jars off								
LB	Light blow								
MAH	Magazine assembles hard								
MCW	Magazine capacity wrong								
MFA	Misfires (ammo)								
MFOP	Magazine follower out of position								

ML	Magazine loose								
MLH	Magazine loads hard								
MRH	Magazine removes hard								
OH	Opens hard								
OR	Over-rides								
PH	Pulls hard								
PSI	Proof stamp illegible								
PSM	Proof stamp missing								
RBOC	Rings and bulges on case								
RDW	(Action) release doesn't work								
RIC	Rings in chamber								
RIS	Ring in sholder								
RS	Rim srem								
SBC	Stems bottom chambers								
SBE	Stems bbl extension								
SCB	Stock cracked or broken								
SCX	Shell catches								
SHI	Short indent								
SI	Stems incline								
SIC	Stems in chamber								
SL	shaves lead								
SLC	Stems left side of chamber								
SMOC	Stretch marks on case								
SOR	Stem over-ride								
SP	Stems port								
SR	Shoulder rough								
SRC	Stems right side of chamber								



SRIC	Specific rings in chamber								
SSOC	Surface scratches on case								
STC	Stems top chamber								
SWE	Safety switch works too easily								
SWH	Safety switch works too hard								
SWW	Safety Switch won't work								
TD	Tips down								
TU	Tips up								
TWP	Trigger won't pull								
TWR	Trigger won't retract								
UNCN-T	Uncoded								
XH	Extracts hard								
HI	High								
LO	Low								
LEFT	Left								
RIGHT	Right								
DG	Doesn't Group								
FSST	Front sight tipped								
RSTT	Rear sight tipped								
RSBR	Rear sight base raised								
FSTR	Front sight raised								
FSTL	Front sight loose								
RSTL	Rear sight loose								
MGPT-G	Missing parts at target								
UNCN-G	Uncoded nonconformity at target								

AI-P	Assembly incomplete at proof							
BBB	Barrel bracket cracked or broken at proof							
BC-P	Blows cases at proof							
BEB-P	Barrel extension broken at proof							
BLP-P	Blanked primer at proof							
BLSO-P	Barrel lug shot off at proof							
BP-P	Blown primer at proof							
BS-P	Barrel split at proof							
DBF-P	Damaged Bolt Face							
DLOS-P	Doesn't lock over shells at proof							
ESB-P	Ejector sticks back at proof							
FCB-P	Fore-end cracked at proof							
FESO-P	Fore-end shot off at proof							
FF-P	Fails to fire at proof							
GCSO-P	Gas cylinder shot off at proof							
MSI-P	Magnaflux stamp illegible on bbl							
MSM-P	Magnaflux stamp missing on bbl							
PP-P	Pierced primer at proof							
SCB-P	Stock cracked or broken at proof							
UNCM-P	Uncoded proof malfunctions							















<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

<b>Proof</b>	Shot:							
	Rejected:	0	0	0	0	0	0	0
	Percent:							
<b>Test</b>	Shot:							
	Rejected:	0	0	0	0	0	0	0
	Percent:							
<b>Target</b>	Shot:							
	Rejected:	0	0	0	0	0	0	0
	Percent:							

CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7
AB	Action binds							
BABS	Bulge at body shoulder							
BAC	Burr at chamber							
BBMA	BBL-to-bolt misalignment							
BB	Bolt binds/catches							
BCOBS	Bolt catches on bolt stop							
BCOF	Bolt catches on follower							
BC	Blows cases							
BHR	Bolt hits receiver							
BHS	Bolt plug hits safety switch							
BLOP	Bar lock or disconnecter out of position							
BLSO	Barrel lug shot off							
BPO	Bolt pulls out							
BSSM	Bolt stems shell in magazine							
BWCD	Bolt won't cam down							

BWCFM	Bolt won't close over full magazine							
CD	Case dented							
CH	Closes hard							
CLM	Can't load magazine							
CO	Cut-off							
CR	Cuts rim							
CS	Cases swell							
CTOG	Chamber torn or gouged							
CTP	Creepy trigger pull							
CWSB	Cams wrong side of action bar							
DBB	Doesn't blow back							
DCS	Double click in safety switch							
DCT	Double click in trigger							
DCU	Doesn't close-up							
DE	Doesn't eject							
DEL	Doesn't eject live round							
DFB	Doesn't feed back							
DFU	Doesn't feed up							
DLO	Doesn't lock open (after last shell)							
DLU	Doesn't lock-up							
DS	Dead safe							
DX	Doesn't extract							
DXL	Doesn't extract live round							
EDS	Extractor drops shell							
ESB	Ejector sticks back							
ESCR	Empty shell catches receiver							
ESS	Extractor stems shell							

FA	Fires automatically								
FB	Follower binds								
FC	Fails to connect								
FCB	Fore end cracked or broken								
FD	Follows down								
FF	Fails to fire								
FFP	Flat firing pin								
FOS	Fires on safe								
FPHB	Firing pin hits bbl								
FPHI	Firing pin hits inside rim								
FPO	Floor plate opens								
FPOH	Floor plate opens hard								
FSR	Fires when safe is released								
FT	Follower tips								
GCSO	Gas cyl shot off								
HBL	Heavy bolt lift								
HMSC	Heading mismatch-steps on case								
HPA	High pressure ammo								
HUR	Hard under rail								
JCS	Jumps cartridge								
JM	Jumps magazine								
JO	Jars off								
LB	Light blow								
MAH	Magazine assembles hard								
MCW	Magazine capacity wrong								
MFA	Misfires (ammo)								
MFOP	Magazine follower out of position								

ML	Magazine loose								
MLH	Magazine loads hard								
MRH	Magazine removes hard								
OH	Opens hard								
OR	Over-rides								
PH	Pulls hard								
PSI	Proof stamp illegible								
PSM	Proof stamp missing								
RBOC	Rings and bulges on case								
RDW	(Action) release doesn't work								
RIC	Rings in chamber								
RIS	Ring in sholder								
RS	Rim srem								
SBC	Stems bottom chambers								
SBE	Stems bbl extension								
SCB	Stock cracked or broken								
SCX	Shell catches								
SHI	Short indent								
SI	Stems incline								
SIC	Stems in chamber								
SL	shaves lead								
SLC	Stems left side of chamber								
SMOC	Stretch marks on case								
SOR	Stem over-ride								
SP	Stems port								
SR	Shoulder rough								
SRC	Stems right side of chamber								

SRIC	Specific rings in chamber								
SSOC	Surface scratches on case								
STC	Stems top chamber								
SWE	Safety switch works too easily								
SWH	Safety switch works too hard								
SWW	Safety Switch won't work								
TD	Tips down								
TU	Tips up								
TWP	Trigger won't pull								
TWR	Trigger won't retract								
UNCN-T	Uncoded								
XH	Extracts hard								
HI	High								
LO	Low								
LEFT	Left								
RIGHT	Right								
DG	Doesn't Group								
FSST	Front sight tipped								
RSTT	Rear sight tipped								
RSBR	Rear sight base raised								
FSTR	Front sight raised								
FSTL	Front sight loose								
RSTL	Rear sight loose								
MGPT-G	Missing parts at target								
UNCN-G	Uncoded nonconformity at target								

AI-P	Assembly incomplete at proof							
BBB	Barrel bracket cracked or broken at proof							
BC-P	Blows cases at proof							
BEB-P	Barrel extension broken at proof							
BLP-P	Blanked primer at proof							
BLSO-P	Barrel lug shot off at proof							
BP-P	Blown primer at proof							
BS-P	Barrel split at proof							
DBF-P	Damaged Bolt Face							
DLOS-P	Doesn't lock over shells at proof							
ESB-P	Ejector sticks back at proof							
FCB-P	Fore-end cracked at proof							
FESO-P	Fore-end shot off at proof							
FF-P	Fails to fire at proof							
GCSO-P	Gas cylinder shot off at proof							
MSI-P	Magnaflux stamp illegible on bbl							
MSM-P	Magnaflux stamp missing on bbl							
PP-P	Pierced primer at proof							
SCB-P	Stock cracked or broken at proof							
UNCM-P	Uncoded proof malfunctions							

Test Date:	totals

[illegible][illegible][illegible][illegible]













<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

<b>Proof</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						
<b>Test</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						
<b>Target</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						

CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7
AB	Action binds							
BABS	Bulge at body shoulder							
BAC	Burr at chamber							
BBMA	BBL-to-bolt misalignment							
BB	Bolt binds/catches							
BCOBS	Bolt catches on bolt stop							
BCOF	Bolt catches on follower							
BC	Blows cases							
BHR	Bolt hits receiver							
BHS	Bolt plug hits safety switch							
BLOP	Bar lock or disconnecter out of position							
BLSO	Barrel lug shot off							
BPO	Bolt pulls out							
BSSM	Bolt stems shell in magazine							
BWCD	Bolt won't cam down							

BWCFM	Bolt won't close over full magazine							
CD	Case dented							
CH	Closes hard							
CLM	Can't load magazine							
CO	Cut-off							
CR	Cuts rim							
CS	Cases swell							
CTOG	Chamber torn or gouged							
CTP	Creepy trigger pull							
CWSB	Cams wrong side of action bar							
DBB	Doesn't blow back							
DCS	Double click in safety switch							
DCT	Double click in trigger							
DCU	Doesn't close-up							
DE	Doesn't eject							
DEL	Doesn't eject live round							
DFB	Doesn't feed back							
DFU	Doesn't feed up							
DLO	Doesn't lock open (after last shell)							
DLU	Doesn't lock-up							
DS	Dead safe							
DX	Doesn't extract							
DXL	Doesn't extract live round							
EDS	Extractor drops shell							
ESB	Ejector sticks back							
ESCR	Empty shell catches receiver							
ESS	Extractor stems shell							

FA	Fires automatically								
FB	Follower binds								
FC	Fails to connect								
FCB	Fore end cracked or broken								
FD	Follows down								
FF	Fails to fire								
FFP	Flat firing pin								
FOS	Fires on safe								
FPHB	Firing pin hits bbl								
FPHI	Firing pin hits inside rim								
FPO	Floor plate opens								
FPOH	Floor plate opens hard								
FSR	Fires when safe is released								
FT	Follower tips								
GCSO	Gas cyl shot off								
HBL	Heavy bolt lift								
HMSC	Heading mismatch-steps on case								
HPA	High pressure ammo								
HUR	Hard under rail								
JCS	Jumps cartridge								
JM	Jumps magazine								
JO	Jars off								
LB	Light blow								
MAH	Magazine assembles hard								
MCW	Magazine capacity wrong								
MFA	Misfires (ammo)								
MFOP	Magazine follower out of position								

ML	Magazine loose								
MLH	Magazine loads hard								
MRH	Magazine removes hard								
OH	Opens hard								
OR	Over-rides								
PH	Pulls hard								
PSI	Proof stamp illegible								
PSM	Proof stamp missing								
RBOC	Rings and bulges on case								
RDW	(Action) release doesn't work								
RIC	Rings in chamber								
RIS	Ring in sholder								
RS	Rim srem								
SBC	Stems bottom chambers								
SBE	Stems bbl extension								
SCB	Stock cracked or broken								
SCX	Shell catches								
SHI	Short indent								
SI	Stems incline								
SIC	Stems in chamber								
SL	shaves lead								
SLC	Stems left side of chamber								
SMOC	Stretch marks on case								
SOR	Stem over-ride								
SP	Stems port								
SR	Shoulder rough								
SRC	Stems right side of chamber								



SRIC	Specific rings in chamber								
SSOC	Surface scratches on case								
STC	Stems top chamber								
SWE	Safety switch works too easily								
SWH	Safety switch works too hard								
SWW	Safety Switch won't work								
TD	Tips down								
TU	Tips up								
TWP	Trigger won't pull								
TWR	Trigger won't retract								
UNCN-T	Uncoded								
XH	Extracts hard								
HI	High								
LO	Low								
LEFT	Left								
RIGHT	Right								
DG	Doesn't Group								
FSST	Front sight tipped								
RSTT	Rear sight tipped								
RSBR	Rear sight base raised								
FSTR	Front sight raised								
FSTL	Front sight loose								
RSTL	Rear sight loose								
MGPT-G	Missing parts at target								
UNCN-G	Uncoded nonconformity at target								

AI-P	Assembly incomplete at proof							
BBB	Barrel bracket cracked or broken at proof							
BC-P	Blows cases at proof							
BEB-P	Barrel extension broken at proof							
BLP-P	Blanked primer at proof							
BLSO-P	Barrel lug shot off at proof							
BP-P	Blown primer at proof							
BS-P	Barrel split at proof							
DBF-P	Damaged Bolt Face							
DLOS-P	Doesn't lock over shells at proof							
ESB-P	Ejector sticks back at proof							
FCB-P	Fore-end cracked at proof							
FESO-P	Fore-end shot off at proof							
FF-P	Fails to fire at proof							
GCSO-P	Gas cylinder shot off at proof							
MSI-P	Magnaflux stamp illegible on bbl							
MSM-P	Magnaflux stamp missing on bbl							
PP-P	Pierced primer at proof							
SCB-P	Stock cracked or broken at proof							
UNCM-P	Uncoded proof malfunctions							

Test Date:	totals

[illegible][illegible][illegible][illegible]













<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

<b>Proof</b>	Shot:							
	Rejected:	0	0	0	0	0	0	0
	Percent:							
<b>Test</b>	Shot:							
	Rejected:	0	0	0	0	0	0	0
	Percent:							
<b>Target</b>	Shot:							
	Rejected:	0	0	0	0	0	0	0
	Percent:							

CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7
AB	Action binds							
BABS	Bulge at body shoulder							
BAC	Burr at chamber							
BBMA	BBL-to-bolt misalignment							
BB	Bolt binds/catches							
BCOBS	Bolt catches on bolt stop							
BCOF	Bolt catches on follower							
BC	Blows cases							
BHR	Bolt hits receiver							
BHS	Bolt plug hits safety switch							
BLOP	Bar lock or disconnecter out of position							
BLSO	Barrel lug shot off							
BPO	Bolt pulls out							
BSSM	Bolt stems shell in magazine							
BWCD	Bolt won't cam down							

BWCFM	Bolt won't close over full magazine							
CD	Case dented							
CH	Closes hard							
CLM	Can't load magazine							
CO	Cut-off							
CR	Cuts rim							
CS	Cases swell							
CTOG	Chamber torn or gouged							
CTP	Creepy trigger pull							
CWSB	Cams wrong side of action bar							
DBB	Doesn't blow back							
DCS	Double click in safety switch							
DCT	Double click in trigger							
DCU	Doesn't close-up							
DE	Doesn't eject							
DEL	Doesn't eject live round							
DFB	Doesn't feed back							
DFU	Doesn't feed up							
DLO	Doesn't lock open (after last shell)							
DLU	Doesn't lock-up							
DS	Dead safe							
DX	Doesn't extract							
DXL	Doesn't extract live round							
EDS	Extractor drops shell							
ESB	Ejector sticks back							
ESCR	Empty shell catches receiver							
ESS	Extractor stems shell							

FA	Fires automatically								
FB	Follower binds								
FC	Fails to connect								
FCB	Fore end cracked or broken								
FD	Follows down								
FF	Fails to fire								
FFP	Flat firing pin								
FOS	Fires on safe								
FPHB	Firing pin hits bbl								
FPHI	Firing pin hits inside rim								
FPO	Floor plate opens								
FPOH	Floor plate opens hard								
FSR	Fires when safe is released								
FT	Follower tips								
GCSO	Gas cyl shot off								
HBL	Heavy bolt lift								
HMSC	Heading mismatch-steps on case								
HPA	High pressure ammo								
HUR	Hard under rail								
JCS	Jumps cartridge								
JM	Jumps magazine								
JO	Jars off								
LB	Light blow								
MAH	Magazine assembles hard								
MCW	Magazine capacity wrong								
MFA	Misfires (ammo)								
MFOP	Magazine follower out of position								

ML	Magazine loose								
MLH	Magazine loads hard								
MRH	Magazine removes hard								
OH	Opens hard								
OR	Over-rides								
PH	Pulls hard								
PSI	Proof stamp illegible								
PSM	Proof stamp missing								
RBOC	Rings and bulges on case								
RDW	(Action) release doesn't work								
RIC	Rings in chamber								
RIS	Ring in sholder								
RS	Rim srem								
SBC	Stems bottom chambers								
SBE	Stems bbl extension								
SCB	Stock cracked or broken								
SCX	Shell catches								
SHI	Short indent								
SI	Stems incline								
SIC	Stems in chamber								
SL	shaves lead								
SLC	Stems left side of chamber								
SMOC	Stretch marks on case								
SOR	Stem over-ride								
SP	Stems port								
SR	Shoulder rough								
SRC	Stems right side of chamber								

SRIC	Specific rings in chamber								
SSOC	Surface scratches on case								
STC	Stems top chamber								
SWE	Safety switch works too easily								
SWH	Safety switch works too hard								
SWW	Safety Switch won't work								
TD	Tips down								
TU	Tips up								
TWP	Trigger won't pull								
TWR	Trigger won't retract								
UNCN-T	Uncoded								
XH	Extracts hard								
HI	High								
LO	Low								
LEFT	Left								
RIGHT	Right								
DG	Doesn't Group								
FSST	Front sight tipped								
RSTT	Rear sight tipped								
RSBR	Rear sight base raised								
FSTR	Front sight raised								
FSTL	Front sight loose								
RSTL	Rear sight loose								
MGPT-G	Missing parts at target								
UNCN-G	Uncoded nonconformity at target								

AI-P	Assembly incomplete at proof							
BBB	Barrel bracket cracked or broken at proof							
BC-P	Blows cases at proof							
BEB-P	Barrel extension broken at proof							
BLP-P	Blanked primer at proof							
BLSO-P	Barrel lug shot off at proof							
BP-P	Blown primer at proof							
BS-P	Barrel split at proof							
DBF-P	Damaged Bolt Face							
DLOS-P	Doesn't lock over shells at proof							
ESB-P	Ejector sticks back at proof							
FCB-P	Fore-end cracked at proof							
FESO-P	Fore-end shot off at proof							
FF-P	Fails to fire at proof							
GCSO-P	Gas cylinder shot off at proof							
MSI-P	Magnaflux stamp illegible on bbl							
MSM-P	Magnaflux stamp missing on bbl							
PP-P	Pierced primer at proof							
SCB-P	Stock cracked or broken at proof							
UNCM-P	Uncoded proof malfunctions							

Test Date:	totals

[illegible][illegible]

A vertical strip of a grid, likely representing a portion of a larger image. It features a black line and several shaded regions with a cross-hatch pattern.

[illegible]













<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

<b>Proof</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						
<b>Test</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						
<b>Target</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						

CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7
AB	Action binds							
BABS	Bulge at body shoulder							
BAC	Burr at chamber							
BBMA	BBL-to-bolt misalignment							
BB	Bolt binds/catches							
BCOBS	Bolt catches on bolt stop							
BCOF	Bolt catches on follower							
BC	Blows cases							
BHR	Bolt hits receiver							
BHS	Bolt plug hits safety switch							
BLOP	Bar lock or disconnecter out of position							
BLSO	Barrel lug shot off							
BPO	Bolt pulls out							
BSSM	Bolt stems shell in magazine							
BWCD	Bolt won't cam down							

BWCFM	Bolt won't close over full magazine								
CD	Case dented								
CH	Closes hard								
CLM	Can't load magazine								
CO	Cut-off								
CR	Cuts rim								
CS	Cases swell								
CTOG	Chamber torn or gouged								
CTP	Creepy trigger pull								
CWSB	Cams wrong side of action bar								
DBB	Doesn't blow back								
DCS	Double click in safety switch								
DCT	Double click in trigger								
DCU	Doesn't close-up								
DE	Doesn't eject								
DEL	Doesn't eject live round								
DFB	Doesn't feed back								
DFU	Doesn't feed up								
DLO	Doesn't lock open (after last shell)								
DLU	Doesn't lock-up								
DS	Dead safe								
DX	Doesn't extract								
DXL	Doesn't extract live round								
EDS	Extractor drops shell								
ESB	Ejector sticks back								
ESCR	Empty shell catches receiver								
ESS	Extractor stems shell								

FA	Fires automatically								
FB	Follower binds								
FC	Fails to connect								
FCB	Fore end cracked or broken								
FD	Follows down								
FF	Fails to fire								
FFP	Flat firing pin								
FOS	Fires on safe								
FPHB	Firing pin hits bbl								
FPHI	Firing pin hits inside rim								
FPO	Floor plate opens								
FPOH	Floor plate opens hard								
FSR	Fires when safe is released								
FT	Follower tips								
GCSO	Gas cyl shot off								
HBL	Heavy bolt lift								
HMSC	Heading mismatch-steps on case								
HPA	High pressure ammo								
HUR	Hard under rail								
JCS	Jumps cartridge								
JM	Jumps magazine								
JO	Jars off								
LB	Light blow								
MAH	Magazine assembles hard								
MCW	Magazine capacity wrong								
MFA	Misfires (ammo)								
MFOP	Magazine follower out of position								

ML	Magazine loose								
MLH	Magazine loads hard								
MRH	Magazine removes hard								
OH	Opens hard								
OR	Over-rides								
PH	Pulls hard								
PSI	Proof stamp illegible								
PSM	Proof stamp missing								
RBOC	Rings and bulges on case								
RDW	(Action) release doesn't work								
RIC	Rings in chamber								
RIS	Ring in sholder								
RS	Rim srem								
SBC	Stems bottom chambers								
SBE	Stems bbl extension								
SCB	Stock cracked or broken								
SCX	Shell catches								
SHI	Short indent								
SI	Stems incline								
SIC	Stems in chamber								
SL	shaves lead								
SLC	Stems left side of chamber								
SMOC	Stretch marks on case								
SOR	Stem over-ride								
SP	Stems port								
SR	Shoulder rough								
SRC	Stems right side of chamber								



SRIC	Specific rings in chamber								
SSOC	Surface scratches on case								
STC	Stems top chamber								
SWE	Safety switch works too easily								
SWH	Safety switch works too hard								
SWW	Safety Switch won't work								
TD	Tips down								
TU	Tips up								
TWP	Trigger won't pull								
TWR	Trigger won't retract								
UNCN-T	Uncoded								
XH	Extracts hard								
HI	High								
LO	Low								
LEFT	Left								
RIGHT	Right								
DG	Doesn't Group								
FSST	Front sight tipped								
RSTT	Rear sight tipped								
RSBR	Rear sight base raised								
FSTR	Front sight raised								
FSTL	Front sight loose								
RSTL	Rear sight loose								
MGPT-G	Missing parts at target								
UNCN-G	Uncoded nonconformity at target								

AI-P	Assembly incomplete at proof							
BBB	Barrel bracket cracked or broken at proof							
BC-P	Blows cases at proof							
BEB-P	Barrel extension broken at proof							
BLP-P	Blanked primer at proof							
BLSO-P	Barrel lug shot off at proof							
BP-P	Blown primer at proof							
BS-P	Barrel split at proof							
DBF-P	Damaged Bolt Face							
DLOS-P	Doesn't lock over shells at proof							
ESB-P	Ejector sticks back at proof							
FCB-P	Fore-end cracked at proof							
FESO-P	Fore-end shot off at proof							
FF-P	Fails to fire at proof							
GCSO-P	Gas cylinder shot off at proof							
MSI-P	Magnaflux stamp illegible on bbl							
MSM-P	Magnaflux stamp missing on bbl							
PP-P	Pierced primer at proof							
SCB-P	Stock cracked or broken at proof							
UNCM-P	Uncoded proof malfunctions							

Test Date:	totals

[illegible][illegible][illegible]













Summary	Total Test + Proof Failures	0
	Total Rejected:	0
	Overall Reject Rate:	

Proof	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						
Test	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						
Target	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						

CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7
AB	Action binds							
BABS	Bulge at body shoulder							
BAC	Burr at chamber							
BBMA	BBL-to-bolt misalignment							
BB	Bolt binds/catches							
BCOBS	Bolt catches on bolt stop							
BCOF	Bolt catches on follower							
BC	Blows cases							
BHR	Bolt hits receiver							
BHS	Bolt plug hits safety switch							
BLOP	Bar lock or disconnecter out of position							
BLSO	Barrel lug shot off							
BPO	Bolt pulls out							
BSSM	Bolt stems shell in magazine							
BWCD	Bolt won't cam down							

BWCFM	Bolt won't close over full magazine							
CD	Case dented							
CH	Closes hard							
CLM	Can't load magazine							
CO	Cut-off							
CR	Cuts rim							
CS	Cases swell							
CTOG	Chamber torn or gouged							
CTP	Creepy trigger pull							
CWSB	Cams wrong side of action bar							
DBB	Doesn't blow back							
DCS	Double click in safety switch							
DCT	Double click in trigger							
DCU	Doesn't close-up							
DE	Doesn't eject							
DEL	Doesn't eject live round							
DFB	Doesn't feed back							
DFU	Doesn't feed up							
DLO	Doesn't lock open (after last shell)							
DLU	Doesn't lock-up							
DS	Dead safe							
DX	Doesn't extract							
DXL	Doesn't extract live round							
EDS	Extractor drops shell							
ESB	Ejector sticks back							
ESCR	Empty shell catches receiver							
ESS	Extractor stems shell							

FA	Fires automatically								
FB	Follower binds								
FC	Fails to connect								
FCB	Fore end cracked or broken								
FD	Follows down								
FF	Fails to fire								
FFP	Flat firing pin								
FOS	Fires on safe								
FPHB	Firing pin hits bbl								
FPHI	Firing pin hits inside rim								
FPO	Floor plate opens								
FPOH	Floor plate opens hard								
FSR	Fires when safe is released								
FT	Follower tips								
GCSO	Gas cyl shot off								
HBL	Heavy bolt lift								
HMSC	Heading mismatch-steps on case								
HPA	High pressure ammo								
HUR	Hard under rail								
JCS	Jumps cartridge								
JM	Jumps magazine								
JO	Jars off								
LB	Light blow								
MAH	Magazine assembles hard								
MCW	Magazine capacity wrong								
MFA	Misfires (ammo)								
MFOP	Magazine follower out of position								

ML	Magazine loose								
MLH	Magazine loads hard								
MRH	Magazine removes hard								
OH	Opens hard								
OR	Over-rides								
PH	Pulls hard								
PSI	Proof stamp illegible								
PSM	Proof stamp missing								
RBOC	Rings and bulges on case								
RDW	(Action) release doesn't work								
RIC	Rings in chamber								
RIS	Ring in sholder								
RS	Rim srem								
SBC	Stems bottom chambers								
SBE	Stems bbl extension								
SCB	Stock cracked or broken								
SCX	Shell catches								
SHI	Short indent								
SI	Stems incline								
SIC	Stems in chamber								
SL	shaves lead								
SLC	Stems left side of chamber								
SMOC	Stretch marks on case								
SOR	Stem over-ride								
SP	Stems port								
SR	Shoulder rough								
SRC	Stems right side of chamber								

SRIC	Specific rings in chamber								
SSOC	Surface scratches on case								
STC	Stems top chamber								
SWE	Safety switch works too easily								
SWH	Safety switch works too hard								
SWW	Safety Switch won't work								
TD	Tips down								
TU	Tips up								
TWP	Trigger won't pull								
TWR	Trigger won't retract								
UNCN-T	Uncoded								
XH	Extracts hard								
HI	High								
LO	Low								
LEFT	Left								
RIGHT	Right								
DG	Doesn't Group								
FSST	Front sight tipped								
RSTT	Rear sight tipped								
RSBR	Rear sight base raised								
FSTR	Front sight raised								
FSTL	Front sight loose								
RSTL	Rear sight loose								
MGPT-G	Missing parts at target								
UNCN-G	Uncoded nonconformity at target								

AI-P	Assembly incomplete at proof							
BBB	Barrel bracket cracked or broken at proof							
BC-P	Blows cases at proof							
BEB-P	Barrel extension broken at proof							
BLP-P	Blanked primer at proof							
BLSO-P	Barrel lug shot off at proof							
BP-P	Blown primer at proof							
BS-P	Barrel split at proof							
DBF-P	Damaged Bolt Face							
DLOS-P	Doesn't lock over shells at proof							
ESB-P	Ejector sticks back at proof							
FCB-P	Fore-end cracked at proof							
FESO-P	Fore-end shot off at proof							
FF-P	Fails to fire at proof							
GCSO-P	Gas cylinder shot off at proof							
MSI-P	Magnaflux stamp illegible on bbl							
MSM-P	Magnaflux stamp missing on bbl							
PP-P	Pierced primer at proof							
SCB-P	Stock cracked or broken at proof							
UNCM-P	Uncoded proof malfunctions							

Test Date:	totals

[illegible][illegible][illegible]













<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

<b>Proof</b>	Shot:							
	Rejected:	0	0	0	0	0	0	0
	Percent:							
<b>Test</b>	Shot:							
	Rejected:	0	0	0	0	0	0	0
	Percent:							
<b>Target</b>	Shot:							
	Rejected:	0	0	0	0	0	0	0
	Percent:							

CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7
AB	Action binds							
BABS	Bulge at body shoulder							
BAC	Burr at chamber							
BBMA	BBL-to-bolt misalignment							
BB	Bolt binds/catches							
BCOBS	Bolt catches on bolt stop							
BCOF	Bolt catches on follower							
BC	Blows cases							
BHR	Bolt hits receiver							
BHS	Bolt plug hits safety switch							
BLOP	Bar lock or disconnecter out of position							
BLSO	Barrel lug shot off							
BPO	Bolt pulls out							
BSSM	Bolt stems shell in magazine							
BWCD	Bolt won't cam down							

BWCFM	Bolt won't close over full magazine							
CD	Case dented							
CH	Closes hard							
CLM	Can't load magazine							
CO	Cut-off							
CR	Cuts rim							
CS	Cases swell							
CTOG	Chamber torn or gouged							
CTP	Creepy trigger pull							
CWSB	Cams wrong side of action bar							
DBB	Doesn't blow back							
DCS	Double click in safety switch							
DCT	Double click in trigger							
DCU	Doesn't close-up							
DE	Doesn't eject							
DEL	Doesn't eject live round							
DFB	Doesn't feed back							
DFU	Doesn't feed up							
DLO	Doesn't lock open (after last shell)							
DLU	Doesn't lock-up							
DS	Dead safe							
DX	Doesn't extract							
DXL	Doesn't extract live round							
EDS	Extractor drops shell							
ESB	Ejector sticks back							
ESCR	Empty shell catches receiver							
ESS	Extractor stems shell							

FA	Fires automatically								
FB	Follower binds								
FC	Fails to connect								
FCB	Fore end cracked or broken								
FD	Follows down								
FF	Fails to fire								
FFP	Flat firing pin								
FOS	Fires on safe								
FPHB	Firing pin hits bbl								
FPHI	Firing pin hits inside rim								
FPO	Floor plate opens								
FPOH	Floor plate opens hard								
FSR	Fires when safe is released								
FT	Follower tips								
GCSO	Gas cyl shot off								
HBL	Heavy bolt lift								
HMSC	Heading mismatch-steps on case								
HPA	High pressure ammo								
HUR	Hard under rail								
JCS	Jumps cartridge								
JM	Jumps magazine								
JO	Jars off								
LB	Light blow								
MAH	Magazine assembles hard								
MCW	Magazine capacity wrong								
MFA	Misfires (ammo)								
MFOP	Magazine follower out of position								

ML	Magazine loose								
MLH	Magazine loads hard								
MRH	Magazine removes hard								
OH	Opens hard								
OR	Over-rides								
PH	Pulls hard								
PSI	Proof stamp illegible								
PSM	Proof stamp missing								
RBOC	Rings and bulges on case								
RDW	(Action) release doesn't work								
RIC	Rings in chamber								
RIS	Ring in sholder								
RS	Rim srem								
SBC	Stems bottom chambers								
SBE	Stems bbl extension								
SCB	Stock cracked or broken								
SCX	Shell catches								
SHI	Short indent								
SI	Stems incline								
SIC	Stems in chamber								
SL	shaves lead								
SLC	Stems left side of chamber								
SMOC	Stretch marks on case								
SOR	Stem over-ride								
SP	Stems port								
SR	Shoulder rough								
SRC	Stems right side of chamber								



SRIC	Specific rings in chamber								
SSOC	Surface scratches on case								
STC	Stems top chamber								
SWE	Safety switch works too easily								
SWH	Safety switch works too hard								
SWW	Safety Switch won't work								
TD	Tips down								
TU	Tips up								
TWP	Trigger won't pull								
TWR	Trigger won't retract								
UNCN-T	Uncoded								
XH	Extracts hard								
HI	High								
LO	Low								
LEFT	Left								
RIGHT	Right								
DG	Doesn't Group								
FSST	Front sight tipped								
RSTT	Rear sight tipped								
RSBR	Rear sight base raised								
FSTR	Front sight raised								
FSTL	Front sight loose								
RSTL	Rear sight loose								
MGPT-G	Missing parts at target								
UNCN-G	Uncoded nonconformity at target								

AI-P	Assembly incomplete at proof							
BBB	Barrel bracket cracked or broken at proof							
BC-P	Blows cases at proof							
BEB-P	Barrel extension broken at proof							
BLP-P	Blanked primer at proof							
BLSO-P	Barrel lug shot off at proof							
BP-P	Blown primer at proof							
BS-P	Barrel split at proof							
DBF-P	Damaged Bolt Face							
DLOS-P	Doesn't lock over shells at proof							
ESB-P	Ejector sticks back at proof							
FCB-P	Fore-end cracked at proof							
FESO-P	Fore-end shot off at proof							
FF-P	Fails to fire at proof							
GCSO-P	Gas cylinder shot off at proof							
MSI-P	Magnaflux stamp illegible on bbl							
MSM-P	Magnaflux stamp missing on bbl							
PP-P	Pierced primer at proof							
SCB-P	Stock cracked or broken at proof							
UNCM-P	Uncoded proof malfunctions							

Test Date:	totals

[illegible][illegible][illegible]













<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

<b>Proof</b>	Shot:							
	Rejected:	0	0	0	0	0	0	0
	Percent:							
<b>Test</b>	Shot:							
	Rejected:	0	0	0	0	0	0	0
	Percent:							
<b>Target</b>	Shot:							
	Rejected:	0	0	0	0	0	0	0
	Percent:							

CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7
AB	Action binds							
BABS	Bulge at body shoulder							
BAC	Burr at chamber							
BBMA	BBL-to-bolt misalignment							
BB	Bolt binds/catches							
BCOBS	Bolt catches on bolt stop							
BCOF	Bolt catches on follower							
BC	Blows cases							
BHR	Bolt hits receiver							
BHS	Bolt plug hits safety switch							
BLOP	Bar lock or disconnecter out of position							
BLSO	Barrel lug shot off							
BPO	Bolt pulls out							
BSSM	Bolt stems shell in magazine							
BWCD	Bolt won't cam down							

BWCFM	Bolt won't close over full magazine								
CD	Case dented								
CH	Closes hard								
CLM	Can't load magazine								
CO	Cut-off								
CR	Cuts rim								
CS	Cases swell								
CTOG	Chamber torn or gouged								
CTP	Creepy trigger pull								
CWSB	Cams wrong side of action bar								
DBB	Doesn't blow back								
DCS	Double click in safety switch								
DCT	Double click in trigger								
DCU	Doesn't close-up								
DE	Doesn't eject								
DEL	Doesn't eject live round								
DFB	Doesn't feed back								
DFU	Doesn't feed up								
DLO	Doesn't lock open (after last shell)								
DLU	Doesn't lock-up								
DS	Dead safe								
DX	Doesn't extract								
DXL	Doesn't extract live round								
EDS	Extractor drops shell								
ESB	Ejector sticks back								
ESCR	Empty shell catches receiver								
ESS	Extractor stems shell								

FA	Fires automatically								
FB	Follower binds								
FC	Fails to connect								
FCB	Fore end cracked or broken								
FD	Follows down								
FF	Fails to fire								
FFP	Flat firing pin								
FOS	Fires on safe								
FPHB	Firing pin hits bbl								
FPHI	Firing pin hits inside rim								
FPO	Floor plate opens								
FPOH	Floor plate opens hard								
FSR	Fires when safe is released								
FT	Follower tips								
GCSO	Gas cyl shot off								
HBL	Heavy bolt lift								
HMSC	Heading mismatch-steps on case								
HPA	High pressure ammo								
HUR	Hard under rail								
JCS	Jumps cartridge								
JM	Jumps magazine								
JO	Jars off								
LB	Light blow								
MAH	Magazine assembles hard								
MCW	Magazine capacity wrong								
MFA	Misfires (ammo)								
MFOP	Magazine follower out of position								

ML	Magazine loose								
MLH	Magazine loads hard								
MRH	Magazine removes hard								
OH	Opens hard								
OR	Over-rides								
PH	Pulls hard								
PSI	Proof stamp illegible								
PSM	Proof stamp missing								
RBOC	Rings and bulges on case								
RDW	(Action) release doesn't work								
RIC	Rings in chamber								
RIS	Ring in sholder								
RS	Rim srem								
SBC	Stems bottom chambers								
SBE	Stems bbl extension								
SCB	Stock cracked or broken								
SCX	Shell catches								
SHI	Short indent								
SI	Stems incline								
SIC	Stems in chamber								
SL	shaves lead								
SLC	Stems left side of chamber								
SMOC	Stretch marks on case								
SOR	Stem over-ride								
SP	Stems port								
SR	Shoulder rough								
SRC	Stems right side of chamber								

SRIC	Specific rings in chamber								
SSOC	Surface scratches on case								
STC	Stems top chamber								
SWE	Safety switch works too easily								
SWH	Safety switch works too hard								
SWW	Safety Switch won't work								
TD	Tips down								
TU	Tips up								
TWP	Trigger won't pull								
TWR	Trigger won't retract								
UNCN-T	Uncoded								
XH	Extracts hard								
HI	High								
LO	Low								
LEFT	Left								
RIGHT	Right								
DG	Doesn't Group								
FSST	Front sight tipped								
RSTT	Rear sight tipped								
RSBR	Rear sight base raised								
FSTR	Front sight raised								
FSTL	Front sight loose								
RSTL	Rear sight loose								
MGPT-G	Missing parts at target								
UNCN-G	Uncoded nonconformity at target								

AI-P	Assembly incomplete at proof							
BBB	Barrel bracket cracked or broken at proof							
BC-P	Blows cases at proof							
BEB-P	Barrel extension broken at proof							
BLP-P	Blanked primer at proof							
BLSO-P	Barrel lug shot off at proof							
BP-P	Blown primer at proof							
BS-P	Barrel split at proof							
DBF-P	Damaged Bolt Face							
DLOS-P	Doesn't lock over shells at proof							
ESB-P	Ejector sticks back at proof							
FCB-P	Fore-end cracked at proof							
FESO-P	Fore-end shot off at proof							
FF-P	Fails to fire at proof							
GCSO-P	Gas cylinder shot off at proof							
MSI-P	Magnaflux stamp illegible on bbl							
MSM-P	Magnaflux stamp missing on bbl							
PP-P	Pierced primer at proof							
SCB-P	Stock cracked or broken at proof							
UNCM-P	Uncoded proof malfunctions							















<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

<b>Proof</b>	Shot:							
	Rejected:	0	0	0	0	0	0	0
	Percent:							
<b>Test</b>	Shot:							
	Rejected:	0	0	0	0	0	0	0
	Percent:							
<b>Target</b>	Shot:							
	Rejected:	0	0	0	0	0	0	0
	Percent:							

CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7
AB	Action binds							
BABS	Bulge at body shoulder							
BAC	Burr at chamber							
BBMA	BBL-to-bolt misalignment							
BB	Bolt binds/catches							
BCOBS	Bolt catches on bolt stop							
BCOF	Bolt catches on follower							
BC	Blows cases							
BHR	Bolt hits receiver							
BHS	Bolt plug hits safety switch							
BLOP	Bar lock or disconnecter out of position							
BLSO	Barrel lug shot off							
BPO	Bolt pulls out							
BSSM	Bolt stems shell in magazine							
BWCD	Bolt won't cam down							

BWCFM	Bolt won't close over full magazine								
CD	Case dented								
CH	Closes hard								
CLM	Can't load magazine								
CO	Cut-off								
CR	Cuts rim								
CS	Cases swell								
CTOG	Chamber torn or gouged								
CTP	Creepy trigger pull								
CWSB	Cams wrong side of action bar								
DBB	Doesn't blow back								
DCS	Double click in safety switch								
DCT	Double click in trigger								
DCU	Doesn't close-up								
DE	Doesn't eject								
DEL	Doesn't eject live round								
DFB	Doesn't feed back								
DFU	Doesn't feed up								
DLO	Doesn't lock open (after last shell)								
DLU	Doesn't lock-up								
DS	Dead safe								
DX	Doesn't extract								
DXL	Doesn't extract live round								
EDS	Extractor drops shell								
ESB	Ejector sticks back								
ESCR	Empty shell catches receiver								
ESS	Extractor stems shell								

FA	Fires automatically								
FB	Follower binds								
FC	Fails to connect								
FCB	Fore end cracked or broken								
FD	Follows down								
FF	Fails to fire								
FFP	Flat firing pin								
FOS	Fires on safe								
FPHB	Firing pin hits bbl								
FPHI	Firing pin hits inside rim								
FPO	Floor plate opens								
FPOH	Floor plate opens hard								
FSR	Fires when safe is released								
FT	Follower tips								
GCSO	Gas cyl shot off								
HBL	Heavy bolt lift								
HMSC	Heading mismatch-steps on case								
HPA	High pressure ammo								
HUR	Hard under rail								
JCS	Jumps cartridge								
JM	Jumps magazine								
JO	Jars off								
LB	Light blow								
MAH	Magazine assembles hard								
MCW	Magazine capacity wrong								
MFA	Misfires (ammo)								
MFOP	Magazine follower out of position								

ML	Magazine loose								
MLH	Magazine loads hard								
MRH	Magazine removes hard								
OH	Opens hard								
OR	Over-rides								
PH	Pulls hard								
PSI	Proof stamp illegible								
PSM	Proof stamp missing								
RBOC	Rings and bulges on case								
RDW	(Action) release doesn't work								
RIC	Rings in chamber								
RIS	Ring in sholder								
RS	Rim srem								
SBC	Stems bottom chambers								
SBE	Stems bbl extension								
SCB	Stock cracked or broken								
SCX	Shell catches								
SHI	Short indent								
SI	Stems incline								
SIC	Stems in chamber								
SL	shaves lead								
SLC	Stems left side of chamber								
SMOC	Stretch marks on case								
SOR	Stem over-ride								
SP	Stems port								
SR	Shoulder rough								
SRC	Stems right side of chamber								



SRIC	Specific rings in chamber								
SSOC	Surface scratches on case								
STC	Stems top chamber								
SWE	Safety switch works too easily								
SWH	Safety switch works too hard								
SWW	Safety Switch won't work								
TD	Tips down								
TU	Tips up								
TWP	Trigger won't pull								
TWR	Trigger won't retract								
UNCN-T	Uncoded								
XH	Extracts hard								
HI	High								
LO	Low								
LEFT	Left								
RIGHT	Right								
DG	Doesn't Group								
FSST	Front sight tipped								
RSTT	Rear sight tipped								
RSBR	Rear sight base raised								
FSTR	Front sight raised								
FSTL	Front sight loose								
RSTL	Rear sight loose								
MGPT-G	Missing parts at target								
UNCN-G	Uncoded nonconformity at target								

AI-P	Assembly incomplete at proof							
BBB	Barrel bracket cracked or broken at proof							
BC-P	Blows cases at proof							
BEB-P	Barrel extension broken at proof							
BLP-P	Blanked primer at proof							
BLSO-P	Barrel lug shot off at proof							
BP-P	Blown primer at proof							
BS-P	Barrel split at proof							
DBF-P	Damaged Bolt Face							
DLOS-P	Doesn't lock over shells at proof							
ESB-P	Ejector sticks back at proof							
FCB-P	Fore-end cracked at proof							
FESO-P	Fore-end shot off at proof							
FF-P	Fails to fire at proof							
GCSO-P	Gas cylinder shot off at proof							
MSI-P	Magnaflux stamp illegible on bbl							
MSM-P	Magnaflux stamp missing on bbl							
PP-P	Pierced primer at proof							
SCB-P	Stock cracked or broken at proof							
UNCM-P	Uncoded proof malfunctions							

Test Date:	totals

[illegible][illegible]

A vertical strip of a grid, likely representing a portion of a larger image. It features a black line and several shaded regions with a cross-hatch pattern.

[illegible]













<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

<b>Proof</b>	Shot:							
	Rejected:	0	0	0	0	0	0	0
	Percent:							
<b>Test</b>	Shot:							
	Rejected:	0	0	0	0	0	0	0
	Percent:							
<b>Target</b>	Shot:							
	Rejected:	0	0	0	0	0	0	0
	Percent:							

CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7
AB	Action binds							
BABS	Bulge at body shoulder							
BAC	Burr at chamber							
BBMA	BBL-to-bolt misalignment							
BB	Bolt binds/catches							
BCOBS	Bolt catches on bolt stop							
BCOF	Bolt catches on follower							
BC	Blows cases							
BHR	Bolt hits receiver							
BHS	Bolt plug hits safety switch							
BLOP	Bar lock or disconnecter out of position							
BLSO	Barrel lug shot off							
BPO	Bolt pulls out							
BSSM	Bolt stems shell in magazine							
BWCD	Bolt won't cam down							

BWCFM	Bolt won't close over full magazine								
CD	Case dented								
CH	Closes hard								
CLM	Can't load magazine								
CO	Cut-off								
CR	Cuts rim								
CS	Cases swell								
CTOG	Chamber torn or gouged								
CTP	Creepy trigger pull								
CWSB	Cams wrong side of action bar								
DBB	Doesn't blow back								
DCS	Double click in safety switch								
DCT	Double click in trigger								
DCU	Doesn't close-up								
DE	Doesn't eject								
DEL	Doesn't eject live round								
DFB	Doesn't feed back								
DFU	Doesn't feed up								
DLO	Doesn't lock open (after last shell)								
DLU	Doesn't lock-up								
DS	Dead safe								
DX	Doesn't extract								
DXL	Doesn't extract live round								
EDS	Extractor drops shell								
ESB	Ejector sticks back								
ESCR	Empty shell catches receiver								
ESS	Extractor stems shell								

FA	Fires automatically								
FB	Follower binds								
FC	Fails to connect								
FCB	Fore end cracked or broken								
FD	Follows down								
FF	Fails to fire								
FFP	Flat firing pin								
FOS	Fires on safe								
FPHB	Firing pin hits bbl								
FPHI	Firing pin hits inside rim								
FPO	Floor plate opens								
FPOH	Floor plate opens hard								
FSR	Fires when safe is released								
FT	Follower tips								
GCSO	Gas cyl shot off								
HBL	Heavy bolt lift								
HMSC	Heading mismatch-steps on case								
HPA	High pressure ammo								
HUR	Hard under rail								
JCS	Jumps cartridge								
JM	Jumps magazine								
JO	Jars off								
LB	Light blow								
MAH	Magazine assembles hard								
MCW	Magazine capacity wrong								
MFA	Misfires (ammo)								
MFOP	Magazine follower out of position								

ML	Magazine loose								
MLH	Magazine loads hard								
MRH	Magazine removes hard								
OH	Opens hard								
OR	Over-rides								
PH	Pulls hard								
PSI	Proof stamp illegible								
PSM	Proof stamp missing								
RBOC	Rings and bulges on case								
RDW	(Action) release doesn't work								
RIC	Rings in chamber								
RIS	Ring in sholder								
RS	Rim srem								
SBC	Stems bottom chambers								
SBE	Stems bbl extension								
SCB	Stock cracked or broken								
SCX	Shell catches								
SHI	Short indent								
SI	Stems incline								
SIC	Stems in chamber								
SL	shaves lead								
SLC	Stems left side of chamber								
SMOC	Stretch marks on case								
SOR	Stem over-ride								
SP	Stems port								
SR	Shoulder rough								
SRC	Stems right side of chamber								

SRIC	Specific rings in chamber								
SSOC	Surface scratches on case								
STC	Stems top chamber								
SWE	Safety switch works too easily								
SWH	Safety switch works too hard								
SWW	Safety Switch won't work								
TD	Tips down								
TU	Tips up								
TWP	Trigger won't pull								
TWR	Trigger won't retract								
UNCN-T	Uncoded								
XH	Extracts hard								
HI	High								
LO	Low								
LEFT	Left								
RIGHT	Right								
DG	Doesn't Group								
FSST	Front sight tipped								
RSTT	Rear sight tipped								
RSBR	Rear sight base raised								
FSTR	Front sight raised								
FSTL	Front sight loose								
RSTL	Rear sight loose								
MGPT-G	Missing parts at target								
UNCN-G	Uncoded nonconformity at target								

AI-P	Assembly incomplete at proof							
BBB	Barrel bracket cracked or broken at proof							
BC-P	Blows cases at proof							
BEB-P	Barrel extension broken at proof							
BLP-P	Blanked primer at proof							
BLSO-P	Barrel lug shot off at proof							
BP-P	Blown primer at proof							
BS-P	Barrel split at proof							
DBF-P	Damaged Bolt Face							
DLOS-P	Doesn't lock over shells at proof							
ESB-P	Ejector sticks back at proof							
FCB-P	Fore-end cracked at proof							
FESO-P	Fore-end shot off at proof							
FF-P	Fails to fire at proof							
GCSO-P	Gas cylinder shot off at proof							
MSI-P	Magnaflux stamp illegible on bbl							
MSM-P	Magnaflux stamp missing on bbl							
PP-P	Pierced primer at proof							
SCB-P	Stock cracked or broken at proof							
UNCM-P	Uncoded proof malfunctions							

Test Date:	totals

[illegible][illegible][illegible][illegible]













<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

<b>Proof</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						
<b>Test</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						
<b>Target</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						

CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7
AB	Action binds							
BABS	Bulge at body shoulder							
BAC	Burr at chamber							
BBMA	BBL-to-bolt misalignment							
BB	Bolt binds/catches							
BCOBS	Bolt catches on bolt stop							
BCOF	Bolt catches on follower							
BC	Blows cases							
BHR	Bolt hits receiver							
BHS	Bolt plug hits safety switch							
BLOP	Bar lock or disconnecter out of position							
BLSO	Barrel lug shot off							
BPO	Bolt pulls out							
BSSM	Bolt stems shell in magazine							
BWCD	Bolt won't cam down							

BWCFM	Bolt won't close over full magazine							
CD	Case dented							
CH	Closes hard							
CLM	Can't load magazine							
CO	Cut-off							
CR	Cuts rim							
CS	Cases swell							
CTOG	Chamber torn or gouged							
CTP	Creepy trigger pull							
CWSB	Cams wrong side of action bar							
DBB	Doesn't blow back							
DCS	Double click in safety switch							
DCT	Double click in trigger							
DCU	Doesn't close-up							
DE	Doesn't eject							
DEL	Doesn't eject live round							
DFB	Doesn't feed back							
DFU	Doesn't feed up							
DLO	Doesn't lock open (after last shell)							
DLU	Doesn't lock-up							
DS	Dead safe							
DX	Doesn't extract							
DXL	Doesn't extract live round							
EDS	Extractor drops shell							
ESB	Ejector sticks back							
ESCR	Empty shell catches receiver							
ESS	Extractor stems shell							

FA	Fires automatically								
FB	Follower binds								
FC	Fails to connect								
FCB	Fore end cracked or broken								
FD	Follows down								
FF	Fails to fire								
FFP	Flat firing pin								
FOS	Fires on safe								
FPHB	Firing pin hits bbl								
FPHI	Firing pin hits inside rim								
FPO	Floor plate opens								
FPOH	Floor plate opens hard								
FSR	Fires when safe is released								
FT	Follower tips								
GCSO	Gas cyl shot off								
HBL	Heavy bolt lift								
HMSC	Heading mismatch-steps on case								
HPA	High pressure ammo								
HUR	Hard under rail								
JCS	Jumps cartridge								
JM	Jumps magazine								
JO	Jars off								
LB	Light blow								
MAH	Magazine assembles hard								
MCW	Magazine capacity wrong								
MFA	Misfires (ammo)								
MFOP	Magazine follower out of position								

ML	Magazine loose								
MLH	Magazine loads hard								
MRH	Magazine removes hard								
OH	Opens hard								
OR	Over-rides								
PH	Pulls hard								
PSI	Proof stamp illegible								
PSM	Proof stamp missing								
RBOC	Rings and bulges on case								
RDW	(Action) release doesn't work								
RIC	Rings in chamber								
RIS	Ring in sholder								
RS	Rim srem								
SBC	Stems bottom chambers								
SBE	Stems bbl extension								
SCB	Stock cracked or broken								
SCX	Shell catches								
SHI	Short indent								
SI	Stems incline								
SIC	Stems in chamber								
SL	shaves lead								
SLC	Stems left side of chamber								
SMOC	Stretch marks on case								
SOR	Stem over-ride								
SP	Stems port								
SR	Shoulder rough								
SRC	Stems right side of chamber								



SRIC	Specific rings in chamber								
SSOC	Surface scratches on case								
STC	Stems top chamber								
SWE	Safety switch works too easily								
SWH	Safety switch works too hard								
SWW	Safety Switch won't work								
TD	Tips down								
TU	Tips up								
TWP	Trigger won't pull								
TWR	Trigger won't retract								
UNCN-T	Uncoded								
XH	Extracts hard								
HI	High								
LO	Low								
LEFT	Left								
RIGHT	Right								
DG	Doesn't Group								
FSST	Front sight tipped								
RSTT	Rear sight tipped								
RSBR	Rear sight base raised								
FSTR	Front sight raised								
FSTL	Front sight loose								
RSTL	Rear sight loose								
MGPT-G	Missing parts at target								
UNCN-G	Uncoded nonconformity at target								

AI-P	Assembly incomplete at proof							
BBB	Barrel bracket cracked or broken at proof							
BC-P	Blows cases at proof							
BEB-P	Barrel extension broken at proof							
BLP-P	Blanked primer at proof							
BLSO-P	Barrel lug shot off at proof							
BP-P	Blown primer at proof							
BS-P	Barrel split at proof							
DBF-P	Damaged Bolt Face							
DLOS-P	Doesn't lock over shells at proof							
ESB-P	Ejector sticks back at proof							
FCB-P	Fore-end cracked at proof							
FESO-P	Fore-end shot off at proof							
FF-P	Fails to fire at proof							
GCSO-P	Gas cylinder shot off at proof							
MSI-P	Magnaflux stamp illegible on bbl							
MSM-P	Magnaflux stamp missing on bbl							
PP-P	Pierced primer at proof							
SCB-P	Stock cracked or broken at proof							
UNCM-P	Uncoded proof malfunctions							















<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

<b>Proof</b>	Shot:							
	Rejected:	0	0	0	0	0	0	0
	Percent:							
<b>Test</b>	Shot:							
	Rejected:	0	0	0	0	0	0	0
	Percent:							
<b>Target</b>	Shot:							
	Rejected:	0	0	0	0	0	0	0
	Percent:							

CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7
AB	Action binds							
BABS	Bulge at body shoulder							
BAC	Burr at chamber							
BBMA	BBL-to-bolt misalignment							
BB	Bolt binds/catches							
BCOBS	Bolt catches on bolt stop							
BCOF	Bolt catches on follower							
BC	Blows cases							
BHR	Bolt hits receiver							
BHS	Bolt plug hits safety switch							
BLOP	Bar lock or disconnecter out of position							
BLSO	Barrel lug shot off							
BPO	Bolt pulls out							
BSSM	Bolt stems shell in magazine							
BWCD	Bolt won't cam down							

BWCFM	Bolt won't close over full magazine							
CD	Case dented							
CH	Closes hard							
CLM	Can't load magazine							
CO	Cut-off							
CR	Cuts rim							
CS	Cases swell							
CTOG	Chamber torn or gouged							
CTP	Creepy trigger pull							
CWSB	Cams wrong side of action bar							
DBB	Doesn't blow back							
DCS	Double click in safety switch							
DCT	Double click in trigger							
DCU	Doesn't close-up							
DE	Doesn't eject							
DEL	Doesn't eject live round							
DFB	Doesn't feed back							
DFU	Doesn't feed up							
DLO	Doesn't lock open (after last shell)							
DLU	Doesn't lock-up							
DS	Dead safe							
DX	Doesn't extract							
DXL	Doesn't extract live round							
EDS	Extractor drops shell							
ESB	Ejector sticks back							
ESCR	Empty shell catches receiver							
ESS	Extractor stems shell							

FA	Fires automatically								
FB	Follower binds								
FC	Fails to connect								
FCB	Fore end cracked or broken								
FD	Follows down								
FF	Fails to fire								
FFP	Flat firing pin								
FOS	Fires on safe								
FPHB	Firing pin hits bbl								
FPHI	Firing pin hits inside rim								
FPO	Floor plate opens								
FPOH	Floor plate opens hard								
FSR	Fires when safe is released								
FT	Follower tips								
GCSO	Gas cyl shot off								
HBL	Heavy bolt lift								
HMSC	Heading mismatch-steps on case								
HPA	High pressure ammo								
HUR	Hard under rail								
JCS	Jumps cartridge								
JM	Jumps magazine								
JO	Jars off								
LB	Light blow								
MAH	Magazine assembles hard								
MCW	Magazine capacity wrong								
MFA	Misfires (ammo)								
MFOP	Magazine follower out of position								

ML	Magazine loose								
MLH	Magazine loads hard								
MRH	Magazine removes hard								
OH	Opens hard								
OR	Over-rides								
PH	Pulls hard								
PSI	Proof stamp illegible								
PSM	Proof stamp missing								
RBOC	Rings and bulges on case								
RDW	(Action) release doesn't work								
RIC	Rings in chamber								
RIS	Ring in sholder								
RS	Rim srem								
SBC	Stems bottom chambers								
SBE	Stems bbl extension								
SCB	Stock cracked or broken								
SCX	Shell catches								
SHI	Short indent								
SI	Stems incline								
SIC	Stems in chamber								
SL	shaves lead								
SLC	Stems left side of chamber								
SMOC	Stretch marks on case								
SOR	Stem over-ride								
SP	Stems port								
SR	Shoulder rough								
SRC	Stems right side of chamber								

SRIC	Specific rings in chamber								
SSOC	Surface scratches on case								
STC	Stems top chamber								
SWE	Safety switch works too easily								
SWH	Safety switch works too hard								
SWW	Safety Switch won't work								
TD	Tips down								
TU	Tips up								
TWP	Trigger won't pull								
TWR	Trigger won't retract								
UNCN-T	Uncoded								
XH	Extracts hard								
HI	High								
LO	Low								
LEFT	Left								
RIGHT	Right								
DG	Doesn't Group								
FSST	Front sight tipped								
RSTT	Rear sight tipped								
RSBR	Rear sight base raised								
FSTR	Front sight raised								
FSTL	Front sight loose								
RSTL	Rear sight loose								
MGPT-G	Missing parts at target								
UNCN-G	Uncoded nonconformity at target								

AI-P	Assembly incomplete at proof							
BBB	Barrel bracket cracked or broken at proof							
BC-P	Blows cases at proof							
BEB-P	Barrel extension broken at proof							
BLP-P	Blanked primer at proof							
BLSO-P	Barrel lug shot off at proof							
BP-P	Blown primer at proof							
BS-P	Barrel split at proof							
DBF-P	Damaged Bolt Face							
DLOS-P	Doesn't lock over shells at proof							
ESB-P	Ejector sticks back at proof							
FCB-P	Fore-end cracked at proof							
FESO-P	Fore-end shot off at proof							
FF-P	Fails to fire at proof							
GCSO-P	Gas cylinder shot off at proof							
MSI-P	Magnaflux stamp illegible on bbl							
MSM-P	Magnaflux stamp missing on bbl							
PP-P	Pierced primer at proof							
SCB-P	Stock cracked or broken at proof							
UNCM-P	Uncoded proof malfunctions							

Test Date:	totals

[illegible][illegible][illegible]













<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

<b>Proof</b>	Shot:							
	Rejected:	0	0	0	0	0	0	0
	Percent:							
<b>Test</b>	Shot:							
	Rejected:	0	0	0	0	0	0	0
	Percent:							
<b>Target</b>	Shot:							
	Rejected:	0	0	0	0	0	0	0
	Percent:							

CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7
AB	Action binds							
BABS	Bulge at body shoulder							
BAC	Burr at chamber							
BBMA	BBL-to-bolt misalignment							
BB	Bolt binds/catches							
BCOBS	Bolt catches on bolt stop							
BCOF	Bolt catches on follower							
BC	Blows cases							
BHR	Bolt hits receiver							
BHS	Bolt plug hits safety switch							
BLOP	Bar lock or disconnecter out of position							
BLSO	Barrel lug shot off							
BPO	Bolt pulls out							
BSSM	Bolt stems shell in magazine							
BWCD	Bolt won't cam down							

BWCFM	Bolt won't close over full magazine							
CD	Case dented							
CH	Closes hard							
CLM	Can't load magazine							
CO	Cut-off							
CR	Cuts rim							
CS	Cases swell							
CTOG	Chamber torn or gouged							
CTP	Creepy trigger pull							
CWSB	Cams wrong side of action bar							
DBB	Doesn't blow back							
DCS	Double click in safety switch							
DCT	Double click in trigger							
DCU	Doesn't close-up							
DE	Doesn't eject							
DEL	Doesn't eject live round							
DFB	Doesn't feed back							
DFU	Doesn't feed up							
DLO	Doesn't lock open (after last shell)							
DLU	Doesn't lock-up							
DS	Dead safe							
DX	Doesn't extract							
DXL	Doesn't extract live round							
EDS	Extractor drops shell							
ESB	Ejector sticks back							
ESCR	Empty shell catches receiver							
ESS	Extractor stems shell							

FA	Fires automatically								
FB	Follower binds								
FC	Fails to connect								
FCB	Fore end cracked or broken								
FD	Follows down								
FF	Fails to fire								
FFP	Flat firing pin								
FOS	Fires on safe								
FPHB	Firing pin hits bbl								
FPHI	Firing pin hits inside rim								
FPO	Floor plate opens								
FPOH	Floor plate opens hard								
FSR	Fires when safe is released								
FT	Follower tips								
GCSO	Gas cyl shot off								
HBL	Heavy bolt lift								
HMSC	Heading mismatch-steps on case								
HPA	High pressure ammo								
HUR	Hard under rail								
JCS	Jumps cartridge								
JM	Jumps magazine								
JO	Jars off								
LB	Light blow								
MAH	Magazine assembles hard								
MCW	Magazine capacity wrong								
MFA	Misfires (ammo)								
MFOP	Magazine follower out of position								

ML	Magazine loose								
MLH	Magazine loads hard								
MRH	Magazine removes hard								
OH	Opens hard								
OR	Over-rides								
PH	Pulls hard								
PSI	Proof stamp illegible								
PSM	Proof stamp missing								
RBOC	Rings and bulges on case								
RDW	(Action) release doesn't work								
RIC	Rings in chamber								
RIS	Ring in sholder								
RS	Rim srem								
SBC	Stems bottom chambers								
SBE	Stems bbl extension								
SCB	Stock cracked or broken								
SCX	Shell catches								
SHI	Short indent								
SI	Stems incline								
SIC	Stems in chamber								
SL	shaves lead								
SLC	Stems left side of chamber								
SMOC	Stretch marks on case								
SOR	Stem over-ride								
SP	Stems port								
SR	Shoulder rough								
SRC	Stems right side of chamber								



SRIC	Specific rings in chamber								
SSOC	Surface scratches on case								
STC	Stems top chamber								
SWE	Safety switch works too easily								
SWH	Safety switch works too hard								
SWW	Safety Switch won't work								
TD	Tips down								
TU	Tips up								
TWP	Trigger won't pull								
TWR	Trigger won't retract								
UNCN-T	Uncoded								
XH	Extracts hard								
HI	High								
LO	Low								
LEFT	Left								
RIGHT	Right								
DG	Doesn't Group								
FSST	Front sight tipped								
RSTT	Rear sight tipped								
RSBR	Rear sight base raised								
FSTR	Front sight raised								
FSTL	Front sight loose								
RSTL	Rear sight loose								
MGPT-G	Missing parts at target								
UNCN-G	Uncoded nonconformity at target								

AI-P	Assembly incomplete at proof							
BBB	Barrel bracket cracked or broken at proof							
BC-P	Blows cases at proof							
BEB-P	Barrel extension broken at proof							
BLP-P	Blanked primer at proof							
BLSO-P	Barrel lug shot off at proof							
BP-P	Blown primer at proof							
BS-P	Barrel split at proof							
DBF-P	Damaged Bolt Face							
DLOS-P	Doesn't lock over shells at proof							
ESB-P	Ejector sticks back at proof							
FCB-P	Fore-end cracked at proof							
FESO-P	Fore-end shot off at proof							
FF-P	Fails to fire at proof							
GCSO-P	Gas cylinder shot off at proof							
MSI-P	Magnaflux stamp illegible on bbl							
MSM-P	Magnaflux stamp missing on bbl							
PP-P	Pierced primer at proof							
SCB-P	Stock cracked or broken at proof							
UNCM-P	Uncoded proof malfunctions							

<b>Test Date:</b>	<b>totals</b>
<hr/>	

[illegible][illegible][illegible][illegible]













<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

<b>Proof</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						
<b>Test</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						
<b>Target</b>	Shot:						
	Rejected:	0	0	0	0	0	0
	Percent:						

CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7
AB	Action binds							
BABS	Bulge at body shoulder							
BAC	Burr at chamber							
BBMA	BBL-to-bolt misalignment							
BB	Bolt binds/catches							
BCOBS	Bolt catches on bolt stop							
BCOF	Bolt catches on follower							
BC	Blows cases							
BHR	Bolt hits receiver							
BHS	Bolt plug hits safety switch							
BLOP	Bar lock or disconnecter out of position							
BLSO	Barrel lug shot off							
BPO	Bolt pulls out							
BSSM	Bolt stems shell in magazine							
BWCD	Bolt won't cam down							

CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7
BWCFM	Bolt won't close over full magazine							
CD	Case dented							
CH	Closes hard							
CLM	Can't load magazine							
CO	Cut-off							
CR	Cuts rim							
CS	Cases swell							
CTOG	Chamber torn or gouged							
CTP	Creepy trigger pull							
CWSB	Cams wrong side of action bar							
DBB	Doesn't blow back							
DCS	Double click in safety switch							
DCT	Double click in trigger							
DCU	Doesn't close-up							
DE	Doesn't eject							
DEL	Doesn't eject live round							
DFB	Doesn't feed back							
DFU	Doesn't feed up							
DLO	Doesn't lock open (after last shell)							
DLU	Doesn't lock-up							
DS	Dead safe							
DX	Doesn't extract							
DXL	Doesn't extract live round							
EDS	Extractor drops shell							
ESB	Ejector sticks back							
ESCR	Empty shell catches receiver							

CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7
ESS	Extractor stems shell							
FA	Fires automatically							
FB	Follower binds							
FC	Fails to connect							
FCB	Fore-end cracked or broken							
FD	Follows-down							
FF	Fails to fire							
FFP	Flat firing pin							
FOS	Fires on safe							
FPHB	Firing pin hits bbl							
FPHI	Firing pin hits inside rim							
FPO	Floor plate opens							
FPOH	Floor plate opens hard							
FSR	Fires when safe is released							
FT	Follower tips							
GCSO	Gas cyl shot off							
HBL	Heavy bolt lift							
HMSC	Heading mismatch-steps on case							
HPA	High pressure ammo							
HUR	Hard under rail							
JCS	Jumps cartridge							
JM	Jumps magazine							
JO	Jars off							
LB	Light blow							
MAH	Magazine assembles hard							
MCW	Magazine capacity wrong							

CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7
MFA	Misfires (ammo)							
MFOP	Magazine follower out of position							
ML	Magazine loose							
MLH	Magazine loads hard							
MRH	Magazine removes hard							
OH	Opens hard							
OR	Over-rides							
PH	Pulls hard							
PSI	Proof stamp illegible							
PSM	Proof stamp missing							
RBOC	Rings and bulges on case							
RDW	(Action) release doesn't work							
RIC	Rings in chamber							
RIS	Ring in sholder							
RS	Rim srem							
SBC	Stems bottom chambers							
SBE	Stems bbl extension							
SCB	Stock cracked or broken							
SCX	Shell catches							
SHI	Short indent							
SI	Stems incline							
SIC	Stems in chamber							
SL	shaves lead							
SLC	Stems left side of chamber							
SMOC	Stretch marks on case							
SOR	Stem over-ride							

CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7
SP	Stems port							
SR	Shoulder rough							
SRC	Stems right side of chamber							
SRIC	Specific rings in chamber							
SSOC	Surface scratches on case							
STC	Stems top chamber							
SWE	Safety switch works too easily							
SWH	Safety switch works too hard							
SWW	Safety Switch won't work							
TD	Tips down							
TU	Tips up							
TWP	Trigger won't pull							
TWR	Trigger won't retract							
UNCN-T	Uncoded							
XH	Extracts hard							
HI	High							
LO	Low							
LEFT	Left							
RIGHT	Right							
DG	Doesn't Group							
FSST	Front sight tipped							
RSTT	Rear sight tipped							
RSBR	Rear sight base raised							
FSTR	Front sight raised							
FSTL	Front sight loose							

CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7
RSTL	Rear sight loose							
MGPT-G	Missing parts at target							
UNCN-G	Uncoded nonconformity at target							
AI-P	Assembly incomplete at proof							
BBB	Barrel bracket cracked or broken at proof							
BC-P	Blows cases at proof							
BEB-P	Barrel extension broken at proof							
BLP-P	Blanked primer at proof							
BLSO-P	Barrel lug shot off at proof							
BP-P	Blown primer at proof							
BS-P	Barrel split at proof							
DBF-P	Damaged Bolt Face							
DLOS-P	Doesn't lock over shells at proof							
ESB-P	Ejector sticks back at proof							
FCB-P	Fore-end cracked at proof							
FESO-P	Fore-end shot off at proof							
FF-P	Fails to fire at proof							
GCSO-P	Gas cylinder shot off at proof							
MSI-P	Magnaflux stamp illegible on bbl							
MSM-P	Magnaflux stamp missing on bbl							
PP-P	Pierced primer at proof							
SCB-P	Stock cracked or broken at proof							
UNCM-P	Uncoded proof malfunctions							

Test Date:	totals

[illegible][illegible][illegible]

[illegible]









