

<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>10275</b>
	<b>Total Rejected:</b>	<b>417</b>
	<b>Overall Reject Rate:</b>	<b>4.06</b>

**Proof**

Shot:	24	689	569	110		169	491	32	4438
Rejected:	0	0	0	0	0	0	0	0	0
Percent:	0.0	0.0	0.0	0.0		0.0	0.0	0.0	0.0

**Test**

Shot:	26	695	593	41		146	417	157	4438
Rejected:	0	146	29	1	0	12	18	102	27
Percent:	0.0	21.0	4.9	2.4		8.2	4.3	65.0	0.6

**Target**

Shot:			1						3
Rejected:	0	0	0	0	0	0	0	0	0
Percent:			0.0						0.0

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga
AB	Action binds		25	7			1		2	8
ASFB	Action spring follower binds									
BABS	Bulge at body shoulder									
BAC	Burr at chamber									
BB	Bolt binds/catches									
BCOE	Bolt catches on ejector									
BC	Blows cases									
BLOP	Bar lock or disconnecter out of position									1
BSCO	Barrel support came out									
CBS-F	Shells catch on bbl support-feeding									
CBS-L	Shells catch on bbl support-loading									
CC	Carrier catches on shells,mag,receiver			1					1	1
CD	Case dented									
CH	Closes hard									
CHAB	Carrier hits action bar									
CLM	Can't load magazine									
CO	Cut-off									
CR	Cuts rim									
CS	Cases swell									

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga
CTOG	Chamber torn or gouged									
CTP	Creepy trigger pull									
CWSB	Cams wrong side of action bar									
DBB	Doesn't blow back		11	2				2	11	
DCS	Double click in safety switch									
DCT	Double click in trigger									
DCU	Doesn't close up		3	3				1		
DE	Doesn't eject		3						3	
DEL	Doesn't eject live round									
DFU	Doesn't feed up		2		1		4	1		
DLO	Doesn't lock open (after last shell)							2	1	
DLU	Doesn't lock-up			3						
DS	Dead safe									
DSM	Drops shell-magazine									
DTL	Doesn't trip latch							6		
DX	Doesn't extract									
DXL	Doesn't extract live round									
EDS	Extractor drops shell								21	
ESB	Ejector sticks back									
ESS	Extractor stems shell									
FA	Fires automatically									
FB	Follower binds							1		
FC	Fails to connect		1							
FCB	Fore-end cracked or broken									
FD	Follows-down									
FF	Fails to fire			1						
FFM	Fails to feed from magazine		5					1	2	6
FFP	Flat firing pin									
FOS	Fires on safe									
FSR	Fires when safe is released									

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga
GCSO	Gas cyl. shot off									
GRSO	Guide ring shot off									
HPA	High pressure ammo									
HUE	Hard under extractor		3							
ILOP	Int. latch out of position									
ILRM	Int. latch ret. Missing									
ILSB	Int. latch stud broken									
ILSP	Int. latch spring out of position									
JL	Jumps latch		2	1				1	1	
JO	Jars off									
LB	Light blow									
MCSO	Magazine cap shot off									1
MCW	Magazine capacity wrong									
MFA	Misfires (ammo)									
MFOP	Magazine follower out of position									
MLH	Magazine loads hard			3				1		2
OH	Opens hard									
PH	Pulls hard									
PSI	Proof stamp illegible									
PSM	Proof stamp missing									
RBOC	Rings and bulges on case									
RDW	(Action) release doesn't work						4	1	1	
RIC	Rings in chamber									
SBC	Stems bottom chambers		1				2		3	
SBCL	Shell binds carrier latch									
SBE	Stems bbl extension									
SCB	Stock cracked or broken									3
SCX	Shell catches									2
SHI	Short indent									
SIC	Stems in chamber		5						1	

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga
SL	shaves lead									
SLC	Stems left side of chamber									
SMOC	Stretch marks on case									
SRC	Stems right side of chamber								54	
SRIC	Specific rings in chamber									
SSC	shell stems carrier									1
STC	Stems top chamber		85	8			1	1	1	2
SWE	Safety switch works too easily									
SWH	Safety switch works too hard									
SWW	Safety ewitxh won't work									
TD	Tips down									
TU	Tips up									
TWP	Trigger won't pull									
TWR	Trigger won't retract									
UNCN-T	Uncoded									
XH	Extracts hard									
XHB	Extractor hits bbl									
HI	High									
LO	Low									
LEFT	Left									
RIGHT	Right									
DG	Doesn't Group									
FSST	Front sight tipped									
RSTT	Rear sight tipped									
RSBR	Rear sight base raised									
FSTR	Front sight raised									
FSTL	Front sight loose									
RSTL	Rear sight loose									
MGPT-G	Missing parts at target									

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga
UNCN-G	Uncoded nonconformity at target									
AI-P	Assembly incomplete at proof									
BC-P	Blows cases at proof									
BEB-P	Barrel extension broken at proof									
BLP-P	Blanked primer at proof									
BP-P	Blown primer at proof									
BS-P	Barrel split at proof									
DLOS-P	Doesn't lock over shells at proof									
ESB-P	Ejector sticks back at proof									
FCB-P	Fore-end cracked at proof									
FESO-P	Fore-end shot off at proof									
FF-P	Fails to fire at proof									
GCSO-P	Gas cylinder shot off at proof									
GRSO-P	Guide ring shot off at proof									
MCSO-P	Magazine cap shot off at proof									
MSI-P	Magnaflux stamp illegible on bbl									
MSM-P	Magnaflux stamp missing on bbl									
PP-P	Pierced primer at proof									
SCB-P	Stock cracked or broken at proof									
UNCM-P	Uncoded proof malfunctions									

Month:								Auto Total	Pump Total
total									
	1535		1562		779		10398	2084	7535
0	0	0	4	0	0	0	4	0	4
	0.0		0.3		0.0		0.038	0.000	0.053
	1535		1562		661		10271	2075	7535
0	4	0	31	0	1	0	371	308	62
	0.3		2.0		0.2		3.61	14.84	0.82
					493		497	1	3
0	0	0	0	0	42	0	42	0	0
					8.5		8.45	0.00	0.00
870 16Ga	870 20Ga	870 light weight	870 SM	SP10	870 Police	O/U	total	Auto Total	Pump Total
			6				49	35	14
							0	0	0
							0	0	0
							0	0	0
							0	0	0
							0	0	0
							0	0	0
							0	0	0
			1				2	0	2
							0	0	0
							0	0	0
							0	0	0
							3	2	1
							0	0	0
							0	0	0
							0	0	0
							0	0	0
							0	0	0
							0	0	0
							0	0	0

870 16Ga	870 20Ga	870 light weight	870 SM	SP10	870 Police	O/U	total	Auto Total	Pump Total
							0	0	0
							0	0	0
							0	0	0
							26	26	0
							0	0	0
							0	0	0
							7	7	0
							6	6	0
							0	0	0
							8	8	0
							3	3	0
							3	3	0
							0	0	0
							0	0	0
							6	6	0
	2		7				9	0	9
	1						1	0	1
			8				29	21	8
							0	0	0
							0	0	0
							0	0	0
	1		4				6	1	5
							1	1	0
							0	0	0
							0	0	0
							1	1	0
							14	8	6
							0	0	0
							0	0	0
							0	0	0

870 16Ga	870 20Ga	870 light weight	870 SM	SP10	870 Police	O/U	total	Auto Total	Pump Total
							0	0	0
							0	0	0
							0	0	0
							3	3	0
							0	0	0
							0	0	0
							0	0	0
							0	0	0
							5	5	0
							0	0	0
							0	0	0
							1	0	1
							0	0	0
							0	0	0
							0	0	0
							6	4	2
							0	0	0
							0	0	0
							6	6	0
							0	0	0
							0	0	0
							0	0	0
							6	6	0
							0	0	0
							6	6	0
							0	0	0
							0	0	0
							8	0	8
							2	0	2
							0	0	0
							6	6	0

 


870 16Ga	870 20Ga	870 light weight	870 SM	SP10	870 Police	O/U	total	Auto Total	Pump Total
							0	0	0
							0	0	0
							0	0	0
							54	54	0
							0	0	0
							1	0	1
					1		99	96	2
							0	0	0
							0	0	0
							0	0	0
							0	0	0
							0	0	0
							0	0	0
							0	0	0
							0	0	0
							0	0	0
							0	0	0
							0	0	0
							0	0	0
							0	0	0
							0	0	0
					12		12	0	0
					3		3	0	0
					4		4	0	0
					20		20	0	0
							0	0	0
							0	0	0
							0	0	0
							0	0	0
							0	0	0
					1		1	0	0
					2		2	0	0
							0	0	0

[illegible]

# Gallery Top Faults for Pump Shotguns - Current month through:

8/13/06

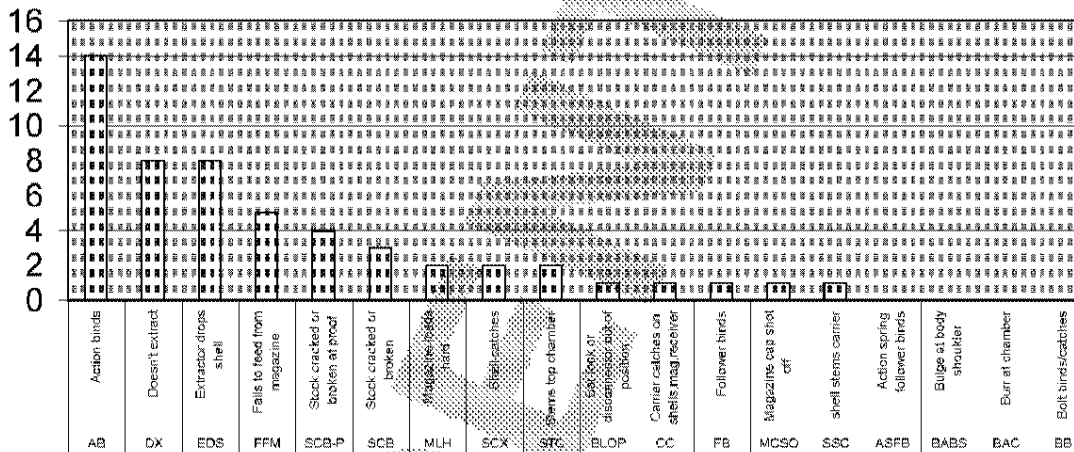 


through:

a	BAC	Burn at chamber	
	BB	Bolt binds/catches	
	BCOM	Bolt catches on ejector	
	BC	Blows cases	

# Gallery Top Faults for Autoloading Shotguns - Current month through:

8/13/06

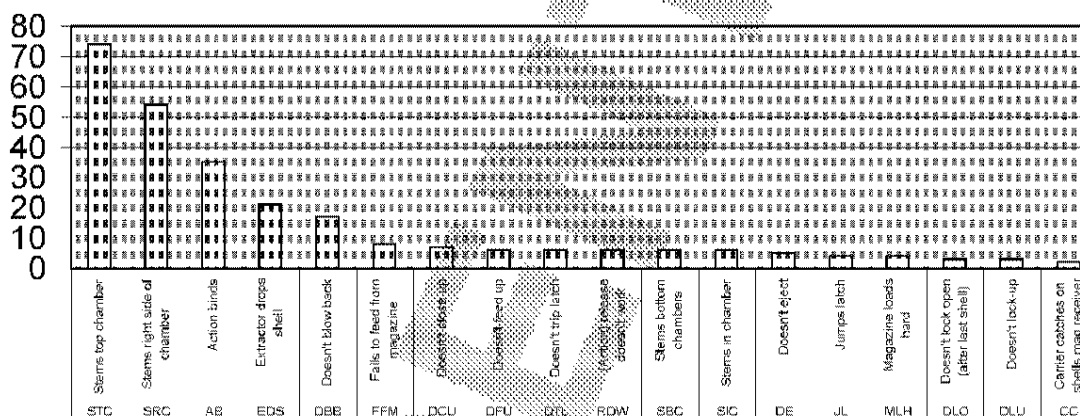 


month

0		DLU	CC	FB	FC
Doesn't lock-up					
Carrier catches on shell mag/receiver					
Follower binds					
Fails to connect					

# Gallery Top Faults for Police Shotguns - Current month through:

8/13/06

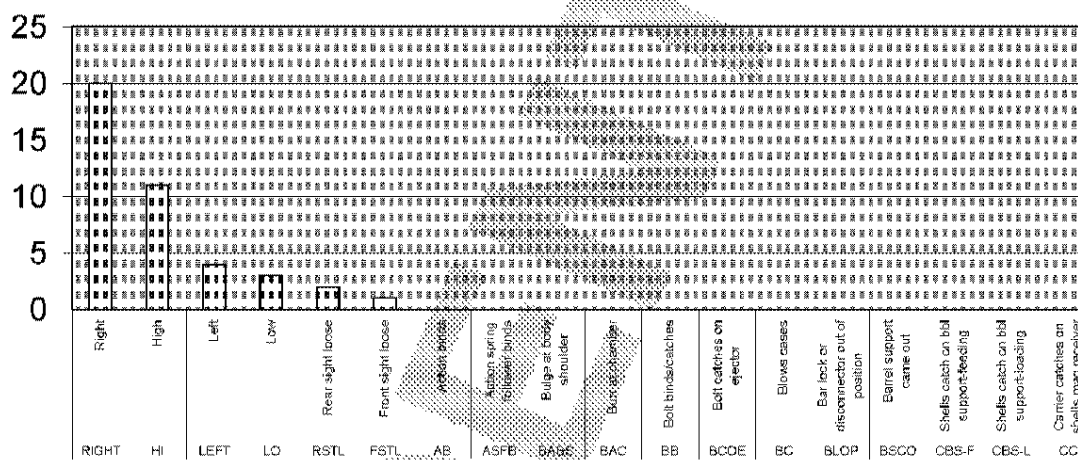

through:

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95	96	97	98	99	100
101	102	103	104	105	106	107	108	109	110	111	112	113	114	115	116	117	118	119	120	121	122	123	124	125	126	127	128	129	130	131	132	133	134	135	136	137	138	139	140	141	142	143	144	145	146	147	148	149	150	151	152	153	154	155	156	157	158	159	160	161	162	163	164	165	166	167	168	169	170	171	172	173	174	175	176	177	178	179	180	181	182	183	184	185	186	187	188	189	190	191	192	193	194	195	196	197	198	199	200
201	202	203	204	205	206	207	208	209	210	211	212	213	214	215	216	217	218	219	220	221	222	223	224	225	226	227	228	229	230	231	232	233	234	235	236	237	238	239	240	241	242	243	244	245	246	247	248	249	250	251	252	253	254	255	256	257	258	259	260	261	262	263	264	265	266	267	268	269	270	271	272	273	274	275	276	277	278	279	280	281	282	283	284	285	286	287	288	289	290	291	292	293	294	295	296	297	298	299	300
301	302	303	304	305	306	307	308	309	310	311	312	313	314	315	316	317	318	319	320	321	322	323	324	325	326	327	328	329	330	331	332	333	334	335	336	337	338	339	340	341	342	343	344	345	346	347	348	349	350	351	352	353	354	355	356	357	358	359	360	361	362	363	364	365	366	367	368	369	370	371	372	373	374	375	376	377	378	379	380	381	382	383	384	385	386	387	388	389	390	391	392	393	394	395	396	397	398	399	400
401	402	403	404	405	406	407	408	409	410	411	412	413	414	415	416	417	418	419	420	421	422	423	424	425	426	427	428	429	430	431	432	433	434	435	436	437	438	439	440	441	442	443	444	445	446	447	448	449	450	451	452	453	454	455	456	457	458	459	460	461	462	463	464	465	466	467	468	469	470	471	472	473	474	475	476	477	478	479	480	481	482	483	484	485	486	487	488	489	490	491	492	493	494	495	496	497	498	499	500
501	502	503	504	505	506	507	508	509	510	511	512	513	514	515	516	517	518	519	520	521	522	523	524	525	526	527	528	529	530	531	532	533	534	535	536	537	538	539	540	541	542	543	544	545	546	547	548	549	550	551	552	553	554	555	556	557	558	559	560	561	562	563	564	565	566	567	568	569	570	571	572	573	574	575	576	577	578	579	580	581	582	583	584	585	586	587	588	589	590	591	592	593	594	595	596	597	598	599	600
601	602	603	604	605	606	607	608	609	610	611	612	613	614	615	616	617	618	619	620	621	622	623	624	625	626	627	628	629	630	631	632	633	634	635	636	637	638	639	640	641	642	643	644	645	646	647	648	649	650	651	652	653	654	655	656	657	658	659	660	661	662	663	664	665	666	667	668	669	670	671	672	673	674	675	676	677	678	679	680	681	682	683	684	685	686	687	688	689	690	691	692	693	694	695	696	697	698	699	700
701	702	703	704	705	706	707	708	709	710	711	712	713	714	715	716	717	718	719	720	721	722	723	724	725	726	727	728	729	730	731	732	733	734	735	736	737	738	739	740	741	742	743	744	745	746	747	748	749	750	751	752	753	754	755	756	757	758	759	760	761	762	763	764	765	766	767	768	769	770	771	772	773	774	775	776	777	778	779	780	781	782	783	784	785	786	787	788	789	790	791	792	793	794	795	796	797	798	799	800
801	802	803	804	805	806	807	808	809	810	811	812	813	814	815	816	817	818	819	820	821	822	823	824	825	826	827	828	829	830	831	832	833	834	835	836	837	838	839	840	841	842	843	844	845	846	847	848	849	850	851	852	853	854	855	856	857	858	859	860	861	862	863	864	865	866	867	868	869	870	871	872	873	874	875	876	877	878	879	880	881	882	883	884	885	886	887	888	889	890	891	892	893	894	895	896	897	898	899	900
901	902	903	904	905	906	907	908	909	910	911	912	913	914	915	916	917	918	919	920	921	922	923	924	925	926	927	928	929	930	931	932	933	934	935	936	937	938	939	940	941	942	943	944	945	946	947	948	949	950	951	952	953	954	955	956	957	958	959	960	961	962	963	964	965	966	967	968	969	970	971	972	973	974	975	976	977	978	979	980	981	982	983	984	985	986	987	988	989	990	991	992	993	994	995	996	997	998	999	1000





FD	Follows-down	0
FF	Fails to fire	0
FFP	Flat firing pin	0
FOS	Fires on safe	0
FSR	Fires when safe is released	0
GCSO	Gas cyl shot off	0
GRSO	Guide ring shot off	0
HPA	High pressure ammo	0
HUE	Hard under extractor	0
ILOP	Int. latch out of position	0
ILRM	Int. latch ret. Missing	0
ILSB	Int. latch stud broken	0
ILSP	Int. latch spring out of position	0
JL	Jumps latch	0
JO	Jars off	0
LB	Light blow	0
MCW	Magazine capacity wrong	0
MFA	Misfires (ammo)	0
MFOP	Magazine follower out of position	0
OH	Opens hard	0
PH	Pulls hard	0
PSI	Proof stamp illegible	0
PSM	Proof stamp missing	0
RBOC	Rings and bulges on case	0
RDW	(Action) release doesn't work	0
RIC	Rings in chamber	0
SBC	Stems bottom chambers	0
SBCL	Shell binds carrier latch	0
SBE	Stems bbl extension	0
SHI	Short indent	0
SIC	Stems in chamber	0
SL	shaves lead	0
SLC	Stems left side of chamber	0
SMOC	Stretch marks on case	0
SRC	Stems right side of chamber	0
SRIC	Specific rings in chamber	0
SWE	Safety switch works too easily	0
SWH	Safety switch works too hard	0
SWW	Safety switch won't work	0
TD	Tips down	0
TU	Tips up	0
TWP	Trigger won't pull	0
TWR	Trigger won't retract	0
UNCN-T	Uncoded	0
XH	Extracts hard	0
XHB	Extractor hits bbl	0
		0
HI	High	0
LO	Low	0
LEFT	Left	0
RIGHT	Right	0

DG	Doesn't Group	0
FSST	Front sight tipped	0
RSTT	Rear sight tipped	0
RSBR	Rear sight base raised	0
FSTR	Front sight raised	0
FSTL	Front sight loose	0
RSTL	Rear sight loose	0
MGPT-G	Missing parts at target	0
UNCN-G	Uncoded nonconformity at target	0
AI-P	Assembly incomplete at proof	0
BC-P	Blows cases at proof	0
BEB-P	Barrel extension broken at proof	0
BLP-P	Blanked primer at proof	0
BP-P	Blown primer at proof	0
BS-P	Barrel split at proof	0
DLOS-P	Doesn't lock over shells at proof	0
ESB-P	Ejector sticks back at proof	0
FCB-P	Fore-end cracked at proof	0
FESO-P	Fore-end shot off at proof	0
FF-P	Fails to fire at proof	0
GCSO-P	Gas cylinder shot off at proof	0
GRSO-P	Guide ring shot off at proof	0
MCSO-P	Magazine cap shot off at proof	0
MSI-P	Magnaflux stamp illegible on bbl	0
MSM-P	Magnaflux stamp missing on bbl	0
PP-P	Pierced primer at proof	0
UNCM-P	Uncoded proof malfunctions	0

STC	Stems top chamber	74
SRC	Stems right side of chamber	54
AB	Action binds	35
EDS	Extractor drops shell	21
DBB	Doesn't blow back	17
FFM	Fails to feed from magazine	8
DCU	Doesn't close-up	7
DFU	Doesn't feed up	6
DTL	Doesn't trip latch	6
RDW	(Action) release doesn't work	6
SBC	Stems bottom chambers	6
SIC	Stems in chamber	6
DE	Doesn't eject	5
JL	Jumps latch	4
MLH	Magazine loads hard	4
DLO	Doesn't lock open (after last shell)	3
DLU	Doesn't lock-up	3
CC	Carrier catches on shells,mag,receiver	2
FB	Follower binds	1
FC	Fails to connect	1
FF	Fails to fire	1
HUE	Hard under extractor	1
ASFB	Action spring follower binds	0
BABS	Bulge at body shoulder	0
BAC	Burr at chamber	0
BB	Bolt binds/catches	0
BCOE	Bolt catches on ejector	0
BC	Blows cases	0
BLOP	Bar lock or disconnecter out of position	0
BSCO	Barrel support came out	0
CBS-F	Shells catch on bbl support-feeding	0
CBS-L	Shells catch on bbl support-loading	0
CD	Case dented	0
CH	Closes hard	0
CHAB	Carrier hits action bar	0
CLM	Can't load magazine	0
CO	Cut-off	0
CR	Cuts rim	0
CS	Cases swell	0
CTOG	Chamber torn or gouged	0
CTP	Creepy trigger pull	0
CWSB	Cams wrong side of action bar	0
DCS	Double click in safety switch	0
DCT	Double click in trigger	0
DEL	Doesn't eject live round	0
DS	Dead safe	0
DSM	Drops shell-magazine	0
DX	Doesn't extract	0
DXL	Doesn't extract live round	0
ESB	Ejector sticks back	0
ESS	Extractor stems shell	0

FA	Fires automatically	0
FCB	Fore-end cracked or broken	0
FD	Follows-down	0
FFP	Flat firing pin	0
FOS	Fires on safe	0
FSR	Fires when safe is released	0
GCSO	Gas cyl shot off	0
GRSO	Guide ring shot off	0
HPA	High pressure ammo	0
ILOP	Int. latch out of position	0
ILRM	Int. latch ret. Missing	0
ILSB	Int. latch stud broken	0
ILSP	Int. latch spring out of position	0
JO	Jars off	0
LB	Light blow	0
MCSO	Magazine cap shot off	0
MCW	Magazine capacity wrong	0
MFA	Misfires (ammo)	0
MFOP	Magazine follower out of position	0
OH	Opens hard	0
PH	Pulls hard	0
PSI	Proof stamp illegible	0
PSM	Proof stamp missing	0
RBOC	Rings and bulges on case	0
RIC	Rings in chamber	0
SBCL	Shell binds carrier latch	0
SBE	Stems bbl extension	0
SCB	Stock cracked or broken	0
SCX	Shell catches	0
SHI	Short indent	0
SL	shaves lead	0
SLC	Stems left side of chamber	0
SMOC	Stretch marks on case	0
SRIC	Specific rings in chamber	0
SSC	shell stems carrier	0
SWE	Safety switch works too easily	0
SWH	Safety switch works too hard	0
SWW	Safety switch won't work	0
TD	Tips down	0
TU	Tips up	0
TWP	Trigger won't pull	0
TWR	Trigger won't retract	0
UNCN-T	Uncoded	0
XH	Extracts hard	0
XHB	Extractor hits bbl	0
HI	High	0
LO	Low	0
LEFT	Left	0
RIGHT	Right	0
DG	Doesn't Group	0
FSST	Front sight tipped	0

RSTT	Rear sight tipped	0
RSBR	Rear sight base raised	0
FSTR	Front sight raised	0
FSTL	Front sight loose	0
RSTL	Rear sight loose	0
MGPT-G	Missing parts at target	0
UNCN-G	Uncoded nonconformity at target	0
AI-P	Assembly incomplete at proof	0
BC-P	Blows cases at proof	0
BEB-P	Barrel extension broken at proof	0
BLP-P	Blanked primer at proof	0
BP-P	Blown primer at proof	0
BS-P	Barrel split at proof	0
DLOS-P	Doesn't lock over shells at proof	0
ESB-P	Ejector sticks back at proof	0
FCB-P	Fore-end cracked at proof	0
FESO-P	Fore-end shot off at proof	0
FF-P	Fails to fire at proof	0
GCSO-P	Gas cylinder shot off at proof	0
GRSO-P	Guide ring shot off at proof	0
MCSO-P	Magazine cap shot off at proof	0
MSI-P	Magnaflux stamp illegible on bbl	0
MSM-P	Magnaflux stamp missing on bbl	0
PP-P	Pierced primer at proof	0
SCB-P	Stock cracked or broken at proof	0
UNCM-P	Uncoded proof malfunctions	0

RIGHT	Right	20
HI	High	11
LEFT	Left	4
LO	Low	3
RSTL	Rear sight loose	2
FSTL	Front sight loose	1
AB	Action binds	0
ASFB	Action spring follower binds	0
BABS	Bulge at body shoulder	0
BAC	Burr at chamber	0
BB	Bolt binds/catches	0
BCOE	Bolt catches on ejector	0
BC	Blows cases	0
BLOP	Bar lock or disconnecter out of position	0
BSCO	Barrel support came out	0
CBS-F	Shells catch on bbl support-feeding	0
CBS-L	Shells catch on bbl support-loading	0
CC	Carrier catches on shells,mag,receiver	0
CD	Case dented	0
CH	Closes hard	0
CHAB	Carrier hits action bar	0
CLM	Can't load magazine	0
CO	Cut-off	0
CR	Cuts rim	0
CS	Cases swell	0
CTOG	Chamber torn or gouged	0
CTP	Creepy trigger pull	0
CWSB	Cams wrong side of action bar	0
DBB	Doesn't blow back	0
DCS	Double click in safety switch	0
DCT	Double click in trigger	0
DCU	Doesn't close-up	0
DE	Doesn't eject	0
DEL	Doesn't eject live round	0
DFU	Doesn't feed up	0
DLO	Doesn't lock open (after last shell)	0
DLU	Doesn't lock-up	0
DS	Dead safe	0
DSM	Drops shell-magazine	0
DTL	Doesn't trip latch	0
DX	Doesn't extract	0
DXL	Doesn't extract live round	0
EDS	Extractor drops shell	0
ESB	Ejector sticks back	0
ESS	Extractor stems shell	0
FA	Fires automatically	0
FB	Follower binds	0
FC	Fails to connect	0
FCB	Fore-end cracked or broken	0
FD	Follows-down	0
FF	Fails to fire	0

FFM	Fails to feed from magazine	0
FFP	Flat firing pin	0
FOS	Fires on safe	0
FSR	Fires when safe is released	0
GCSO	Gas cyl shot off	0
GRSO	Guide ring shot off	0
HPA	High pressure ammo	0
HUE	Hard under extractor	0
ILOP	Int. latch out of position	0
ILRM	Int. latch ret. Missing	0
ILSB	Int. latch stud broken	0
ILSP	Int. latch spring out of position	0
JL	Jumps latch	0
JO	Jars off	0
LB	Light blow	0
MCSO	Magazine cap shot off	0
MCW	Magazine capacity wrong	0
MFA	Misfires (ammo)	0
MFOP	Magazine follower out of position	0
MLH	Magazine loads hard	0
OH	Opens hard	0
PH	Pulls hard	0
PSI	Proof stamp illegible	0
PSM	Proof stamp missing	0
RBOC	Rings and bulges on case	0
RDW	(Action) release doesn't work	0
RIC	Rings in chamber	0
SBC	Stems bottom chambers	0
SBCL	Shell binds carrier latch	0
SBE	Stems bbl extension	0
SCB	Stock cracked or broken	0
SCX	Shell catches	0
SHI	Short indent	0
SIC	Stems in chamber	0
SL	shaves lead	0
SLC	Stems left side of chamber	0
SMOC	Stretch marks on case	0
SRC	Stems right side of chamber	0
SRIC	Specific rings in chamber	0
SSC	shell stems carrier	0
STC	Stems top chamber	0
SWE	Safety switch works too easily	0
SWH	Safety switch works too hard	0
SWW	Safety switch won't work	0
TD	Tips down	0
TU	Tips up	0
TWP	Trigger won't pull	0
TWR	Trigger won't retract	0
UNCN-T	Uncoded	0
XH	Extracts hard	0
XHB	Extractor hits bbl	0



DG	Doesn't Group	0
FSST	Front sight tipped	0
RSTT	Rear sight tipped	0
RSBR	Rear sight base raised	0
FSTR	Front sight raised	0
MGPT-G	Missing parts at target	0
UNCN-G	Uncoded nonconformity at target	0
		0
AI-P	Assembly incomplete at proof	0
BC-P	Blows cases at proof	0
BEB-P	Barrel extension broken at proof	0
BLP-P	Blanked primer at proof	0
BP-P	Blown primer at proof	0
BS-P	Barrel split at proof	0
DLOS-P	Doesn't lock over shells at proof	0
ESB-P	Ejector sticks back at proof	0
FCB-P	Fore-end cracked at proof	0
FESO-P	Fore-end shot off at proof	0
FF-P	Fails to fire at proof	0
GCSO-P	Gas cylinder shot off at proof	0
GRSO-P	Guide ring shot off at proof	0
MCSO-P	Magazine cap shot off at proof	0
MSI-P	Magnaflux stamp illegible on bbl	0
MSM-P	Magnaflux stamp missing on bbl	0
PP-P	Pierced primer at proof	0
SCB-P	Stock cracked or broken at proof	0
UNCM-P	Uncoded proof malfunctions	0
		0

<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>1160</b>
	<b>Total Rejected:</b>	<b>68</b>
	<b>Overall Reject Rate:</b>	<b>5.86</b>

<b>Proof</b>	Shot:	38	6	59				17	538	
	Rejected:	0	0	0	0	0	0	0	0	0
	Percent:	0.0	0.0	0.0				0.0	0.0	
<b>Test</b>	Shot:	1	40	100	12			92	538	
	Rejected:	0	0	2	0	0	0	60	3	0
	Percent:	0.0	0.0	2.0	0.0			65.2	0.6	
<b>Target</b>	Shot:									
	Rejected:	0	0	0	0	0	0	0	0	0
	Percent:									

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
AB	Action binds			1					2		
ASFB	Action spring follower binds										
BABS	Bulge at body shoulder										
BAC	Burr at chamber										
BB	Bolt binds/catches										
BCOE	Bolt catches on ejector										
BC	Blows cases										
BLOP	Bar lock or disconnecter out of position										
BSCO	Barrel support came out										
CBS-F	Shells catch on bbl support-feeding										
CBS-L	Shells catch on bbl support-loading										
CC	Carrier catches on shells,mag,receiver								1		
CD	Case dented										
CH	Closes hard										

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
CHAB	Carrier hits action bar										
CLM	Can't load magazine										
CO	Cut-off										
CR	Cuts rim										
CS	Cases swell										
CTOG	Chamber torn or gouged										
CTP	Creepy trigger pull										
CWSB	Cams wrong side of action bar										
DBB	Doesn't blow back								8		
DCS	Double click in safety switch										
DCT	Double click in trigger										
DCU	Doesn't close-up										
DE	Doesn't eject										
DEL	Doesn't eject live round										
DFU	Doesn't feed up										
DLO	Doesn't lock open (after last shell)								1		
DLU	Doesn't lock-up										
DS	Dead safe										
DSM	Drops shell-magazine										
DTL	Doesn't trip latch										
DX	Doesn't extract										
DXL	Doesn't extract live round										
EDS	Extractor drops shell								9		
ESB	Ejector sticks back										
ESS	Extractor stems shell										

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
FA	Fires automatically										
FB	Follower binds										
FC	Fails to connect										
FCB	Fore-end cracked or broken										
FD	Follows-down										
FF	Fails to fire			1							
FFM	Fails to feed from magazine								2	2	
FFP	Flat firing pin										
FOS	Fires on safe										
FSR	Fires when safe is released										
GCSO	Gas cyl shot off										
GRSO	Guide ring shot off										
HPA	High pressure ammo										
HUE	Hard under extractor										
ILOP	Int. latch out of position										
ILRM	Int. latch ret. Missing										
ILSB	Int. latch stud broken										
ILSP	Int. latch spring out of position										
JL	Jumps latch								1		
JO	Jars off										
LB	Light blow										
MCSO	Magazine cap shot off										
MCW	Magazine capacity wrong										
MFA	Misfires (ammo)										
MFOP	Magazine follower out of position										

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
MLH	Magazine loads hard										
OH	Opens hard										
PH	Pulls hard										
PSI	Proof stamp illegible										
PSM	Proof stamp missing										
RBOC	Rings and bulges on case										
RDW	(Action) release doesn't work								1		
RIC	Rings in chamber										
SBC	Stems bottom chambers										
SBCL	Shell binds carrier latch										
SBE	Stems bbl extension										
SCB	Stock cracked or broken										
SCX	Shell catches										
SHI	Short indent										
SIC	Stems in chamber										
SL	shaves lead										
SLC	Stems left side of chamber										
SMOC	Stretch marks on case										
SRC	Stems right side of chamber								35		
SRIC	Specific rings in chamber										
SSC	shell stems carrier										
STC	Stems top chamber									1	
SWE	Safety switch works too easily										
SWH	Safety switch works too hard										
SWW	Safety ewitxh won't work										

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
TD	Tips down										
TU	Tips up										
TWP	Trigger won't pull										
TWR	Trigger won't retract										
UNCN-T	Uncoded										
XH	Extracts hard										
XHB	Extractor hits bbl										
HI	High										
LO	Low										
LEFT	Left										
RIGHT	Right										
DG	Doesn't Group										
FSST	Front sight tipped										
RSTT	Rear sight tipped										
RSBR	Rear sight base raised										
FSTR	Front sight raised										
FSTL	Front sight loose										
RSTL	Rear sight loose										
MGPT-G	Missing parts at target										
UNCN-G	Uncoded nonconformity at target										
AI-P	Assembly incomplete at proof										
BC-P	Blows cases at proof										
BEB-P	Barrel extension broken at proof										

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
BLP-P	Blanked primer at proof										
BP-P	Blown primer at proof										
BS-P	Barrel split at proof										
DLOS-P	Doesn't lock over shells at proof										
ESB-P	Ejector sticks back at proof										
FCB-P	Fore-end cracked at proof										
FESO-P	Fore-end shot off at proof										
FF-P	Fails to fire at proof										
GCSO-P	Gas cylinder shot off at proof										
GRSO-P	Guide ring shot off at proof										
MCSO-P	Magazine cap shot off at proof										
MSI-P	Magnaflux stamp illegible on bbl										
MSM-P	Magnaflux stamp missing on bbl										
PP-P	Pierced primer at proof										
SCB-P	Stock cracked or broken at proof										
UNCM-P	Uncoded proof malfunctions										

[illegible]

ILE00125145



[illegible]

[illegible]



[illegible]



<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>1125</b>
	<b>Total Rejected:</b>	<b>24</b>
	<b>Overall Reject Rate:</b>	<b>2.13</b>

<b>Proof</b>	Shot:	42	108						820	
	Rejected:	0	0	0	0	0	0	0	0	0
	Percent:	0.0	0.0						0.0	
<b>Test</b>	Shot:	1	25	104	3				10	820
	Rejected:	0	1	5	0	0	0	0	7	6
	Percent:	0.0	3.8	4.8	0.0				70.0	0.7
<b>Target</b>	Shot:									
	Rejected:	0	0	0	0	0	0	0	0	0
	Percent:									

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
AB	Action binds		1	2						3	
ASFB	Action spring follower binds										
BABS	Bulge at body shoulder										
BAC	Burr at chamber										
BB	Bolt binds/catches										
BCOE	Bolt catches on ejector										
BC	Blows cases										
BLOP	Bar lock or disconnecter out of position										
BSCO	Barrel support came out										
CBS-F	Shells catch on bbl support-feeding										
CBS-L	Shells catch on bbl support-loading										
CC	Carrier catches on shells,mag,receiver			1							
CD	Case dented										
CH	Closes hard										

CHAB	Carrier hits action bar											
CLM	Can't load magazine											
CO	Cut-off											
CR	Cuts rim											
CS	Cases swell											
CTOG	Chamber torn or gouged											
CTP	Creepy trigger pull											
CWSB	Cams wrong side of action bar											
DBB	Doesn't blow back											
DCS	Double click in safety switch											
DCT	Double click in trigger											
DCU	Doesn't close-up											
DE	Doesn't eject											
DEL	Doesn't eject live round											
DFU	Doesn't feed up											
DLO	Doesn't lock open (after last shell)											
DLU	Doesn't lock-up											
DS	Dead safe											
DSM	Drops shell-magazine											
DTL	Doesn't trip latch											
DX	Doesn't extract											
DXL	Doesn't extract live round											
EDS	Extractor drops shell									4		
ESB	Ejector sticks back											
ESS	Extractor stems shell											
FA	Fires automatically											
FB	Follower binds											

FC	Fails to connect											
FCB	Fore-end cracked or broken											
FD	Follows-down											
FF	Fails to fire											
FFM	Fails to feed from magazine									3		
FFP	Flat firing pin											
FOS	Fires on safe											
FSR	Fires when safe is released											
GCSO	Gas cyl shot off											
GRSO	Guide ring shot off											
HPA	High pressure ammo											
HUE	Hard under extractor											
ILOP	Int. latch out of position											
ILRM	Int. latch ret. Missing											
ILSB	Int. latch stud broken											
ILSP	Int. latch spring out of position											
JL	Jumps latch			1								
JO	Jars off											
LB	Light blow											
MCSO	Magazine cap shot off											
MCW	Magazine capacity wrong											
MFA	Misfires (ammo)											
MFOP	Magazine follower out of position											
MLH	Magazine loads hard											
OH	Opens hard											
PH	Pulls hard											
PSI	Proof stamp illegible											



PSM	Proof stamp missing											
RBOC	Rings and bulges on case											
RDW	(Action) release doesn't work											
RIC	Rings in chamber											
SBC	Stems bottom chambers											
SBCL	Shell binds carrier latch											
SBE	Stems bbl extension											
SCB	Stock cracked or broken											
SCX	Shell catches											
SHI	Short indent											
SIC	Stems in chamber											
SL	shaves lead											
SLC	Stems left side of chamber											
SMOC	Stretch marks on case											
SRC	Stems right side of chamber								3			
SRIC	Specific rings in chamber											
SSC	shell stems carrier											
STC	Stems top chamber											
SWE	Safety switch works too easily											
SWH	Safety switch works too hard											
SWW	Safety ewitxh won't work											
TD	Tips down											
TU	Tips up											
TWP	Trigger won't pull											
TWR	Trigger won't retract											
UNCN-T	Uncoded											
XH	Extracts hard											

XHB	Extractor hits bbl												
HI	High												
LO	Low												
LEFT	Left												
RIGHT	Right												
DG	Doesn't Group												
FSST	Front sight tipped												
RSTT	Rear sight tipped												
RSBR	Rear sight base raised												
FSTR	Front sight raised												
FSTL	Front sight loose												
RSTL	Rear sight loose												
MGPT-G	Missing parts at target												
UNCN-G	Uncoded nonconformity at target												
AI-P	Assembly incomplete at proof												
BC-P	Blows cases at proof												
BEB-P	Barrel extension broken at proof												
BLP-P	Blanked primer at proof												
BP-P	Blown primer at proof												
BS-P	Barrel split at proof												
DLOS-P	Doesn't lock over shells at proof												
ESB-P	Ejector sticks back at proof												
FCB-P	Fore-end cracked at proof												
FESO-P	Fore-end shot off at proof												
FF-P	Fails to fire at proof												

GCSO-P	Gas cylinder shot off at proof
CPSO-P	Guide ring shot off at proof
MCSO-P	Magazine cap shot off at proof
MSI-P	Magnaflux stamp illegible or bbl
MSM-P	Magnaflux stamp missing on bbl
PP-P	Pierced primer at proof
SCB-P	Stock cracked or broken at proof
UNCM-P	Uncoded proof malfunctions

Test Date:				
0	0	58	0	113
		0.0	0	0.0
		0.0		0.0
0	0	58	0	103
		0	0	0
		0.0		0.0
0	0	0	0	66
				5
0	0	0	0	76

Test Date:				
0	0	58	0	113
		0.0	0	0.0
		0.0		0.0
0	0	58	0	103
		0	0	0
		0.0		0.0
0	0	0	0	66
				5
0	0	0	0	76












<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

**Proof**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

**Test**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

**Target**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
AB	Action binds										
ASFB	Action spring follower binds										
BABS	Bulge at body shoulder										
BAC	Burr at chamber										
BB	Bolt binds/catches										
BCOE	Bolt catches on ejector										
BC	Blows cases										
BLOP	Bar lock or disconnecter out of position										
BSCO	Barrel support came out										
CBS-F	Shells catch on bbl support-feeding										
CBS-L	Shells catch on bbl support-loading										
CC	Carrier catches on shells,mag,receiver										
CD	Case dented										
CH	Closes hard										

CHAB	Carrier hits action bar											
CLM	Can't load magazine											
CO	Cut-off											
CR	Cuts rim											
CS	Cases swell											
CTOG	Chamber torn or gouged											
CTP	Creepy trigger pull											
CWSB	Cams wrong side of action bar											
DBB	Doesn't blow back											
DCS	Double click in safety switch											
DCT	Double click in trigger											
DCU	Doesn't close-up											
DE	Doesn't eject											
DEL	Doesn't eject live round											
DFU	Doesn't feed up											
DLO	Doesn't lock open (after last shell)											
DLU	Doesn't lock-up											
DS	Dead safe											
DSM	Drops shell-magazine											
DTL	Doesn't trip latch											
DX	Doesn't extract											
DXL	Doesn't extract live round											
EDS	Extractor drops shell											
ESB	Ejector sticks back											
ESS	Extractor stems shell											
FA	Fires automatically											
FB	Follower binds											

FC	Fails to connect											
FCB	Fore-end cracked or broken											
FD	Follows-down											
FF	Fails to fire											
FFM	Fails to feed from magazine											
FFP	Flat firing pin											
FOS	Fires on safe											
FSR	Fires when safe is released											
GCSO	Gas cyl shot off											
GRSO	Guide ring shot off											
HPA	High pressure ammo											
HUE	Hard under extractor											
ILOP	Int. latch out of position											
ILRM	Int. latch ret. Missing											
ILSB	Int. latch stud broken											
ILSP	Int. latch spring out of position											
JL	Jumps latch											
JO	Jars off											
LB	Light blow											
MCSO	Magazine cap shot off											
MCW	Magazine capacity wrong											
MFA	Misfires (ammo)											
MFOP	Magazine follower out of position											
MLH	Magazine loads hard											
OH	Opens hard											
PH	Pulls hard											
PSI	Proof stamp illegible											

PSM	Proof stamp missing											
RBOC	Rings and bulges on case											
RDW	(Action) release doesn't work											
RIC	Rings in chamber											
SBC	Stems bottom chambers											
SBCL	Shell binds carrier latch											
SBE	Stems bbl extension											
SCB	Stock cracked or broken											
SCX	Shell catches											
SHI	Short indent											
SIC	Stems in chamber											
SL	shaves lead											
SLC	Stems left side of chamber											
SMOC	Stretch marks on case											
SRC	Stems right side of chamber											
SRIC	Specific rings in chamber											
SSC	shell stems carrier											
STC	Stems top chamber											
SWE	Safety switch works too easily											
SWH	Safety switch works too hard											
SWW	Safety ewitxh won't work											
TD	Tips down											
TU	Tips up											
TWP	Trigger won't pull											
TWR	Trigger won't retract											
UNCN-T	Uncoded											
XH	Extracts hard											

XHB	Extractor hits bbl												
HI	High												
LO	Low												
LEFT	Left												
RIGHT	Right												
DG	Doesn't Group												
FSST	Front sight tipped												
RSTT	Rear sight tipped												
RSBR	Rear sight base raised												
FSTR	Front sight raised												
FSTL	Front sight loose												
RSTL	Rear sight loose												
MGPT-G	Missing parts at target												
UNCN-G	Uncoded nonconformity at target												
AI-P	Assembly incomplete at proof												
BC-P	Blows cases at proof												
BEB-P	Barrel extension broken at proof												
BLP-P	Blanked primer at proof												
BP-P	Blown primer at proof												
BS-P	Barrel split at proof												
DLOS-P	Doesn't lock over shells at proof												
ESB-P	Ejector sticks back at proof												
FCB-P	Fore-end cracked at proof												
FESO-P	Fore-end shot off at proof												
FF-P	Fails to fire at proof												

[illegible]

Test Date:

[illegible]












<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

**Proof**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

**Test**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

**Target**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
AB	Action binds										
ASFB	Action spring follower binds										
BABS	Bulge at body shoulder										
BAC	Burr at chamber										
BB	Bolt binds/catches										
BCOE	Bolt catches on ejector										
BC	Blows cases										
BLOP	Bar lock or disconnecter out of position										
BSCO	Barrel support came out										
CBS-F	Shells catch on bbl support-feeding										
CBS-L	Shells catch on bbl support-loading										
CC	Carrier catches on shells,mag,receiver										
CD	Case dented										
CH	Closes hard										

CHAB	Carrier hits action bar											
CLM	Can't load magazine											
CO	Cut-off											
CR	Cuts rim											
CS	Cases swell											
CTOG	Chamber torn or gouged											
CTP	Creepy trigger pull											
CWSB	Cams wrong side of action bar											
DBB	Doesn't blow back											
DCS	Double click in safety switch											
DCT	Double click in trigger											
DCU	Doesn't close-up											
DE	Doesn't eject											
DEL	Doesn't eject live round											
DFU	Doesn't feed up											
DLO	Doesn't lock open (after last shell)											
DLU	Doesn't lock-up											
DS	Dead safe											
DSM	Drops shell-magazine											
DTL	Doesn't trip latch											
DX	Doesn't extract											
DXL	Doesn't extract live round											
EDS	Extractor drops shell											
ESB	Ejector sticks back											
ESS	Extractor stems shell											
FA	Fires automatically											
FB	Follower binds											

FC	Fails to connect											
FCB	Fore-end cracked or broken											
FD	Follows-down											
FF	Fails to fire											
FFM	Fails to feed from magazine											
FFP	Flat firing pin											
FOS	Fires on safe											
FSR	Fires when safe is released											
GCSO	Gas cyl shot off											
GRSO	Guide ring shot off											
HPA	High pressure ammo											
HUE	Hard under extractor											
ILOP	Int. latch out of position											
ILRM	Int. latch ret. Missing											
ILSB	Int. latch stud broken											
ILSP	Int. latch spring out of position											
JL	Jumps latch											
JO	Jars off											
LB	Light blow											
MCSO	Magazine cap shot off											
MCW	Magazine capacity wrong											
MFA	Misfires (ammo)											
MFOP	Magazine follower out of position											
MLH	Magazine loads hard											
OH	Opens hard											
PH	Pulls hard											
PSI	Proof stamp illegible											



PSM	Proof stamp missing											
RBOC	Rings and bulges on case											
RDW	(Action) release doesn't work											
RIC	Rings in chamber											
SBC	Stems bottom chambers											
SBCL	Shell binds carrier latch											
SBE	Stems bbl extension											
SCB	Stock cracked or broken											
SCX	Shell catches											
SHI	Short indent											
SIC	Stems in chamber											
SL	shaves lead											
SLC	Stems left side of chamber											
SMOC	Stretch marks on case											
SRC	Stems right side of chamber											
SRIC	Specific rings in chamber											
SSC	shell stems carrier											
STC	Stems top chamber											
SWE	Safety switch works too easily											
SWH	Safety switch works too hard											
SWW	Safety ewitxh won't work											
TD	Tips down											
TU	Tips up											
TWP	Trigger won't pull											
TWR	Trigger won't retract											
UNCN-T	Uncoded											
XH	Extracts hard											

XHB	Extractor hits bbl												
HI	High												
LO	Low												
LEFT	Left												
RIGHT	Right												
DG	Doesn't Group												
FSST	Front sight tipped												
RSTT	Rear sight tipped												
RSBR	Rear sight base raised												
FSTR	Front sight raised												
FSTL	Front sight loose												
RSTL	Rear sight loose												
MGPT-G	Missing parts at target												
UNCN-G	Uncoded nonconformity at target												
AI-P	Assembly incomplete at proof												
BC-P	Blows cases at proof												
BEB-P	Barrel extension broken at proof												
BLP-P	Blanked primer at proof												
BP-P	Blown primer at proof												
BS-P	Barrel split at proof												
DLOS-P	Doesn't lock over shells at proof												
ESB-P	Ejector sticks back at proof												
FCB-P	Fore-end cracked at proof												
FESO-P	Fore-end shot off at proof												
FF-P	Fails to fire at proof												



[illegible][illegible]












<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

**Proof**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

**Test**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

**Target**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
AB	Action binds										
ASFB	Action spring follower binds										
BABS	Bulge at body shoulder										
BAC	Burr at chamber										
BB	Bolt binds/catches										
BCOE	Bolt catches on ejector										
BC	Blows cases										
BLOP	Bar lock or disconnecter out of position										
BSCO	Barrel support came out										
CBS-F	Shells catch on bbl support-feeding										
CBS-L	Shells catch on bbl support-loading										
CC	Carrier catches on shells,mag,receiver										
CD	Case dented										
CH	Closes hard										

CHAB	Carrier hits action bar											
CLM	Can't load magazine											
CO	Cut-off											
CR	Cuts rim											
CS	Cases swell											
CTOG	Chamber torn or gouged											
CTP	Creepy trigger pull											
CWSB	Cams wrong side of action bar											
DBB	Doesn't blow back											
DCS	Double click in safety switch											
DCT	Double click in trigger											
DCU	Doesn't close-up											
DE	Doesn't eject											
DEL	Doesn't eject live round											
DFU	Doesn't feed up											
DLO	Doesn't lock open (after last shell)											
DLU	Doesn't lock-up											
DS	Dead safe											
DSM	Drops shell-magazine											
DTL	Doesn't trip latch											
DX	Doesn't extract											
DXL	Doesn't extract live round											
EDS	Extractor drops shell											
ESB	Ejector sticks back											
ESS	Extractor stems shell											
FA	Fires automatically											
FB	Follower binds											

FC	Fails to connect											
FCB	Fore-end cracked or broken											
FD	Follows-down											
FF	Fails to fire											
FFM	Fails to feed from magazine											
FFP	Flat firing pin											
FOS	Fires on safe											
FSR	Fires when safe is released											
GCSO	Gas cyl shot off											
GRSO	Guide ring shot off											
HPA	High pressure ammo											
HUE	Hard under extractor											
ILOP	Int. latch out of position											
ILRM	Int. latch ret. Missing											
ILSB	Int. latch stud broken											
ILSP	Int. latch spring out of position											
JL	Jumps latch											
JO	Jars off											
LB	Light blow											
MCSO	Magazine cap shot off											
MCW	Magazine capacity wrong											
MFA	Misfires (ammo)											
MFOP	Magazine follower out of position											
MLH	Magazine loads hard											
OH	Opens hard											
PH	Pulls hard											
PSI	Proof stamp illegible											

PSM	Proof stamp missing											
RBOC	Rings and bulges on case											
RDW	(Action) release doesn't work											
RIC	Rings in chamber											
SBC	Stems bottom chambers											
SBCL	Shell binds carrier latch											
SBE	Stems bbl extension											
SCB	Stock cracked or broken											
SCX	Shell catches											
SHI	Short indent											
SIC	Stems in chamber											
SL	shaves lead											
SLC	Stems left side of chamber											
SMOC	Stretch marks on case											
SRC	Stems right side of chamber											
SRIC	Specific rings in chamber											
SSC	shell stems carrier											
STC	Stems top chamber											
SWE	Safety switch works too easily											
SWH	Safety switch works too hard											
SWW	Safety ewitxh won't work											
TD	Tips down											
TU	Tips up											
TWP	Trigger won't pull											
TWR	Trigger won't retract											
UNCN-T	Uncoded											
XH	Extracts hard											

XHB	Extractor hits bbl												
HI	High												
LO	Low												
LEFT	Left												
RIGHT	Right												
DG	Doesn't Group												
FSST	Front sight tipped												
RSTT	Rear sight tipped												
RSBR	Rear sight base raised												
FSTR	Front sight raised												
FSTL	Front sight loose												
RSTL	Rear sight loose												
MGPT-G	Missing parts at target												
UNCN-G	Uncoded nonconformity at target												
AI-P	Assembly incomplete at proof												
BC-P	Blows cases at proof												
BEB-P	Barrel extension broken at proof												
BLP-P	Blanked primer at proof												
BP-P	Blown primer at proof												
BS-P	Barrel split at proof												
DLOS-P	Doesn't lock over shells at proof												
ESB-P	Ejector sticks back at proof												
FCB-P	Fore-end cracked at proof												
FESO-P	Fore-end shot off at proof												
FF-P	Fails to fire at proof												

[illegible]

[illegible][illegible]












<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>1194</b>
	<b>Total Rejected:</b>	<b>68</b>
	<b>Overall Reject Rate:</b>	<b>5.70</b>

<b>Proof</b>	Shot:		107	279					11	592	
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:		0.0	0.0					0.0	0.0	
<b>Test</b>	Shot:		75	285					21	592	
	Rejected:	0	25	16	1	0	0	0	15	5	0
	Percent:		33.3	5.6					71.4	0.8	
<b>Target</b>	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
AB	Action binds		15	4						1	
ASFB	Action spring follower binds										
BABS	Bulge at body shoulder										
BAC	Burr at chamber										
BB	Bolt binds/catches										
BCOE	Bolt catches on ejector										
BC	Blows cases										
BLOP	Bar lock or disconnecter out of position										
BSCO	Barrel support came out										
CBS-F	Shells catch on bbl support-feeding										
CBS-L	Shells catch on bbl support-loading										
CC	Carrier catches on shells,mag,receiver									1	
CD	Case dented										
CH	Closes hard										

CHAB	Carrier hits action bar											
CLM	Can't load magazine											
CO	Cut-off											
CR	Cuts rim											
CS	Cases swell											
CTOG	Chamber torn or gouged											
CTP	Creepy trigger pull											
CWSB	Cams wrong side of action bar											
DBB	Doesn't blow back			1								
DCS	Double click in safety switch											
DCT	Double click in trigger											
DCU	Doesn't close-up		2	2								
DE	Doesn't eject											
DEL	Doesn't eject live round											
DFU	Doesn't feed up				1							
DLO	Doesn't lock open (after last shell)											
DLU	Doesn't lock-up			3								
DS	Dead safe											
DSM	Drops shell-magazine											
DTL	Doesn't trip latch											
DX	Doesn't extract											
DXL	Doesn't extract live round											
EDS	Extractor drops shell								6			
ESB	Ejector sticks back											
ESS	Extractor stems shell											
FA	Fires automatically											
FB	Follower binds											

FC	Fails to connect											
FCB	Fore-end cracked or broken											
FD	Follows-down											
FF	Fails to fire											
FFM	Fails to feed from magazine			1								
FFP	Flat firing pin											
FOS	Fires on safe											
FSR	Fires when safe is released											
GCSO	Gas cyl shot off											
GRSO	Guide ring shot off											
HPA	High pressure ammo											
HUE	Hard under extractor											
ILOP	Int. latch out of position											
ILRM	Int. latch ret. Missing											
ILSB	Int. latch stud broken											
ILSP	Int. latch spring out of position											
JL	Jumps latch											
JO	Jars off											
LB	Light blow											
MCSO	Magazine cap shot off											
MCW	Magazine capacity wrong											
MFA	Misfires (ammo)											
MFOP	Magazine follower out of position											
MLH	Magazine loads hard				2							
OH	Opens hard											
PH	Pulls hard											
PSI	Proof stamp illegible											



PSM	Proof stamp missing											
RBOC	Rings and bulges on case											
RDW	(Action) release doesn't work											
RIC	Rings in chamber											
SBC	Stems bottom chambers								2			
SBCL	Shell binds carrier latch											
SBE	Stems bbl extension											
SCB	Stock cracked or broken											
SCX	Shell catches									2		
SHI	Short indent											
SIC	Stems in chamber											
SL	shaves lead											
SLC	Stems left side of chamber											
SMOC	Stretch marks on case											
SRC	Stems right side of chamber								7			
SRIC	Specific rings in chamber											
SSC	shell stems carrier											
STC	Stems top chamber		7	4							1	
SWE	Safety switch works too easily											
SWH	Safety switch works too hard											
SWW	Safety ewitxh won't work											
TD	Tips down											
TU	Tips up											
TWP	Trigger won't pull											
TWR	Trigger won't retract											
UNCN-T	Uncoded											
XH	Extracts hard											

XHB	Extractor hits bbl												
HI	High												
LO	Low												
LEFT	Left												
RIGHT	Right												
DG	Doesn't Group												
FSST	Front sight tipped												
RSTT	Rear sight tipped												
RSBR	Rear sight base raised												
FSTR	Front sight raised												
FSTL	Front sight loose												
RSTL	Rear sight loose												
MGPT-G	Missing parts at target												
UNCN-G	Uncoded nonconformity at target												
AI-P	Assembly incomplete at proof												
BC-P	Blows cases at proof												
BEB-P	Barrel extension broken at proof												
BLP-P	Blanked primer at proof												
BP-P	Blown primer at proof												
BS-P	Barrel split at proof												
DLOS-P	Doesn't lock over shells at proof												
ESB-P	Ejector sticks back at proof												
FCB-P	Fore-end cracked at proof												
FESO-P	Fore-end shot off at proof												
FF-P	Fails to fire at proof												

GCSO-P	Gas cylinder shot off at proof
GRSO-P	Guide ring shot off at proof
MCSO-P	Magazine cap shot off at proof
MSI-P	Magnaflex stamp illegible or bbl
MSM-P	Magniflux stamp missing or bbl
PP-P	Pierced primer at proof
SCB-P	Stock cracked or broken at proof
UNCM-P	Uncoded proof malfunctions

**Test Date:**

122	02	02	02
122	02	02	02

122	99				
0	0	0	0	0	0

[illegible][illegible]












<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>1271</b>
	<b>Total Rejected:</b>	<b>92</b>
	<b>Overall Reject Rate:</b>	<b>7.24</b>

<b>Proof</b>	Shot:		124	68			79			484	
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:		0.0	0.0			0.0			0.0	
<b>Test</b>	Shot:		175	56			81		20	484	
	Rejected:	0	40	3	0	0	6	0	14	6	0
	Percent:		22.7	5.4			7.4		70.0	1.2	
<b>Target</b>	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
AB	Action binds		9							1	
ASFB	Action spring follower binds										
BABS	Bulge at body shoulder										
BAC	Burr at chamber										
BB	Bolt binds/catches										
BCOE	Bolt catches on ejector										
BC	Blows cases										
BLOP	Bar lock or disconnecter out of position									1	
BSCO	Barrel support came out										
CBS-F	Shells catch on bbl support-feeding										
CBS-L	Shells catch on bbl support-loading										
CC	Carrier catches on shells,mag,receiver										
CD	Case dented										
CH	Closes hard										

CHAB	Carrier hits action bar											
CLM	Can't load magazine											
CO	Cut-off											
CR	Cuts rim											
CS	Cases swell											
CTOG	Chamber torn or gouged											
CTP	Creepy trigger pull											
CWSB	Cams wrong side of action bar											
DBB	Doesn't blow back								2			
DCS	Double click in safety switch											
DCT	Double click in trigger											
DCU	Doesn't close-up		1									
DE	Doesn't eject								2			
DEL	Doesn't eject live round											
DFU	Doesn't feed up						2					
DLO	Doesn't lock open (after last shell)											
DLU	Doesn't lock-up											
DS	Dead safe											
DSM	Drops shell-magazine											
DTL	Doesn't trip latch											
DX	Doesn't extract											
DXL	Doesn't extract live round											
EDS	Extractor drops shell								2			
ESB	Ejector sticks back											
ESS	Extractor stems shell											
FA	Fires automatically											
FB	Follower binds											

FC	Fails to connect		1									
FCB	Fore-end cracked or broken											
FD	Follows-down											
FF	Fails to fire											
FFM	Fails to feed from magazine											
FFP	Flat firing pin											
FOS	Fires on safe											
FSR	Fires when safe is released											
GCSO	Gas cyl shot off											
GRSO	Guide ring shot off											
HPA	High pressure ammo											
HUE	Hard under extractor		1									
ILOP	Int. latch out of position											
ILRM	Int. latch ret. Missing											
ILSB	Int. latch stud broken											
ILSP	Int. latch spring out of position											
JL	Jumps latch		1									
JO	Jars off											
LB	Light blow											
MCSO	Magazine cap shot off											
MCW	Magazine capacity wrong											
MFA	Misfires (ammo)											
MFOP	Magazine follower out of position											
MLH	Magazine loads hard											
OH	Opens hard											
PH	Pulls hard											
PSI	Proof stamp illegible											

PSM	Proof stamp missing											
RBOC	Rings and bulges on case											
RDW	(Action) release doesn't work						2					
RIC	Rings in chamber											
SBC	Stems bottom chambers						2					
SBCL	Shell binds carrier latch											
SBE	Stems bbl extension											
SCB	Stock cracked or broken									3		
SCX	Shell catches											
SHI	Short indent											
SIC	Stems in chamber		3									
SL	shaves lead											
SLC	Stems left side of chamber											
SMOC	Stretch marks on case											
SRC	Stems right side of chamber							7				
SRIC	Specific rings in chamber											
SSC	shell stems carrier									1		
STC	Stems top chamber		24	3				1				
SWE	Safety switch works too easily											
SWH	Safety switch works too hard											
SWW	Safety ewitxh won't work											
TD	Tips down											
TU	Tips up											
TWP	Trigger won't pull											
TWR	Trigger won't retract											
UNCN-T	Uncoded											
XH	Extracts hard											

XHB	Extractor hits bbl												
HI	High												
LO	Low												
LEFT	Left												
RIGHT	Right												
DG	Doesn't Group												
FSST	Front sight tipped												
RSTT	Rear sight tipped												
RSBR	Rear sight base raised												
FSTR	Front sight raised												
FSTL	Front sight loose												
RSTL	Rear sight loose												
MGPT-G	Missing parts at target												
UNCN-G	Uncoded nonconformity at target												
AI-P	Assembly incomplete at proof												
BC-P	Blows cases at proof												
BEB-P	Barrel extension broken at proof												
BLP-P	Blanked primer at proof												
BP-P	Blown primer at proof												
BS-P	Barrel split at proof												
DLOS-P	Doesn't lock over shells at proof												
ESB-P	Ejector sticks back at proof												
FCB-P	Fore-end cracked at proof												
FESO-P	Fore-end shot off at proof												
FF-P	Fails to fire at proof												

[illegible]

Test Date:									
63		344		73					
0	0	0	0	0	0				
0.0		0.0		0.0					
63		344		47					
0	0	20	0	0	0				
0.0		5.8		0.0					
0	0	0	0	30					
				3					
				10.0					

63		344		73	
0	0	0	0	0	0
0.0		0.0		0.0	
63		344		47	
0	0	20	0	0	0
0.0		5.8		0.0	
0	0	0	0	30	0
					10.0

[illegible]












<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>1175</b>
	<b>Total Rejected:</b>	<b>12</b>
	<b>Overall Reject Rate:</b>	<b>1.02</b>

<b>Proof</b>	Shot:	20	95			49	116		317	
	Rejected:	0	0	0	0	0	0	0	0	0
	Percent:	0.0	0.0			0.0	0.0		0.0	
<b>Test</b>	Shot:	18	17			36	22		317	
	Rejected:	0	0	0	0	4	1	0	2	0
	Percent:	0.0	0.0			11.1	4.5		0.6	
<b>Target</b>	Shot:									
	Rejected:	0	0	0	0	0	0	0	0	0
	Percent:									

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
AB	Action binds						1			2	
ASFB	Action spring follower binds										
BABS	Bulge at body shoulder										
BAC	Burr at chamber										
BB	Bolt binds/catches										
BCOE	Bolt catches on ejector										
BC	Blows cases										
BLOP	Bar lock or disconnecter out of position										
BSCO	Barrel support came out										
CBS-F	Shells catch on bbl support-feeding										
CBS-L	Shells catch on bbl support-loading										
CC	Carrier catches on shells,mag,receiver										
CD	Case dented										
CH	Closes hard										

CHAB	Carrier hits action bar											
CLM	Can't load magazine											
CO	Cut-off											
CR	Cuts rim											
CS	Cases swell											
CTOG	Chamber torn or gouged											
CTP	Creepy trigger pull											
CWSB	Cams wrong side of action bar											
DBB	Doesn't blow back											
DCS	Double click in safety switch											
DCT	Double click in trigger											
DCU	Doesn't close-up											
DE	Doesn't eject											
DEL	Doesn't eject live round											
DFU	Doesn't feed up											
DLO	Doesn't lock open (after last shell)											
DLU	Doesn't lock-up											
DS	Dead safe											
DSM	Drops shell-magazine											
DTL	Doesn't trip latch											
DX	Doesn't extract											
DXL	Doesn't extract live round											
EDS	Extractor drops shell											
ESB	Ejector sticks back											
ESS	Extractor stems shell											
FA	Fires automatically											
FB	Follower binds											

FC	Fails to connect											
FCB	Fore-end cracked or broken											
FD	Follows-down											
FF	Fails to fire											
FFM	Fails to feed from magazine											
FFP	Flat firing pin											
FOS	Fires on safe											
FSR	Fires when safe is released											
GCSO	Gas cyl shot off											
GRSO	Guide ring shot off											
HPA	High pressure ammo											
HUE	Hard under extractor											
ILOP	Int. latch out of position											
ILRM	Int. latch ret. Missing											
ILSB	Int. latch stud broken											
ILSP	Int. latch spring out of position											
JL	Jumps latch											
JO	Jars off											
LB	Light blow											
MCSO	Magazine cap shot off											
MCW	Magazine capacity wrong											
MFA	Misfires (ammo)											
MFOP	Magazine follower out of position											
MLH	Magazine loads hard							1				
OH	Opens hard											
PH	Pulls hard											
PSI	Proof stamp illegible											



PSM	Proof stamp missing											
RBOC	Rings and bulges on case											
RDW	(Action) release doesn't work						1					
RIC	Rings in chamber											
SBC	Stems bottom chambers											
SBCL	Shell binds carrier latch											
SBE	Stems bbl extension											
SCB	Stock cracked or broken											
SCX	Shell catches											
SHI	Short indent											
SIC	Stems in chamber											
SL	shaves lead											
SLC	Stems left side of chamber											
SMOC	Stretch marks on case											
SRC	Stems right side of chamber											
SRIC	Specific rings in chamber											
SSC	shell stems carrier											
STC	Stems top chamber											
SWE	Safety switch works too easily											
SWH	Safety switch works too hard											
SWW	Safety ewitxh won't work											
TD	Tips down											
TU	Tips up											
TWP	Trigger won't pull											
TWR	Trigger won't retract											
UNCN-T	Uncoded											
XH	Extracts hard											

XHB	Extractor hits bbl												
HI	High												
LO	Low												
LEFT	Left												
RIGHT	Right												
DG	Doesn't Group												
FSST	Front sight tipped												
RSTT	Rear sight tipped												
RSBR	Rear sight base raised												
FSTR	Front sight raised												
FSTL	Front sight loose												
RSTL	Rear sight loose												
MGPT-G	Missing parts at target												
UNCN-G	Uncoded nonconformity at target												
AI-P	Assembly incomplete at proof												
BC-P	Blows cases at proof												
BEB-P	Barrel extension broken at proof												
BLP-P	Blanked primer at proof												
BP-P	Blown primer at proof												
BS-P	Barrel split at proof												
DLOS-P	Doesn't lock over shells at proof												
ESB-P	Ejector sticks back at proof												
FCB-P	Fore-end cracked at proof												
FESO-P	Fore-end shot off at proof												
FF-P	Fails to fire at proof												

[illegible]

Test Date:									
449		208		108					
0	0	0	0	0	0				
0.0		0.0		0.0					
449		208		108					
0	0	0	0	0	0				
0.0		0.0		0.0					
				101					
0	0	0	0	5	0				
				5.0					

449	208	108
0	0	0
0.0	0.0	0.0
449	208	108
0	0	0
0.0	0.0	0.0
0	0	0
0.0	0.0	0.0
0	0	0
0.0	0.0	0.0
0	0	0
0.0	0.0	0.0

[illegible]












<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>974</b>
	<b>Total Rejected:</b>	<b>4</b>
	<b>Overall Reject Rate:</b>	<b>0.41</b>

**Proof**

Shot:	8	11	6	23		14	126		438	
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:	0.0	0.0	0.0	0.0		0.0	0.0		0.0	

**Test**

Shot:			20				135		438	
Rejected:	0	0	0	0	0	0	0	0	2	0
Percent:			0.0				0.0		0.5	

**Target**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
AB	Action binds										
ASFB	Action spring follower binds										
BABS	Bulge at body shoulder										
BAC	Burr at chamber										
BB	Bolt binds/catches										
BCOE	Bolt catches on ejector										
BC	Blows cases										
BLOP	Bar lock or disconnecter out of position										
BSCO	Barrel support came out										
CBS-F	Shells catch on bbl support-feeding										
CBS-L	Shells catch on bbl support-loading										
CC	Carrier catches on shells,mag,receiver										
CD	Case dented										
CH	Closes hard										

CHAB	Carrier hits action bar											
CLM	Can't load magazine											
CO	Cut-off											
CR	Cuts rim											
CS	Cases swell											
CTOG	Chamber torn or gouged											
CTP	Creepy trigger pull											
CWSB	Cams wrong side of action bar											
DBB	Doesn't blow back											
DCS	Double click in safety switch											
DCT	Double click in trigger											
DCU	Doesn't close-up											
DE	Doesn't eject											
DEL	Doesn't eject live round											
DFU	Doesn't feed up											
DLO	Doesn't lock open (after last shell)											
DLU	Doesn't lock-up											
DS	Dead safe											
DSM	Drops shell-magazine											
DTL	Doesn't trip latch											
DX	Doesn't extract											
DXL	Doesn't extract live round											
EDS	Extractor drops shell											
ESB	Ejector sticks back											
ESS	Extractor stems shell											
FA	Fires automatically											
FB	Follower binds											

FC	Fails to connect											
FCB	Fore-end cracked or broken											
FD	Follows-down											
FF	Fails to fire											
FFM	Fails to feed from magazine											
FFP	Flat firing pin											
FOS	Fires on safe											
FSR	Fires when safe is released											
GCSO	Gas cyl shot off											
GRSO	Guide ring shot off											
HPA	High pressure ammo											
HUE	Hard under extractor											
ILOP	Int. latch out of position											
ILRM	Int. latch ret. Missing											
ILSB	Int. latch stud broken											
ILSP	Int. latch spring out of position											
JL	Jumps latch											
JO	Jars off											
LB	Light blow											
MCSO	Magazine cap shot off										1	
MCW	Magazine capacity wrong											
MFA	Misfires (ammo)											
MFOP	Magazine follower out of position											
MLH	Magazine loads hard										1	
OH	Opens hard											
PH	Pulls hard											
PSI	Proof stamp illegible											

PSM	Proof stamp missing											
RBOC	Rings and bulges on case											
RDW	(Action) release doesn't work											
RIC	Rings in chamber											
SBC	Stems bottom chambers											
SBCL	Shell binds carrier latch											
SBE	Stems bbl extension											
SCB	Stock cracked or broken											
SCX	Shell catches											
SHI	Short indent											
SIC	Stems in chamber											
SL	shaves lead											
SLC	Stems left side of chamber											
SMOC	Stretch marks on case											
SRC	Stems right side of chamber											
SRIC	Specific rings in chamber											
SSC	shell stems carrier											
STC	Stems top chamber											
SWE	Safety switch works too easily											
SWH	Safety switch works too hard											
SWW	Safety ewitxh won't work											
TD	Tips down											
TU	Tips up											
TWP	Trigger won't pull											
TWR	Trigger won't retract											
UNCN-T	Uncoded											
XH	Extracts hard											

XHB	Extractor hits bbl												
HI	High												
LO	Low												
LEFT	Left												
RIGHT	Right												
DG	Doesn't Group												
FSST	Front sight tipped												
RSTT	Rear sight tipped												
RSBR	Rear sight base raised												
FSTR	Front sight raised												
FSTL	Front sight loose												
RSTL	Rear sight loose												
MGPT-G	Missing parts at target												
UNCN-G	Uncoded nonconformity at target												
AI-P	Assembly incomplete at proof												
BC-P	Blows cases at proof												
BEB-P	Barrel extension broken at proof												
BLP-P	Blanked primer at proof												
BP-P	Blown primer at proof												
BS-P	Barrel split at proof												
DLOS-P	Doesn't lock over shells at proof												
ESB-P	Ejector sticks back at proof												
FCB-P	Fore-end cracked at proof												
FESO-P	Fore-end shot off at proof												
FF-P	Fails to fire at proof												

[illegible]

Test Date:				
169		163		84
0	0	2	0	0
0.0		1.2		0.0
169		163		47
0	0	0	0	0
0.0		0.0		0.0
0	0	0	0	0
0.0		0.0		0.0

169		163		84
0	0	2	0	0
0.0		1.2		0.0
169		163		47
0	0	0	0	0
0.0		0.0		0.0
0	0	0	0	0
0.0		0.0		0.0

[illegible]













<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

<b>Proof</b>	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										
<b>Test</b>	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										
<b>Target</b>	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
AB	Action binds										
ASFB	Action spring follower binds										
BABS	Bulge at body shoulder										
BAC	Burr at chamber										
BB	Bolt binds/catches										
BCOE	Bolt catches on ejector										
BC	Blows cases										
BLOP	Bar lock or disconnecter out of position										
BSCO	Barrel support came out										
CBS-F	Shells catch on bbl support-feeding										
CBS-L	Shells catch on bbl support-loading										
CC	Carrier catches on shells,mag,receiver										
CD	Case dented										
CH	Closes hard										

CHAB	Carrier hits action bar											
CLM	Can't load magazine											
CO	Cut-off											
CR	Cuts rim											
CS	Cases swell											
CTOG	Chamber torn or gouged											
CTP	Creepy trigger pull											
CWSB	Cams wrong side of action bar											
DBB	Doesn't blow back											
DCS	Double click in safety switch											
DCT	Double click in trigger											
DCU	Doesn't close-up											
DE	Doesn't eject											
DEL	Doesn't eject live round											
DFU	Doesn't feed up											
DLO	Doesn't lock open (after last shell)											
DLU	Doesn't lock-up											
DS	Dead safe											
DSM	Drops shell-magazine											
DTL	Doesn't trip latch											
DX	Doesn't extract											
DXL	Doesn't extract live round											
EDS	Extractor drops shell											
ESB	Ejector sticks back											
ESS	Extractor stems shell											
FA	Fires automatically											
FB	Follower binds											

FC	Fails to connect											
FCB	Fore-end cracked or broken											
FD	Follows-down											
FF	Fails to fire											
FFM	Fails to feed from magazine											
FFP	Flat firing pin											
FOS	Fires on safe											
FSR	Fires when safe is released											
GCSO	Gas cyl shot off											
GRSO	Guide ring shot off											
HPA	High pressure ammo											
HUE	Hard under extractor											
ILOP	Int. latch out of position											
ILRM	Int. latch ret. Missing											
ILSB	Int. latch stud broken											
ILSP	Int. latch spring out of position											
JL	Jumps latch											
JO	Jars off											
LB	Light blow											
MCSO	Magazine cap shot off											
MCW	Magazine capacity wrong											
MFA	Misfires (ammo)											
MFOP	Magazine follower out of position											
MLH	Magazine loads hard											
OH	Opens hard											
PH	Pulls hard											
PSI	Proof stamp illegible											



PSM	Proof stamp missing											
RBOC	Rings and bulges on case											
RDW	(Action) release doesn't work											
RIC	Rings in chamber											
SBC	Stems bottom chambers											
SBCL	Shell binds carrier latch											
SBE	Stems bbl extension											
SCB	Stock cracked or broken											
SCX	Shell catches											
SHI	Short indent											
SIC	Stems in chamber											
SL	shaves lead											
SLC	Stems left side of chamber											
SMOC	Stretch marks on case											
SRC	Stems right side of chamber											
SRIC	Specific rings in chamber											
SSC	shell stems carrier											
STC	Stems top chamber											
SWE	Safety switch works too easily											
SWH	Safety switch works too hard											
SWW	Safety ewitxh won't work											
TD	Tips down											
TU	Tips up											
TWP	Trigger won't pull											
TWR	Trigger won't retract											
UNCN-T	Uncoded											
XH	Extracts hard											

XHB	Extractor hits bbl												
HI	High												
LO	Low												
LEFT	Left												
RIGHT	Right												
DG	Doesn't Group												
FSST	Front sight tipped												
RSTT	Rear sight tipped												
RSBR	Rear sight base raised												
FSTR	Front sight raised												
FSTL	Front sight loose												
RSTL	Rear sight loose												
MGPT-G	Missing parts at target												
UNCN-G	Uncoded nonconformity at target												
AI-P	Assembly incomplete at proof												
BC-P	Blows cases at proof												
BEB-P	Barrel extension broken at proof												
BLP-P	Blanked primer at proof												
BP-P	Blown primer at proof												
BS-P	Barrel split at proof												
DLOS-P	Doesn't lock over shells at proof												
ESB-P	Ejector sticks back at proof												
FCB-P	Fore-end cracked at proof												
FESO-P	Fore-end shot off at proof												
FF-P	Fails to fire at proof												

[illegible]

[illegible][illegible]












<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

**Proof**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

**Test**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

**Target**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
AB	Action binds										
ASFB	Action spring follower binds										
BABS	Bulge at body shoulder										
BAC	Burr at chamber										
BB	Bolt binds/catches										
BCOE	Bolt catches on ejector										
BC	Blows cases										
BLOP	Bar lock or disconnecter out of position										
BSCO	Barrel support came out										
CBS-F	Shells catch on bbl support-feeding										
CBS-L	Shells catch on bbl support-loading										
CC	Carrier catches on shells,mag,receiver										
CD	Case dented										
CH	Closes hard										

CHAB	Carrier hits action bar											
CLM	Can't load magazine											
CO	Cut-off											
CR	Cuts rim											
CS	Cases swell											
CTOG	Chamber torn or gouged											
CTP	Creepy trigger pull											
CWSB	Cams wrong side of action bar											
DBB	Doesn't blow back											
DCS	Double click in safety switch											
DCT	Double click in trigger											
DCU	Doesn't close-up											
DE	Doesn't eject											
DEL	Doesn't eject live round											
DFU	Doesn't feed up											
DLO	Doesn't lock open (after last shell)											
DLU	Doesn't lock-up											
DS	Dead safe											
DSM	Drops shell-magazine											
DTL	Doesn't trip latch											
DX	Doesn't extract											
DXL	Doesn't extract live round											
EDS	Extractor drops shell											
ESB	Ejector sticks back											
ESS	Extractor stems shell											
FA	Fires automatically											
FB	Follower binds											

FC	Fails to connect											
FCB	Fore-end cracked or broken											
FD	Follows-down											
FF	Fails to fire											
FFM	Fails to feed from magazine											
FFP	Flat firing pin											
FOS	Fires on safe											
FSR	Fires when safe is released											
GCSO	Gas cyl shot off											
GRSO	Guide ring shot off											
HPA	High pressure ammo											
HUE	Hard under extractor											
ILOP	Int. latch out of position											
ILRM	Int. latch ret. Missing											
ILSB	Int. latch stud broken											
ILSP	Int. latch spring out of position											
JL	Jumps latch											
JO	Jars off											
LB	Light blow											
MCSO	Magazine cap shot off											
MCW	Magazine capacity wrong											
MFA	Misfires (ammo)											
MFOP	Magazine follower out of position											
MLH	Magazine loads hard											
OH	Opens hard											
PH	Pulls hard											
PSI	Proof stamp illegible											

PSM	Proof stamp missing											
RBOC	Rings and bulges on case											
RDW	(Action) release doesn't work											
RIC	Rings in chamber											
SBC	Stems bottom chambers											
SBCL	Shell binds carrier latch											
SBE	Stems bbl extension											
SCB	Stock cracked or broken											
SCX	Shell catches											
SHI	Short indent											
SIC	Stems in chamber											
SL	shaves lead											
SLC	Stems left side of chamber											
SMOC	Stretch marks on case											
SRC	Stems right side of chamber											
SRIC	Specific rings in chamber											
SSC	shell stems carrier											
STC	Stems top chamber											
SWE	Safety switch works too easily											
SWH	Safety switch works too hard											
SWW	Safety ewitxh won't work											
TD	Tips down											
TU	Tips up											
TWP	Trigger won't pull											
TWR	Trigger won't retract											
UNCN-T	Uncoded											
XH	Extracts hard											

XHB	Extractor hits bbl												
HI	High												
LO	Low												
LEFT	Left												
RIGHT	Right												
DG	Doesn't Group												
FSST	Front sight tipped												
RSTT	Rear sight tipped												
RSBR	Rear sight base raised												
FSTR	Front sight raised												
FSTL	Front sight loose												
RSTL	Rear sight loose												
MGPT-G	Missing parts at target												
UNCN-G	Uncoded nonconformity at target												
AI-P	Assembly incomplete at proof												
BC-P	Blows cases at proof												
BEB-P	Barrel extension broken at proof												
BLP-P	Blanked primer at proof												
BP-P	Blown primer at proof												
BS-P	Barrel split at proof												
DLOS-P	Doesn't lock over shells at proof												
ESB-P	Ejector sticks back at proof												
FCB-P	Fore-end cracked at proof												
FESO-P	Fore-end shot off at proof												
FF-P	Fails to fire at proof												



[illegible][illegible]












<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>1114</b>
	<b>Total Rejected:</b>	<b>38</b>
	<b>Overall Reject Rate:</b>	<b>3.41</b>

<b>Proof</b>	Shot:	16	9		26			149	3	471	
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:	0.0	0.0		0.0			0.0	0.0	0.0	
<b>Test</b>	Shot:	24	43		17			166	14	471	
	Rejected:	0	7	0	0	0	0	13	6	1	0
	Percent:	0.0	16.3		0.0			7.8	42.9	0.2	
<b>Target</b>	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
AB	Action binds										
ASFB	Action spring follower binds										
BABS	Bulge at body shoulder										
BAC	Burr at chamber										
BB	Bolt binds/catches										
BCOE	Bolt catches on ejector										
BC	Blows cases										
BLOP	Bar lock or disconnecter out of position										
BSCO	Barrel support came out										
CBS-F	Shells catch on bbl support-feeding										
CBS-L	Shells catch on bbl support-loading										
CC	Carrier catches on shells,mag,receiver										
CD	Case dented										
CH	Closes hard										

CHAB	Carrier hits action bar											
CLM	Can't load magazine											
CO	Cut-off											
CR	Cuts rim											
CS	Cases swell											
CTOG	Chamber torn or gouged											
CTP	Creepy trigger pull											
CWSB	Cams wrong side of action bar											
DBB	Doesn't blow back		1					1	1			
DCS	Double click in safety switch											
DCT	Double click in trigger											
DCU	Doesn't close-up											
DE	Doesn't eject		1						1			
DEL	Doesn't eject live round											
DFU	Doesn't feed up											
DLO	Doesn't lock open (after last shell)							1				
DLU	Doesn't lock-up											
DS	Dead safe											
DSM	Drops shell-magazine											
DTL	Doesn't trip latch							6				
DX	Doesn't extract											
DXL	Doesn't extract live round											
EDS	Extractor drops shell											
ESB	Ejector sticks back											
ESS	Extractor stems shell											
FA	Fires automatically											
FB	Follower binds							1				

FC	Fails to connect											
FCB	Fore-end cracked or broken											
FD	Follows-down											
FF	Fails to fire											
FFM	Fails to feed from magazine							1				
FFP	Flat firing pin											
FOS	Fires on safe											
FSR	Fires when safe is released											
GCSO	Gas cyl shot off											
GRSO	Guide ring shot off											
HPA	High pressure ammo											
HUE	Hard under extractor											
ILOP	Int. latch out of position											
ILRM	Int. latch ret. Missing											
ILSB	Int. latch stud broken											
ILSP	Int. latch spring out of position											
JL	Jumps latch							1				
JO	Jars off											
LB	Light blow											
MCSO	Magazine cap shot off											
MCW	Magazine capacity wrong											
MFA	Misfires (ammo)											
MFOP	Magazine follower out of position											
MLH	Magazine loads hard										1	
OH	Opens hard											
PH	Pulls hard											
PSI	Proof stamp illegible											



PSM	Proof stamp missing											
RBOC	Rings and bulges on case											
RDW	(Action) release doesn't work							1				
RIC	Rings in chamber											
SBC	Stems bottom chambers								1			
SBCL	Shell binds carrier latch											
SBE	Stems bbl extension											
SCB	Stock cracked or broken											
SCX	Shell catches											
SHI	Short indent											
SIC	Stems in chamber		2						1			
SL	shaves lead											
SLC	Stems left side of chamber											
SMOC	Stretch marks on case											
SRC	Stems right side of chamber								2			
SRIC	Specific rings in chamber											
SSC	shell stems carrier											
STC	Stems top chamber		3					1				
SWE	Safety switch works too easily											
SWH	Safety switch works too hard											
SWW	Safety ewitxh won't work											
TD	Tips down											
TU	Tips up											
TWP	Trigger won't pull											
TWR	Trigger won't retract											
UNCN-T	Uncoded											
XH	Extracts hard											

XHB	Extractor hits bbl												
HI	High												
LO	Low												
LEFT	Left												
RIGHT	Right												
DG	Doesn't Group												
FSST	Front sight tipped												
RSTT	Rear sight tipped												
RSBR	Rear sight base raised												
FSTR	Front sight raised												
FSTL	Front sight loose												
RSTL	Rear sight loose												
MGPT-G	Missing parts at target												
UNCN-G	Uncoded nonconformity at target												
AI-P	Assembly incomplete at proof												
BC-P	Blows cases at proof												
BEB-P	Barrel extension broken at proof												
BLP-P	Blanked primer at proof												
BP-P	Blown primer at proof												
BS-P	Barrel split at proof												
DLOS-P	Doesn't lock over shells at proof												
ESB-P	Ejector sticks back at proof												
FCB-P	Fore-end cracked at proof												
FESO-P	Fore-end shot off at proof												
FF-P	Fails to fire at proof												

[illegible]

Test Date:

189		98	81
0	0	0	0
0.0	0.0	0.0	0.0
189		98	92
2	0	0	0
1.1	0.0	0.0	0.0
0	0	0	9
			19.6

[illegible]












<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>1094</b>
	<b>Total Rejected:</b>	<b>59</b>
	<b>Overall Reject Rate:</b>	<b>5.39</b>

<b>Proof</b>	Shot:		150	7	2		27	93	1	490	
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:		0.0	0.0	0.0		0.0	0.0	0.0	0.0	
<b>Test</b>	Shot:		131	11	9		29	94		490	
	Rejected:	0	36	3	0	0	2	4	0	1	0
	Percent:		27.5	27.3	0.0		6.9	4.3		0.2	
<b>Target</b>	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
AB	Action binds									1	
ASFB	Action spring follower binds										
BABS	Bulge at body shoulder										
BAC	Burr at chamber										
BB	Bolt binds/catches										
BCOE	Bolt catches on ejector										
BC	Blows cases										
BLOP	Bar lock or disconnecter out of position										
BSCO	Barrel support came out										
CBS-F	Shells catch on bbl support-feeding										
CBS-L	Shells catch on bbl support-loading										
CC	Carrier catches on shells,mag,receiver										
CD	Case dented										
CH	Closes hard										

CHAB	Carrier hits action bar											
CLM	Can't load magazine											
CO	Cut-off											
CR	Cuts rim											
CS	Cases swell											
CTOG	Chamber torn or gouged											
CTP	Creepy trigger pull											
CWSB	Cams wrong side of action bar											
DBB	Doesn't blow back		1					1				
DCS	Double click in safety switch											
DCT	Double click in trigger											
DCU	Doesn't close-up			1				1				
DE	Doesn't eject		1									
DEL	Doesn't eject live round											
DFU	Doesn't feed up							1				
DLO	Doesn't lock open (after last shell)							1				
DLU	Doesn't lock-up											
DS	Dead safe											
DSM	Drops shell-magazine											
DTL	Doesn't trip latch											
DX	Doesn't extract											
DXL	Doesn't extract live round											
EDS	Extractor drops shell											
ESB	Ejector sticks back											
ESS	Extractor stems shell											
FA	Fires automatically											
FB	Follower binds											

FC	Fails to connect											
FCB	Fore-end cracked or broken											
FD	Follows-down											
FF	Fails to fire											
FFM	Fails to feed from magazine		4									
FFP	Flat firing pin											
FOS	Fires on safe											
FSR	Fires when safe is released											
GCSO	Gas cyl shot off											
GRSO	Guide ring shot off											
HPA	High pressure ammo											
HUE	Hard under extractor											
ILOP	Int. latch out of position											
ILRM	Int. latch ret. Missing											
ILSB	Int. latch stud broken											
ILSP	Int. latch spring out of position											
JL	Jumps latch											
JO	Jars off											
LB	Light blow											
MCSO	Magazine cap shot off											
MCW	Magazine capacity wrong											
MFA	Misfires (ammo)											
MFOP	Magazine follower out of position											
MLH	Magazine loads hard			1								
OH	Opens hard											
PH	Pulls hard											
PSI	Proof stamp illegible											

PSM	Proof stamp missing											
RBOC	Rings and bulges on case											
RDW	(Action) release doesn't work						1					
RIC	Rings in chamber											
SBC	Stems bottom chambers		1									
SBCL	Shell binds carrier latch											
SBE	Stems bbl extension											
SCB	Stock cracked or broken											
SCX	Shell catches											
SHI	Short indent											
SIC	Stems in chamber											
SL	shaves lead											
SLC	Stems left side of chamber											
SMOC	Stretch marks on case											
SRC	Stems right side of chamber											
SRIC	Specific rings in chamber											
SSC	shell stems carrier											
STC	Stems top chamber		29	1			1					
SWE	Safety switch works too easily											
SWH	Safety switch works too hard											
SWW	Safety ewitxh won't work											
TD	Tips down											
TU	Tips up											
TWP	Trigger won't pull											
TWR	Trigger won't retract											
UNCN-T	Uncoded											
XH	Extracts hard											

[illegible]

[illegible]

Test Date: \_\_\_\_\_

[illegible]












<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>1168</b>
	<b>Total Rejected:</b>	<b>52</b>
	<b>Overall Reject Rate:</b>	<b>4.45</b>

<b>Proof</b>	Shot:	188					7		288	
	Rejected:	0	0	0	0	0	0	0	0	0
	Percent:	0.0					0.0		0.0	
<b>Test</b>	Shot:	185							288	
	Rejected:	0	37	0	0	0	0	0	1	0
	Percent:		19.9						0.3	
<b>Target</b>	Shot:		1						3	
	Rejected:	0	0	0	0	0	0	0	0	0
	Percent:		0.0						0.0	

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
AB	Action binds										
ASFB	Action spring follower binds										
BABS	Bulge at body shoulder										
BAC	Burr at chamber										
BB	Bolt binds/catches										
BCOE	Bolt catches on ejector										
BC	Blows cases										
BLOP	Bar lock or disconnecter out of position										
BSCO	Barrel support came out										
CBS-F	Shells catch on bbl support-feeding										
CBS-L	Shells catch on bbl support-loading										
CC	Carrier catches on shells,mag,receiver										
CD	Case dented										
CH	Closes hard										

CHAB	Carrier hits action bar											
CLM	Can't load magazine											
CO	Cut-off											
CR	Cuts rim											
CS	Cases swell											
CTOG	Chamber torn or gouged											
CTP	Creepy trigger pull											
CWSB	Cams wrong side of action bar											
DBB	Doesn't blow back		9									
DCS	Double click in safety switch											
DCT	Double click in trigger											
DCU	Doesn't close-up											
DE	Doesn't eject		1									
DEL	Doesn't eject live round											
DFU	Doesn't feed up		2									
DLO	Doesn't lock open (after last shell)											
DLU	Doesn't lock-up											
DS	Dead safe											
DSM	Drops shell-magazine											
DTL	Doesn't trip latch											
DX	Doesn't extract											
DXL	Doesn't extract live round											
EDS	Extractor drops shell											
ESB	Ejector sticks back											
ESS	Extractor stems shell											
FA	Fires automatically											
FB	Follower binds											

FC	Fails to connect											
FCB	Fore-end cracked or broken											
FD	Follows-down											
FF	Fails to fire											
FFM	Fails to feed from magazine									1		
FFP	Flat firing pin											
FOS	Fires on safe											
FSR	Fires when safe is released											
GCSO	Gas cyl shot off											
GRSO	Guide ring shot off											
HPA	High pressure ammo											
HUE	Hard under extractor		2									
ILOP	Int. latch out of position											
ILRM	Int. latch ret. Missing											
ILSB	Int. latch stud broken											
ILSP	Int. latch spring out of position											
JL	Jumps latch		1									
JO	Jars off											
LB	Light blow											
MCSO	Magazine cap shot off											
MCW	Magazine capacity wrong											
MFA	Misfires (ammo)											
MFOP	Magazine follower out of position											
MLH	Magazine loads hard											
OH	Opens hard											
PH	Pulls hard											
PSI	Proof stamp illegible											



PSM	Proof stamp missing											
RBOC	Rings and bulges on case											
RDW	(Action) release doesn't work											
RIC	Rings in chamber											
SBC	Stems bottom chambers											
SBCL	Shell binds carrier latch											
SBE	Stems bbl extension											
SCB	Stock cracked or broken											
SCX	Shell catches											
SHI	Short indent											
SIC	Stems in chamber											
SL	shaves lead											
SLC	Stems left side of chamber											
SMOC	Stretch marks on case											
SRC	Stems right side of chamber											
SRIC	Specific rings in chamber											
SSC	shell stems carrier											
STC	Stems top chamber		22									
SWE	Safety switch works too easily											
SWH	Safety switch works too hard											
SWW	Safety ewitxh won't work											
TD	Tips down											
TU	Tips up											
TWP	Trigger won't pull											
TWR	Trigger won't retract											
UNCN-T	Uncoded											
XH	Extracts hard											

XHB	Extractor hits bbl												
HI	High												
LO	Low												
LEFT	Left												
RIGHT	Right												
DG	Doesn't Group												
FSST	Front sight tipped												
RSTT	Rear sight tipped												
RSBR	Rear sight base raised												
FSTR	Front sight raised												
FSTL	Front sight loose												
RSTL	Rear sight loose												
MGPT-G	Missing parts at target												
UNCN-G	Uncoded nonconformity at target												
AI-P	Assembly incomplete at proof												
BC-P	Blows cases at proof												
BEB-P	Barrel extension broken at proof												
BLP-P	Blanked primer at proof												
BP-P	Blown primer at proof												
BS-P	Barrel split at proof												
DLOS-P	Doesn't lock over shells at proof												
ESB-P	Ejector sticks back at proof												
FCB-P	Fore-end cracked at proof												
FESO-P	Fore-end shot off at proof												
FF-P	Fails to fire at proof												

[illegible]

Test Date:

316	276	102
0	0	0
0.0	0.0	0.0
316	276	102
2	10	1
0.6	3.6	1.0
0	0	0
		75
		13

[illegible]












<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

**Proof**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

**Test**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

**Target**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
AB	Action binds										
ASFB	Action spring follower binds										
BABS	Bulge at body shoulder										
BAC	Burr at chamber										
BB	Bolt binds/catches										
BCOE	Bolt catches on ejector										
BC	Blows cases										
BLOP	Bar lock or disconnecter out of position										
BSCO	Barrel support came out										
CBS-F	Shells catch on bbl support-feeding										
CBS-L	Shells catch on bbl support-loading										
CC	Carrier catches on shells,mag,receiver										
CD	Case dented										
CH	Closes hard										

CHAB	Carrier hits action bar											
CLM	Can't load magazine											
CO	Cut-off											
CR	Cuts rim											
CS	Cases swell											
CTOG	Chamber torn or gouged											
CTP	Creepy trigger pull											
CWSB	Cams wrong side of action bar											
DBB	Doesn't blow back											
DCS	Double click in safety switch											
DCT	Double click in trigger											
DCU	Doesn't close-up											
DE	Doesn't eject											
DEL	Doesn't eject live round											
DFU	Doesn't feed up											
DLO	Doesn't lock open (after last shell)											
DLU	Doesn't lock-up											
DS	Dead safe											
DSM	Drops shell-magazine											
DTL	Doesn't trip latch											
DX	Doesn't extract											
DXL	Doesn't extract live round											
EDS	Extractor drops shell											
ESB	Ejector sticks back											
ESS	Extractor stems shell											
FA	Fires automatically											
FB	Follower binds											

FC	Fails to connect											
FCB	Fore-end cracked or broken											
FD	Follows-down											
FF	Fails to fire											
FFM	Fails to feed from magazine											
FFP	Flat firing pin											
FOS	Fires on safe											
FSR	Fires when safe is released											
GCSO	Gas cyl shot off											
GRSO	Guide ring shot off											
HPA	High pressure ammo											
HUE	Hard under extractor											
ILOP	Int. latch out of position											
ILRM	Int. latch ret. Missing											
ILSB	Int. latch stud broken											
ILSP	Int. latch spring out of position											
JL	Jumps latch											
JO	Jars off											
LB	Light blow											
MCSO	Magazine cap shot off											
MCW	Magazine capacity wrong											
MFA	Misfires (ammo)											
MFOP	Magazine follower out of position											
MLH	Magazine loads hard											
OH	Opens hard											
PH	Pulls hard											
PSI	Proof stamp illegible											

PSM	Proof stamp missing											
RBOC	Rings and bulges on case											
RDW	(Action) release doesn't work											
RIC	Rings in chamber											
SBC	Stems bottom chambers											
SBCL	Shell binds carrier latch											
SBE	Stems bbl extension											
SCB	Stock cracked or broken											
SCX	Shell catches											
SHI	Short indent											
SIC	Stems in chamber											
SL	shaves lead											
SLC	Stems left side of chamber											
SMOC	Stretch marks on case											
SRC	Stems right side of chamber											
SRIC	Specific rings in chamber											
SSC	shell stems carrier											
STC	Stems top chamber											
SWE	Safety switch works too easily											
SWH	Safety switch works too hard											
SWW	Safety ewitxh won't work											
TD	Tips down											
TU	Tips up											
TWP	Trigger won't pull											
TWR	Trigger won't retract											
UNCN-T	Uncoded											
XH	Extracts hard											

XHB	Extractor hits bbl												
HI	High												
LO	Low												
LEFT	Left												
RIGHT	Right												
DG	Doesn't Group												
FSST	Front sight tipped												
RSTT	Rear sight tipped												
RSBR	Rear sight base raised												
FSTR	Front sight raised												
FSTL	Front sight loose												
RSTL	Rear sight loose												
MGPT-G	Missing parts at target												
UNCN-G	Uncoded nonconformity at target												
AI-P	Assembly incomplete at proof												
BC-P	Blows cases at proof												
BEB-P	Barrel extension broken at proof												
BLP-P	Blanked primer at proof												
BP-P	Blown primer at proof												
BS-P	Barrel split at proof												
DLOS-P	Doesn't lock over shells at proof												
ESB-P	Ejector sticks back at proof												
FCB-P	Fore-end cracked at proof												
FESO-P	Fore-end shot off at proof												
FF-P	Fails to fire at proof												

[illegible]

[illegible][illegible]












<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

<b>Proof</b>	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										
<b>Test</b>	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										
<b>Target</b>	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
AB	Action binds										
ASFB	Action spring follower binds										
BABS	Bulge at body shoulder										
BAC	Burr at chamber										
BB	Bolt binds/catches										
BCOE	Bolt catches on ejector										
BC	Blows cases										
BLOP	Bar lock or disconnecter out of position										
BSCO	Barrel support came out										
CBS-F	Shells catch on bbl support-feeding										
CBS-L	Shells catch on bbl support-loading										
CC	Carrier catches on shells,mag,receiver										
CD	Case dented										
CH	Closes hard										

CHAB	Carrier hits action bar											
CLM	Can't load magazine											
CO	Cut-off											
CR	Cuts rim											
CS	Cases swell											
CTOG	Chamber torn or gouged											
CTP	Creepy trigger pull											
CWSB	Cams wrong side of action bar											
DBB	Doesn't blow back											
DCS	Double click in safety switch											
DCT	Double click in trigger											
DCU	Doesn't close-up											
DE	Doesn't eject											
DEL	Doesn't eject live round											
DFU	Doesn't feed up											
DLO	Doesn't lock open (after last shell)											
DLU	Doesn't lock-up											
DS	Dead safe											
DSM	Drops shell-magazine											
DTL	Doesn't trip latch											
DX	Doesn't extract											
DXL	Doesn't extract live round											
EDS	Extractor drops shell											
ESB	Ejector sticks back											
ESS	Extractor stems shell											
FA	Fires automatically											
FB	Follower binds											

FC	Fails to connect											
FCB	Fore-end cracked or broken											
FD	Follows-down											
FF	Fails to fire											
FFM	Fails to feed from magazine											
FFP	Flat firing pin											
FOS	Fires on safe											
FSR	Fires when safe is released											
GCSO	Gas cyl shot off											
GRSO	Guide ring shot off											
HPA	High pressure ammo											
HUE	Hard under extractor											
ILOP	Int. latch out of position											
ILRM	Int. latch ret. Missing											
ILSB	Int. latch stud broken											
ILSP	Int. latch spring out of position											
JL	Jumps latch											
JO	Jars off											
LB	Light blow											
MCSO	Magazine cap shot off											
MCW	Magazine capacity wrong											
MFA	Misfires (ammo)											
MFOP	Magazine follower out of position											
MLH	Magazine loads hard											
OH	Opens hard											
PH	Pulls hard											
PSI	Proof stamp illegible											



PSM	Proof stamp missing											
RBOC	Rings and bulges on case											
RDW	(Action) release doesn't work											
RIC	Rings in chamber											
SBC	Stems bottom chambers											
SBCL	Shell binds carrier latch											
SBE	Stems bbl extension											
SCB	Stock cracked or broken											
SCX	Shell catches											
SHI	Short indent											
SIC	Stems in chamber											
SL	shaves lead											
SLC	Stems left side of chamber											
SMOC	Stretch marks on case											
SRC	Stems right side of chamber											
SRIC	Specific rings in chamber											
SSC	shell stems carrier											
STC	Stems top chamber											
SWE	Safety switch works too easily											
SWH	Safety switch works too hard											
SWW	Safety ewitxh won't work											
TD	Tips down											
TU	Tips up											
TWP	Trigger won't pull											
TWR	Trigger won't retract											
UNCN-T	Uncoded											
XH	Extracts hard											

[illegible]

[illegible]

[illegible][illegible]












<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

<b>Proof</b>	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										
<b>Test</b>	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										
<b>Target</b>	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
AB	Action binds										
ASFB	Action spring follower binds										
BABS	Bulge at body shoulder										
BAC	Burr at chamber										
BB	Bolt binds/catches										
BCOE	Bolt catches on ejector										
BC	Blows cases										
BLOP	Bar lock or disconnecter out of position										
BSCO	Barrel support came out										
CBS-F	Shells catch on bbl support-feeding										
CBS-L	Shells catch on bbl support-loading										
CC	Carrier catches on shells,mag,receiver										
CD	Case dented										
CH	Closes hard										

CHAB	Carrier hits action bar											
CLM	Can't load magazine											
CO	Cut-off											
CR	Cuts rim											
CS	Cases swell											
CTOG	Chamber torn or gouged											
CTP	Creepy trigger pull											
CWSB	Cams wrong side of action bar											
DBB	Doesn't blow back											
DCS	Double click in safety switch											
DCT	Double click in trigger											
DCU	Doesn't close-up											
DE	Doesn't eject											
DEL	Doesn't eject live round											
DFU	Doesn't feed up											
DLO	Doesn't lock open (after last shell)											
DLU	Doesn't lock-up											
DS	Dead safe											
DSM	Drops shell-magazine											
DTL	Doesn't trip latch											
DX	Doesn't extract											
DXL	Doesn't extract live round											
EDS	Extractor drops shell											
ESB	Ejector sticks back											
ESS	Extractor stems shell											
FA	Fires automatically											
FB	Follower binds											

FC	Fails to connect											
FCB	Fore-end cracked or broken											
FD	Follows-down											
FF	Fails to fire											
FFM	Fails to feed from magazine											
FFP	Flat firing pin											
FOS	Fires on safe											
FSR	Fires when safe is released											
GCSO	Gas cyl shot off											
GRSO	Guide ring shot off											
HPA	High pressure ammo											
HUE	Hard under extractor											
ILOP	Int. latch out of position											
ILRM	Int. latch ret. Missing											
ILSB	Int. latch stud broken											
ILSP	Int. latch spring out of position											
JL	Jumps latch											
JO	Jars off											
LB	Light blow											
MCSO	Magazine cap shot off											
MCW	Magazine capacity wrong											
MFA	Misfires (ammo)											
MFOP	Magazine follower out of position											
MLH	Magazine loads hard											
OH	Opens hard											
PH	Pulls hard											
PSI	Proof stamp illegible											

PSM	Proof stamp missing											
RBOC	Rings and bulges on case											
RDW	(Action) release doesn't work											
RIC	Rings in chamber											
SBC	Stems bottom chambers											
SBCL	Shell binds carrier latch											
SBE	Stems bbl extension											
SCB	Stock cracked or broken											
SCX	Shell catches											
SHI	Short indent											
SIC	Stems in chamber											
SL	shaves lead											
SLC	Stems left side of chamber											
SMOC	Stretch marks on case											
SRC	Stems right side of chamber											
SRIC	Specific rings in chamber											
SSC	shell stems carrier											
STC	Stems top chamber											
SWE	Safety switch works too easily											
SWH	Safety switch works too hard											
SWW	Safety ewitxh won't work											
TD	Tips down											
TU	Tips up											
TWP	Trigger won't pull											
TWR	Trigger won't retract											
UNCN-T	Uncoded											
XH	Extracts hard											

[illegible]



<b><i>Test Date:</i></b>					
0	0	0	0	0	0
0	0	0	0	0	0
0	0	0	0	0	0
0	0	0	0	0	0

<b>Test Date:</b>							
0	0	0	0	0	0	0	0
0	0	0	0	0	0	0	0
0	0	0	0	0	0	0	0












Summary	Total Test + Proof Failures	0
	Total Rejected:	0
	Overall Reject Rate:	

Proof

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

Test

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

Target

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
AB	Action binds										
ASFB	Action spring follower binds										
BABS	Bulge at body shoulder										
BAC	Burr at chamber										
BB	Bolt binds/catches										
BCOE	Bolt catches on ejector										
BC	Blows cases										
BLOP	Bar lock or disconnecter out of position										
BSCO	Barrel support came out										
CBS-F	Shells catch on bbl support-feeding										
CBS-L	Shells catch on bbl support-loading										
CC	Carrier catches on shells,mag,receiver										
CD	Case dented										
CH	Closes hard										

CHAB	Carrier hits action bar											
CLM	Can't load magazine											
CO	Cut-off											
CR	Cuts rim											
CS	Cases swell											
CTOG	Chamber torn or gouged											
CTP	Creepy trigger pull											
CWSB	Cams wrong side of action bar											
DBB	Doesn't blow back											
DCS	Double click in safety switch											
DCT	Double click in trigger											
DCU	Doesn't close-up											
DE	Doesn't eject											
DEL	Doesn't eject live round											
DFU	Doesn't feed up											
DLO	Doesn't lock open (after last shell)											
DLU	Doesn't lock-up											
DS	Dead safe											
DSM	Drops shell-magazine											
DTL	Doesn't trip latch											
DX	Doesn't extract											
DXL	Doesn't extract live round											
EDS	Extractor drops shell											
ESB	Ejector sticks back											
ESS	Extractor stems shell											
FA	Fires automatically											
FB	Follower binds											

FC	Fails to connect											
FCB	Fore-end cracked or broken											
FD	Follows-down											
FF	Fails to fire											
FFM	Fails to feed from magazine											
FFP	Flat firing pin											
FOS	Fires on safe											
FSR	Fires when safe is released											
GCSO	Gas cyl shot off											
GRSO	Guide ring shot off											
HPA	High pressure ammo											
HUE	Hard under extractor											
ILOP	Int. latch out of position											
ILRM	Int. latch ret. Missing											
ILSB	Int. latch stud broken											
ILSP	Int. latch spring out of position											
JL	Jumps latch											
JO	Jars off											
LB	Light blow											
MCSO	Magazine cap shot off											
MCW	Magazine capacity wrong											
MFA	Misfires (ammo)											
MFOP	Magazine follower out of position											
MLH	Magazine loads hard											
OH	Opens hard											
PH	Pulls hard											
PSI	Proof stamp illegible											



PSM	Proof stamp missing											
RBOC	Rings and bulges on case											
RDW	(Action) release doesn't work											
RIC	Rings in chamber											
SBC	Stems bottom chambers											
SBCL	Shell binds carrier latch											
SBE	Stems bbl extension											
SCB	Stock cracked or broken											
SCX	Shell catches											
SHI	Short indent											
SIC	Stems in chamber											
SL	shaves lead											
SLC	Stems left side of chamber											
SMOC	Stretch marks on case											
SRC	Stems right side of chamber											
SRIC	Specific rings in chamber											
SSC	shell stems carrier											
STC	Stems top chamber											
SWE	Safety switch works too easily											
SWH	Safety switch works too hard											
SWW	Safety ewitxh won't work											
TD	Tips down											
TU	Tips up											
TWP	Trigger won't pull											
TWR	Trigger won't retract											
UNCN-T	Uncoded											
XH	Extracts hard											

XHB	Extractor hits bbl												
HI	High												
LO	Low												
LEFT	Left												
RIGHT	Right												
DG	Doesn't Group												
FSST	Front sight tipped												
RSTT	Rear sight tipped												
RSBR	Rear sight base raised												
FSTR	Front sight raised												
FSTL	Front sight loose												
RSTL	Rear sight loose												
MGPT-G	Missing parts at target												
UNCN-G	Uncoded nonconformity at target												
AI-P	Assembly incomplete at proof												
BC-P	Blows cases at proof												
BEB-P	Barrel extension broken at proof												
BLP-P	Blanked primer at proof												
BP-P	Blown primer at proof												
BS-P	Barrel split at proof												
DLOS-P	Doesn't lock over shells at proof												
ESB-P	Ejector sticks back at proof												
FCB-P	Fore-end cracked at proof												
FESO-P	Fore-end shot off at proof												
FF-P	Fails to fire at proof												



Test Date:							
0	0	0	0	0	0	0	0
0	0	0	0	0	0	0	0
0	0	0	0	0	0	0	0
0	0	0	0	0	0	0	0

[illegible]












Summary	Total Test + Proof Failures	0
	Total Rejected:	0
	Overall Reject Rate:	

Proof

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

Test

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

Target

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
AB	Action binds										
ASFB	Action spring follower binds										
BABS	Bulge at body shoulder										
BAC	Burr at chamber										
BB	Bolt binds/catches										
BCOE	Bolt catches on ejector										
BC	Blows cases										
BLOP	Bar lock or disconnecter out of position										
BSCO	Barrel support came out										
CBS-F	Shells catch on bbl support-feeding										
CBS-L	Shells catch on bbl support-loading										
CC	Carrier catches on shells,mag,receiver										
CD	Case dented										
CH	Closes hard										

CHAB	Carrier hits action bar											
CLM	Can't load magazine											
CO	Cut-off											
CR	Cuts rim											
CS	Cases swell											
CTOG	Chamber torn or gouged											
CTP	Creepy trigger pull											
CWSB	Cams wrong side of action bar											
DBB	Doesn't blow back											
DCS	Double click in safety switch											
DCT	Double click in trigger											
DCU	Doesn't close-up											
DE	Doesn't eject											
DEL	Doesn't eject live round											
DFU	Doesn't feed up											
DLO	Doesn't lock open (after last shell)											
DLU	Doesn't lock-up											
DS	Dead safe											
DSM	Drops shell-magazine											
DTL	Doesn't trip latch											
DX	Doesn't extract											
DXL	Doesn't extract live round											
EDS	Extractor drops shell											
ESB	Ejector sticks back											
ESS	Extractor stems shell											
FA	Fires automatically											
FB	Follower binds											

FC	Fails to connect											
FCB	Fore-end cracked or broken											
FD	Follows-down											
FF	Fails to fire											
FFM	Fails to feed from magazine											
FFP	Flat firing pin											
FOS	Fires on safe											
FSR	Fires when safe is released											
GCSO	Gas cyl shot off											
GRSO	Guide ring shot off											
HPA	High pressure ammo											
HUE	Hard under extractor											
ILOP	Int. latch out of position											
ILRM	Int. latch ret. Missing											
ILSB	Int. latch stud broken											
ILSP	Int. latch spring out of position											
JL	Jumps latch											
JO	Jars off											
LB	Light blow											
MCSO	Magazine cap shot off											
MCW	Magazine capacity wrong											
MFA	Misfires (ammo)											
MFOP	Magazine follower out of position											
MLH	Magazine loads hard											
OH	Opens hard											
PH	Pulls hard											
PSI	Proof stamp illegible											

PSM	Proof stamp missing											
RBOC	Rings and bulges on case											
RDW	(Action) release doesn't work											
RIC	Rings in chamber											
SBC	Stems bottom chambers											
SBCL	Shell binds carrier latch											
SBE	Stems bbl extension											
SCB	Stock cracked or broken											
SCX	Shell catches											
SHI	Short indent											
SIC	Stems in chamber											
SL	shaves lead											
SLC	Stems left side of chamber											
SMOC	Stretch marks on case											
SRC	Stems right side of chamber											
SRIC	Specific rings in chamber											
SSC	shell stems carrier											
STC	Stems top chamber											
SWE	Safety switch works too easily											
SWH	Safety switch works too hard											
SWW	Safety ewitxh won't work											
TD	Tips down											
TU	Tips up											
TWP	Trigger won't pull											
TWR	Trigger won't retract											
UNCN-T	Uncoded											
XH	Extracts hard											

XHB	Extractor hits bbl												
HI	High												
LO	Low												
LEFT	Left												
RIGHT	Right												
DG	Doesn't Group												
FSST	Front sight tipped												
RSTT	Rear sight tipped												
RSBR	Rear sight base raised												
FSTR	Front sight raised												
FSTL	Front sight loose												
RSTL	Rear sight loose												
MGPT-G	Missing parts at target												
UNCN-G	Uncoded nonconformity at target												
AI-P	Assembly incomplete at proof												
BC-P	Blows cases at proof												
BEB-P	Barrel extension broken at proof												
BLP-P	Blanked primer at proof												
BP-P	Blown primer at proof												
BS-P	Barrel split at proof												
DLOS-P	Doesn't lock over shells at proof												
ESB-P	Ejector sticks back at proof												
FCB-P	Fore-end cracked at proof												
FESO-P	Fore-end shot off at proof												
FF-P	Fails to fire at proof												

GCSO-P	Gas cylinder shot off at proof								
GRSO-P	Guide ring shot off at proof								
MCSO-P	Magazine cap shot off at proof								
MSI-P	Magnaflex stamp illegible or bbl								
MSM-P	Magnaflex stamp missing on bbl								
PP-P	Pierced primer at proof								
SCB-P	Stock cracked or broken at proof								
UNCM-P	Uncoded proof malfunctions								

[illegible][illegible]












<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

<b>Proof</b>	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										
<b>Test</b>	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										
<b>Target</b>	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
AB	Action binds										
ASFB	Action spring follower binds										
BABS	Bulge at body shoulder										
BAC	Burr at chamber										
BB	Bolt binds/catches										
BCOE	Bolt catches on ejector										
BC	Blows cases										
BLOP	Bar lock or disconnecter out of position										
BSCO	Barrel support came out										
CBS-F	Shells catch on bbl support-feeding										
CBS-L	Shells catch on bbl support-loading										
CC	Carrier catches on shells,mag,receiver										
CD	Case dented										
CH	Closes hard										

CHAB	Carrier hits action bar											
CLM	Can't load magazine											
CO	Cut-off											
CR	Cuts rim											
CS	Cases swell											
CTOG	Chamber torn or gouged											
CTP	Creepy trigger pull											
CWSB	Cams wrong side of action bar											
DBB	Doesn't blow back											
DCS	Double click in safety switch											
DCT	Double click in trigger											
DCU	Doesn't close-up											
DE	Doesn't eject											
DEL	Doesn't eject live round											
DFU	Doesn't feed up											
DLO	Doesn't lock open (after last shell)											
DLU	Doesn't lock-up											
DS	Dead safe											
DSM	Drops shell-magazine											
DTL	Doesn't trip latch											
DX	Doesn't extract											
DXL	Doesn't extract live round											
EDS	Extractor drops shell											
ESB	Ejector sticks back											
ESS	Extractor stems shell											
FA	Fires automatically											
FB	Follower binds											

FC	Fails to connect											
FCB	Fore-end cracked or broken											
FD	Follows-down											
FF	Fails to fire											
FFM	Fails to feed from magazine											
FFP	Flat firing pin											
FOS	Fires on safe											
FSR	Fires when safe is released											
GCSO	Gas cyl shot off											
GRSO	Guide ring shot off											
HPA	High pressure ammo											
HUE	Hard under extractor											
ILOP	Int. latch out of position											
ILRM	Int. latch ret. Missing											
ILSB	Int. latch stud broken											
ILSP	Int. latch spring out of position											
JL	Jumps latch											
JO	Jars off											
LB	Light blow											
MCSO	Magazine cap shot off											
MCW	Magazine capacity wrong											
MFA	Misfires (ammo)											
MFOP	Magazine follower out of position											
MLH	Magazine loads hard											
OH	Opens hard											
PH	Pulls hard											
PSI	Proof stamp illegible											



PSM	Proof stamp missing											
RBOC	Rings and bulges on case											
RDW	(Action) release doesn't work											
RIC	Rings in chamber											
SBC	Stems bottom chambers											
SBCL	Shell binds carrier latch											
SBE	Stems bbl extension											
SCB	Stock cracked or broken											
SCX	Shell catches											
SHI	Short indent											
SIC	Stems in chamber											
SL	shaves lead											
SLC	Stems left side of chamber											
SMOC	Stretch marks on case											
SRC	Stems right side of chamber											
SRIC	Specific rings in chamber											
SSC	shell stems carrier											
STC	Stems top chamber											
SWE	Safety switch works too easily											
SWH	Safety switch works too hard											
SWW	Safety ewitxh won't work											
TD	Tips down											
TU	Tips up											
TWP	Trigger won't pull											
TWR	Trigger won't retract											
UNCN-T	Uncoded											
XH	Extracts hard											

XHB	Extractor hits bbl												
HI	High												
LO	Low												
LEFT	Left												
RIGHT	Right												
DG	Doesn't Group												
FSST	Front sight tipped												
RSTT	Rear sight tipped												
RSBR	Rear sight base raised												
FSTR	Front sight raised												
FSTL	Front sight loose												
RSTL	Rear sight loose												
MGPT-G	Missing parts at target												
UNCN-G	Uncoded nonconformity at target												
AI-P	Assembly incomplete at proof												
BC-P	Blows cases at proof												
BEB-P	Barrel extension broken at proof												
BLP-P	Blanked primer at proof												
BP-P	Blown primer at proof												
BS-P	Barrel split at proof												
DLOS-P	Doesn't lock over shells at proof												
ESB-P	Ejector sticks back at proof												
FCB-P	Fore-end cracked at proof												
FESO-P	Fore-end shot off at proof												
FF-P	Fails to fire at proof												

[illegible]

[illegible][illegible]












Summary	Total Test + Proof Failures	0
	Total Rejected:	0
	Overall Reject Rate:	

Proof

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

Test

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

Target

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
AB	Action binds										
ASFB	Action spring follower binds										
BABS	Bulge at body shoulder										
BAC	Burr at chamber										
BB	Bolt binds/catches										
BCOE	Bolt catches on ejector										
BC	Blows cases										
BLOP	Bar lock or disconnecter out of position										
BSCO	Barrel support came out										
CBS-F	Shells catch on bbl support-feeding										
CBS-L	Shells catch on bbl support-loading										
CC	Carrier catches on shells,mag,receiver										
CD	Case dented										
CH	Closes hard										

CHAB	Carrier hits action bar											
CLM	Can't load magazine											
CO	Cut-off											
CR	Cuts rim											
CS	Cases swell											
CTOG	Chamber torn or gouged											
CTP	Creepy trigger pull											
CWSB	Cams wrong side of action bar											
DBB	Doesn't blow back											
DCS	Double click in safety switch											
DCT	Double click in trigger											
DCU	Doesn't close-up											
DE	Doesn't eject											
DEL	Doesn't eject live round											
DFU	Doesn't feed up											
DLO	Doesn't lock open (after last shell)											
DLU	Doesn't lock-up											
DS	Dead safe											
DSM	Drops shell-magazine											
DTL	Doesn't trip latch											
DX	Doesn't extract											
DXL	Doesn't extract live round											
EDS	Extractor drops shell											
ESB	Ejector sticks back											
ESS	Extractor stems shell											
FA	Fires automatically											
FB	Follower binds											

FC	Fails to connect											
FCB	Fore-end cracked or broken											
FD	Follows-down											
FF	Fails to fire											
FFM	Fails to feed from magazine											
FFP	Flat firing pin											
FOS	Fires on safe											
FSR	Fires when safe is released											
GCSO	Gas cyl shot off											
GRSO	Guide ring shot off											
HPA	High pressure ammo											
HUE	Hard under extractor											
ILOP	Int. latch out of position											
ILRM	Int. latch ret. Missing											
ILSB	Int. latch stud broken											
ILSP	Int. latch spring out of position											
JL	Jumps latch											
JO	Jars off											
LB	Light blow											
MCSO	Magazine cap shot off											
MCW	Magazine capacity wrong											
MFA	Misfires (ammo)											
MFOP	Magazine follower out of position											
MLH	Magazine loads hard											
OH	Opens hard											
PH	Pulls hard											
PSI	Proof stamp illegible											

PSM	Proof stamp missing											
RBOC	Rings and bulges on case											
RDW	(Action) release doesn't work											
RIC	Rings in chamber											
SBC	Stems bottom chambers											
SBCL	Shell binds carrier latch											
SBE	Stems bbl extension											
SCB	Stock cracked or broken											
SCX	Shell catches											
SHI	Short indent											
SIC	Stems in chamber											
SL	shaves lead											
SLC	Stems left side of chamber											
SMOC	Stretch marks on case											
SRC	Stems right side of chamber											
SRIC	Specific rings in chamber											
SSC	shell stems carrier											
STC	Stems top chamber											
SWE	Safety switch works too easily											
SWH	Safety switch works too hard											
SWW	Safety ewitxh won't work											
TD	Tips down											
TU	Tips up											
TWP	Trigger won't pull											
TWR	Trigger won't retract											
UNCN-T	Uncoded											
XH	Extracts hard											

XHB	Extractor hits bbl												
HI	High												
LO	Low												
LEFT	Left												
RIGHT	Right												
DG	Doesn't Group												
FSST	Front sight tipped												
RSTT	Rear sight tipped												
RSBR	Rear sight base raised												
FSTR	Front sight raised												
FSTL	Front sight loose												
RSTL	Rear sight loose												
MGPT-G	Missing parts at target												
UNCN-G	Uncoded nonconformity at target												
AI-P	Assembly incomplete at proof												
BC-P	Blows cases at proof												
BEB-P	Barrel extension broken at proof												
BLP-P	Blanked primer at proof												
BP-P	Blown primer at proof												
BS-P	Barrel split at proof												
DLOS-P	Doesn't lock over shells at proof												
ESB-P	Ejector sticks back at proof												
FCB-P	Fore-end cracked at proof												
FESO-P	Fore-end shot off at proof												
FF-P	Fails to fire at proof												

[illegible]

[illegible][illegible]












<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

**Proof**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

**Test**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

**Target**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
AB	Action binds										
ASFB	Action spring follower binds										
BABS	Bulge at body shoulder										
BAC	Burr at chamber										
BB	Bolt binds/catches										
BCOE	Bolt catches on ejector										
BC	Blows cases										
BLOP	Bar lock or disconnecter out of position										
BSCO	Barrel support came out										
CBS-F	Shells catch on bbl support-feeding										
CBS-L	Shells catch on bbl support-loading										
CC	Carrier catches on shells,mag,receiver										
CD	Case dented										
CH	Closes hard										

CHAB	Carrier hits action bar											
CLM	Can't load magazine											
CO	Cut-off											
CR	Cuts rim											
CS	Cases swell											
CTOG	Chamber torn or gouged											
CTP	Creepy trigger pull											
CWSB	Cams wrong side of action bar											
DBB	Doesn't blow back											
DCS	Double click in safety switch											
DCT	Double click in trigger											
DCU	Doesn't close-up											
DE	Doesn't eject											
DEL	Doesn't eject live round											
DFU	Doesn't feed up											
DLO	Doesn't lock open (after last shell)											
DLU	Doesn't lock-up											
DS	Dead safe											
DSM	Drops shell-magazine											
DTL	Doesn't trip latch											
DX	Doesn't extract											
DXL	Doesn't extract live round											
EDS	Extractor drops shell											
ESB	Ejector sticks back											
ESS	Extractor stems shell											
FA	Fires automatically											
FB	Follower binds											

FC	Fails to connect											
FCB	Fore-end cracked or broken											
FD	Follows-down											
FF	Fails to fire											
FFM	Fails to feed from magazine											
FFP	Flat firing pin											
FOS	Fires on safe											
FSR	Fires when safe is released											
GCSO	Gas cyl shot off											
GRSO	Guide ring shot off											
HPA	High pressure ammo											
HUE	Hard under extractor											
ILOP	Int. latch out of position											
ILRM	Int. latch ret. Missing											
ILSB	Int. latch stud broken											
ILSP	Int. latch spring out of position											
JL	Jumps latch											
JO	Jars off											
LB	Light blow											
MCSO	Magazine cap shot off											
MCW	Magazine capacity wrong											
MFA	Misfires (ammo)											
MFOP	Magazine follower out of position											
MLH	Magazine loads hard											
OH	Opens hard											
PH	Pulls hard											
PSI	Proof stamp illegible											



PSM	Proof stamp missing											
RBOC	Rings and bulges on case											
RDW	(Action) release doesn't work											
RIC	Rings in chamber											
SBC	Stems bottom chambers											
SBCL	Shell binds carrier latch											
SBE	Stems bbl extension											
SCB	Stock cracked or broken											
SCX	Shell catches											
SHI	Short indent											
SIC	Stems in chamber											
SL	shaves lead											
SLC	Stems left side of chamber											
SMOC	Stretch marks on case											
SRC	Stems right side of chamber											
SRIC	Specific rings in chamber											
SSC	shell stems carrier											
STC	Stems top chamber											
SWE	Safety switch works too easily											
SWH	Safety switch works too hard											
SWW	Safety ewitxh won't work											
TD	Tips down											
TU	Tips up											
TWP	Trigger won't pull											
TWR	Trigger won't retract											
UNCN-T	Uncoded											
XH	Extracts hard											

XHB	Extractor hits bbl												
HI	High												
LO	Low												
LEFT	Left												
RIGHT	Right												
DG	Doesn't Group												
FSST	Front sight tipped												
RSTT	Rear sight tipped												
RSBR	Rear sight base raised												
FSTR	Front sight raised												
FSTL	Front sight loose												
RSTL	Rear sight loose												
MGPT-G	Missing parts at target												
UNCN-G	Uncoded nonconformity at target												
AI-P	Assembly incomplete at proof												
BC-P	Blows cases at proof												
BEB-P	Barrel extension broken at proof												
BLP-P	Blanked primer at proof												
BP-P	Blown primer at proof												
BS-P	Barrel split at proof												
DLOS-P	Doesn't lock over shells at proof												
ESB-P	Ejector sticks back at proof												
FCB-P	Fore-end cracked at proof												
FESO-P	Fore-end shot off at proof												
FF-P	Fails to fire at proof												

[illegible]

**Test Date:** \_\_\_\_\_

0	0	0	0	0	0
0	0	0	0	0	0
0	0	0	0	0	0
0	0	0	0	0	0

[illegible]












<b>Summary</b>	Total Test + Proof Failures	0
	Total Rejected:	0
	Overall Reject Rate:	

<b>Proof</b>	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										
<b>Test</b>	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										
<b>Target</b>	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
AB	Action binds										
ASFB	Action spring follower binds										
BABS	Bulge at body shoulder										
BAC	Burr at chamber										
BB	Bolt binds/catches										
BCOE	Bolt catches on ejector										
BC	Blows cases										
BLOP	Bar lock or disconnecter out of position										
BSCO	Barrel support came out										
CBS-F	Shells catch on bbl support-feeding										
CBS-L	Shells catch on bbl support-loading										
CC	Carrier catches on shells,mag,receiver										
CD	Case dented										
CH	Closes hard										

CHAB	Carrier hits action bar											
CLM	Can't load magazine											
CO	Cut-off											
CR	Cuts rim											
CS	Cases swell											
CTOG	Chamber torn or gouged											
CTP	Creepy trigger pull											
CWSB	Cams wrong side of action bar											
DBB	Doesn't blow back											
DCS	Double click in safety switch											
DCT	Double click in trigger											
DCU	Doesn't close-up											
DE	Doesn't eject											
DEL	Doesn't eject live round											
DFU	Doesn't feed up											
DLO	Doesn't lock open (after last shell)											
DLU	Doesn't lock-up											
DS	Dead safe											
DSM	Drops shell-magazine											
DTL	Doesn't trip latch											
DX	Doesn't extract											
DXL	Doesn't extract live round											
EDS	Extractor drops shell											
ESB	Ejector sticks back											
ESS	Extractor stems shell											
FA	Fires automatically											
FB	Follower binds											

FC	Fails to connect											
FCB	Fore-end cracked or broken											
FD	Follows-down											
FF	Fails to fire											
FFM	Fails to feed from magazine											
FFP	Flat firing pin											
FOS	Fires on safe											
FSR	Fires when safe is released											
GCSO	Gas cyl shot off											
GRSO	Guide ring shot off											
HPA	High pressure ammo											
HUE	Hard under extractor											
ILOP	Int. latch out of position											
ILRM	Int. latch ret. Missing											
ILSB	Int. latch stud broken											
ILSP	Int. latch spring out of position											
JL	Jumps latch											
JO	Jars off											
LB	Light blow											
MCSO	Magazine cap shot off											
MCW	Magazine capacity wrong											
MFA	Misfires (ammo)											
MFOP	Magazine follower out of position											
MLH	Magazine loads hard											
OH	Opens hard											
PH	Pulls hard											
PSI	Proof stamp illegible											

PSM	Proof stamp missing											
RBOC	Rings and bulges on case											
RDW	(Action) release doesn't work											
RIC	Rings in chamber											
SBC	Stems bottom chambers											
SBCL	Shell binds carrier latch											
SBE	Stems bbl extension											
SCB	Stock cracked or broken											
SCX	Shell catches											
SHI	Short indent											
SIC	Stems in chamber											
SL	shaves lead											
SLC	Stems left side of chamber											
SMOC	Stretch marks on case											
SRC	Stems right side of chamber											
SRIC	Specific rings in chamber											
SSC	shell stems carrier											
STC	Stems top chamber											
SWE	Safety switch works too easily											
SWH	Safety switch works too hard											
SWW	Safety ewitxh won't work											
TD	Tips down											
TU	Tips up											
TWP	Trigger won't pull											
TWR	Trigger won't retract											
UNCN-T	Uncoded											
XH	Extracts hard											

XHB	Extractor hits bbl												
HI	High												
LO	Low												
LEFT	Left												
RIGHT	Right												
DG	Doesn't Group												
FSST	Front sight tipped												
RSTT	Rear sight tipped												
RSBR	Rear sight base raised												
FSTR	Front sight raised												
FSTL	Front sight loose												
RSTL	Rear sight loose												
MGPT-G	Missing parts at target												
UNCN-G	Uncoded nonconformity at target												
AI-P	Assembly incomplete at proof												
BC-P	Blows cases at proof												
BEB-P	Barrel extension broken at proof												
BLP-P	Blanked primer at proof												
BP-P	Blown primer at proof												
BS-P	Barrel split at proof												
DLOS-P	Doesn't lock over shells at proof												
ESB-P	Ejector sticks back at proof												
FCB-P	Fore-end cracked at proof												
FESO-P	Fore-end shot off at proof												
FF-P	Fails to fire at proof												

[illegible]

[illegible][illegible]












<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

**Proof**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

**Test**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

**Target**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
AB	Action binds										
ASFB	Action spring follower binds										
BABS	Bulge at body shoulder										
BAC	Burr at chamber										
BB	Bolt binds/catches										
BCOE	Bolt catches on ejector										
BC	Blows cases										
BLOP	Bar lock or disconnecter out of position										
BSCO	Barrel support came out										
CBS-F	Shells catch on bbl support-feeding										
CBS-L	Shells catch on bbl support-loading										
CC	Carrier catches on shells,mag,receiver										
CD	Case dented										
CH	Closes hard										

CHAB	Carrier hits action bar											
CLM	Can't load magazine											
CO	Cut-off											
CR	Cuts rim											
CS	Cases swell											
CTOG	Chamber torn or gouged											
CTP	Creepy trigger pull											
CWSB	Cams wrong side of action bar											
DBB	Doesn't blow back											
DCS	Double click in safety switch											
DCT	Double click in trigger											
DCU	Doesn't close-up											
DE	Doesn't eject											
DEL	Doesn't eject live round											
DFU	Doesn't feed up											
DLO	Doesn't lock open (after last shell)											
DLU	Doesn't lock-up											
DS	Dead safe											
DSM	Drops shell-magazine											
DTL	Doesn't trip latch											
DX	Doesn't extract											
DXL	Doesn't extract live round											
EDS	Extractor drops shell											
ESB	Ejector sticks back											
ESS	Extractor stems shell											
FA	Fires automatically											
FB	Follower binds											

FC	Fails to connect											
FCB	Fore-end cracked or broken											
FD	Follows-down											
FF	Fails to fire											
FFM	Fails to feed from magazine											
FFP	Flat firing pin											
FOS	Fires on safe											
FSR	Fires when safe is released											
GCSO	Gas cyl shot off											
GRSO	Guide ring shot off											
HPA	High pressure ammo											
HUE	Hard under extractor											
ILOP	Int. latch out of position											
ILRM	Int. latch ret. Missing											
ILSB	Int. latch stud broken											
ILSP	Int. latch spring out of position											
JL	Jumps latch											
JO	Jars off											
LB	Light blow											
MCSO	Magazine cap shot off											
MCW	Magazine capacity wrong											
MFA	Misfires (ammo)											
MFOP	Magazine follower out of position											
MLH	Magazine loads hard											
OH	Opens hard											
PH	Pulls hard											
PSI	Proof stamp illegible											



PSM	Proof stamp missing											
RBOC	Rings and bulges on case											
RDW	(Action) release doesn't work											
RIC	Rings in chamber											
SBC	Stems bottom chambers											
SBCL	Shell binds carrier latch											
SBE	Stems bbl extension											
SCB	Stock cracked or broken											
SCX	Shell catches											
SHI	Short indent											
SIC	Stems in chamber											
SL	shaves lead											
SLC	Stems left side of chamber											
SMOC	Stretch marks on case											
SRC	Stems right side of chamber											
SRIC	Specific rings in chamber											
SSC	shell stems carrier											
STC	Stems top chamber											
SWE	Safety switch works too easily											
SWH	Safety switch works too hard											
SWW	Safety ewitxh won't work											
TD	Tips down											
TU	Tips up											
TWP	Trigger won't pull											
TWR	Trigger won't retract											
UNCN-T	Uncoded											
XH	Extracts hard											

XHB	Extractor hits bbl												
HI	High												
LO	Low												
LEFT	Left												
RIGHT	Right												
DG	Doesn't Group												
FSST	Front sight tipped												
RSTT	Rear sight tipped												
RSBR	Rear sight base raised												
FSTR	Front sight raised												
FSTL	Front sight loose												
RSTL	Rear sight loose												
MGPT-G	Missing parts at target												
UNCN-G	Uncoded nonconformity at target												
AI-P	Assembly incomplete at proof												
BC-P	Blows cases at proof												
BEB-P	Barrel extension broken at proof												
BLP-P	Blanked primer at proof												
BP-P	Blown primer at proof												
BS-P	Barrel split at proof												
DLOS-P	Doesn't lock over shells at proof												
ESB-P	Ejector sticks back at proof												
FCB-P	Fore-end cracked at proof												
FESO-P	Fore-end shot off at proof												
FF-P	Fails to fire at proof												

[illegible]

[illegible][illegible]












<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

<b>Proof</b>	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										
<b>Test</b>	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										
<b>Target</b>	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
AB	Action binds										
ASFB	Action spring follower binds										
BABS	Bulge at body shoulder										
BAC	Burr at chamber										
BB	Bolt binds/catches										
BCOE	Bolt catches on ejector										
BC	Blows cases										
BLOP	Bar lock or disconnecter out of position										
BSCO	Barrel support came out										
CBS-F	Shells catch on bbl support-feeding										
CBS-L	Shells catch on bbl support-loading										
CC	Carrier catches on shells,mag,receiver										
CD	Case dented										
CH	Closes hard										

CHAB	Carrier hits action bar											
CLM	Can't load magazine											
CO	Cut-off											
CR	Cuts rim											
CS	Cases swell											
CTOG	Chamber torn or gouged											
CTP	Creepy trigger pull											
CWSB	Cams wrong side of action bar											
DBB	Doesn't blow back											
DCS	Double click in safety switch											
DCT	Double click in trigger											
DCU	Doesn't close-up											
DE	Doesn't eject											
DEL	Doesn't eject live round											
DFU	Doesn't feed up											
DLO	Doesn't lock open (after last shell)											
DLU	Doesn't lock-up											
DS	Dead safe											
DSM	Drops shell-magazine											
DTL	Doesn't trip latch											
DX	Doesn't extract											
DXL	Doesn't extract live round											
EDS	Extractor drops shell											
ESB	Ejector sticks back											
ESS	Extractor stems shell											
FA	Fires automatically											
FB	Follower binds											

FC	Fails to connect											
FCB	Fore-end cracked or broken											
FD	Follows-down											
FF	Fails to fire											
FFM	Fails to feed from magazine											
FFP	Flat firing pin											
FOS	Fires on safe											
FSR	Fires when safe is released											
GCSO	Gas cyl shot off											
GRSO	Guide ring shot off											
HPA	High pressure ammo											
HUE	Hard under extractor											
ILOP	Int. latch out of position											
ILRM	Int. latch ret. Missing											
ILSB	Int. latch stud broken											
ILSP	Int. latch spring out of position											
JL	Jumps latch											
JO	Jars off											
LB	Light blow											
MCSO	Magazine cap shot off											
MCW	Magazine capacity wrong											
MFA	Misfires (ammo)											
MFOP	Magazine follower out of position											
MLH	Magazine loads hard											
OH	Opens hard											
PH	Pulls hard											
PSI	Proof stamp illegible											

PSM	Proof stamp missing											
RBOC	Rings and bulges on case											
RDW	(Action) release doesn't work											
RIC	Rings in chamber											
SBC	Stems bottom chambers											
SBCL	Shell binds carrier latch											
SBE	Stems bbl extension											
SCB	Stock cracked or broken											
SCX	Shell catches											
SHI	Short indent											
SIC	Stems in chamber											
SL	shaves lead											
SLC	Stems left side of chamber											
SMOC	Stretch marks on case											
SRC	Stems right side of chamber											
SRIC	Specific rings in chamber											
SSC	shell stems carrier											
STC	Stems top chamber											
SWE	Safety switch works too easily											
SWH	Safety switch works too hard											
SWW	Safety ewitxh won't work											
TD	Tips down											
TU	Tips up											
TWP	Trigger won't pull											
TWR	Trigger won't retract											
UNCN-T	Uncoded											
XH	Extracts hard											

XHB	Extractor hits bbl												
HI	High												
LO	Low												
LEFT	Left												
RIGHT	Right												
DG	Doesn't Group												
FSST	Front sight tipped												
RSTT	Rear sight tipped												
RSBR	Rear sight base raised												
FSTR	Front sight raised												
FSTL	Front sight loose												
RSTL	Rear sight loose												
MGPT-G	Missing parts at target												
UNCN-G	Uncoded nonconformity at target												
AI-P	Assembly incomplete at proof												
BC-P	Blows cases at proof												
BEB-P	Barrel extension broken at proof												
BLP-P	Blanked primer at proof												
BP-P	Blown primer at proof												
BS-P	Barrel split at proof												
DLOS-P	Doesn't lock over shells at proof												
ESB-P	Ejector sticks back at proof												
FCB-P	Fore-end cracked at proof												
FESO-P	Fore-end shot off at proof												
FF-P	Fails to fire at proof												

[illegible]

[illegible][illegible]












Total Test + Proof Failures		0
Total Rejected:		0
Overall Reject Rate:		
Proof	Shot:	
	Rejected:	0
	Percent:	
Test	Shot:	
	Rejected:	0
	Percent:	
Target	Shot:	
	Rejected:	0
	Percent:	

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
AB	Action binds										
ASFB	Action spring follower binds										
BABS	Bulge at body shoulder										
BAC	Burr at chamber										
BB	Bolt binds/catches										
BCOE	Bolt catches on ejector										
BC	Blows cases										
BLOP	Bar lock or disconnecter out of position										
BSCO	Barrel support came out										
CBS-F	Shells catch on bbl support-feeding										
CBS-L	Shells catch on bbl support-loading										
CC	Carrier catches on shells,mag,receiver										
CD	Case dented										
CH	Closes hard										

CHAB	Carrier hits action bar											
CLM	Can't load magazine											
CO	Cut-off											
CR	Cuts rim											
CS	Cases swell											
CTOG	Chamber torn or gouged											
CTP	Creepy trigger pull											
CWSB	Cams wrong side of action bar											
DBB	Doesn't blow back											
DCS	Double click in safety switch											
DCT	Double click in trigger											
DCU	Doesn't close-up											
DE	Doesn't eject											
DEL	Doesn't eject live round											
DFU	Doesn't feed up											
DLO	Doesn't lock open (after last shell)											
DLU	Doesn't lock-up											
DS	Dead safe											
DSM	Drops shell-magazine											
DTL	Doesn't trip latch											
DX	Doesn't extract											
DXL	Doesn't extract live round											
EDS	Extractor drops shell											
ESB	Ejector sticks back											
ESS	Extractor stems shell											
FA	Fires automatically											
FB	Follower binds											

FC	Fails to connect											
FCB	Fore-end cracked or broken											
FD	Follows-down											
FF	Fails to fire											
FFM	Fails to feed from magazine											
FFP	Flat firing pin											
FOS	Fires on safe											
FSR	Fires when safe is released											
GCSO	Gas cyl shot off											
GRSO	Guide ring shot off											
HPA	High pressure ammo											
HUE	Hard under extractor											
ILOP	Int. latch out of position											
ILRM	Int. latch ret. Missing											
ILSB	Int. latch stud broken											
ILSP	Int. latch spring out of position											
JL	Jumps latch											
JO	Jars off											
LB	Light blow											
MCSO	Magazine cap shot off											
MCW	Magazine capacity wrong											
MFA	Misfires (ammo)											
MFOP	Magazine follower out of position											
MLH	Magazine loads hard											
OH	Opens hard											
PH	Pulls hard											
PSI	Proof stamp illegible											



PSM	Proof stamp missing											
RBOC	Rings and bulges on case											
RDW	(Action) release doesn't work											
RIC	Rings in chamber											
SBC	Stems bottom chambers											
SBCL	Shell binds carrier latch											
SBE	Stems bbl extension											
SCB	Stock cracked or broken											
SCX	Shell catches											
SHI	Short indent											
SIC	Stems in chamber											
SL	shaves lead											
SLC	Stems left side of chamber											
SMOC	Stretch marks on case											
SRC	Stems right side of chamber											
SRIC	Specific rings in chamber											
SSC	shell stems carrier											
STC	Stems top chamber											
SWE	Safety switch works too easily											
SWH	Safety switch works too hard											
SWW	Safety ewitxh won't work											
TD	Tips down											
TU	Tips up											
TWP	Trigger won't pull											
TWR	Trigger won't retract											
UNCN-T	Uncoded											
XH	Extracts hard											

XHB	Extractor hits bbl												
HI	High												
LO	Low												
LEFT	Left												
RIGHT	Right												
DG	Doesn't Group												
FSST	Front sight tipped												
RSTT	Rear sight tipped												
RSBR	Rear sight base raised												
FSTR	Front sight raised												
FSTL	Front sight loose												
RSTL	Rear sight loose												
MGPT-G	Missing parts at target												
UNCN-G	Uncoded nonconformity at target												
AI-P	Assembly incomplete at proof												
BC-P	Blows cases at proof												
BEB-P	Barrel extension broken at proof												
BLP-P	Blanked primer at proof												
BP-P	Blown primer at proof												
BS-P	Barrel split at proof												
DLOS-P	Doesn't lock over shells at proof												
ESB-P	Ejector sticks back at proof												
FCB-P	Fore-end cracked at proof												
FESO-P	Fore-end shot off at proof												
FF-P	Fails to fire at proof												

GCSO-P	Gas cylinder shot off at proof									
GRSO-P	Guide ring shot off at proof									
MCSO-P	Magazine cap shot off at proof									
MSI-P	Magnaflex stamp illegible or bbl									
MSM-P	Magnaflex stamp missing on bbl									
PP-P	Pierced primer at proof									
SCB-P	Stock cracked or broken at proof									
UNCM-P	Uncoded proof malfunctions									

<i><b>Test Date:</b></i>					
0	0	0	0	0	0
0	0	0	0	0	0
0	0	0	0	0	0
0	0	0	0	0	0

[illegible]












<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

<b>Proof</b>	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										
<b>Test</b>	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										
<b>Target</b>	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
AB	Action binds										
ASFB	Action spring follower binds										
BABS	Bulge at body shoulder										
BAC	Burr at chamber										
BB	Bolt binds/catches										
BCOE	Bolt catches on ejector										
BC	Blows cases										
BLOP	Bar lock or disconnecter out of position										
BSCO	Barrel support came out										
CBS-F	Shells catch on bbl support-feeding										
CBS-L	Shells catch on bbl support-loading										
CC	Carrier catches on shells,mag,receiver										
CD	Case dented										
CH	Closes hard										

CHAB	Carrier hits action bar											
CLM	Can't load magazine											
CO	Cut-off											
CR	Cuts rim											
CS	Cases swell											
CTOG	Chamber torn or gouged											
CTP	Creepy trigger pull											
CWSB	Cams wrong side of action bar											
DBB	Doesn't blow back											
DCS	Double click in safety switch											
DCT	Double click in trigger											
DCU	Doesn't close-up											
DE	Doesn't eject											
DEL	Doesn't eject live round											
DFU	Doesn't feed up											
DLO	Doesn't lock open (after last shell)											
DLU	Doesn't lock-up											
DS	Dead safe											
DSM	Drops shell-magazine											
DTL	Doesn't trip latch											
DX	Doesn't extract											
DXL	Doesn't extract live round											
EDS	Extractor drops shell											
ESB	Ejector sticks back											
ESS	Extractor stems shell											
FA	Fires automatically											
FB	Follower binds											

FC	Fails to connect											
FCB	Fore-end cracked or broken											
FD	Follows-down											
FF	Fails to fire											
FFM	Fails to feed from magazine											
FFP	Flat firing pin											
FOS	Fires on safe											
FSR	Fires when safe is released											
GCSO	Gas cyl shot off											
GRSO	Guide ring shot off											
HPA	High pressure ammo											
HUE	Hard under extractor											
ILOP	Int. latch out of position											
ILRM	Int. latch ret. Missing											
ILSB	Int. latch stud broken											
ILSP	Int. latch spring out of position											
JL	Jumps latch											
JO	Jars off											
LB	Light blow											
MCSO	Magazine cap shot off											
MCW	Magazine capacity wrong											
MFA	Misfires (ammo)											
MFOP	Magazine follower out of position											
MLH	Magazine loads hard											
OH	Opens hard											
PH	Pulls hard											
PSI	Proof stamp illegible											

PSM	Proof stamp missing											
RBOC	Rings and bulges on case											
RDW	(Action) release doesn't work											
RIC	Rings in chamber											
SBC	Stems bottom chambers											
SBCL	Shell binds carrier latch											
SBE	Stems bbl extension											
SCB	Stock cracked or broken											
SCX	Shell catches											
SHI	Short indent											
SIC	Stems in chamber											
SL	shaves lead											
SLC	Stems left side of chamber											
SMOC	Stretch marks on case											
SRC	Stems right side of chamber											
SRIC	Specific rings in chamber											
SSC	shell stems carrier											
STC	Stems top chamber											
SWE	Safety switch works too easily											
SWH	Safety switch works too hard											
SWW	Safety ewitxh won't work											
TD	Tips down											
TU	Tips up											
TWP	Trigger won't pull											
TWR	Trigger won't retract											
UNCN-T	Uncoded											
XH	Extracts hard											

XHB	Extractor hits bbl												
HI	High												
LO	Low												
LEFT	Left												
RIGHT	Right												
DG	Doesn't Group												
FSST	Front sight tipped												
RSTT	Rear sight tipped												
RSBR	Rear sight base raised												
FSTR	Front sight raised												
FSTL	Front sight loose												
RSTL	Rear sight loose												
MGPT-G	Missing parts at target												
UNCN-G	Uncoded nonconformity at target												
AI-P	Assembly incomplete at proof												
BC-P	Blows cases at proof												
BEB-P	Barrel extension broken at proof												
BLP-P	Blanked primer at proof												
BP-P	Blown primer at proof												
BS-P	Barrel split at proof												
DLOS-P	Doesn't lock over shells at proof												
ESB-P	Ejector sticks back at proof												
FCB-P	Fore-end cracked at proof												
FESO-P	Fore-end shot off at proof												
FF-P	Fails to fire at proof												



**Test Date:** \_\_\_\_\_

0	0	0	0	0	0
0	0	0	0	0	0
0	0	0	0	0	0
0	0	0	0	0	0

[illegible]












<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

<b>Proof</b>	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										
<b>Test</b>	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										
<b>Target</b>	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
AB	Action binds										
ASFB	Action spring follower binds										
BABS	Bulge at body shoulder										
BAC	Burr at chamber										
BB	Bolt binds/catches										
BCOE	Bolt catches on ejector										
BC	Blows cases										
BLOP	Bar lock or disconnecter out of position										
BSCO	Barrel support came out										
CBS-F	Shells catch on bbl support-feeding										
CBS-L	Shells catch on bbl support-loading										
CC	Carrier catches on shells,mag,receiver										
CD	Case dented										
CH	Closes hard										

CHAB	Carrier hits action bar											
CLM	Can't load magazine											
CO	Cut-off											
CR	Cuts rim											
CS	Cases swell											
CTOG	Chamber torn or gouged											
CTP	Creepy trigger pull											
CWSB	Cams wrong side of action bar											
DBB	Doesn't blow back											
DCS	Double click in safety switch											
DCT	Double click in trigger											
DCU	Doesn't close-up											
DE	Doesn't eject											
DEL	Doesn't eject live round											
DFU	Doesn't feed up											
DLO	Doesn't lock open (after last shell)											
DLU	Doesn't lock-up											
DS	Dead safe											
DSM	Drops shell-magazine											
DTL	Doesn't trip latch											
DX	Doesn't extract											
DXL	Doesn't extract live round											
EDS	Extractor drops shell											
ESB	Ejector sticks back											
ESS	Extractor stems shell											
FA	Fires automatically											
FB	Follower binds											

FC	Fails to connect											
FCB	Fore-end cracked or broken											
FD	Follows-down											
FF	Fails to fire											
FFM	Fails to feed from magazine											
FFP	Flat firing pin											
FOS	Fires on safe											
FSR	Fires when safe is released											
GCSO	Gas cyl shot off											
GRSO	Guide ring shot off											
HPA	High pressure ammo											
HUE	Hard under extractor											
ILOP	Int. latch out of position											
ILRM	Int. latch ret. Missing											
ILSB	Int. latch stud broken											
ILSP	Int. latch spring out of position											
JL	Jumps latch											
JO	Jars off											
LB	Light blow											
MCSO	Magazine cap shot off											
MCW	Magazine capacity wrong											
MFA	Misfires (ammo)											
MFOP	Magazine follower out of position											
MLH	Magazine loads hard											
OH	Opens hard											
PH	Pulls hard											
PSI	Proof stamp illegible											



PSM	Proof stamp missing											
RBOC	Rings and bulges on case											
RDW	(Action) release doesn't work											
RIC	Rings in chamber											
SBC	Stems bottom chambers											
SBCL	Shell binds carrier latch											
SBE	Stems bbl extension											
SCB	Stock cracked or broken											
SCX	Shell catches											
SHI	Short indent											
SIC	Stems in chamber											
SL	shaves lead											
SLC	Stems left side of chamber											
SMOC	Stretch marks on case											
SRC	Stems right side of chamber											
SRIC	Specific rings in chamber											
SSC	shell stems carrier											
STC	Stems top chamber											
SWE	Safety switch works too easily											
SWH	Safety switch works too hard											
SWW	Safety ewitxh won't work											
TD	Tips down											
TU	Tips up											
TWP	Trigger won't pull											
TWR	Trigger won't retract											
UNCN-T	Uncoded											
XH	Extracts hard											

XHB	Extractor hits bbl												
HI	High												
LO	Low												
LEFT	Left												
RIGHT	Right												
DG	Doesn't Group												
FSST	Front sight tipped												
RSTT	Rear sight tipped												
RSBR	Rear sight base raised												
FSTR	Front sight raised												
FSTL	Front sight loose												
RSTL	Rear sight loose												
MGPT-G	Missing parts at target												
UNCN-G	Uncoded nonconformity at target												
AI-P	Assembly incomplete at proof												
BC-P	Blows cases at proof												
BEB-P	Barrel extension broken at proof												
BLP-P	Blanked primer at proof												
BP-P	Blown primer at proof												
BS-P	Barrel split at proof												
DLOS-P	Doesn't lock over shells at proof												
ESB-P	Ejector sticks back at proof												
FCB-P	Fore-end cracked at proof												
FESO-P	Fore-end shot off at proof												
FF-P	Fails to fire at proof												

[illegible]

<b>Test Date:</b>						

[illegible]












Summary	Total Test + Proof Failures	0
	Total Rejected:	0
	Overall Reject Rate:	

Proof

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

Test

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

Target

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
AB	Action binds										
ASFB	Action spring follower binds										
BABS	Bulge at body shoulder										
BAC	Burr at chamber										
BB	Bolt binds/catches										
BCOE	Bolt catches on ejector										
BC	Blows cases										
BLOP	Bar lock or disconnecter out of position										
BSCO	Barrel support came out										
CBS-F	Shells catch on bbl support-feeding										
CBS-L	Shells catch on bbl support-loading										
CC	Carrier catches on shells,mag,receiver										
CD	Case dented										
CH	Closes hard										

CHAB	Carrier hits action bar											
CLM	Can't load magazine											
CO	Cut-off											
CR	Cuts rim											
CS	Cases swell											
CTOG	Chamber torn or gouged											
CTP	Creepy trigger pull											
CWSB	Cams wrong side of action bar											
DBB	Doesn't blow back											
DCS	Double click in safety switch											
DCT	Double click in trigger											
DCU	Doesn't close-up											
DE	Doesn't eject											
DEL	Doesn't eject live round											
DFU	Doesn't feed up											
DLO	Doesn't lock open (after last shell)											
DLU	Doesn't lock-up											
DS	Dead safe											
DSM	Drops shell-magazine											
DTL	Doesn't trip latch											
DX	Doesn't extract											
DXL	Doesn't extract live round											
EDS	Extractor drops shell											
ESB	Ejector sticks back											
ESS	Extractor stems shell											
FA	Fires automatically											
FB	Follower binds											

FC	Fails to connect											
FCB	Fore-end cracked or broken											
FD	Follows-down											
FF	Fails to fire											
FFM	Fails to feed from magazine											
FFP	Flat firing pin											
FOS	Fires on safe											
FSR	Fires when safe is released											
GCSO	Gas cyl shot off											
GRSO	Guide ring shot off											
HPA	High pressure ammo											
HUE	Hard under extractor											
ILOP	Int. latch out of position											
ILRM	Int. latch ret. Missing											
ILSB	Int. latch stud broken											
ILSP	Int. latch spring out of position											
JL	Jumps latch											
JO	Jars off											
LB	Light blow											
MCSO	Magazine cap shot off											
MCW	Magazine capacity wrong											
MFA	Misfires (ammo)											
MFOP	Magazine follower out of position											
MLH	Magazine loads hard											
OH	Opens hard											
PH	Pulls hard											
PSI	Proof stamp illegible											

PSM	Proof stamp missing											
RBOC	Rings and bulges on case											
RDW	(Action) release doesn't work											
RIC	Rings in chamber											
SBC	Stems bottom chambers											
SBCL	Shell binds carrier latch											
SBE	Stems bbl extension											
SCB	Stock cracked or broken											
SCX	Shell catches											
SHI	Short indent											
SIC	Stems in chamber											
SL	shaves lead											
SLC	Stems left side of chamber											
SMOC	Stretch marks on case											
SRC	Stems right side of chamber											
SRIC	Specific rings in chamber											
SSC	shell stems carrier											
STC	Stems top chamber											
SWE	Safety switch works too easily											
SWH	Safety switch works too hard											
SWW	Safety ewitxh won't work											
TD	Tips down											
TU	Tips up											
TWP	Trigger won't pull											
TWR	Trigger won't retract											
UNCN-T	Uncoded											
XH	Extracts hard											

XHB	Extractor hits bbl												
HI	High												
LO	Low												
LEFT	Left												
RIGHT	Right												
DG	Doesn't Group												
FSST	Front sight tipped												
RSTT	Rear sight tipped												
RSBR	Rear sight base raised												
FSTR	Front sight raised												
FSTL	Front sight loose												
RSTL	Rear sight loose												
MGPT-G	Missing parts at target												
UNCN-G	Uncoded nonconformity at target												
AI-P	Assembly incomplete at proof												
BC-P	Blows cases at proof												
BEB-P	Barrel extension broken at proof												
BLP-P	Blanked primer at proof												
BP-P	Blown primer at proof												
BS-P	Barrel split at proof												
DLOS-P	Doesn't lock over shells at proof												
ESB-P	Ejector sticks back at proof												
FCB-P	Fore-end cracked at proof												
FESO-P	Fore-end shot off at proof												
FF-P	Fails to fire at proof												



[illegible][illegible]












<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

<b>Proof</b>	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										
<b>Test</b>	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										
<b>Target</b>	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
AB	Action binds										
ASFB	Action spring follower binds										
BABS	Bulge at body shoulder										
BAC	Burr at chamber										
BB	Bolt binds/catches										
BCOE	Bolt catches on ejector										
BC	Blows cases										
BLOP	Bar lock or disconnecter out of position										
BSCO	Barrel support came out										
CBS-F	Shells catch on bbl support-feeding										
CBS-L	Shells catch on bbl support-loading										
CC	Carrier catches on shells,mag,receiver										
CD	Case dented										
CH	Closes hard										

CHAB	Carrier hits action bar											
CLM	Can't load magazine											
CO	Cut-off											
CR	Cuts rim											
CS	Cases swell											
CTOG	Chamber torn or gouged											
CTP	Creepy trigger pull											
CWSB	Cams wrong side of action bar											
DBB	Doesn't blow back											
DCS	Double click in safety switch											
DCT	Double click in trigger											
DCU	Doesn't close-up											
DE	Doesn't eject											
DEL	Doesn't eject live round											
DFU	Doesn't feed up											
DLO	Doesn't lock open (after last shell)											
DLU	Doesn't lock-up											
DS	Dead safe											
DSM	Drops shell-magazine											
DTL	Doesn't trip latch											
DX	Doesn't extract											
DXL	Doesn't extract live round											
EDS	Extractor drops shell											
ESB	Ejector sticks back											
ESS	Extractor stems shell											
FA	Fires automatically											
FB	Follower binds											

FC	Fails to connect											
FCB	Fore-end cracked or broken											
FD	Follows-down											
FF	Fails to fire											
FFM	Fails to feed from magazine											
FFP	Flat firing pin											
FOS	Fires on safe											
FSR	Fires when safe is released											
GCSO	Gas cyl shot off											
GRSO	Guide ring shot off											
HPA	High pressure ammo											
HUE	Hard under extractor											
ILOP	Int. latch out of position											
ILRM	Int. latch ret. Missing											
ILSB	Int. latch stud broken											
ILSP	Int. latch spring out of position											
JL	Jumps latch											
JO	Jars off											
LB	Light blow											
MCSO	Magazine cap shot off											
MCW	Magazine capacity wrong											
MFA	Misfires (ammo)											
MFOP	Magazine follower out of position											
MLH	Magazine loads hard											
OH	Opens hard											
PH	Pulls hard											
PSI	Proof stamp illegible											



PSM	Proof stamp missing											
RBOC	Rings and bulges on case											
RDW	(Action) release doesn't work											
RIC	Rings in chamber											
SBC	Stems bottom chambers											
SBCL	Shell binds carrier latch											
SBE	Stems bbl extension											
SCB	Stock cracked or broken											
SCX	Shell catches											
SHI	Short indent											
SIC	Stems in chamber											
SL	shaves lead											
SLC	Stems left side of chamber											
SMOC	Stretch marks on case											
SRC	Stems right side of chamber											
SRIC	Specific rings in chamber											
SSC	shell stems carrier											
STC	Stems top chamber											
SWE	Safety switch works too easily											
SWH	Safety switch works too hard											
SWW	Safety ewitxh won't work											
TD	Tips down											
TU	Tips up											
TWP	Trigger won't pull											
TWR	Trigger won't retract											
UNCN-T	Uncoded											
XH	Extracts hard											

XHB	Extractor hits bbl												
HI	High												
LO	Low												
LEFT	Left												
RIGHT	Right												
DG	Doesn't Group												
FSST	Front sight tipped												
RSTT	Rear sight tipped												
RSBR	Rear sight base raised												
FSTR	Front sight raised												
FSTL	Front sight loose												
RSTL	Rear sight loose												
MGPT-G	Missing parts at target												
UNCN-G	Uncoded nonconformity at target												
AI-P	Assembly incomplete at proof												
BC-P	Blows cases at proof												
BEB-P	Barrel extension broken at proof												
BLP-P	Blanked primer at proof												
BP-P	Blown primer at proof												
BS-P	Barrel split at proof												
DLOS-P	Doesn't lock over shells at proof												
ESB-P	Ejector sticks back at proof												
FCB-P	Fore-end cracked at proof												
FESO-P	Fore-end shot off at proof												
FF-P	Fails to fire at proof												

GCSO-P										Gas cylinder shot off at proof
GRSO-P										Guide ring shot off at proof
MCSO-P										Magazine cap shot off at proof
MSI-P										Magnaflex stamp illegible or bbl
MSM-P										Magnaflex stamp missing or bbl
PP-P										Pierced primer at proof
SCB-P										Stock cracked or broken at proof
UNCMI-P										Uncoded proof malfunctions

[illegible]

ILE00125493












<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

**Proof**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

**Test**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

**Target**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
AB	Action binds										
ASFB	Action spring follower binds										
BABS	Bulge at body shoulder										
BAC	Burr at chamber										
BB	Bolt binds/catches										
BCOE	Bolt catches on ejector										
BC	Blows cases										
BLOP	Bar lock or disconnecter out of position										
BSCO	Barrel support came out										
CBS-F	Shells catch on bbl support-feeding										
CBS-L	Shells catch on bbl support-loading										
CC	Carrier catches on shells,mag,receiver										
CD	Case dented										
CH	Closes hard										

CHAB	Carrier hits action bar											
CLM	Can't load magazine											
CO	Cut-off											
CR	Cuts rim											
CS	Cases swell											
CTOG	Chamber torn or gouged											
CTP	Creepy trigger pull											
CWSB	Cams wrong side of action bar											
DBB	Doesn't blow back											
DCS	Double click in safety switch											
DCT	Double click in trigger											
DCU	Doesn't close-up											
DE	Doesn't eject											
DEL	Doesn't eject live round											
DFU	Doesn't feed up											
DLO	Doesn't lock open (after last shell)											
DLU	Doesn't lock-up											
DS	Dead safe											
DSM	Drops shell-magazine											
DTL	Doesn't trip latch											
DX	Doesn't extract											
DXL	Doesn't extract live round											
EDS	Extractor drops shell											
ESB	Ejector sticks back											
ESS	Extractor stems shell											
FA	Fires automatically											
FB	Follower binds											

FC	Fails to connect											
FCB	Fore-end cracked or broken											
FD	Follows-down											
FF	Fails to fire											
FFM	Fails to feed from magazine											
FFP	Flat firing pin											
FOS	Fires on safe											
FSR	Fires when safe is released											
GCSO	Gas cyl shot off											
GRSO	Guide ring shot off											
HPA	High pressure ammo											
HUE	Hard under extractor											
ILOP	Int. latch out of position											
ILRM	Int. latch ret. Missing											
ILSB	Int. latch stud broken											
ILSP	Int. latch spring out of position											
JL	Jumps latch											
JO	Jars off											
LB	Light blow											
MCSO	Magazine cap shot off											
MCW	Magazine capacity wrong											
MFA	Misfires (ammo)											
MFOP	Magazine follower out of position											
MLH	Magazine loads hard											
OH	Opens hard											
PH	Pulls hard											
PSI	Proof stamp illegible											

PSM	Proof stamp missing											
RBOC	Rings and bulges on case											
RDW	(Action) release doesn't work											
RIC	Rings in chamber											
SBC	Stems bottom chambers											
SBCL	Shell binds carrier latch											
SBE	Stems bbl extension											
SCB	Stock cracked or broken											
SCX	Shell catches											
SHI	Short indent											
SIC	Stems in chamber											
SL	shaves lead											
SLC	Stems left side of chamber											
SMOC	Stretch marks on case											
SRC	Stems right side of chamber											
SRIC	Specific rings in chamber											
SSC	shell stems carrier											
STC	Stems top chamber											
SWE	Safety switch works too easily											
SWH	Safety switch works too hard											
SWW	Safety ewitxh won't work											
TD	Tips down											
TU	Tips up											
TWP	Trigger won't pull											
TWR	Trigger won't retract											
UNCN-T	Uncoded											
XH	Extracts hard											

XHB	Extractor hits bbl												
HI	High												
LO	Low												
LEFT	Left												
RIGHT	Right												
DG	Doesn't Group												
FSST	Front sight tipped												
RSTT	Rear sight tipped												
RSBR	Rear sight base raised												
FSTR	Front sight raised												
FSTL	Front sight loose												
RSTL	Rear sight loose												
MGPT-G	Missing parts at target												
UNCN-G	Uncoded nonconformity at target												
AI-P	Assembly incomplete at proof												
BC-P	Blows cases at proof												
BEB-P	Barrel extension broken at proof												
BLP-P	Blanked primer at proof												
BP-P	Blown primer at proof												
BS-P	Barrel split at proof												
DLOS-P	Doesn't lock over shells at proof												
ESB-P	Ejector sticks back at proof												
FCB-P	Fore-end cracked at proof												
FESO-P	Fore-end shot off at proof												
FF-P	Fails to fire at proof												

[illegible]

<i><b>Test Date:</b></i>					
0	0	0	0	0	0
0	0	0	0	0	0
0	0	0	0	0	0
0	0	0	0	0	0

**CONFIDENTIAL**

0	0	0	0	0
0	0	0	0	0
0	0	0	0	0

870 20Ga	870 light weight	870 SM	SP-10	870 Police	O/U

Test Date:

ive Order - Williams v. Remington







