

TRIGGER ADJUSTMENT/ALTERATION WARNINGS

The Model XR-100™ Rangemaster® Single Shot Target Rifle is equipped with a target style trigger assembly which is adjustable for trigger pull weight from 1 1/2lbs – 3 1/2lbs. Adjustments to the trigger must strictly adhere to the instructions included in the Owner's Manual of the Model XR-100™ Rangemaster® Single Shot Target Rifle. **WARNING! DO NOT ATTEMPT TO ADJUST THE TRIGGER PULL WEIGHT OF THE MODEL XR-100 RANGEMASTER® TRIGGER ASSEMBLY IF YOU HAVE NOT READ, OR DO NOT UNDERSTAND THE INSTRUCTIONS PROVIDED IN THE OWNER'S MANUAL. NEVER MAKE ANY ADJUSTMENTS TO THE TRIGGER ASSEMBLY OTHER THAN THE TRIGGER PULL WEIGHT ADJUSTMENT AS SPECIFIED IN THE INSTRUCTIONS FOUND IN THE OWNER'S MANUAL. IMPROPER ADJUSTMENTS TO THE TRIGGER ASSEMBLY CAN MAKE THE RIFLE UNSAFE AND RESULT IN PERSONAL INJURY OR DEATH.**

USAGE OF THE MODEL XR-100™ RANGEMASTER® SINGLE SHOT TARGET RIFLE

(1) This rifle is intended for use ONLY by experienced and responsible shooters in a controlled target shooting environment where the rifle is NEVER loaded with a live round of ammunition except when it is in the ready-to-fire position with the muzzle pointed safely down range. (2) If a cartridge is loaded into the chamber and not fired, it should be IMMEDIATELY unloaded from the rifle. NEVER move the rifle away from the down range position without first unloading the round from the chamber. (3) **WARNING! NEVER carry this rifle with a live round loaded in the chamber.**

FIREARM SALE OR TRANSFER

WARNING! BECAUSE THE MODEL XR-100™ RANGEMASTER® SINGLE SHOT TARGET RIFLE IS A TARGET RIFLE WITH A TARGET STYLE TRIGGER ASSEMBLY, IF YOU INTEND TO SELL OR OTHERWISE TRANSFER POSSESSION OF YOUR RIFLE YOU MUST:

- (1) Warn the purchaser or recipient of your rifle that the rifle is equipped with a target style trigger assembly intended for use in a controlled target shooting environment as specified above, and (2) give the purchaser or recipient this Owner's Manual for review and reference.

WARNING! NEVER ALTER OR MODIFY ANY PART OF THE TRIGGER ASSEMBLY OR ANY PART OF THE FIRING MECHANISM. IMPROPER ALTERATIONS CAN MAKE THE RIFLE UNSAFE AND RESULT IN PERSONAL INJURY OR DEATH.

WARNING! NEVER PUT YOUR FINGER ON THE TRIGGER UNLESS YOU ARE GOING TO FIRE THE FIREARM.