

<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>1731</b>
	<b>Total Rejected:</b>	<b>61</b>
	<b>Overall Reject Rate:</b>	<b>3.52</b>

**Proof**

Shot:	137	29		84	24	191	4	22	883
Rejected:	1	0	0	0	0	0	0	0	2
Percent:	0.7	0.0		0.0	0.0	0.0	0.0	0.0	0.2

**Test**

Shot:	197	62		5	25	195	8	23	883
Rejected:	22	2	0	0	1	23	1	0	2
Percent:	11.2	3.2		0.0	4.0	11.8	12.5	0.0	0.2

**Target**

Shot:									6
Rejected:	0	0	0	0	0	0	0	0	0
Percent:									0.0

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga
AB	Action binds						4	1		1
ASFB	Action spring follower binds									
BABS	Bulge at body shoulder									
BAC	Burr at chamber									
BB	Bolt binds/catches									
BCOE	Bolt catches on ejector									
BC	Blows cases									
BLOP	Bar lock or disconnecter out of position									
BSCO	Barrel support came out									
CBS-F	Shells catch on bbl support-feeding									
CBS-L	Shells catch on bbl support-loading									
CC	Carrier catches on shells,mag,receiver	1	1				1			
CD	Case dented									
CH	Closes hard									
CHAB	Carrier hits action bar									
CLM	Can't load magazine						1			
CO	Cut-off									
CR	Cuts rim									
CS	Cases swell									

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga
CTOG	Chamber torn or gouged									
CTP	Creepy trigger pull									
CWSB	Cams wrong side of action bar									
DBB	Doesn't blow back						4			
DCS	Double click in safety switch									
DCT	Double click in trigger									
DCU	Doesn't close up									
DE	Doesn't eject	12								
DEL	Doesn't eject live round									
DFU	Doesn't feed up	3								
DLO	Doesn't lock open (after last shell)						1			
DLU	Doesn't lock-up									
DS	Dead safe									
DSM	Drops shell-magazine	2								
DTL	Doesn't trip latch						2			
DX	Doesn't extract									
DXL	Doesn't extract live round									
EDS	Extractor drops shell									
ESB	Ejector sticks back	1								
ESS	Extractor stems shell									
FA	Fires automatically									
FB	Follower binds									
FC	Fails to connect									
FCB	Fore-end cracked or broken									
FD	Follows-down									
FF	Fails to fire									
FFM	Fails to feed from magazine									
FFP	Flat firing pin									
FOS	Fires on safe									
FSR	Fires when safe is released									

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga
GCSO	Gas cyl. shot off									
GRSO	Guide ring shot off									
HPA	High pressure ammo									
HUE	Hard under extractor									
ILOP	Int. latch out of position									
ILRM	Int. latch ret. Missing					1	1			
ILSB	Int. latch stud broken									
ILSP	Int. latch spring out of position									
JL	Jumps latch	1								
JO	Jars off									
LB	Light blow									
MCSO	Magazine cap shot off									
MCW	Magazine capacity wrong									
MFA	Misfires (ammo)									
MFOP	Magazine follower out of position									
MLH	Magazine loads hard						6			
OH	Opens hard									
PH	Pulls hard									
PSI	Proof stamp illegible									
PSM	Proof stamp missing									
RBOC	Rings and bulges on case									
RDW	(Action) release doesn't work									
RIC	Rings in chamber									
SBC	Stems bottom chambers									
SBCL	Shell binds carrier latch									
SBE	Stems bbl extension									
SCB	Stock cracked or broken	2								1
SCX	Shell catches									
SHI	Short indent									
SIC	Stems in chamber									

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga
SL	shaves lead									
SLC	Stems left side of chamber						1			
SMOC	Stretch marks on case									
SRC	Stems right side of chamber									
SRIC	Specific rings in chamber									
SSC	shell stems carrier									
STC	Stems top chamber						2			
SWE	Safety switch works too easily									
SWH	Safety switch works too hard									
SWW	Safety ewitxh won't work		1							
TD	Tips down									
TU	Tips up									
TWP	Trigger won't pull									
TWR	Trigger won't retract									
UNCN-T	Uncoded									
XH	Extracts hard									
XHB	Extractor hits bbl									
HI	High									
LO	Low									
LEFT	Left									
RIGHT	Right									
DG	Doesn't Group									
FSST	Front sight tipped									
RSTT	Rear sight tipped									
RSBR	Rear sight base raised									
FSTR	Front sight raised									
FSTL	Front sight loose									
RSTL	Rear sight loose									
MGPT-G	Missing parts at target									

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga
UNCN-G	Uncoded nonconformity at target									
AI-P	Assembly incomplete at proof									
BC-P	Blows cases at proof									
BEB-P	Barrel extension broken at proof									
BLP-P	Blanked primer at proof									
BP-P	Blown primer at proof									
BS-P	Barrel split at proof									
DLOS-P	Doesn't lock over shells at proof									
ESB-P	Ejector sticks back at proof									
FCB-P	Fore-end cracked at proof									
FESO-P	Fore-end shot off at proof									
FF-P	Fails to fire at proof	1								2
GCSO-P	Gas cylinder shot off at proof									
GRSO-P	Guide ring shot off at proof									
MCSO-P	Magazine cap shot off at proof									
MSI-P	Magnaflux stamp illegible on bbl									
MSM-P	Magnaflux stamp missing on bbl									
PP-P	Pierced primer at proof									
SCB-P	Stock cracked or broken at proof									
UNCM-P	Uncoded proof malfunctions									

Month:							total
9	148	72	74			9	1686
0	0	0	0	0	0	0	3
0.0	0.0	0.0	0.0			0.0	0.178
9	148	90	74			9	1728
0	5	2	0	0	0	0	58
0.0	3.4	2.2	0.0			0.0	3.36
							6
0	0	0	0	0	0	0	0
							0.00

870 16Ga	870 20Ga	870 light weight	870 SM	SP10		O/U	total
							6
							0
							0
							0
							0
							0
							0
							0
							0
							0
							0
							0
							3
							0
							0
							0
		1					2
							0
							0
							0

870 16Ga	870 20Ga	870 light weight	870 SM	SP10	O/U	total
						0
						0
						0
						4
						0
						0
						0
						12
						0
						3
						1
						0
						0
						2
						2
						0
						0
						0
						1
		1				1
						0
	5					5
						0
						0
						0
						0
						0
						0
						0

[illegible]



870 16Ga	870 20Ga	870 light weight	870 SM	SP10	O/U	total
						0
						1
						0
						0
						0
						0
						0
						2
						0
						0
						1
						0
						0
						0
						0
						0
						0
						0
						0

						0
						0
						0
						0
						0
						0
						0
						0
						0
						0
						0
						0
						0
						0
						0
						0
						0
						0



<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>1731</b>
	<b>Total Rejected:</b>	<b>61</b>
	<b>Overall Reject Rate:</b>	<b>3.52</b>

<b>Proof</b>	Shot:	137	29		84	24	191	4	22	883	9
	Rejected:	1	0	0	0	0	0	0	0	2	0
	Percent:	0.7	0.0		0.0	0.0	0.0	0.0	0.0	0.2	0.0
<b>Test</b>	Shot:	197	62		5	25	195	8	23	883	9
	Rejected:	22	2	0	0	1	23	1	0	2	0
	Percent:	11.2	3.2		0.0	4.0	11.8	12.5	0.0	0.2	0.0
<b>Target</b>	Shot:									6	
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:									0.0	

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
AB	Action binds						4	1		1	
ASFB	Action spring follower binds										
BABS	Bulge at body shoulder										
BAC	Burr at chamber										
BB	Bolt binds/catches										
BCOE	Bolt catches on ejector										
BC	Blows cases										
BLOP	Bar lock or disconnecter out of position										
BSCO	Barrel support came out										
CBS-F	Shells catch on bbl support-feeding										
CBS-L	Shells catch on bbl support-loading										
CC	Carrier catches on shells,mag,receiver	1	1				1				
CD	Case dented										
CH	Closes hard										

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
CHAB	Carrier hits action bar										
CLM	Can't load magazine						1				
CO	Cut-off										
CR	Cuts rim										
CS	Cases swell										
CTOG	Chamber torn or gouged										
CTP	Creepy trigger pull										
CWSB	Cams wrong side of action bar										
DBB	Doesn't blow back						4				
DCS	Double click in safety switch										
DCT	Double click in trigger										
DCU	Doesn't close-up										
DE	Doesn't eject	12									
DEL	Doesn't eject live round										
DFU	Doesn't feed up	3									
DLO	Doesn't lock open (after last shell)						1				
DLU	Doesn't lock-up										
DS	Dead safe										
DSM	Drops shell-magazine	2									
DTL	Doesn't trip latch						2				
DX	Doesn't extract										
DXL	Doesn't extract live round										
EDS	Extractor drops shell										
ESB	Ejector sticks back	1									
ESS	Extractor stems shell										

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
FA	Fires automatically										
FB	Follower binds										
FC	Fails to connect										
FCB	Fore-end cracked or broken										
FD	Follows-down										
FF	Fails to fire										
FFM	Fails to feed from magazine										
FFP	Flat firing pin										
FOS	Fires on safe										
FSR	Fires when safe is released										
GCSO	Gas cyl shot off										
GRSO	Guide ring shot off										
HPA	High pressure ammo										
HUE	Hard under extractor										
ILOP	Int. latch out of position										
ILRM	Int. latch ret. Missing					1	1				
ILSB	Int. latch stud broken										
ILSP	Int. latch spring out of position										
JL	Jumps latch	1									
JO	Jars off										
LB	Light blow										
MCSO	Magazine cap shot off										
MCW	Magazine capacity wrong										
MFA	Misfires (ammo)										
MFOP	Magazine follower out of position										

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
MLH	Magazine loads hard						6				
OH	Opens hard										
PH	Pulls hard										
PSI	Proof stamp illegible										
PSM	Proof stamp missing										
RBOC	Rings and bulges on case										
RDW	(Action) release doesn't work										
RIC	Rings in chamber										
SBC	Stems bottom chambers										
SBCL	Shell binds carrier latch										
SBE	Stems bbl extension										
SCB	Stock cracked or broken	2								1	
SCX	Shell catches										
SHI	Short indent										
SIC	Stems in chamber										
SL	shaves lead										
SLC	Stems left side of chamber						1				
SMOC	Stretch marks on case										
SRC	Stems right side of chamber										
SRIC	Specific rings in chamber										
SSC	shell stems carrier										
STC	Stems top chamber						2				
SWE	Safety switch works too easily										
SWH	Safety switch works too hard										
SWW	Safety switch won't work		1								

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
TD	Tips down										
TU	Tips up										
TWP	Trigger won't pull										
TWR	Trigger won't retract										
UNCN-T	Uncoded										
XH	Extracts hard										
XHB	Extractor hits bbl										
HI	High										
LO	Low										
LEFT	Left										
RIGHT	Right										
DG	Doesn't Group										
FSST	Front sight tipped										
RSTT	Rear sight tipped										
RSBR	Rear sight base raised										
FSTR	Front sight raised										
FSTL	Front sight loose										
RSTL	Rear sight loose										
MGPT-G	Missing parts at target										
UNCN-G	Uncoded nonconformity at target										
AI-P	Assembly incomplete at proof										
BC-P	Blows cases at proof										
BEB-P	Barrel extension broken at proof										

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
BLP-P	Blanked primer at proof										
BP-P	Blown primer at proof										
BS-P	Barrel split at proof										
DLOS-P	Doesn't lock over shells at proof										
ESB-P	Ejector sticks back at proof										
FCB-P	Fore-end cracked at proof										
FESO-P	Fore-end shot off at proof										
FF-P	Fails to fire at proof	1								2	
GCSO-P	Gas cylinder shot off at proof										
GRSO-P	Guide ring shot off at proof										
MCSO-P	Magazine cap shot off at proof										
MSI-P	Magnaflux stamp illegible on bbl										
MSM-P	Magnaflux stamp missing on bbl										
PP-P	Pierced primer at proof										
SCB-P	Stock cracked or broken at proof										
UNCM-P	Uncoded proof malfunctions										



Test Date:				
148	72	74		9
0	0	0	0	0
0.0	0.0	0.0		
148	90	74		9
5	2	0	0	0
3.4	2.2	0.0		
0	0	0	0	0

148	72	74		9
0	0	0	0	0
0.0	0.0	0.0		
148	90	74		9
5	2	0	0	0
3.4	2.2	0.0		

[illegible]







[illegible]



Summary	Total Test + Proof Failures	0
	Total Rejected:	0
	Overall Reject Rate:	

Proof	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										
Test	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										
Target	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
AB	Action binds										
ASFB	Action spring follower binds										
BABS	Bulge at body shoulder										
BAC	Burr at chamber										
BB	Bolt binds/catches										
BCOE	Bolt catches on ejector										
BC	Blows cases										
BLOP	Bar lock or disconnecter out of position										
BSCO	Barrel support came out										
CBS-F	Shells catch on bbl support-feeding										
CBS-L	Shells catch on bbl support-loading										
CC	Carrier catches on shells,mag,receiver										
CD	Case dented										
CH	Closes hard										

CHAB	Carrier hits action bar											
CLM	Can't load magazine											
CO	Cut-off											
CR	Cuts rim											
CS	Cases swell											
CTOG	Chamber torn or gouged											
CTP	Creepy trigger pull											
CWSB	Cams wrong side of action bar											
DBB	Doesn't blow back											
DCS	Double click in safety switch											
DCT	Double click in trigger											
DCU	Doesn't close-up											
DE	Doesn't eject											
DEL	Doesn't eject live round											
DFU	Doesn't feed up											
DLO	Doesn't lock open (after last shell)											
DLU	Doesn't lock-up											
DS	Dead safe											
DSM	Drops shell-magazine											
DTL	Doesn't trip latch											
DX	Doesn't extract											
DXL	Doesn't extract live round											
EDS	Extractor drops shell											
ESB	Ejector sticks back											
ESS	Extractor stems shell											
FA	Fires automatically											
FB	Follower binds											



FC	Fails to connect											
FCB	Fore-end cracked or broken											
FD	Follows-down											
FF	Fails to fire											
FFM	Fails to feed from magazine											
FFP	Flat firing pin											
FOS	Fires on safe											
FSR	Fires when safe is released											
GCSO	Gas cyl shot off											
GRSO	Guide ring shot off											
HPA	High pressure ammo											
HUE	Hard under extractor											
ILOP	Int. latch out of position											
ILRM	Int. latch ret. Missing											
ILSB	Int. latch stud broken											
ILSP	Int. latch spring out of position											
JL	Jumps latch											
JO	Jars off											
LB	Light blow											
MCSO	Magazine cap shot off											
MCW	Magazine capacity wrong											
MFA	Misfires (ammo)											
MFOP	Magazine follower out of position											
MLH	Magazine loads hard											
OH	Opens hard											
PH	Pulls hard											
PSI	Proof stamp illegible											

PSM	Proof stamp missing											
RBOC	Rings and bulges on case											
RDW	(Action) release doesn't work											
RIC	Rings in chamber											
SBC	Stems bottom chambers											
SBCL	Shell binds carrier latch											
SBE	Stems bbl extension											
SCB	Stock cracked or broken											
SCX	Shell catches											
SHI	Short indent											
SIC	Stems in chamber											
SL	shaves lead											
SLC	Stems left side of chamber											
SMOC	Stretch marks on case											
SRC	Stems right side of chamber											
SRIC	Specific rings in chamber											
SSC	shell stems carrier											
STC	Stems top chamber											
SWE	Safety switch works too easily											
SWH	Safety switch works too hard											
SWW	Safety ewitxh won't work											
TD	Tips down											
TU	Tips up											
TWP	Trigger won't pull											
TWR	Trigger won't retract											
UNCN-T	Uncoded											
XH	Extracts hard											

XHB	Extractor hits bbl												
HI	High												
LO	Low												
LEFT	Left												
RIGHT	Right												
DG	Doesn't Group												
FSST	Front sight tipped												
RSTT	Rear sight tipped												
RSBR	Rear sight base raised												
FSTR	Front sight raised												
FSTL	Front sight loose												
RSTL	Rear sight loose												
MGPT-G	Missing parts at target												
UNCN-G	Uncoded nonconformity at target												
AI-P	Assembly incomplete at proof												
BC-P	Blows cases at proof												
BEB-P	Barrel extension broken at proof												
BLP-P	Blanked primer at proof												
BP-P	Blown primer at proof												
BS-P	Barrel split at proof												
DLOS-P	Doesn't lock over shells at proof												
ESB-P	Ejector sticks back at proof												
FCB-P	Fore-end cracked at proof												
FESO-P	Fore-end shot off at proof												
FF-P	Fails to fire at proof												



[illegible][illegible]












<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

**Proof**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

**Test**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

**Target**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
AB	Action binds										
ASFB	Action spring follower binds										
BABS	Bulge at body shoulder										
BAC	Burr at chamber										
BB	Bolt binds/catches										
BCOE	Bolt catches on ejector										
BC	Blows cases										
BLOP	Bar lock or disconnecter out of position										
BSCO	Barrel support came out										
CBS-F	Shells catch on bbl support-feeding										
CBS-L	Shells catch on bbl support-loading										
CC	Carrier catches on shells,mag,receiver										
CD	Case dented										
CH	Closes hard										

CHAB	Carrier hits action bar											
CLM	Can't load magazine											
CO	Cut-off											
CR	Cuts rim											
CS	Cases swell											
CTOG	Chamber torn or gouged											
CTP	Creepy trigger pull											
CWSB	Cams wrong side of action bar											
DBB	Doesn't blow back											
DCS	Double click in safety switch											
DCT	Double click in trigger											
DCU	Doesn't close-up											
DE	Doesn't eject											
DEL	Doesn't eject live round											
DFU	Doesn't feed up											
DLO	Doesn't lock open (after last shell)											
DLU	Doesn't lock-up											
DS	Dead safe											
DSM	Drops shell-magazine											
DTL	Doesn't trip latch											
DX	Doesn't extract											
DXL	Doesn't extract live round											
EDS	Extractor drops shell											
ESB	Ejector sticks back											
ESS	Extractor stems shell											
FA	Fires automatically											
FB	Follower binds											

FC	Fails to connect												
FCB	Fore-end cracked or broken												
FD	Follows-down												
FF	Fails to fire												
FFM	Fails to feed from magazine												
FFP	Flat firing pin												
FOS	Fires on safe												
FSR	Fires when safe is released												
GCSO	Gas cyl shot off												
GRSO	Guide ring shot off												
HPA	High pressure ammo												
HUE	Hard under extractor												
ILOP	Int. latch out of position												
ILRM	Int. latch ret. Missing												
ILSB	Int. latch stud broken												
ILSP	Int. latch spring out of position												
JL	Jumps latch												
JO	Jars off												
LB	Light blow												
MCSO	Magazine cap shot off												
MCW	Magazine capacity wrong												
MFA	Misfires (ammo)												
MFOP	Magazine follower out of position												
MLH	Magazine loads hard												
OH	Opens hard												
PH	Pulls hard												
PSI	Proof stamp illegible												

PSM	Proof stamp missing											
RBOC	Rings and bulges on case											
RDW	(Action) release doesn't work											
RIC	Rings in chamber											
SBC	Stems bottom chambers											
SBCL	Shell binds carrier latch											
SBE	Stems bbl extension											
SCB	Stock cracked or broken											
SCX	Shell catches											
SHI	Short indent											
SIC	Stems in chamber											
SL	shaves lead											
SLC	Stems left side of chamber											
SMOC	Stretch marks on case											
SRC	Stems right side of chamber											
SRIC	Specific rings in chamber											
SSC	shell stems carrier											
STC	Stems top chamber											
SWE	Safety switch works too easily											
SWH	Safety switch works too hard											
SWW	Safety ewitxh won't work											
TD	Tips down											
TU	Tips up											
TWP	Trigger won't pull											
TWR	Trigger won't retract											
UNCN-T	Uncoded											
XH	Extracts hard											

XHB	Extractor hits bbl												
HI	High												
LO	Low												
LEFT	Left												
RIGHT	Right												
DG	Doesn't Group												
FSST	Front sight tipped												
RSTT	Rear sight tipped												
RSBR	Rear sight base raised												
FSTR	Front sight raised												
FSTL	Front sight loose												
RSTL	Rear sight loose												
MGPT-G	Missing parts at target												
UNCN-G	Uncoded nonconformity at target												
AI-P	Assembly incomplete at proof												
BC-P	Blows cases at proof												
BEB-P	Barrel extension broken at proof												
BLP-P	Blanked primer at proof												
BP-P	Blown primer at proof												
BS-P	Barrel split at proof												
DLOS-P	Doesn't lock over shells at proof												
ESB-P	Ejector sticks back at proof												
FCB-P	Fore-end cracked at proof												
FESO-P	Fore-end shot off at proof												
FF-P	Fails to fire at proof												

GCSO-P	Gas cylinder shot off at proof									
GRSO-P	Guide ring shot off at proof									
MCSO-P	Magazine cap shot off at proof									
MSI-P	Magnaflex stamp illegible or bbl									
MSM-P	Magnaflex stamp missing on bbl									
PP-P	Pierced primer at proof									
SCB-P	Stock cracked or broken at proof									
UNCM-P	Uncoded proof malfunctions									



<b><i>Test Date:</i></b>					
0	0	0	0	0	0
0	0	0	0	0	0
0	0	0	0	0	0

[illegible]










<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

**Proof**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

**Test**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

**Target**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
AB	Action binds										
ASFB	Action spring follower binds										
BABS	Bulge at body shoulder										
BAC	Burr at chamber										
BB	Bolt binds/catches										
BCOE	Bolt catches on ejector										
BC	Blows cases										
BLOP	Bar lock or disconnecter out of position										
BSCO	Barrel support came out										
CBS-F	Shells catch on bbl support-feeding										
CBS-L	Shells catch on bbl support-loading										
CC	Carrier catches on shells,mag,receiver										
CD	Case dented										
CH	Closes hard										

CHAB	Carrier hits action bar											
CLM	Can't load magazine											
CO	Cut-off											
CR	Cuts rim											
CS	Cases swell											
CTOG	Chamber torn or gouged											
CTP	Creepy trigger pull											
CWSB	Cams wrong side of action bar											
DBB	Doesn't blow back											
DCS	Double click in safety switch											
DCT	Double click in trigger											
DCU	Doesn't close-up											
DE	Doesn't eject											
DEL	Doesn't eject live round											
DFU	Doesn't feed up											
DLO	Doesn't lock open (after last shell)											
DLU	Doesn't lock-up											
DS	Dead safe											
DSM	Drops shell-magazine											
DTL	Doesn't trip latch											
DX	Doesn't extract											
DXL	Doesn't extract live round											
EDS	Extractor drops shell											
ESB	Ejector sticks back											
ESS	Extractor stems shell											
FA	Fires automatically											
FB	Follower binds											



FC	Fails to connect											
FCB	Fore-end cracked or broken											
FD	Follows-down											
FF	Fails to fire											
FFM	Fails to feed from magazine											
FFP	Flat firing pin											
FOS	Fires on safe											
FSR	Fires when safe is released											
GCSO	Gas cyl shot off											
GRSO	Guide ring shot off											
HPA	High pressure ammo											
HUE	Hard under extractor											
ILOP	Int. latch out of position											
ILRM	Int. latch ret. Missing											
ILSB	Int. latch stud broken											
ILSP	Int. latch spring out of position											
JL	Jumps latch											
JO	Jars off											
LB	Light blow											
MCSO	Magazine cap shot off											
MCW	Magazine capacity wrong											
MFA	Misfires (ammo)											
MFOP	Magazine follower out of position											
MLH	Magazine loads hard											
OH	Opens hard											
PH	Pulls hard											
PSI	Proof stamp illegible											

PSM	Proof stamp missing											
RBOC	Rings and bulges on case											
RDW	(Action) release doesn't work											
RIC	Rings in chamber											
SBC	Stems bottom chambers											
SBCL	Shell binds carrier latch											
SBE	Stems bbl extension											
SCB	Stock cracked or broken											
SCX	Shell catches											
SHI	Short indent											
SIC	Stems in chamber											
SL	shaves lead											
SLC	Stems left side of chamber											
SMOC	Stretch marks on case											
SRC	Stems right side of chamber											
SRIC	Specific rings in chamber											
SSC	shell stems carrier											
STC	Stems top chamber											
SWE	Safety switch works too easily											
SWH	Safety switch works too hard											
SWW	Safety ewitxh won't work											
TD	Tips down											
TU	Tips up											
TWP	Trigger won't pull											
TWR	Trigger won't retract											
UNCN-T	Uncoded											
XH	Extracts hard											

XHB	Extractor hits bbl												
HI	High												
LO	Low												
LEFT	Left												
RIGHT	Right												
DG	Doesn't Group												
FSST	Front sight tipped												
RSTT	Rear sight tipped												
RSBR	Rear sight base raised												
FSTR	Front sight raised												
FSTL	Front sight loose												
RSTL	Rear sight loose												
MGPT-G	Missing parts at target												
UNCN-G	Uncoded nonconformity at target												
AI-P	Assembly incomplete at proof												
BC-P	Blows cases at proof												
BEB-P	Barrel extension broken at proof												
BLP-P	Blanked primer at proof												
BP-P	Blown primer at proof												
BS-P	Barrel split at proof												
DLOS-P	Doesn't lock over shells at proof												
ESB-P	Ejector sticks back at proof												
FCB-P	Fore-end cracked at proof												
FESO-P	Fore-end shot off at proof												
FF-P	Fails to fire at proof												



[illegible][illegible]












<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

**Proof**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

**Test**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

**Target**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
AB	Action binds										
ASFB	Action spring follower binds										
BABS	Bulge at body shoulder										
BAC	Burr at chamber										
BB	Bolt binds/catches										
BCOE	Bolt catches on ejector										
BC	Blows cases										
BLOP	Bar lock or disconnecter out of position										
BSCO	Barrel support came out										
CBS-F	Shells catch on bbl support-feeding										
CBS-L	Shells catch on bbl support-loading										
CC	Carrier catches on shells,mag,receiver										
CD	Case dented										
CH	Closes hard										

CHAB	Carrier hits action bar											
CLM	Can't load magazine											
CO	Cut-off											
CR	Cuts rim											
CS	Cases swell											
CTOG	Chamber torn or gouged											
CTP	Creepy trigger pull											
CWSB	Cams wrong side of action bar											
DBB	Doesn't blow back											
DCS	Double click in safety switch											
DCT	Double click in trigger											
DCU	Doesn't close-up											
DE	Doesn't eject											
DEL	Doesn't eject live round											
DFU	Doesn't feed up											
DLO	Doesn't lock open (after last shell)											
DLU	Doesn't lock-up											
DS	Dead safe											
DSM	Drops shell-magazine											
DTL	Doesn't trip latch											
DX	Doesn't extract											
DXL	Doesn't extract live round											
EDS	Extractor drops shell											
ESB	Ejector sticks back											
ESS	Extractor stems shell											
FA	Fires automatically											
FB	Follower binds											

FC	Fails to connect											
FCB	Fore-end cracked or broken											
FD	Follows-down											
FF	Fails to fire											
FFM	Fails to feed from magazine											
FFP	Flat firing pin											
FOS	Fires on safe											
FSR	Fires when safe is released											
GCSO	Gas cyl shot off											
GRSO	Guide ring shot off											
HPA	High pressure ammo											
HUE	Hard under extractor											
ILOP	Int. latch out of position											
ILRM	Int. latch ret. Missing											
ILSB	Int. latch stud broken											
ILSP	Int. latch spring out of position											
JL	Jumps latch											
JO	Jars off											
LB	Light blow											
MCSO	Magazine cap shot off											
MCW	Magazine capacity wrong											
MFA	Misfires (ammo)											
MFOP	Magazine follower out of position											
MLH	Magazine loads hard											
OH	Opens hard											
PH	Pulls hard											
PSI	Proof stamp illegible											

PSM	Proof stamp missing											
RBOC	Rings and bulges on case											
RDW	(Action) release doesn't work											
RIC	Rings in chamber											
SBC	Stems bottom chambers											
SBCL	Shell binds carrier latch											
SBE	Stems bbl extension											
SCB	Stock cracked or broken											
SCX	Shell catches											
SHI	Short indent											
SIC	Stems in chamber											
SL	shaves lead											
SLC	Stems left side of chamber											
SMOC	Stretch marks on case											
SRC	Stems right side of chamber											
SRIC	Specific rings in chamber											
SSC	shell stems carrier											
STC	Stems top chamber											
SWE	Safety switch works too easily											
SWH	Safety switch works too hard											
SWW	Safety ewitxh won't work											
TD	Tips down											
TU	Tips up											
TWP	Trigger won't pull											
TWR	Trigger won't retract											
UNCN-T	Uncoded											
XH	Extracts hard											

XHB	Extractor hits bbl												
HI	High												
LO	Low												
LEFT	Left												
RIGHT	Right												
DG	Doesn't Group												
FSST	Front sight tipped												
RSTT	Rear sight tipped												
RSBR	Rear sight base raised												
FSTR	Front sight raised												
FSTL	Front sight loose												
RSTL	Rear sight loose												
MGPT-G	Missing parts at target												
UNCN-G	Uncoded nonconformity at target												
AI-P	Assembly incomplete at proof												
BC-P	Blows cases at proof												
BEB-P	Barrel extension broken at proof												
BLP-P	Blanked primer at proof												
BP-P	Blown primer at proof												
BS-P	Barrel split at proof												
DLOS-P	Doesn't lock over shells at proof												
ESB-P	Ejector sticks back at proof												
FCB-P	Fore-end cracked at proof												
FESO-P	Fore-end shot off at proof												
FF-P	Fails to fire at proof												





[illegible][illegible]










<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

**Proof**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

**Test**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

**Target**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
AB	Action binds										
ASFB	Action spring follower binds										
BABS	Bulge at body shoulder										
BAC	Burr at chamber										
BB	Bolt binds/catches										
BCOE	Bolt catches on ejector										
BC	Blows cases										
BLOP	Bar lock or disconnecter out of position										
BSCO	Barrel support came out										
CBS-F	Shells catch on bbl support-feeding										
CBS-L	Shells catch on bbl support-loading										
CC	Carrier catches on shells,mag,receiver										
CD	Case dented										
CH	Closes hard										

CHAB	Carrier hits action bar											
CLM	Can't load magazine											
CO	Cut-off											
CR	Cuts rim											
CS	Cases swell											
CTOG	Chamber torn or gouged											
CTP	Creepy trigger pull											
CWSB	Cams wrong side of action bar											
DBB	Doesn't blow back											
DCS	Double click in safety switch											
DCT	Double click in trigger											
DCU	Doesn't close-up											
DE	Doesn't eject											
DEL	Doesn't eject live round											
DFU	Doesn't feed up											
DLO	Doesn't lock open (after last shell)											
DLU	Doesn't lock-up											
DS	Dead safe											
DSM	Drops shell-magazine											
DTL	Doesn't trip latch											
DX	Doesn't extract											
DXL	Doesn't extract live round											
EDS	Extractor drops shell											
ESB	Ejector sticks back											
ESS	Extractor stems shell											
FA	Fires automatically											
FB	Follower binds											



FC	Fails to connect											
FCB	Fore-end cracked or broken											
FD	Follows-down											
FF	Fails to fire											
FFM	Fails to feed from magazine											
FFP	Flat firing pin											
FOS	Fires on safe											
FSR	Fires when safe is released											
GCSO	Gas cyl shot off											
GRSO	Guide ring shot off											
HPA	High pressure ammo											
HUE	Hard under extractor											
ILOP	Int. latch out of position											
ILRM	Int. latch ret. Missing											
ILSB	Int. latch stud broken											
ILSP	Int. latch spring out of position											
JL	Jumps latch											
JO	Jars off											
LB	Light blow											
MCSO	Magazine cap shot off											
MCW	Magazine capacity wrong											
MFA	Misfires (ammo)											
MFOP	Magazine follower out of position											
MLH	Magazine loads hard											
OH	Opens hard											
PH	Pulls hard											
PSI	Proof stamp illegible											

PSM	Proof stamp missing											
RBOC	Rings and bulges on case											
RDW	(Action) release doesn't work											
RIC	Rings in chamber											
SBC	Stems bottom chambers											
SBCL	Shell binds carrier latch											
SBE	Stems bbl extension											
SCB	Stock cracked or broken											
SCX	Shell catches											
SHI	Short indent											
SIC	Stems in chamber											
SL	shaves lead											
SLC	Stems left side of chamber											
SMOC	Stretch marks on case											
SRC	Stems right side of chamber											
SRIC	Specific rings in chamber											
SSC	shell stems carrier											
STC	Stems top chamber											
SWE	Safety switch works too easily											
SWH	Safety switch works too hard											
SWW	Safety ewitxh won't work											
TD	Tips down											
TU	Tips up											
TWP	Trigger won't pull											
TWR	Trigger won't retract											
UNCN-T	Uncoded											
XH	Extracts hard											

XHB	Extractor hits bbl												
HI	High												
LO	Low												
LEFT	Left												
RIGHT	Right												
DG	Doesn't Group												
FSST	Front sight tipped												
RSTT	Rear sight tipped												
RSBR	Rear sight base raised												
FSTR	Front sight raised												
FSTL	Front sight loose												
RSTL	Rear sight loose												
MGPT-G	Missing parts at target												
UNCN-G	Uncoded nonconformity at target												
AI-P	Assembly incomplete at proof												
BC-P	Blows cases at proof												
BEB-P	Barrel extension broken at proof												
BLP-P	Blanked primer at proof												
BP-P	Blown primer at proof												
BS-P	Barrel split at proof												
DLOS-P	Doesn't lock over shells at proof												
ESB-P	Ejector sticks back at proof												
FCB-P	Fore-end cracked at proof												
FESO-P	Fore-end shot off at proof												
FF-P	Fails to fire at proof												

[illegible]

[illegible][illegible]












<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

**Proof**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

**Test**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

**Target**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
AB	Action binds										
ASFB	Action spring follower binds										
BABS	Bulge at body shoulder										
BAC	Burr at chamber										
BB	Bolt binds/catches										
BCOE	Bolt catches on ejector										
BC	Blows cases										
BLOP	Bar lock or disconnecter out of position										
BSCO	Barrel support came out										
CBS-F	Shells catch on bbl support-feeding										
CBS-L	Shells catch on bbl support-loading										
CC	Carrier catches on shells,mag,receiver										
CD	Case dented										
CH	Closes hard										

CHAB	Carrier hits action bar											
CLM	Can't load magazine											
CO	Cut-off											
CR	Cuts rim											
CS	Cases swell											
CTOG	Chamber torn or gouged											
CTP	Creepy trigger pull											
CWSB	Cams wrong side of action bar											
DBB	Doesn't blow back											
DCS	Double click in safety switch											
DCT	Double click in trigger											
DCU	Doesn't close-up											
DE	Doesn't eject											
DEL	Doesn't eject live round											
DFU	Doesn't feed up											
DLO	Doesn't lock open (after last shell)											
DLU	Doesn't lock-up											
DS	Dead safe											
DSM	Drops shell-magazine											
DTL	Doesn't trip latch											
DX	Doesn't extract											
DXL	Doesn't extract live round											
EDS	Extractor drops shell											
ESB	Ejector sticks back											
ESS	Extractor stems shell											
FA	Fires automatically											
FB	Follower binds											

FC	Fails to connect											
FCB	Fore-end cracked or broken											
FD	Follows-down											
FF	Fails to fire											
FFM	Fails to feed from magazine											
FFP	Flat firing pin											
FOS	Fires on safe											
FSR	Fires when safe is released											
GCSO	Gas cyl shot off											
GRSO	Guide ring shot off											
HPA	High pressure ammo											
HUE	Hard under extractor											
ILOP	Int. latch out of position											
ILRM	Int. latch ret. Missing											
ILSB	Int. latch stud broken											
ILSP	Int. latch spring out of position											
JL	Jumps latch											
JO	Jars off											
LB	Light blow											
MCSO	Magazine cap shot off											
MCW	Magazine capacity wrong											
MFA	Misfires (ammo)											
MFOP	Magazine follower out of position											
MLH	Magazine loads hard											
OH	Opens hard											
PH	Pulls hard											
PSI	Proof stamp illegible											

PSM	Proof stamp missing											
RBOC	Rings and bulges on case											
RDW	(Action) release doesn't work											
RIC	Rings in chamber											
SBC	Stems bottom chambers											
SBCL	Shell binds carrier latch											
SBE	Stems bbl extension											
SCB	Stock cracked or broken											
SCX	Shell catches											
SHI	Short indent											
SIC	Stems in chamber											
SL	shaves lead											
SLC	Stems left side of chamber											
SMOC	Stretch marks on case											
SRC	Stems right side of chamber											
SRIC	Specific rings in chamber											
SSC	shell stems carrier											
STC	Stems top chamber											
SWE	Safety switch works too easily											
SWH	Safety switch works too hard											
SWW	Safety ewitxh won't work											
TD	Tips down											
TU	Tips up											
TWP	Trigger won't pull											
TWR	Trigger won't retract											
UNCN-T	Uncoded											
XH	Extracts hard											

XHB	Extractor hits bbl												
HI	High												
LO	Low												
LEFT	Left												
RIGHT	Right												
DG	Doesn't Group												
FSST	Front sight tipped												
RSTT	Rear sight tipped												
RSBR	Rear sight base raised												
FSTR	Front sight raised												
FSTL	Front sight loose												
RSTL	Rear sight loose												
MGPT-G	Missing parts at target												
UNCN-G	Uncoded nonconformity at target												
AI-P	Assembly incomplete at proof												
BC-P	Blows cases at proof												
BEB-P	Barrel extension broken at proof												
BLP-P	Blanked primer at proof												
BP-P	Blown primer at proof												
BS-P	Barrel split at proof												
DLOS-P	Doesn't lock over shells at proof												
ESB-P	Ejector sticks back at proof												
FCB-P	Fore-end cracked at proof												
FESO-P	Fore-end shot off at proof												
FF-P	Fails to fire at proof												





[illegible][illegible]










<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

<b>Proof</b>	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										
<b>Test</b>	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										
<b>Target</b>	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
AB	Action binds										
ASFB	Action spring follower binds										
BABS	Bulge at body shoulder										
BAC	Burr at chamber										
BB	Bolt binds/catches										
BCOE	Bolt catches on ejector										
BC	Blows cases										
BLOP	Bar lock or disconnecter out of position										
BSCO	Barrel support came out										
CBS-F	Shells catch on bbl support-feeding										
CBS-L	Shells catch on bbl support-loading										
CC	Carrier catches on shells,mag,receiver										
CD	Case dented										
CH	Closes hard										

CHAB	Carrier hits action bar											
CLM	Can't load magazine											
CO	Cut-off											
CR	Cuts rim											
CS	Cases swell											
CTOG	Chamber torn or gouged											
CTP	Creepy trigger pull											
CWSB	Cams wrong side of action bar											
DBB	Doesn't blow back											
DCS	Double click in safety switch											
DCT	Double click in trigger											
DCU	Doesn't close-up											
DE	Doesn't eject											
DEL	Doesn't eject live round											
DFU	Doesn't feed up											
DLO	Doesn't lock open (after last shell)											
DLU	Doesn't lock-up											
DS	Dead safe											
DSM	Drops shell-magazine											
DTL	Doesn't trip latch											
DX	Doesn't extract											
DXL	Doesn't extract live round											
EDS	Extractor drops shell											
ESB	Ejector sticks back											
ESS	Extractor stems shell											
FA	Fires automatically											
FB	Follower binds											



FC	Fails to connect												
FCB	Fore-end cracked or broken												
FD	Follows-down												
FF	Fails to fire												
FFM	Fails to feed from magazine												
FFP	Flat firing pin												
FOS	Fires on safe												
FSR	Fires when safe is released												
GCSO	Gas cyl shot off												
GRSO	Guide ring shot off												
HPA	High pressure ammo												
HUE	Hard under extractor												
ILOP	Int. latch out of position												
ILRM	Int. latch ret. Missing												
ILSB	Int. latch stud broken												
ILSP	Int. latch spring out of position												
JL	Jumps latch												
JO	Jars off												
LB	Light blow												
MCSO	Magazine cap shot off												
MCW	Magazine capacity wrong												
MFA	Misfires (ammo)												
MFOP	Magazine follower out of position												
MLH	Magazine loads hard												
OH	Opens hard												
PH	Pulls hard												
PSI	Proof stamp illegible												

PSM	Proof stamp missing											
RBOC	Rings and bulges on case											
RDW	(Action) release doesn't work											
RIC	Rings in chamber											
SBC	Stems bottom chambers											
SBCL	Shell binds carrier latch											
SBE	Stems bbl extension											
SCB	Stock cracked or broken											
SCX	Shell catches											
SHI	Short indent											
SIC	Stems in chamber											
SL	shaves lead											
SLC	Stems left side of chamber											
SMOC	Stretch marks on case											
SRC	Stems right side of chamber											
SRIC	Specific rings in chamber											
SSC	shell stems carrier											
STC	Stems top chamber											
SWE	Safety switch works too easily											
SWH	Safety switch works too hard											
SWW	Safety ewitxh won't work											
TD	Tips down											
TU	Tips up											
TWP	Trigger won't pull											
TWR	Trigger won't retract											
UNCN-T	Uncoded											
XH	Extracts hard											

XHB	Extractor hits bbl												
HI	High												
LO	Low												
LEFT	Left												
RIGHT	Right												
DG	Doesn't Group												
FSST	Front sight tipped												
RSTT	Rear sight tipped												
RSBR	Rear sight base raised												
FSTR	Front sight raised												
FSTL	Front sight loose												
RSTL	Rear sight loose												
MGPT-G	Missing parts at target												
UNCN-G	Uncoded nonconformity at target												
AI-P	Assembly incomplete at proof												
BC-P	Blows cases at proof												
BEB-P	Barrel extension broken at proof												
BLP-P	Blanked primer at proof												
BP-P	Blown primer at proof												
BS-P	Barrel split at proof												
DLOS-P	Doesn't lock over shells at proof												
ESB-P	Ejector sticks back at proof												
FCB-P	Fore-end cracked at proof												
FESO-P	Fore-end shot off at proof												
FF-P	Fails to fire at proof												

GCSO-P	Gas cylinder shot off at proof
CPSO-P	Guide ring shot off at proof
MCSO-P	Magazine cap shot off at proof
MSI-P	Magnaflex stamp illegible or bbl
MSM-P	Magniflux stamp missing or bbl
PP-P	Pierced primer at proof
SCB-P	Stock cracked or broken at proof
UNCM-P	Uncoded proof malfunctions

<b><i>Test Date:</i></b>					
0	0	0	0	0	0
0	0	0	0	0	0
0	0	0	0	0	0

[illegible]












<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

<b>Proof</b>	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										
<b>Test</b>	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										
<b>Target</b>	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
AB	Action binds										
ASFB	Action spring follower binds										
BABS	Bulge at body shoulder										
BAC	Burr at chamber										
BB	Bolt binds/catches										
BCOE	Bolt catches on ejector										
BC	Blows cases										
BLOP	Bar lock or disconnecter out of position										
BSCO	Barrel support came out										
CBS-F	Shells catch on bbl support-feeding										
CBS-L	Shells catch on bbl support-loading										
CC	Carrier catches on shells,mag,receiver										
CD	Case dented										
CH	Closes hard										

CHAB	Carrier hits action bar											
CLM	Can't load magazine											
CO	Cut-off											
CR	Cuts rim											
CS	Cases swell											
CTOG	Chamber torn or gouged											
CTP	Creepy trigger pull											
CWSB	Cams wrong side of action bar											
DBB	Doesn't blow back											
DCS	Double click in safety switch											
DCT	Double click in trigger											
DCU	Doesn't close-up											
DE	Doesn't eject											
DEL	Doesn't eject live round											
DFU	Doesn't feed up											
DLO	Doesn't lock open (after last shell)											
DLU	Doesn't lock-up											
DS	Dead safe											
DSM	Drops shell-magazine											
DTL	Doesn't trip latch											
DX	Doesn't extract											
DXL	Doesn't extract live round											
EDS	Extractor drops shell											
ESB	Ejector sticks back											
ESS	Extractor stems shell											
FA	Fires automatically											
FB	Follower binds											

FC	Fails to connect											
FCB	Fore-end cracked or broken											
FD	Follows-down											
FF	Fails to fire											
FFM	Fails to feed from magazine											
FFP	Flat firing pin											
FOS	Fires on safe											
FSR	Fires when safe is released											
GCSO	Gas cyl shot off											
GRSO	Guide ring shot off											
HPA	High pressure ammo											
HUE	Hard under extractor											
ILOP	Int. latch out of position											
ILRM	Int. latch ret. Missing											
ILSB	Int. latch stud broken											
ILSP	Int. latch spring out of position											
JL	Jumps latch											
JO	Jars off											
LB	Light blow											
MCSO	Magazine cap shot off											
MCW	Magazine capacity wrong											
MFA	Misfires (ammo)											
MFOP	Magazine follower out of position											
MLH	Magazine loads hard											
OH	Opens hard											
PH	Pulls hard											
PSI	Proof stamp illegible											

PSM	Proof stamp missing											
RBOC	Rings and bulges on case											
RDW	(Action) release doesn't work											
RIC	Rings in chamber											
SBC	Stems bottom chambers											
SBCL	Shell binds carrier latch											
SBE	Stems bbl extension											
SCB	Stock cracked or broken											
SCX	Shell catches											
SHI	Short indent											
SIC	Stems in chamber											
SL	shaves lead											
SLC	Stems left side of chamber											
SMOC	Stretch marks on case											
SRC	Stems right side of chamber											
SRIC	Specific rings in chamber											
SSC	shell stems carrier											
STC	Stems top chamber											
SWE	Safety switch works too easily											
SWH	Safety switch works too hard											
SWW	Safety ewitxh won't work											
TD	Tips down											
TU	Tips up											
TWP	Trigger won't pull											
TWR	Trigger won't retract											
UNCN-T	Uncoded											
XH	Extracts hard											

XHB	Extractor hits bbl												
HI	High												
LO	Low												
LEFT	Left												
RIGHT	Right												
DG	Doesn't Group												
FSST	Front sight tipped												
RSTT	Rear sight tipped												
RSBR	Rear sight base raised												
FSTR	Front sight raised												
FSTL	Front sight loose												
RSTL	Rear sight loose												
MGPT-G	Missing parts at target												
UNCN-G	Uncoded nonconformity at target												
AI-P	Assembly incomplete at proof												
BC-P	Blows cases at proof												
BEB-P	Barrel extension broken at proof												
BLP-P	Blanked primer at proof												
BP-P	Blown primer at proof												
BS-P	Barrel split at proof												
DLOS-P	Doesn't lock over shells at proof												
ESB-P	Ejector sticks back at proof												
FCB-P	Fore-end cracked at proof												
FESO-P	Fore-end shot off at proof												
FF-P	Fails to fire at proof												

[illegible]



[illegible][illegible]










<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

**Proof**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

**Test**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

**Target**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
AB	Action binds										
ASFB	Action spring follower binds										
BABS	Bulge at body shoulder										
BAC	Burr at chamber										
BB	Bolt binds/catches										
BCOE	Bolt catches on ejector										
BC	Blows cases										
BLOP	Bar lock or disconnecter out of position										
BSCO	Barrel support came out										
CBS-F	Shells catch on bbl support-feeding										
CBS-L	Shells catch on bbl support-loading										
CC	Carrier catches on shells,mag,receiver										
CD	Case dented										
CH	Closes hard										

CHAB	Carrier hits action bar											
CLM	Can't load magazine											
CO	Cut-off											
CR	Cuts rim											
CS	Cases swell											
CTOG	Chamber torn or gouged											
CTP	Creepy trigger pull											
CWSB	Cams wrong side of action bar											
DBB	Doesn't blow back											
DCS	Double click in safety switch											
DCT	Double click in trigger											
DCU	Doesn't close-up											
DE	Doesn't eject											
DEL	Doesn't eject live round											
DFU	Doesn't feed up											
DLO	Doesn't lock open (after last shell)											
DLU	Doesn't lock-up											
DS	Dead safe											
DSM	Drops shell-magazine											
DTL	Doesn't trip latch											
DX	Doesn't extract											
DXL	Doesn't extract live round											
EDS	Extractor drops shell											
ESB	Ejector sticks back											
ESS	Extractor stems shell											
FA	Fires automatically											
FB	Follower binds											



FC	Fails to connect											
FCB	Fore-end cracked or broken											
FD	Follows-down											
FF	Fails to fire											
FFM	Fails to feed from magazine											
FFP	Flat firing pin											
FOS	Fires on safe											
FSR	Fires when safe is released											
GCSO	Gas cyl shot off											
GRSO	Guide ring shot off											
HPA	High pressure ammo											
HUE	Hard under extractor											
ILOP	Int. latch out of position											
ILRM	Int. latch ret. Missing											
ILSB	Int. latch stud broken											
ILSP	Int. latch spring out of position											
JL	Jumps latch											
JO	Jars off											
LB	Light blow											
MCSO	Magazine cap shot off											
MCW	Magazine capacity wrong											
MFA	Misfires (ammo)											
MFOP	Magazine follower out of position											
MLH	Magazine loads hard											
OH	Opens hard											
PH	Pulls hard											
PSI	Proof stamp illegible											

PSM	Proof stamp missing											
RBOC	Rings and bulges on case											
RDW	(Action) release doesn't work											
RIC	Rings in chamber											
SBC	Stems bottom chambers											
SBCL	Shell binds carrier latch											
SBE	Stems bbl extension											
SCB	Stock cracked or broken											
SCX	Shell catches											
SHI	Short indent											
SIC	Stems in chamber											
SL	shaves lead											
SLC	Stems left side of chamber											
SMOC	Stretch marks on case											
SRC	Stems right side of chamber											
SRIC	Specific rings in chamber											
SSC	shell stems carrier											
STC	Stems top chamber											
SWE	Safety switch works too easily											
SWH	Safety switch works too hard											
SWW	Safety ewitxh won't work											
TD	Tips down											
TU	Tips up											
TWP	Trigger won't pull											
TWR	Trigger won't retract											
UNCN-T	Uncoded											
XH	Extracts hard											

XHB	Extractor hits bbl												
HI	High												
LO	Low												
LEFT	Left												
RIGHT	Right												
DG	Doesn't Group												
FSST	Front sight tipped												
RSTT	Rear sight tipped												
RSBR	Rear sight base raised												
FSTR	Front sight raised												
FSTL	Front sight loose												
RSTL	Rear sight loose												
MGPT-G	Missing parts at target												
UNCN-G	Uncoded nonconformity at target												
AI-P	Assembly incomplete at proof												
BC-P	Blows cases at proof												
BEB-P	Barrel extension broken at proof												
BLP-P	Blanked primer at proof												
BP-P	Blown primer at proof												
BS-P	Barrel split at proof												
DLOS-P	Doesn't lock over shells at proof												
ESB-P	Ejector sticks back at proof												
FCB-P	Fore-end cracked at proof												
FESO-P	Fore-end shot off at proof												
FF-P	Fails to fire at proof												

GCSO-P	Gas cylinder shot off at proof
GRSO-P	Guide ring shot off at proof
MCSO-P	Magazine cap shot off at proof
MSI-P	Magnaflex stamp illegible or bbl
MSM-P	Magniflux stamp missing or bbl
PP-P	Pierced primer at proof
SCB-P	Stock cracked or broken at proof
UNCM-P	Uncoded proof malfunctions

<b><i>Test Date:</i></b>					
0	0	0	0	0	0
0	0	0	0	0	0
0	0	0	0	0	0

[illegible]












<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

**Proof**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

**Test**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

**Target**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
AB	Action binds										
ASFB	Action spring follower binds										
BABS	Bulge at body shoulder										
BAC	Burr at chamber										
BB	Bolt binds/catches										
BCOE	Bolt catches on ejector										
BC	Blows cases										
BLOP	Bar lock or disconnecter out of position										
BSCO	Barrel support came out										
CBS-F	Shells catch on bbl support-feeding										
CBS-L	Shells catch on bbl support-loading										
CC	Carrier catches on shells,mag,receiver										
CD	Case dented										
CH	Closes hard										

CHAB	Carrier hits action bar											
CLM	Can't load magazine											
CO	Cut-off											
CR	Cuts rim											
CS	Cases swell											
CTOG	Chamber torn or gouged											
CTP	Creepy trigger pull											
CWSB	Cams wrong side of action bar											
DBB	Doesn't blow back											
DCS	Double click in safety switch											
DCT	Double click in trigger											
DCU	Doesn't close-up											
DE	Doesn't eject											
DEL	Doesn't eject live round											
DFU	Doesn't feed up											
DLO	Doesn't lock open (after last shell)											
DLU	Doesn't lock-up											
DS	Dead safe											
DSM	Drops shell-magazine											
DTL	Doesn't trip latch											
DX	Doesn't extract											
DXL	Doesn't extract live round											
EDS	Extractor drops shell											
ESB	Ejector sticks back											
ESS	Extractor stems shell											
FA	Fires automatically											
FB	Follower binds											

FC	Fails to connect											
FCB	Fore-end cracked or broken											
FD	Follows-down											
FF	Fails to fire											
FFM	Fails to feed from magazine											
FFP	Flat firing pin											
FOS	Fires on safe											
FSR	Fires when safe is released											
GCSO	Gas cyl shot off											
GRSO	Guide ring shot off											
HPA	High pressure ammo											
HUE	Hard under extractor											
ILOP	Int. latch out of position											
ILRM	Int. latch ret. Missing											
ILSB	Int. latch stud broken											
ILSP	Int. latch spring out of position											
JL	Jumps latch											
JO	Jars off											
LB	Light blow											
MCSO	Magazine cap shot off											
MCW	Magazine capacity wrong											
MFA	Misfires (ammo)											
MFOP	Magazine follower out of position											
MLH	Magazine loads hard											
OH	Opens hard											
PH	Pulls hard											
PSI	Proof stamp illegible											

PSM	Proof stamp missing											
RBOC	Rings and bulges on case											
RDW	(Action) release doesn't work											
RIC	Rings in chamber											
SBC	Stems bottom chambers											
SBCL	Shell binds carrier latch											
SBE	Stems bbl extension											
SCB	Stock cracked or broken											
SCX	Shell catches											
SHI	Short indent											
SIC	Stems in chamber											
SL	shaves lead											
SLC	Stems left side of chamber											
SMOC	Stretch marks on case											
SRC	Stems right side of chamber											
SRIC	Specific rings in chamber											
SSC	shell stems carrier											
STC	Stems top chamber											
SWE	Safety switch works too easily											
SWH	Safety switch works too hard											
SWW	Safety ewitxh won't work											
TD	Tips down											
TU	Tips up											
TWP	Trigger won't pull											
TWR	Trigger won't retract											
UNCN-T	Uncoded											
XH	Extracts hard											

XHB	Extractor hits bbl												
HI	High												
LO	Low												
LEFT	Left												
RIGHT	Right												
DG	Doesn't Group												
FSST	Front sight tipped												
RSTT	Rear sight tipped												
RSBR	Rear sight base raised												
FSTR	Front sight raised												
FSTL	Front sight loose												
RSTL	Rear sight loose												
MGPT-G	Missing parts at target												
UNCN-G	Uncoded nonconformity at target												
AI-P	Assembly incomplete at proof												
BC-P	Blows cases at proof												
BEB-P	Barrel extension broken at proof												
BLP-P	Blanked primer at proof												
BP-P	Blown primer at proof												
BS-P	Barrel split at proof												
DLOS-P	Doesn't lock over shells at proof												
ESB-P	Ejector sticks back at proof												
FCB-P	Fore-end cracked at proof												
FESO-P	Fore-end shot off at proof												
FF-P	Fails to fire at proof												





[illegible][illegible]










<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

<b>Proof</b>	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										
<b>Test</b>	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										
<b>Target</b>	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
AB	Action binds										
ASFB	Action spring follower binds										
BABS	Bulge at body shoulder										
BAC	Burr at chamber										
BB	Bolt binds/catches										
BCOE	Bolt catches on ejector										
BC	Blows cases										
BLOP	Bar lock or disconnecter out of position										
BSCO	Barrel support came out										
CBS-F	Shells catch on bbl support-feeding										
CBS-L	Shells catch on bbl support-loading										
CC	Carrier catches on shells,mag,receiver										
CD	Case dented										
CH	Closes hard										

CHAB	Carrier hits action bar											
CLM	Can't load magazine											
CO	Cut-off											
CR	Cuts rim											
CS	Cases swell											
CTOG	Chamber torn or gouged											
CTP	Creepy trigger pull											
CWSB	Cams wrong side of action bar											
DBB	Doesn't blow back											
DCS	Double click in safety switch											
DCT	Double click in trigger											
DCU	Doesn't close-up											
DE	Doesn't eject											
DEL	Doesn't eject live round											
DFU	Doesn't feed up											
DLO	Doesn't lock open (after last shell)											
DLU	Doesn't lock-up											
DS	Dead safe											
DSM	Drops shell-magazine											
DTL	Doesn't trip latch											
DX	Doesn't extract											
DXL	Doesn't extract live round											
EDS	Extractor drops shell											
ESB	Ejector sticks back											
ESS	Extractor stems shell											
FA	Fires automatically											
FB	Follower binds											



FC	Fails to connect											
FCB	Fore-end cracked or broken											
FD	Follows-down											
FF	Fails to fire											
FFM	Fails to feed from magazine											
FFP	Flat firing pin											
FOS	Fires on safe											
FSR	Fires when safe is released											
GCSO	Gas cyl shot off											
GRSO	Guide ring shot off											
HPA	High pressure ammo											
HUE	Hard under extractor											
ILOP	Int. latch out of position											
ILRM	Int. latch ret. Missing											
ILSB	Int. latch stud broken											
ILSP	Int. latch spring out of position											
JL	Jumps latch											
JO	Jars off											
LB	Light blow											
MCSO	Magazine cap shot off											
MCW	Magazine capacity wrong											
MFA	Misfires (ammo)											
MFOP	Magazine follower out of position											
MLH	Magazine loads hard											
OH	Opens hard											
PH	Pulls hard											
PSI	Proof stamp illegible											

PSM	Proof stamp missing											
RBOC	Rings and bulges on case											
RDW	(Action) release doesn't work											
RIC	Rings in chamber											
SBC	Stems bottom chambers											
SBCL	Shell binds carrier latch											
SBE	Stems bbl extension											
SCB	Stock cracked or broken											
SCX	Shell catches											
SHI	Short indent											
SIC	Stems in chamber											
SL	shaves lead											
SLC	Stems left side of chamber											
SMOC	Stretch marks on case											
SRC	Stems right side of chamber											
SRIC	Specific rings in chamber											
SSC	shell stems carrier											
STC	Stems top chamber											
SWE	Safety switch works too easily											
SWH	Safety switch works too hard											
SWW	Safety ewitxh won't work											
TD	Tips down											
TU	Tips up											
TWP	Trigger won't pull											
TWR	Trigger won't retract											
UNCN-T	Uncoded											
XH	Extracts hard											

XHB	Extractor hits bbl												
HI	High												
LO	Low												
LEFT	Left												
RIGHT	Right												
DG	Doesn't Group												
FSST	Front sight tipped												
RSTT	Rear sight tipped												
RSBR	Rear sight base raised												
FSTR	Front sight raised												
FSTL	Front sight loose												
RSTL	Rear sight loose												
MGPT-G	Missing parts at target												
UNCN-G	Uncoded nonconformity at target												
AI-P	Assembly incomplete at proof												
BC-P	Blows cases at proof												
BEB-P	Barrel extension broken at proof												
BLP-P	Blanked primer at proof												
BP-P	Blown primer at proof												
BS-P	Barrel split at proof												
DLOS-P	Doesn't lock over shells at proof												
ESB-P	Ejector sticks back at proof												
FCB-P	Fore-end cracked at proof												
FESO-P	Fore-end shot off at proof												
FF-P	Fails to fire at proof												



Test Date:					
0	0	0	0	0	0
0	0	0	0	0	0
0	0	0	0	0	0
0	0	0	0	0	0

[illegible]












<b>Summary</b>	Total Test + Proof Failures	0
	Total Rejected:	0
	Overall Reject Rate:	

**Proof**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

**Test**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

**Target**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
AB	Action binds										
ASFB	Action spring follower binds										
BABS	Bulge at body shoulder										
BAC	Burr at chamber										
BB	Bolt binds/catches										
BCOE	Bolt catches on ejector										
BC	Blows cases										
BLOP	Bar lock or disconnecter out of position										
BSCO	Barrel support came out										
CBS-F	Shells catch on bbl support-feeding										
CBS-L	Shells catch on bbl support-loading										
CC	Carrier catches on shells,mag,receiver										
CD	Case dented										
CH	Closes hard										

CHAB	Carrier hits action bar											
CLM	Can't load magazine											
CO	Cut-off											
CR	Cuts rim											
CS	Cases swell											
CTOG	Chamber torn or gouged											
CTP	Creepy trigger pull											
CWSB	Cams wrong side of action bar											
DBB	Doesn't blow back											
DCS	Double click in safety switch											
DCT	Double click in trigger											
DCU	Doesn't close-up											
DE	Doesn't eject											
DEL	Doesn't eject live round											
DFU	Doesn't feed up											
DLO	Doesn't lock open (after last shell)											
DLU	Doesn't lock-up											
DS	Dead safe											
DSM	Drops shell-magazine											
DTL	Doesn't trip latch											
DX	Doesn't extract											
DXL	Doesn't extract live round											
EDS	Extractor drops shell											
ESB	Ejector sticks back											
ESS	Extractor stems shell											
FA	Fires automatically											
FB	Follower binds											

FC	Fails to connect											
FCB	Fore-end cracked or broken											
FD	Follows-down											
FF	Fails to fire											
FFM	Fails to feed from magazine											
FFP	Flat firing pin											
FOS	Fires on safe											
FSR	Fires when safe is released											
GCSO	Gas cyl shot off											
GRSO	Guide ring shot off											
HPA	High pressure ammo											
HUE	Hard under extractor											
ILOP	Int. latch out of position											
ILRM	Int. latch ret. Missing											
ILSB	Int. latch stud broken											
ILSP	Int. latch spring out of position											
JL	Jumps latch											
JO	Jars off											
LB	Light blow											
MCSO	Magazine cap shot off											
MCW	Magazine capacity wrong											
MFA	Misfires (ammo)											
MFOP	Magazine follower out of position											
MLH	Magazine loads hard											
OH	Opens hard											
PH	Pulls hard											
PSI	Proof stamp illegible											

PSM	Proof stamp missing											
RBOC	Rings and bulges on case											
RDW	(Action) release doesn't work											
RIC	Rings in chamber											
SBC	Stems bottom chambers											
SBCL	Shell binds carrier latch											
SBE	Stems bbl extension											
SCB	Stock cracked or broken											
SCX	Shell catches											
SHI	Short indent											
SIC	Stems in chamber											
SL	shaves lead											
SLC	Stems left side of chamber											
SMOC	Stretch marks on case											
SRC	Stems right side of chamber											
SRIC	Specific rings in chamber											
SSC	shell stems carrier											
STC	Stems top chamber											
SWE	Safety switch works too easily											
SWH	Safety switch works too hard											
SWW	Safety ewitxh won't work											
TD	Tips down											
TU	Tips up											
TWP	Trigger won't pull											
TWR	Trigger won't retract											
UNCN-T	Uncoded											
XH	Extracts hard											

XHB	Extractor hits bbl												
HI	High												
LO	Low												
LEFT	Left												
RIGHT	Right												
DG	Doesn't Group												
FSST	Front sight tipped												
RSTT	Rear sight tipped												
RSBR	Rear sight base raised												
FSTR	Front sight raised												
FSTL	Front sight loose												
RSTL	Rear sight loose												
MGPT-G	Missing parts at target												
UNCN-G	Uncoded nonconformity at target												
AI-P	Assembly incomplete at proof												
BC-P	Blows cases at proof												
BEB-P	Barrel extension broken at proof												
BLP-P	Blanked primer at proof												
BP-P	Blown primer at proof												
BS-P	Barrel split at proof												
DLOS-P	Doesn't lock over shells at proof												
ESB-P	Ejector sticks back at proof												
FCB-P	Fore-end cracked at proof												
FESO-P	Fore-end shot off at proof												
FF-P	Fails to fire at proof												





<b><i>Test Date:</i></b>					
0	0	0	0	0	0
0	0	0	0	0	0
0	0	0	0	0	0

[illegible]










<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

<b>Proof</b>	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										
<b>Test</b>	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										
<b>Target</b>	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
AB	Action binds										
ASFB	Action spring follower binds										
BABS	Bulge at body shoulder										
BAC	Burr at chamber										
BB	Bolt binds/catches										
BCOE	Bolt catches on ejector										
BC	Blows cases										
BLOP	Bar lock or disconnecter out of position										
BSCO	Barrel support came out										
CBS-F	Shells catch on bbl support-feeding										
CBS-L	Shells catch on bbl support-loading										
CC	Carrier catches on shells,mag,receiver										
CD	Case dented										
CH	Closes hard										

CHAB	Carrier hits action bar											
CLM	Can't load magazine											
CO	Cut-off											
CR	Cuts rim											
CS	Cases swell											
CTOG	Chamber torn or gouged											
CTP	Creepy trigger pull											
CWSB	Cams wrong side of action bar											
DBB	Doesn't blow back											
DCS	Double click in safety switch											
DCT	Double click in trigger											
DCU	Doesn't close-up											
DE	Doesn't eject											
DEL	Doesn't eject live round											
DFU	Doesn't feed up											
DLO	Doesn't lock open (after last shell)											
DLU	Doesn't lock-up											
DS	Dead safe											
DSM	Drops shell-magazine											
DTL	Doesn't trip latch											
DX	Doesn't extract											
DXL	Doesn't extract live round											
EDS	Extractor drops shell											
ESB	Ejector sticks back											
ESS	Extractor stems shell											
FA	Fires automatically											
FB	Follower binds											



FC	Fails to connect											
FCB	Fore-end cracked or broken											
FD	Follows-down											
FF	Fails to fire											
FFM	Fails to feed from magazine											
FFP	Flat firing pin											
FOS	Fires on safe											
FSR	Fires when safe is released											
GCSO	Gas cyl shot off											
GRSO	Guide ring shot off											
HPA	High pressure ammo											
HUE	Hard under extractor											
ILOP	Int. latch out of position											
ILRM	Int. latch ret. Missing											
ILSB	Int. latch stud broken											
ILSP	Int. latch spring out of position											
JL	Jumps latch											
JO	Jars off											
LB	Light blow											
MCSO	Magazine cap shot off											
MCW	Magazine capacity wrong											
MFA	Misfires (ammo)											
MFOP	Magazine follower out of position											
MLH	Magazine loads hard											
OH	Opens hard											
PH	Pulls hard											
PSI	Proof stamp illegible											

PSM	Proof stamp missing											
RBOC	Rings and bulges on case											
RDW	(Action) release doesn't work											
RIC	Rings in chamber											
SBC	Stems bottom chambers											
SBCL	Shell binds carrier latch											
SBE	Stems bbl extension											
SCB	Stock cracked or broken											
SCX	Shell catches											
SHI	Short indent											
SIC	Stems in chamber											
SL	shaves lead											
SLC	Stems left side of chamber											
SMOC	Stretch marks on case											
SRC	Stems right side of chamber											
SRIC	Specific rings in chamber											
SSC	shell stems carrier											
STC	Stems top chamber											
SWE	Safety switch works too easily											
SWH	Safety switch works too hard											
SWW	Safety ewitxh won't work											
TD	Tips down											
TU	Tips up											
TWP	Trigger won't pull											
TWR	Trigger won't retract											
UNCN-T	Uncoded											
XH	Extracts hard											

XHB	Extractor hits bbl												
HI	High												
LO	Low												
LEFT	Left												
RIGHT	Right												
DG	Doesn't Group												
FSST	Front sight tipped												
RSTT	Rear sight tipped												
RSBR	Rear sight base raised												
FSTR	Front sight raised												
FSTL	Front sight loose												
RSTL	Rear sight loose												
MGPT-G	Missing parts at target												
UNCN-G	Uncoded nonconformity at target												
AI-P	Assembly incomplete at proof												
BC-P	Blows cases at proof												
BEB-P	Barrel extension broken at proof												
BLP-P	Blanked primer at proof												
BP-P	Blown primer at proof												
BS-P	Barrel split at proof												
DLOS-P	Doesn't lock over shells at proof												
ESB-P	Ejector sticks back at proof												
FCB-P	Fore-end cracked at proof												
FESO-P	Fore-end shot off at proof												
FF-P	Fails to fire at proof												



[illegible][illegible]











CONFIDENTIAL


<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

**Proof**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

**Test**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

**Target**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
AB	Action binds										
ASFB	Action spring follower binds										
BABS	Bulge at body shoulder										
BAC	Burr at chamber										
BB	Bolt binds/catches										
BCOE	Bolt catches on ejector										
BC	Blows cases										
BLOP	Bar lock or disconnecter out of position										
BSCO	Barrel support came out										
CBS-F	Shells catch on bbl support-feeding										
CBS-L	Shells catch on bbl support-loading										
CC	Carrier catches on shells,mag,receiver										
CD	Case dented										
CH	Closes hard										

CHAB	Carrier hits action bar											
CLM	Can't load magazine											
CO	Cut-off											
CR	Cuts rim											
CS	Cases swell											
CTOG	Chamber torn or gouged											
CTP	Creepy trigger pull											
CWSB	Cams wrong side of action bar											
DBB	Doesn't blow back											
DCS	Double click in safety switch											
DCT	Double click in trigger											
DCU	Doesn't close-up											
DE	Doesn't eject											
DEL	Doesn't eject live round											
DFU	Doesn't feed up											
DLO	Doesn't lock open (after last shell)											
DLU	Doesn't lock-up											
DS	Dead safe											
DSM	Drops shell-magazine											
DTL	Doesn't trip latch											
DX	Doesn't extract											
DXL	Doesn't extract live round											
EDS	Extractor drops shell											
ESB	Ejector sticks back											
ESS	Extractor stems shell											
FA	Fires automatically											
FB	Follower binds											

FC	Fails to connect											
FCB	Fore-end cracked or broken											
FD	Follows-down											
FF	Fails to fire											
FFM	Fails to feed from magazine											
FFP	Flat firing pin											
FOS	Fires on safe											
FSR	Fires when safe is released											
GCSO	Gas cyl shot off											
GRSO	Guide ring shot off											
HPA	High pressure ammo											
HUE	Hard under extractor											
ILOP	Int. latch out of position											
ILRM	Int. latch ret. Missing											
ILSB	Int. latch stud broken											
ILSP	Int. latch spring out of position											
JL	Jumps latch											
JO	Jars off											
LB	Light blow											
MCSO	Magazine cap shot off											
MCW	Magazine capacity wrong											
MFA	Misfires (ammo)											
MFOP	Magazine follower out of position											
MLH	Magazine loads hard											
OH	Opens hard											
PH	Pulls hard											
PSI	Proof stamp illegible											

PSM	Proof stamp missing											
RBOC	Rings and bulges on case											
RDW	(Action) release doesn't work											
RIC	Rings in chamber											
SBC	Stems bottom chambers											
SBCL	Shell binds carrier latch											
SBE	Stems bbl extension											
SCB	Stock cracked or broken											
SCX	Shell catches											
SHI	Short indent											
SIC	Stems in chamber											
SL	shaves lead											
SLC	Stems left side of chamber											
SMOC	Stretch marks on case											
SRC	Stems right side of chamber											
SRIC	Specific rings in chamber											
SSC	shell stems carrier											
STC	Stems top chamber											
SWE	Safety switch works too easily											
SWH	Safety switch works too hard											
SWW	Safety ewitxh won't work											
TD	Tips down											
TU	Tips up											
TWP	Trigger won't pull											
TWR	Trigger won't retract											
UNCN-T	Uncoded											
XH	Extracts hard											

XHB	Extractor hits bbl												
HI	High												
LO	Low												
LEFT	Left												
RIGHT	Right												
DG	Doesn't Group												
FSST	Front sight tipped												
RSTT	Rear sight tipped												
RSBR	Rear sight base raised												
FSTR	Front sight raised												
FSTL	Front sight loose												
RSTL	Rear sight loose												
MGPT-G	Missing parts at target												
UNCN-G	Uncoded nonconformity at target												
AI-P	Assembly incomplete at proof												
BC-P	Blows cases at proof												
BEB-P	Barrel extension broken at proof												
BLP-P	Blanked primer at proof												
BP-P	Blown primer at proof												
BS-P	Barrel split at proof												
DLOS-P	Doesn't lock over shells at proof												
ESB-P	Ejector sticks back at proof												
FCB-P	Fore-end cracked at proof												
FESO-P	Fore-end shot off at proof												
FF-P	Fails to fire at proof												





[illegible][illegible]










<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

<b>Proof</b>	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										
<b>Test</b>	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										
<b>Target</b>	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
AB	Action binds										
ASFB	Action spring follower binds										
BABS	Bulge at body shoulder										
BAC	Burr at chamber										
BB	Bolt binds/catches										
BCOE	Bolt catches on ejector										
BC	Blows cases										
BLOP	Bar lock or disconnecter out of position										
BSCO	Barrel support came out										
CBS-F	Shells catch on bbl support-feeding										
CBS-L	Shells catch on bbl support-loading										
CC	Carrier catches on shells,mag,receiver										
CD	Case dented										
CH	Closes hard										

CHAB	Carrier hits action bar											
CLM	Can't load magazine											
CO	Cut-off											
CR	Cuts rim											
CS	Cases swell											
CTOG	Chamber torn or gouged											
CTP	Creepy trigger pull											
CWSB	Cams wrong side of action bar											
DBB	Doesn't blow back											
DCS	Double click in safety switch											
DCT	Double click in trigger											
DCU	Doesn't close-up											
DE	Doesn't eject											
DEL	Doesn't eject live round											
DFU	Doesn't feed up											
DLO	Doesn't lock open (after last shell)											
DLU	Doesn't lock-up											
DS	Dead safe											
DSM	Drops shell-magazine											
DTL	Doesn't trip latch											
DX	Doesn't extract											
DXL	Doesn't extract live round											
EDS	Extractor drops shell											
ESB	Ejector sticks back											
ESS	Extractor stems shell											
FA	Fires automatically											
FB	Follower binds											





PSM	Proof stamp missing											
RBOC	Rings and bulges on case											
RDW	(Action) release doesn't work											
RIC	Rings in chamber											
SBC	Stems bottom chambers											
SBCL	Shell binds carrier latch											
SBE	Stems bbl extension											
SCB	Stock cracked or broken											
SCX	Shell catches											
SHI	Short indent											
SIC	Stems in chamber											
SL	shaves lead											
SLC	Stems left side of chamber											
SMOC	Stretch marks on case											
SRC	Stems right side of chamber											
SRIC	Specific rings in chamber											
SSC	shell stems carrier											
STC	Stems top chamber											
SWE	Safety switch works too easily											
SWH	Safety switch works too hard											
SWW	Safety ewitxh won't work											
TD	Tips down											
TU	Tips up											
TWP	Trigger won't pull											
TWR	Trigger won't retract											
UNCN-T	Uncoded											
XH	Extracts hard											

XHB	Extractor hits bbl												
HI	High												
LO	Low												
LEFT	Left												
RIGHT	Right												
DG	Doesn't Group												
FSST	Front sight tipped												
RSTT	Rear sight tipped												
RSBR	Rear sight base raised												
FSTR	Front sight raised												
FSTL	Front sight loose												
RSTL	Rear sight loose												
MGPT-G	Missing parts at target												
UNCN-G	Uncoded nonconformity at target												
AI-P	Assembly incomplete at proof												
BC-P	Blows cases at proof												
BEB-P	Barrel extension broken at proof												
BLP-P	Blanked primer at proof												
BP-P	Blown primer at proof												
BS-P	Barrel split at proof												
DLOS-P	Doesn't lock over shells at proof												
ESB-P	Ejector sticks back at proof												
FCB-P	Fore-end cracked at proof												
FESO-P	Fore-end shot off at proof												
FF-P	Fails to fire at proof												



[illegible][illegible]











CONFIDENTIAL


<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

**Proof**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

**Test**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

**Target**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
AB	Action binds										
ASFB	Action spring follower binds										
BABS	Bulge at body shoulder										
BAC	Burr at chamber										
BB	Bolt binds/catches										
BCOE	Bolt catches on ejector										
BC	Blows cases										
BLOP	Bar lock or disconnecter out of position										
BSCO	Barrel support came out										
CBS-F	Shells catch on bbl support-feeding										
CBS-L	Shells catch on bbl support-loading										
CC	Carrier catches on shells,mag,receiver										
CD	Case dented										
CH	Closes hard										

CHAB	Carrier hits action bar											
CLM	Can't load magazine											
CO	Cut-off											
CR	Cuts rim											
CS	Cases swell											
CTOG	Chamber torn or gouged											
CTP	Creepy trigger pull											
CWSB	Cams wrong side of action bar											
DBB	Doesn't blow back											
DCS	Double click in safety switch											
DCT	Double click in trigger											
DCU	Doesn't close-up											
DE	Doesn't eject											
DEL	Doesn't eject live round											
DFU	Doesn't feed up											
DLO	Doesn't lock open (after last shell)											
DLU	Doesn't lock-up											
DS	Dead safe											
DSM	Drops shell-magazine											
DTL	Doesn't trip latch											
DX	Doesn't extract											
DXL	Doesn't extract live round											
EDS	Extractor drops shell											
ESB	Ejector sticks back											
ESS	Extractor stems shell											
FA	Fires automatically											
FB	Follower binds											

FC	Fails to connect											
FCB	Fore-end cracked or broken											
FD	Follows-down											
FF	Fails to fire											
FFM	Fails to feed from magazine											
FFP	Flat firing pin											
FOS	Fires on safe											
FSR	Fires when safe is released											
GCSO	Gas cyl shot off											
GRSO	Guide ring shot off											
HPA	High pressure ammo											
HUE	Hard under extractor											
ILOP	Int. latch out of position											
ILRM	Int. latch ret. Missing											
ILSB	Int. latch stud broken											
ILSP	Int. latch spring out of position											
JL	Jumps latch											
JO	Jars off											
LB	Light blow											
MCSO	Magazine cap shot off											
MCW	Magazine capacity wrong											
MFA	Misfires (ammo)											
MFOP	Magazine follower out of position											
MLH	Magazine loads hard											
OH	Opens hard											
PH	Pulls hard											
PSI	Proof stamp illegible											

PSM	Proof stamp missing											
RBOC	Rings and bulges on case											
RDW	(Action) release doesn't work											
RIC	Rings in chamber											
SBC	Stems bottom chambers											
SBCL	Shell binds carrier latch											
SBE	Stems bbl extension											
SCB	Stock cracked or broken											
SCX	Shell catches											
SHI	Short indent											
SIC	Stems in chamber											
SL	shaves lead											
SLC	Stems left side of chamber											
SMOC	Stretch marks on case											
SRC	Stems right side of chamber											
SRIC	Specific rings in chamber											
SSC	shell stems carrier											
STC	Stems top chamber											
SWE	Safety switch works too easily											
SWH	Safety switch works too hard											
SWW	Safety ewitxh won't work											
TD	Tips down											
TU	Tips up											
TWP	Trigger won't pull											
TWR	Trigger won't retract											
UNCN-T	Uncoded											
XH	Extracts hard											

XHB	Extractor hits bbl												
HI	High												
LO	Low												
LEFT	Left												
RIGHT	Right												
DG	Doesn't Group												
FSST	Front sight tipped												
RSTT	Rear sight tipped												
RSBR	Rear sight base raised												
FSTR	Front sight raised												
FSTL	Front sight loose												
RSTL	Rear sight loose												
MGPT-G	Missing parts at target												
UNCN-G	Uncoded nonconformity at target												
AI-P	Assembly incomplete at proof												
BC-P	Blows cases at proof												
BEB-P	Barrel extension broken at proof												
BLP-P	Blanked primer at proof												
BP-P	Blown primer at proof												
BS-P	Barrel split at proof												
DLOS-P	Doesn't lock over shells at proof												
ESB-P	Ejector sticks back at proof												
FCB-P	Fore-end cracked at proof												
FESO-P	Fore-end shot off at proof												
FF-P	Fails to fire at proof												





[illegible]

MAE0001441C










<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

**Proof**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

**Test**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

**Target**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
AB	Action binds										
ASFB	Action spring follower binds										
BABS	Bulge at body shoulder										
BAC	Burr at chamber										
BB	Bolt binds/catches										
BCOE	Bolt catches on ejector										
BC	Blows cases										
BLOP	Bar lock or disconnecter out of position										
BSCO	Barrel support came out										
CBS-F	Shells catch on bbl support-feeding										
CBS-L	Shells catch on bbl support-loading										
CC	Carrier catches on shells,mag,receiver										
CD	Case dented										
CH	Closes hard										

CHAB	Carrier hits action bar											
CLM	Can't load magazine											
CO	Cut-off											
CR	Cuts rim											
CS	Cases swell											
CTOG	Chamber torn or gouged											
CTP	Creepy trigger pull											
CWSB	Cams wrong side of action bar											
DBB	Doesn't blow back											
DCS	Double click in safety switch											
DCT	Double click in trigger											
DCU	Doesn't close-up											
DE	Doesn't eject											
DEL	Doesn't eject live round											
DFU	Doesn't feed up											
DLO	Doesn't lock open (after last shell)											
DLU	Doesn't lock-up											
DS	Dead safe											
DSM	Drops shell-magazine											
DTL	Doesn't trip latch											
DX	Doesn't extract											
DXL	Doesn't extract live round											
EDS	Extractor drops shell											
ESB	Ejector sticks back											
ESS	Extractor stems shell											
FA	Fires automatically											
FB	Follower binds											



FC	Fails to connect											
FCB	Fore-end cracked or broken											
FD	Follows-down											
FF	Fails to fire											
FFM	Fails to feed from magazine											
FFP	Flat firing pin											
FOS	Fires on safe											
FSR	Fires when safe is released											
GCSO	Gas cyl shot off											
GRSO	Guide ring shot off											
HPA	High pressure ammo											
HUE	Hard under extractor											
ILOP	Int. latch out of position											
ILRM	Int. latch ret. Missing											
ILSB	Int. latch stud broken											
ILSP	Int. latch spring out of position											
JL	Jumps latch											
JO	Jars off											
LB	Light blow											
MCSO	Magazine cap shot off											
MCW	Magazine capacity wrong											
MFA	Misfires (ammo)											
MFOP	Magazine follower out of position											
MLH	Magazine loads hard											
OH	Opens hard											
PH	Pulls hard											
PSI	Proof stamp illegible											

PSM	Proof stamp missing											
RBOC	Rings and bulges on case											
RDW	(Action) release doesn't work											
RIC	Rings in chamber											
SBC	Stems bottom chambers											
SBCL	Shell binds carrier latch											
SBE	Stems bbl extension											
SCB	Stock cracked or broken											
SCX	Shell catches											
SHI	Short indent											
SIC	Stems in chamber											
SL	shaves lead											
SLC	Stems left side of chamber											
SMOC	Stretch marks on case											
SRC	Stems right side of chamber											
SRIC	Specific rings in chamber											
SSC	shell stems carrier											
STC	Stems top chamber											
SWE	Safety switch works too easily											
SWH	Safety switch works too hard											
SWW	Safety ewitxh won't work											
TD	Tips down											
TU	Tips up											
TWP	Trigger won't pull											
TWR	Trigger won't retract											
UNCN-T	Uncoded											
XH	Extracts hard											

XHB	Extractor hits bbl												
HI	High												
LO	Low												
LEFT	Left												
RIGHT	Right												
DG	Doesn't Group												
FSST	Front sight tipped												
RSTT	Rear sight tipped												
RSBR	Rear sight base raised												
FSTR	Front sight raised												
FSTL	Front sight loose												
RSTL	Rear sight loose												
MGPT-G	Missing parts at target												
UNCN-G	Uncoded nonconformity at target												
AI-P	Assembly incomplete at proof												
BC-P	Blows cases at proof												
BEB-P	Barrel extension broken at proof												
BLP-P	Blanked primer at proof												
BP-P	Blown primer at proof												
BS-P	Barrel split at proof												
DLOS-P	Doesn't lock over shells at proof												
ESB-P	Ejector sticks back at proof												
FCB-P	Fore-end cracked at proof												
FESO-P	Fore-end shot off at proof												
FF-P	Fails to fire at proof												



[illegible][illegible]











CONFIDENTIAL


Summary	Total Test + Proof Failures	0
	Total Rejected:	0
	Overall Reject Rate:	

Proof	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										
Test	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										
Target	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
AB	Action binds										
ASFB	Action spring follower binds										
BABS	Bulge at body shoulder										
BAC	Burr at chamber										
BB	Bolt binds/catches										
BCOE	Bolt catches on ejector										
BC	Blows cases										
BLOP	Bar lock or disconnecter out of position										
BSCO	Barrel support came out										
CBS-F	Shells catch on bbl support-feeding										
CBS-L	Shells catch on bbl support-loading										
CC	Carrier catches on shells,mag,receiver										
CD	Case dented										
CH	Closes hard										

CHAB	Carrier hits action bar											
CLM	Can't load magazine											
CO	Cut-off											
CR	Cuts rim											
CS	Cases swell											
CTOG	Chamber torn or gouged											
CTP	Creepy trigger pull											
CWSB	Cams wrong side of action bar											
DBB	Doesn't blow back											
DCS	Double click in safety switch											
DCT	Double click in trigger											
DCU	Doesn't close-up											
DE	Doesn't eject											
DEL	Doesn't eject live round											
DFU	Doesn't feed up											
DLO	Doesn't lock open (after last shell)											
DLU	Doesn't lock-up											
DS	Dead safe											
DSM	Drops shell-magazine											
DTL	Doesn't trip latch											
DX	Doesn't extract											
DXL	Doesn't extract live round											
EDS	Extractor drops shell											
ESB	Ejector sticks back											
ESS	Extractor stems shell											
FA	Fires automatically											
FB	Follower binds											

FC	Fails to connect											
FCB	Fore-end cracked or broken											
FD	Follows-down											
FF	Fails to fire											
FFM	Fails to feed from magazine											
FFP	Flat firing pin											
FOS	Fires on safe											
FSR	Fires when safe is released											
GCSO	Gas cyl shot off											
GRSO	Guide ring shot off											
HPA	High pressure ammo											
HUE	Hard under extractor											
ILOP	Int. latch out of position											
ILRM	Int. latch ret. Missing											
ILSB	Int. latch stud broken											
ILSP	Int. latch spring out of position											
JL	Jumps latch											
JO	Jars off											
LB	Light blow											
MCSO	Magazine cap shot off											
MCW	Magazine capacity wrong											
MFA	Misfires (ammo)											
MFOP	Magazine follower out of position											
MLH	Magazine loads hard											
OH	Opens hard											
PH	Pulls hard											
PSI	Proof stamp illegible											

PSM	Proof stamp missing											
RBOC	Rings and bulges on case											
RDW	(Action) release doesn't work											
RIC	Rings in chamber											
SBC	Stems bottom chambers											
SBCL	Shell binds carrier latch											
SBE	Stems bbl extension											
SCB	Stock cracked or broken											
SCX	Shell catches											
SHI	Short indent											
SIC	Stems in chamber											
SL	shaves lead											
SLC	Stems left side of chamber											
SMOC	Stretch marks on case											
SRC	Stems right side of chamber											
SRIC	Specific rings in chamber											
SSC	shell stems carrier											
STC	Stems top chamber											
SWE	Safety switch works too easily											
SWH	Safety switch works too hard											
SWW	Safety ewitxh won't work											
TD	Tips down											
TU	Tips up											
TWP	Trigger won't pull											
TWR	Trigger won't retract											
UNCN-T	Uncoded											
XH	Extracts hard											

XHB	Extractor hits bbl												
HI	High												
LO	Low												
LEFT	Left												
RIGHT	Right												
DG	Doesn't Group												
FSST	Front sight tipped												
RSTT	Rear sight tipped												
RSBR	Rear sight base raised												
FSTR	Front sight raised												
FSTL	Front sight loose												
RSTL	Rear sight loose												
MGPT-G	Missing parts at target												
UNCN-G	Uncoded nonconformity at target												
AI-P	Assembly incomplete at proof												
BC-P	Blows cases at proof												
BEB-P	Barrel extension broken at proof												
BLP-P	Blanked primer at proof												
BP-P	Blown primer at proof												
BS-P	Barrel split at proof												
DLOS-P	Doesn't lock over shells at proof												
ESB-P	Ejector sticks back at proof												
FCB-P	Fore-end cracked at proof												
FESO-P	Fore-end shot off at proof												
FF-P	Fails to fire at proof												





<b><i>Test Date:</i></b>					
0	0	0	0	0	0
0	0	0	0	0	0
0	0	0	0	0	0

[illegible]










<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

<b>Proof</b>	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										
<b>Test</b>	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										
<b>Target</b>	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
AB	Action binds										
ASFB	Action spring follower binds										
BABS	Bulge at body shoulder										
BAC	Burr at chamber										
BB	Bolt binds/catches										
BCOE	Bolt catches on ejector										
BC	Blows cases										
BLOP	Bar lock or disconnecter out of position										
BSCO	Barrel support came out										
CBS-F	Shells catch on bbl support-feeding										
CBS-L	Shells catch on bbl support-loading										
CC	Carrier catches on shells,mag,receiver										
CD	Case dented										
CH	Closes hard										

CHAB	Carrier hits action bar											
CLM	Can't load magazine											
CO	Cut-off											
CR	Cuts rim											
CS	Cases swell											
CTOG	Chamber torn or gouged											
CTP	Creepy trigger pull											
CWSB	Cams wrong side of action bar											
DBB	Doesn't blow back											
DCS	Double click in safety switch											
DCT	Double click in trigger											
DCU	Doesn't close-up											
DE	Doesn't eject											
DEL	Doesn't eject live round											
DFU	Doesn't feed up											
DLO	Doesn't lock open (after last shell)											
DLU	Doesn't lock-up											
DS	Dead safe											
DSM	Drops shell-magazine											
DTL	Doesn't trip latch											
DX	Doesn't extract											
DXL	Doesn't extract live round											
EDS	Extractor drops shell											
ESB	Ejector sticks back											
ESS	Extractor stems shell											
FA	Fires automatically											
FB	Follower binds											



FC	Fails to connect											
FCB	Fore-end cracked or broken											
FD	Follows-down											
FF	Fails to fire											
FFM	Fails to feed from magazine											
FFP	Flat firing pin											
FOS	Fires on safe											
FSR	Fires when safe is released											
GCSO	Gas cyl shot off											
GRSO	Guide ring shot off											
HPA	High pressure ammo											
HUE	Hard under extractor											
ILOP	Int. latch out of position											
ILRM	Int. latch ret. Missing											
ILSB	Int. latch stud broken											
ILSP	Int. latch spring out of position											
JL	Jumps latch											
JO	Jars off											
LB	Light blow											
MCSO	Magazine cap shot off											
MCW	Magazine capacity wrong											
MFA	Misfires (ammo)											
MFOP	Magazine follower out of position											
MLH	Magazine loads hard											
OH	Opens hard											
PH	Pulls hard											
PSI	Proof stamp illegible											

PSM	Proof stamp missing											
RBOC	Rings and bulges on case											
RDW	(Action) release doesn't work											
RIC	Rings in chamber											
SBC	Stems bottom chambers											
SBCL	Shell binds carrier latch											
SBE	Stems bbl extension											
SCB	Stock cracked or broken											
SCX	Shell catches											
SHI	Short indent											
SIC	Stems in chamber											
SL	shaves lead											
SLC	Stems left side of chamber											
SMOC	Stretch marks on case											
SRC	Stems right side of chamber											
SRIC	Specific rings in chamber											
SSC	shell stems carrier											
STC	Stems top chamber											
SWE	Safety switch works too easily											
SWH	Safety switch works too hard											
SWW	Safety ewitxh won't work											
TD	Tips down											
TU	Tips up											
TWP	Trigger won't pull											
TWR	Trigger won't retract											
UNCN-T	Uncoded											
XH	Extracts hard											

XHB	Extractor hits bbl												
HI	High												
LO	Low												
LEFT	Left												
RIGHT	Right												
DG	Doesn't Group												
FSST	Front sight tipped												
RSTT	Rear sight tipped												
RSBR	Rear sight base raised												
FSTR	Front sight raised												
FSTL	Front sight loose												
RSTL	Rear sight loose												
MGPT-G	Missing parts at target												
UNCN-G	Uncoded nonconformity at target												
AI-P	Assembly incomplete at proof												
BC-P	Blows cases at proof												
BEB-P	Barrel extension broken at proof												
BLP-P	Blanked primer at proof												
BP-P	Blown primer at proof												
BS-P	Barrel split at proof												
DLOS-P	Doesn't lock over shells at proof												
ESB-P	Ejector sticks back at proof												
FCB-P	Fore-end cracked at proof												
FESO-P	Fore-end shot off at proof												
FF-P	Fails to fire at proof												

GCSO-P	Gas cylinder shot off at proof
GRSO-P	Guide ring shot off at proof
MCSO-P	Magazine cap shot off at proof
MSI-P	Magnaflex stamp illegible or bbl
MSM-P	Magnaflex stamp missing or bbl
PP-P	Pierced primer at proof
SCB-P	Stock cracked or broken at proof
UNCM-P	Uncoded proof malfunctions

[illegible][illegible]












<b>Summary</b>	Total Test + Proof Failures	0
	Total Rejected:	0
	Overall Reject Rate:	

<b>Proof</b>	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										
<b>Test</b>	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										
<b>Target</b>	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
AB	Action binds										
ASFB	Action spring follower binds										
BABS	Bulge at body shoulder										
BAC	Burr at chamber										
BB	Bolt binds/catches										
BCOE	Bolt catches on ejector										
BC	Blows cases										
BLOP	Bar lock or disconnecter out of position										
BSCO	Barrel support came out										
CBS-F	Shells catch on bbl support-feeding										
CBS-L	Shells catch on bbl support-loading										
CC	Carrier catches on shells,mag,receiver										
CD	Case dented										
CH	Closes hard										

CHAB	Carrier hits action bar											
CLM	Can't load magazine											
CO	Cut-off											
CR	Cuts rim											
CS	Cases swell											
CTOG	Chamber torn or gouged											
CTP	Creepy trigger pull											
CWSB	Cams wrong side of action bar											
DBB	Doesn't blow back											
DCS	Double click in safety switch											
DCT	Double click in trigger											
DCU	Doesn't close-up											
DE	Doesn't eject											
DEL	Doesn't eject live round											
DFU	Doesn't feed up											
DLO	Doesn't lock open (after last shell)											
DLU	Doesn't lock-up											
DS	Dead safe											
DSM	Drops shell-magazine											
DTL	Doesn't trip latch											
DX	Doesn't extract											
DXL	Doesn't extract live round											
EDS	Extractor drops shell											
ESB	Ejector sticks back											
ESS	Extractor stems shell											
FA	Fires automatically											
FB	Follower binds											

FC	Fails to connect											
FCB	Fore-end cracked or broken											
FD	Follows-down											
FF	Fails to fire											
FFM	Fails to feed from magazine											
FFP	Flat firing pin											
FOS	Fires on safe											
FSR	Fires when safe is released											
GCSO	Gas cyl shot off											
GRSO	Guide ring shot off											
HPA	High pressure ammo											
HUE	Hard under extractor											
ILOP	Int. latch out of position											
ILRM	Int. latch ret. Missing											
ILSB	Int. latch stud broken											
ILSP	Int. latch spring out of position											
JL	Jumps latch											
JO	Jars off											
LB	Light blow											
MCSO	Magazine cap shot off											
MCW	Magazine capacity wrong											
MFA	Misfires (ammo)											
MFOP	Magazine follower out of position											
MLH	Magazine loads hard											
OH	Opens hard											
PH	Pulls hard											
PSI	Proof stamp illegible											

PSM	Proof stamp missing											
RBOC	Rings and bulges on case											
RDW	(Action) release doesn't work											
RIC	Rings in chamber											
SBC	Stems bottom chambers											
SBCL	Shell binds carrier latch											
SBE	Stems bbl extension											
SCB	Stock cracked or broken											
SCX	Shell catches											
SHI	Short indent											
SIC	Stems in chamber											
SL	shaves lead											
SLC	Stems left side of chamber											
SMOC	Stretch marks on case											
SRC	Stems right side of chamber											
SRIC	Specific rings in chamber											
SSC	shell stems carrier											
STC	Stems top chamber											
SWE	Safety switch works too easily											
SWH	Safety switch works too hard											
SWW	Safety ewitxh won't work											
TD	Tips down											
TU	Tips up											
TWP	Trigger won't pull											
TWR	Trigger won't retract											
UNCN-T	Uncoded											
XH	Extracts hard											

XHB	Extractor hits bbl												
HI	High												
LO	Low												
LEFT	Left												
RIGHT	Right												
DG	Doesn't Group												
FSST	Front sight tipped												
RSTT	Rear sight tipped												
RSBR	Rear sight base raised												
FSTR	Front sight raised												
FSTL	Front sight loose												
RSTL	Rear sight loose												
MGPT-G	Missing parts at target												
UNCN-G	Uncoded nonconformity at target												
AI-P	Assembly incomplete at proof												
BC-P	Blows cases at proof												
BEB-P	Barrel extension broken at proof												
BLP-P	Blanked primer at proof												
BP-P	Blown primer at proof												
BS-P	Barrel split at proof												
DLOS-P	Doesn't lock over shells at proof												
ESB-P	Ejector sticks back at proof												
FCB-P	Fore-end cracked at proof												
FESO-P	Fore-end shot off at proof												
FF-P	Fails to fire at proof												





[illegible][illegible]










<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

<b>Proof</b>	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										
<b>Test</b>	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										
<b>Target</b>	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
AB	Action binds										
ASFB	Action spring follower binds										
BABS	Bulge at body shoulder										
BAC	Burr at chamber										
BB	Bolt binds/catches										
BCOE	Bolt catches on ejector										
BC	Blows cases										
BLOP	Bar lock or disconnecter out of position										
BSCO	Barrel support came out										
CBS-F	Shells catch on bbl support-feeding										
CBS-L	Shells catch on bbl support-loading										
CC	Carrier catches on shells,mag,receiver										
CD	Case dented										
CH	Closes hard										

CHAB	Carrier hits action bar											
CLM	Can't load magazine											
CO	Cut-off											
CR	Cuts rim											
CS	Cases swell											
CTOG	Chamber torn or gouged											
CTP	Creepy trigger pull											
CWSB	Cams wrong side of action bar											
DBB	Doesn't blow back											
DCS	Double click in safety switch											
DCT	Double click in trigger											
DCU	Doesn't close-up											
DE	Doesn't eject											
DEL	Doesn't eject live round											
DFU	Doesn't feed up											
DLO	Doesn't lock open (after last shell)											
DLU	Doesn't lock-up											
DS	Dead safe											
DSM	Drops shell-magazine											
DTL	Doesn't trip latch											
DX	Doesn't extract											
DXL	Doesn't extract live round											
EDS	Extractor drops shell											
ESB	Ejector sticks back											
ESS	Extractor stems shell											
FA	Fires automatically											
FB	Follower binds											



FC	Fails to connect											
FCB	Fore-end cracked or broken											
FD	Follows-down											
FF	Fails to fire											
FFM	Fails to feed from magazine											
FFP	Flat firing pin											
FOS	Fires on safe											
FSR	Fires when safe is released											
GCSO	Gas cyl shot off											
GRSO	Guide ring shot off											
HPA	High pressure ammo											
HUE	Hard under extractor											
ILOP	Int. latch out of position											
ILRM	Int. latch ret. Missing											
ILSB	Int. latch stud broken											
ILSP	Int. latch spring out of position											
JL	Jumps latch											
JO	Jars off											
LB	Light blow											
MCSO	Magazine cap shot off											
MCW	Magazine capacity wrong											
MFA	Misfires (ammo)											
MFOP	Magazine follower out of position											
MLH	Magazine loads hard											
OH	Opens hard											
PH	Pulls hard											
PSI	Proof stamp illegible											

PSM	Proof stamp missing											
RBOC	Rings and bulges on case											
RDW	(Action) release doesn't work											
RIC	Rings in chamber											
SBC	Stems bottom chambers											
SBCL	Shell binds carrier latch											
SBE	Stems bbl extension											
SCB	Stock cracked or broken											
SCX	Shell catches											
SHI	Short indent											
SIC	Stems in chamber											
SL	shaves lead											
SLC	Stems left side of chamber											
SMOC	Stretch marks on case											
SRC	Stems right side of chamber											
SRIC	Specific rings in chamber											
SSC	shell stems carrier											
STC	Stems top chamber											
SWE	Safety switch works too easily											
SWH	Safety switch works too hard											
SWW	Safety ewitxh won't work											
TD	Tips down											
TU	Tips up											
TWP	Trigger won't pull											
TWR	Trigger won't retract											
UNCN-T	Uncoded											
XH	Extracts hard											

XHB	Extractor hits bbl												
HI	High												
LO	Low												
LEFT	Left												
RIGHT	Right												
DG	Doesn't Group												
FSST	Front sight tipped												
RSTT	Rear sight tipped												
RSBR	Rear sight base raised												
FSTR	Front sight raised												
FSTL	Front sight loose												
RSTL	Rear sight loose												
MGPT-G	Missing parts at target												
UNCN-G	Uncoded nonconformity at target												
AI-P	Assembly incomplete at proof												
BC-P	Blows cases at proof												
BEB-P	Barrel extension broken at proof												
BLP-P	Blanked primer at proof												
BP-P	Blown primer at proof												
BS-P	Barrel split at proof												
DLOS-P	Doesn't lock over shells at proof												
ESB-P	Ejector sticks back at proof												
FCB-P	Fore-end cracked at proof												
FESO-P	Fore-end shot off at proof												
FF-P	Fails to fire at proof												

[illegible]

[illegible][illegible]












<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

<b>Proof</b>	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										
<b>Test</b>	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										
<b>Target</b>	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
AB	Action binds										
ASFB	Action spring follower binds										
BABS	Bulge at body shoulder										
BAC	Burr at chamber										
BB	Bolt binds/catches										
BCOE	Bolt catches on ejector										
BC	Blows cases										
BLOP	Bar lock or disconnecter out of position										
BSCO	Barrel support came out										
CBS-F	Shells catch on bbl support-feeding										
CBS-L	Shells catch on bbl support-loading										
CC	Carrier catches on shells,mag,receiver										
CD	Case dented										
CH	Closes hard										

CHAB	Carrier hits action bar											
CLM	Can't load magazine											
CO	Cut-off											
CR	Cuts rim											
CS	Cases swell											
CTOG	Chamber torn or gouged											
CTP	Creepy trigger pull											
CWSB	Cams wrong side of action bar											
DBB	Doesn't blow back											
DCS	Double click in safety switch											
DCT	Double click in trigger											
DCU	Doesn't close-up											
DE	Doesn't eject											
DEL	Doesn't eject live round											
DFU	Doesn't feed up											
DLO	Doesn't lock open (after last shell)											
DLU	Doesn't lock-up											
DS	Dead safe											
DSM	Drops shell-magazine											
DTL	Doesn't trip latch											
DX	Doesn't extract											
DXL	Doesn't extract live round											
EDS	Extractor drops shell											
ESB	Ejector sticks back											
ESS	Extractor stems shell											
FA	Fires automatically											
FB	Follower binds											

FC	Fails to connect											
FCB	Fore-end cracked or broken											
FD	Follows-down											
FF	Fails to fire											
FFM	Fails to feed from magazine											
FFP	Flat firing pin											
FOS	Fires on safe											
FSR	Fires when safe is released											
GCSO	Gas cyl shot off											
GRSO	Guide ring shot off											
HPA	High pressure ammo											
HUE	Hard under extractor											
ILOP	Int. latch out of position											
ILRM	Int. latch ret. Missing											
ILSB	Int. latch stud broken											
ILSP	Int. latch spring out of position											
JL	Jumps latch											
JO	Jars off											
LB	Light blow											
MCSO	Magazine cap shot off											
MCW	Magazine capacity wrong											
MFA	Misfires (ammo)											
MFOP	Magazine follower out of position											
MLH	Magazine loads hard											
OH	Opens hard											
PH	Pulls hard											
PSI	Proof stamp illegible											

PSM	Proof stamp missing											
RBOC	Rings and bulges on case											
RDW	(Action) release doesn't work											
RIC	Rings in chamber											
SBC	Stems bottom chambers											
SBCL	Shell binds carrier latch											
SBE	Stems bbl extension											
SCB	Stock cracked or broken											
SCX	Shell catches											
SHI	Short indent											
SIC	Stems in chamber											
SL	shaves lead											
SLC	Stems left side of chamber											
SMOC	Stretch marks on case											
SRC	Stems right side of chamber											
SRIC	Specific rings in chamber											
SSC	shell stems carrier											
STC	Stems top chamber											
SWE	Safety switch works too easily											
SWH	Safety switch works too hard											
SWW	Safety ewitxh won't work											
TD	Tips down											
TU	Tips up											
TWP	Trigger won't pull											
TWR	Trigger won't retract											
UNCN-T	Uncoded											
XH	Extracts hard											

XHB	Extractor hits bbl												
HI	High												
LO	Low												
LEFT	Left												
RIGHT	Right												
DG	Doesn't Group												
FSST	Front sight tipped												
RSTT	Rear sight tipped												
RSBR	Rear sight base raised												
FSTR	Front sight raised												
FSTL	Front sight loose												
RSTL	Rear sight loose												
MGPT-G	Missing parts at target												
UNCN-G	Uncoded nonconformity at target												
AI-P	Assembly incomplete at proof												
BC-P	Blows cases at proof												
BEB-P	Barrel extension broken at proof												
BLP-P	Blanked primer at proof												
BP-P	Blown primer at proof												
BS-P	Barrel split at proof												
DLOS-P	Doesn't lock over shells at proof												
ESB-P	Ejector sticks back at proof												
FCB-P	Fore-end cracked at proof												
FESO-P	Fore-end shot off at proof												
FF-P	Fails to fire at proof												

GCSO-P	Gas cylinder shot off at proof								
GRSO-P	Guide ring shot off at proof								
MCSO-P	Magazine cap shot off at proof								
MSI-P	Magnaflex stamp illegible or bbl								
MSM-P	Magniflux stamp missing or bbl								
PP-P	Pierced primer at proof								
SCB-P	Stock cracked or broken at proof								
UNCM-P	Uncoded proof malfunctions								



[illegible][illegible]










Summary	Total Test + Proof Failures	0
	Total Rejected:	0
	Overall Reject Rate:	

Proof	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										
Test	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										
Target	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
AB	Action binds										
ASFB	Action spring follower binds										
BABS	Bulge at body shoulder										
BAC	Burr at chamber										
BB	Bolt binds/catches										
BCOE	Bolt catches on ejector										
BC	Blows cases										
BLOP	Bar lock or disconnecter out of position										
BSCO	Barrel support came out										
CBS-F	Shells catch on bbl support-feeding										
CBS-L	Shells catch on bbl support-loading										
CC	Carrier catches on shells,mag,receiver										
CD	Case dented										
CH	Closes hard										

CHAB	Carrier hits action bar											
CLM	Can't load magazine											
CO	Cut-off											
CR	Cuts rim											
CS	Cases swell											
CTOG	Chamber torn or gouged											
CTP	Creepy trigger pull											
CWSB	Cams wrong side of action bar											
DBB	Doesn't blow back											
DCS	Double click in safety switch											
DCT	Double click in trigger											
DCU	Doesn't close-up											
DE	Doesn't eject											
DEL	Doesn't eject live round											
DFU	Doesn't feed up											
DLO	Doesn't lock open (after last shell)											
DLU	Doesn't lock-up											
DS	Dead safe											
DSM	Drops shell-magazine											
DTL	Doesn't trip latch											
DX	Doesn't extract											
DXL	Doesn't extract live round											
EDS	Extractor drops shell											
ESB	Ejector sticks back											
ESS	Extractor stems shell											
FA	Fires automatically											
FB	Follower binds											



FC	Fails to connect												
FCB	Fore-end cracked or broken												
FD	Follows-down												
FF	Fails to fire												
FFM	Fails to feed from magazine												
FFP	Flat firing pin												
FOS	Fires on safe												
FSR	Fires when safe is released												
GCSO	Gas cyl shot off												
GRSO	Guide ring shot off												
HPA	High pressure ammo												
HUE	Hard under extractor												
ILOP	Int. latch out of position												
ILRM	Int. latch ret. Missing												
ILSB	Int. latch stud broken												
ILSP	Int. latch spring out of position												
JL	Jumps latch												
JO	Jars off												
LB	Light blow												
MCSO	Magazine cap shot off												
MCW	Magazine capacity wrong												
MFA	Misfires (ammo)												
MFOP	Magazine follower out of position												
MLH	Magazine loads hard												
OH	Opens hard												
PH	Pulls hard												
PSI	Proof stamp illegible												

PSM	Proof stamp missing											
RBOC	Rings and bulges on case											
RDW	(Action) release doesn't work											
RIC	Rings in chamber											
SBC	Stems bottom chambers											
SBCL	Shell binds carrier latch											
SBE	Stems bbl extension											
SCB	Stock cracked or broken											
SCX	Shell catches											
SHI	Short indent											
SIC	Stems in chamber											
SL	shaves lead											
SLC	Stems left side of chamber											
SMOC	Stretch marks on case											
SRC	Stems right side of chamber											
SRIC	Specific rings in chamber											
SSC	shell stems carrier											
STC	Stems top chamber											
SWE	Safety switch works too easily											
SWH	Safety switch works too hard											
SWW	Safety ewitxh won't work											
TD	Tips down											
TU	Tips up											
TWP	Trigger won't pull											
TWR	Trigger won't retract											
UNCN-T	Uncoded											
XH	Extracts hard											

XHB	Extractor hits bbl												
HI	High												
LO	Low												
LEFT	Left												
RIGHT	Right												
DG	Doesn't Group												
FSST	Front sight tipped												
RSTT	Rear sight tipped												
RSBR	Rear sight base raised												
FSTR	Front sight raised												
FSTL	Front sight loose												
RSTL	Rear sight loose												
MGPT-G	Missing parts at target												
UNCN-G	Uncoded nonconformity at target												
AI-P	Assembly incomplete at proof												
BC-P	Blows cases at proof												
BEB-P	Barrel extension broken at proof												
BLP-P	Blanked primer at proof												
BP-P	Blown primer at proof												
BS-P	Barrel split at proof												
DLOS-P	Doesn't lock over shells at proof												
ESB-P	Ejector sticks back at proof												
FCB-P	Fore-end cracked at proof												
FESO-P	Fore-end shot off at proof												
FF-P	Fails to fire at proof												

GCSO-P	Gas cylinder shot off at proof
GRSO-P	Guide ring shot off at proof
MCSO-P	Magazine cap shot off at proof
MSI-P	Magnaflux stamp illegible or bbl
MSM-P	Magnaflux stamp missing or bbl
PP-P	Pierced primer at proof
SCB-P	Stock cracked or broken at proof
UNCM-P	Uncoded proof malfunctions

<b><i>Test Date:</i></b>						
0	0	0	0	0	0	0
0	0	0	0	0	0	0
0	0	0	0	0	0	0

[illegible]












<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

**Proof**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

**Test**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

**Target**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
AB	Action binds										
ASFB	Action spring follower binds										
BABS	Bulge at body shoulder										
BAC	Burr at chamber										
BB	Bolt binds/catches										
BCOE	Bolt catches on ejector										
BC	Blows cases										
BLOP	Bar lock or disconnecter out of position										
BSCO	Barrel support came out										
CBS-F	Shells catch on bbl support-feeding										
CBS-L	Shells catch on bbl support-loading										
CC	Carrier catches on shells,mag,receiver										
CD	Case dented										
CH	Closes hard										

CHAB	Carrier hits action bar											
CLM	Can't load magazine											
CO	Cut-off											
CR	Cuts rim											
CS	Cases swell											
CTOG	Chamber torn or gouged											
CTP	Creepy trigger pull											
CWSB	Cams wrong side of action bar											
DBB	Doesn't blow back											
DCS	Double click in safety switch											
DCT	Double click in trigger											
DCU	Doesn't close-up											
DE	Doesn't eject											
DEL	Doesn't eject live round											
DFU	Doesn't feed up											
DLO	Doesn't lock open (after last shell)											
DLU	Doesn't lock-up											
DS	Dead safe											
DSM	Drops shell-magazine											
DTL	Doesn't trip latch											
DX	Doesn't extract											
DXL	Doesn't extract live round											
EDS	Extractor drops shell											
ESB	Ejector sticks back											
ESS	Extractor stems shell											
FA	Fires automatically											
FB	Follower binds											

FC	Fails to connect												
FCB	Fore-end cracked or broken												
FD	Follows-down												
FF	Fails to fire												
FFM	Fails to feed from magazine												
FFP	Flat firing pin												
FOS	Fires on safe												
FSR	Fires when safe is released												
GCSO	Gas cyl shot off												
GRSO	Guide ring shot off												
HPA	High pressure ammo												
HUE	Hard under extractor												
ILOP	Int. latch out of position												
ILRM	Int. latch ret. Missing												
ILSB	Int. latch stud broken												
ILSP	Int. latch spring out of position												
JL	Jumps latch												
JO	Jars off												
LB	Light blow												
MCSO	Magazine cap shot off												
MCW	Magazine capacity wrong												
MFA	Misfires (ammo)												
MFOP	Magazine follower out of position												
MLH	Magazine loads hard												
OH	Opens hard												
PH	Pulls hard												
PSI	Proof stamp illegible												

PSM	Proof stamp missing											
RBOC	Rings and bulges on case											
RDW	(Action) release doesn't work											
RIC	Rings in chamber											
SBC	Stems bottom chambers											
SBCL	Shell binds carrier latch											
SBE	Stems bbl extension											
SCB	Stock cracked or broken											
SCX	Shell catches											
SHI	Short indent											
SIC	Stems in chamber											
SL	shaves lead											
SLC	Stems left side of chamber											
SMOC	Stretch marks on case											
SRC	Stems right side of chamber											
SRIC	Specific rings in chamber											
SSC	shell stems carrier											
STC	Stems top chamber											
SWE	Safety switch works too easily											
SWH	Safety switch works too hard											
SWW	Safety ewitxh won't work											
TD	Tips down											
TU	Tips up											
TWP	Trigger won't pull											
TWR	Trigger won't retract											
UNCN-T	Uncoded											
XH	Extracts hard											

XHB	Extractor hits bbl												
HI	High												
LO	Low												
LEFT	Left												
RIGHT	Right												
DG	Doesn't Group												
FSST	Front sight tipped												
RSTT	Rear sight tipped												
RSBR	Rear sight base raised												
FSTR	Front sight raised												
FSTL	Front sight loose												
RSTL	Rear sight loose												
MGPT-G	Missing parts at target												
UNCN-G	Uncoded nonconformity at target												
AI-P	Assembly incomplete at proof												
BC-P	Blows cases at proof												
BEB-P	Barrel extension broken at proof												
BLP-P	Blanked primer at proof												
BP-P	Blown primer at proof												
BS-P	Barrel split at proof												
DLOS-P	Doesn't lock over shells at proof												
ESB-P	Ejector sticks back at proof												
FCB-P	Fore-end cracked at proof												
FESO-P	Fore-end shot off at proof												
FF-P	Fails to fire at proof												





[illegible][illegible]










Total Test + Proof Failures		0
Total Rejected:		0
Overall Reject Rate:		
Proof	Shot:	
	Rejected:	0
	Percent:	
Test	Shot:	
	Rejected:	0
	Percent:	
Target	Shot:	
	Rejected:	0
	Percent:	

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
AB	Action binds										
ASFB	Action spring follower binds										
BABS	Bulge at body shoulder										
BAC	Burr at chamber										
BB	Bolt binds/catches										
BCOE	Bolt catches on ejector										
BC	Blows cases										
BLOP	Bar lock or disconnecter out of position										
BSCO	Barrel support came out										
CBS-F	Shells catch on bbl support-feeding										
CBS-L	Shells catch on bbl support-loading										
CC	Carrier catches on shells,mag,receiver										
CD	Case dented										
CH	Closes hard										

CHAB	Carrier hits action bar											
CLM	Can't load magazine											
CO	Cut-off											
CR	Cuts rim											
CS	Cases swell											
CTOG	Chamber torn or gouged											
CTP	Creepy trigger pull											
CWSB	Cams wrong side of action bar											
DBB	Doesn't blow back											
DCS	Double click in safety switch											
DCT	Double click in trigger											
DCU	Doesn't close-up											
DE	Doesn't eject											
DEL	Doesn't eject live round											
DFU	Doesn't feed up											
DLO	Doesn't lock open (after last shell)											
DLU	Doesn't lock-up											
DS	Dead safe											
DSM	Drops shell-magazine											
DTL	Doesn't trip latch											
DX	Doesn't extract											
DXL	Doesn't extract live round											
EDS	Extractor drops shell											
ESB	Ejector sticks back											
ESS	Extractor stems shell											
FA	Fires automatically											
FB	Follower binds											



FC	Fails to connect											
FCB	Fore-end cracked or broken											
FD	Follows-down											
FF	Fails to fire											
FFM	Fails to feed from magazine											
FFP	Flat firing pin											
FOS	Fires on safe											
FSR	Fires when safe is released											
GCSO	Gas cyl shot off											
GRSO	Guide ring shot off											
HPA	High pressure ammo											
HUE	Hard under extractor											
ILOP	Int. latch out of position											
ILRM	Int. latch ret. Missing											
ILSB	Int. latch stud broken											
ILSP	Int. latch spring out of position											
JL	Jumps latch											
JO	Jars off											
LB	Light blow											
MCSO	Magazine cap shot off											
MCW	Magazine capacity wrong											
MFA	Misfires (ammo)											
MFOP	Magazine follower out of position											
MLH	Magazine loads hard											
OH	Opens hard											
PH	Pulls hard											
PSI	Proof stamp illegible											

PSM	Proof stamp missing											
RBOC	Rings and bulges on case											
RDW	(Action) release doesn't work											
RIC	Rings in chamber											
SBC	Stems bottom chambers											
SBCL	Shell binds carrier latch											
SBE	Stems bbl extension											
SCB	Stock cracked or broken											
SCX	Shell catches											
SHI	Short indent											
SIC	Stems in chamber											
SL	shaves lead											
SLC	Stems left side of chamber											
SMOC	Stretch marks on case											
SRC	Stems right side of chamber											
SRIC	Specific rings in chamber											
SSC	shell stems carrier											
STC	Stems top chamber											
SWE	Safety switch works too easily											
SWH	Safety switch works too hard											
SWW	Safety ewitxh won't work											
TD	Tips down											
TU	Tips up											
TWP	Trigger won't pull											
TWR	Trigger won't retract											
UNCN-T	Uncoded											
XH	Extracts hard											

XHB	Extractor hits bbl												
HI	High												
LO	Low												
LEFT	Left												
RIGHT	Right												
DG	Doesn't Group												
FSST	Front sight tipped												
RSTT	Rear sight tipped												
RSBR	Rear sight base raised												
FSTR	Front sight raised												
FSTL	Front sight loose												
RSTL	Rear sight loose												
MGPT-G	Missing parts at target												
UNCN-G	Uncoded nonconformity at target												
AI-P	Assembly incomplete at proof												
BC-P	Blows cases at proof												
BEB-P	Barrel extension broken at proof												
BLP-P	Blanked primer at proof												
BP-P	Blown primer at proof												
BS-P	Barrel split at proof												
DLOS-P	Doesn't lock over shells at proof												
ESB-P	Ejector sticks back at proof												
FCB-P	Fore-end cracked at proof												
FESO-P	Fore-end shot off at proof												
FF-P	Fails to fire at proof												

[illegible]

[illegible]

MAE00014518












<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

**Proof**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

**Test**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

**Target**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
AB	Action binds										
ASFB	Action spring follower binds										
BABS	Bulge at body shoulder										
BAC	Burr at chamber										
BB	Bolt binds/catches										
BCOE	Bolt catches on ejector										
BC	Blows cases										
BLOP	Bar lock or disconnecter out of position										
BSCO	Barrel support came out										
CBS-F	Shells catch on bbl support-feeding										
CBS-L	Shells catch on bbl support-loading										
CC	Carrier catches on shells,mag,receiver										
CD	Case dented										
CH	Closes hard										

CHAB	Carrier hits action bar											
CLM	Can't load magazine											
CO	Cut-off											
CR	Cuts rim											
CS	Cases swell											
CTOG	Chamber torn or gouged											
CTP	Creepy trigger pull											
CWSB	Cams wrong side of action bar											
DBB	Doesn't blow back											
DCS	Double click in safety switch											
DCT	Double click in trigger											
DCU	Doesn't close-up											
DE	Doesn't eject											
DEL	Doesn't eject live round											
DFU	Doesn't feed up											
DLO	Doesn't lock open (after last shell)											
DLU	Doesn't lock-up											
DS	Dead safe											
DSM	Drops shell-magazine											
DTL	Doesn't trip latch											
DX	Doesn't extract											
DXL	Doesn't extract live round											
EDS	Extractor drops shell											
ESB	Ejector sticks back											
ESS	Extractor stems shell											
FA	Fires automatically											
FB	Follower binds											

FC	Fails to connect											
FCB	Fore-end cracked or broken											
FD	Follows-down											
FF	Fails to fire											
FFM	Fails to feed from magazine											
FFP	Flat firing pin											
FOS	Fires on safe											
FSR	Fires when safe is released											
GCSO	Gas cyl shot off											
GRSO	Guide ring shot off											
HPA	High pressure ammo											
HUE	Hard under extractor											
ILOP	Int. latch out of position											
ILRM	Int. latch ret. Missing											
ILSB	Int. latch stud broken											
ILSP	Int. latch spring out of position											
JL	Jumps latch											
JO	Jars off											
LB	Light blow											
MCSO	Magazine cap shot off											
MCW	Magazine capacity wrong											
MFA	Misfires (ammo)											
MFOP	Magazine follower out of position											
MLH	Magazine loads hard											
OH	Opens hard											
PH	Pulls hard											
PSI	Proof stamp illegible											

PSM	Proof stamp missing											
RBOC	Rings and bulges on case											
RDW	(Action) release doesn't work											
RIC	Rings in chamber											
SBC	Stems bottom chambers											
SBCL	Shell binds carrier latch											
SBE	Stems bbl extension											
SCB	Stock cracked or broken											
SCX	Shell catches											
SHI	Short indent											
SIC	Stems in chamber											
SL	shaves lead											
SLC	Stems left side of chamber											
SMOC	Stretch marks on case											
SRC	Stems right side of chamber											
SRIC	Specific rings in chamber											
SSC	shell stems carrier											
STC	Stems top chamber											
SWE	Safety switch works too easily											
SWH	Safety switch works too hard											
SWW	Safety ewitxh won't work											
TD	Tips down											
TU	Tips up											
TWP	Trigger won't pull											
TWR	Trigger won't retract											
UNCN-T	Uncoded											
XH	Extracts hard											

XHB	Extractor hits bbl												
HI	High												
LO	Low												
LEFT	Left												
RIGHT	Right												
DG	Doesn't Group												
FSST	Front sight tipped												
RSTT	Rear sight tipped												
RSBR	Rear sight base raised												
FSTR	Front sight raised												
FSTL	Front sight loose												
RSTL	Rear sight loose												
MGPT-G	Missing parts at target												
UNCN-G	Uncoded nonconformity at target												
AI-P	Assembly incomplete at proof												
BC-P	Blows cases at proof												
BEB-P	Barrel extension broken at proof												
BLP-P	Blanked primer at proof												
BP-P	Blown primer at proof												
BS-P	Barrel split at proof												
DLOS-P	Doesn't lock over shells at proof												
ESB-P	Ejector sticks back at proof												
FCB-P	Fore-end cracked at proof												
FESO-P	Fore-end shot off at proof												
FF-P	Fails to fire at proof												

GCSO-P	Gas cylinder shot off at proof
GRSO-P	Guide ring shot off at proof
MCSO-P	Magazine cap shot off at proof
MSI-P	Magnaflex stamp illegible or bbl
MSM-P	Magnaflex stamp missing on bbl
PP-P	Pierced primer at proof
SCB-P	Stock cracked or broken at proof
UNCM-P	Uncoded proof malfunctions



[illegible]

MAE00014530










<b>Summary</b>	Total Test + Proof Failures	0
	Total Rejected:	0
	Overall Reject Rate:	

<b>Proof</b>	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										
<b>Test</b>	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										
<b>Target</b>	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
AB	Action binds										
ASFB	Action spring follower binds										
BABS	Bulge at body shoulder										
BAC	Burr at chamber										
BB	Bolt binds/catches										
BCOE	Bolt catches on ejector										
BC	Blows cases										
BLOP	Bar lock or disconnecter out of position										
BSCO	Barrel support came out										
CBS-F	Shells catch on bbl support-feeding										
CBS-L	Shells catch on bbl support-loading										
CC	Carrier catches on shells,mag,receiver										
CD	Case dented										
CH	Closes hard										

CHAB	Carrier hits action bar											
CLM	Can't load magazine											
CO	Cut-off											
CR	Cuts rim											
CS	Cases swell											
CTOG	Chamber torn or gouged											
CTP	Creepy trigger pull											
CWSB	Cams wrong side of action bar											
DBB	Doesn't blow back											
DCS	Double click in safety switch											
DCT	Double click in trigger											
DCU	Doesn't close-up											
DE	Doesn't eject											
DEL	Doesn't eject live round											
DFU	Doesn't feed up											
DLO	Doesn't lock open (after last shell)											
DLU	Doesn't lock-up											
DS	Dead safe											
DSM	Drops shell-magazine											
DTL	Doesn't trip latch											
DX	Doesn't extract											
DXL	Doesn't extract live round											
EDS	Extractor drops shell											
ESB	Ejector sticks back											
ESS	Extractor stems shell											
FA	Fires automatically											
FB	Follower binds											



FC	Fails to connect												
FCB	Fore-end cracked or broken												
FD	Follows-down												
FF	Fails to fire												
FFM	Fails to feed from magazine												
FFP	Flat firing pin												
FOS	Fires on safe												
FSR	Fires when safe is released												
GCSO	Gas cyl shot off												
GRSO	Guide ring shot off												
HPA	High pressure ammo												
HUE	Hard under extractor												
ILOP	Int. latch out of position												
ILRM	Int. latch ret. Missing												
ILSB	Int. latch stud broken												
ILSP	Int. latch spring out of position												
JL	Jumps latch												
JO	Jars off												
LB	Light blow												
MCSO	Magazine cap shot off												
MCW	Magazine capacity wrong												
MFA	Misfires (ammo)												
MFOP	Magazine follower out of position												
MLH	Magazine loads hard												
OH	Opens hard												
PH	Pulls hard												
PSI	Proof stamp illegible												

PSM	Proof stamp missing											
RBOC	Rings and bulges on case											
RDW	(Action) release doesn't work											
RIC	Rings in chamber											
SBC	Stems bottom chambers											
SBCL	Shell binds carrier latch											
SBE	Stems bbl extension											
SCB	Stock cracked or broken											
SCX	Shell catches											
SHI	Short indent											
SIC	Stems in chamber											
SL	shaves lead											
SLC	Stems left side of chamber											
SMOC	Stretch marks on case											
SRC	Stems right side of chamber											
SRIC	Specific rings in chamber											
SSC	shell stems carrier											
STC	Stems top chamber											
SWE	Safety switch works too easily											
SWH	Safety switch works too hard											
SWW	Safety ewitxh won't work											
TD	Tips down											
TU	Tips up											
TWP	Trigger won't pull											
TWR	Trigger won't retract											
UNCN-T	Uncoded											
XH	Extracts hard											

XHB	Extractor hits bbl												
HI	High												
LO	Low												
LEFT	Left												
RIGHT	Right												
DG	Doesn't Group												
FSST	Front sight tipped												
RSTT	Rear sight tipped												
RSBR	Rear sight base raised												
FSTR	Front sight raised												
FSTL	Front sight loose												
RSTL	Rear sight loose												
MGPT-G	Missing parts at target												
UNCN-G	Uncoded nonconformity at target												
AI-P	Assembly incomplete at proof												
BC-P	Blows cases at proof												
BEB-P	Barrel extension broken at proof												
BLP-P	Blanked primer at proof												
BP-P	Blown primer at proof												
BS-P	Barrel split at proof												
DLOS-P	Doesn't lock over shells at proof												
ESB-P	Ejector sticks back at proof												
FCB-P	Fore-end cracked at proof												
FESO-P	Fore-end shot off at proof												
FF-P	Fails to fire at proof												

GCSO-P	Gas cylinder shot off at proof
GRSO-P	Guide ring shot off at proof
MCSO-P	Magazine cap shot off at proof
MSI-P	Magnaflex stamp illegible or bbl
MSM-P	Magniflux stamp missing or bbl
PP-P	Pierced primer at proof
SCB-P	Stock cracked or broken at proof
UNCM-P	Uncoded proof malfunctions

[illegible][illegible]












<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

**Proof**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

**Test**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

**Target**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
AB	Action binds										
ASFB	Action spring follower binds										
BABS	Bulge at body shoulder										
BAC	Burr at chamber										
BB	Bolt binds/catches										
BCOE	Bolt catches on ejector										
BC	Blows cases										
BLOP	Bar lock or disconnecter out of position										
BSCO	Barrel support came out										
CBS-F	Shells catch on bbl support-feeding										
CBS-L	Shells catch on bbl support-loading										
CC	Carrier catches on shells,mag,receiver										
CD	Case dented										
CH	Closes hard										

CHAB	Carrier hits action bar											
CLM	Can't load magazine											
CO	Cut-off											
CR	Cuts rim											
CS	Cases swell											
CTOG	Chamber torn or gouged											
CTP	Creepy trigger pull											
CWSB	Cams wrong side of action bar											
DBB	Doesn't blow back											
DCS	Double click in safety switch											
DCT	Double click in trigger											
DCU	Doesn't close-up											
DE	Doesn't eject											
DEL	Doesn't eject live round											
DFU	Doesn't feed up											
DLO	Doesn't lock open (after last shell)											
DLU	Doesn't lock-up											
DS	Dead safe											
DSM	Drops shell-magazine											
DTL	Doesn't trip latch											
DX	Doesn't extract											
DXL	Doesn't extract live round											
EDS	Extractor drops shell											
ESB	Ejector sticks back											
ESS	Extractor stems shell											
FA	Fires automatically											
FB	Follower binds											

FC	Fails to connect											
FCB	Fore-end cracked or broken											
FD	Follows-down											
FF	Fails to fire											
FFM	Fails to feed from magazine											
FFP	Flat firing pin											
FOS	Fires on safe											
FSR	Fires when safe is released											
GCSO	Gas cyl shot off											
GRSO	Guide ring shot off											
HPA	High pressure ammo											
HUE	Hard under extractor											
ILOP	Int. latch out of position											
ILRM	Int. latch ret. Missing											
ILSB	Int. latch stud broken											
ILSP	Int. latch spring out of position											
JL	Jumps latch											
JO	Jars off											
LB	Light blow											
MCSO	Magazine cap shot off											
MCW	Magazine capacity wrong											
MFA	Misfires (ammo)											
MFOP	Magazine follower out of position											
MLH	Magazine loads hard											
OH	Opens hard											
PH	Pulls hard											
PSI	Proof stamp illegible											

PSM	Proof stamp missing											
RBOC	Rings and bulges on case											
RDW	(Action) release doesn't work											
RIC	Rings in chamber											
SBC	Stems bottom chambers											
SBCL	Shell binds carrier latch											
SBE	Stems bbl extension											
SCB	Stock cracked or broken											
SCX	Shell catches											
SHI	Short indent											
SIC	Stems in chamber											
SL	shaves lead											
SLC	Stems left side of chamber											
SMOC	Stretch marks on case											
SRC	Stems right side of chamber											
SRIC	Specific rings in chamber											
SSC	shell stems carrier											
STC	Stems top chamber											
SWE	Safety switch works too easily											
SWH	Safety switch works too hard											
SWW	Safety ewitxh won't work											
TD	Tips down											
TU	Tips up											
TWP	Trigger won't pull											
TWR	Trigger won't retract											
UNCN-T	Uncoded											
XH	Extracts hard											

XHB	Extractor hits bbl												
HI	High												
LO	Low												
LEFT	Left												
RIGHT	Right												
DG	Doesn't Group												
FSST	Front sight tipped												
RSTT	Rear sight tipped												
RSBR	Rear sight base raised												
FSTR	Front sight raised												
FSTL	Front sight loose												
RSTL	Rear sight loose												
MGPT-G	Missing parts at target												
UNCN-G	Uncoded nonconformity at target												
AI-P	Assembly incomplete at proof												
BC-P	Blows cases at proof												
BEB-P	Barrel extension broken at proof												
BLP-P	Blanked primer at proof												
BP-P	Blown primer at proof												
BS-P	Barrel split at proof												
DLOS-P	Doesn't lock over shells at proof												
ESB-P	Ejector sticks back at proof												
FCB-P	Fore-end cracked at proof												
FESO-P	Fore-end shot off at proof												
FF-P	Fails to fire at proof												

GCSO-P	Gas cylinder shot off at proof									
GRSO-P	Guide ring shot off at proof									
MCSO-P	Magazine cap shot off at proof									
MSI-P	Magnaflux stamp illegible or bbl									
MSM-P	Magnaflux stamp missing on bbl									
PP-P	Pierced primer at proof									
SCB-P	Stock cracked or broken at proof									
UNCM-P	Uncoded proof malfunctions									



[illegible][illegible]










<b>Summary</b>	<b>Total Test + Proof Failures</b>	<b>0</b>
	<b>Total Rejected:</b>	<b>0</b>
	<b>Overall Reject Rate:</b>	

<b>Proof</b>	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										
<b>Test</b>	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										
<b>Target</b>	Shot:										
	Rejected:	0	0	0	0	0	0	0	0	0	0
	Percent:										

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
AB	Action binds										
ASFB	Action spring follower binds										
BABS	Bulge at body shoulder										
BAC	Burr at chamber										
BB	Bolt binds/catches										
BCOE	Bolt catches on ejector										
BC	Blows cases										
BLOP	Bar lock or disconnecter out of position										
BSCO	Barrel support came out										
CBS-F	Shells catch on bbl support-feeding										
CBS-L	Shells catch on bbl support-loading										
CC	Carrier catches on shells,mag,receiver										
CD	Case dented										
CH	Closes hard										

CHAB	Carrier hits action bar											
CLM	Can't load magazine											
CO	Cut-off											
CR	Cuts rim											
CS	Cases swell											
CTOG	Chamber torn or gouged											
CTP	Creepy trigger pull											
CWSB	Cams wrong side of action bar											
DBB	Doesn't blow back											
DCS	Double click in safety switch											
DCT	Double click in trigger											
DCU	Doesn't close-up											
DE	Doesn't eject											
DEL	Doesn't eject live round											
DFU	Doesn't feed up											
DLO	Doesn't lock open (after last shell)											
DLU	Doesn't lock-up											
DS	Dead safe											
DSM	Drops shell-magazine											
DTL	Doesn't trip latch											
DX	Doesn't extract											
DXL	Doesn't extract live round											
EDS	Extractor drops shell											
ESB	Ejector sticks back											
ESS	Extractor stems shell											
FA	Fires automatically											
FB	Follower binds											



FC	Fails to connect											
FCB	Fore-end cracked or broken											
FD	Follows-down											
FF	Fails to fire											
FFM	Fails to feed from magazine											
FFP	Flat firing pin											
FOS	Fires on safe											
FSR	Fires when safe is released											
GCSO	Gas cyl shot off											
GRSO	Guide ring shot off											
HPA	High pressure ammo											
HUE	Hard under extractor											
ILOP	Int. latch out of position											
ILRM	Int. latch ret. Missing											
ILSB	Int. latch stud broken											
ILSP	Int. latch spring out of position											
JL	Jumps latch											
JO	Jars off											
LB	Light blow											
MCSO	Magazine cap shot off											
MCW	Magazine capacity wrong											
MFA	Misfires (ammo)											
MFOP	Magazine follower out of position											
MLH	Magazine loads hard											
OH	Opens hard											
PH	Pulls hard											
PSI	Proof stamp illegible											

PSM	Proof stamp missing											
RBOC	Rings and bulges on case											
RDW	(Action) release doesn't work											
RIC	Rings in chamber											
SBC	Stems bottom chambers											
SBCL	Shell binds carrier latch											
SBE	Stems bbl extension											
SCB	Stock cracked or broken											
SCX	Shell catches											
SHI	Short indent											
SIC	Stems in chamber											
SL	shaves lead											
SLC	Stems left side of chamber											
SMOC	Stretch marks on case											
SRC	Stems right side of chamber											
SRIC	Specific rings in chamber											
SSC	shell stems carrier											
STC	Stems top chamber											
SWE	Safety switch works too easily											
SWH	Safety switch works too hard											
SWW	Safety ewitxh won't work											
TD	Tips down											
TU	Tips up											
TWP	Trigger won't pull											
TWR	Trigger won't retract											
UNCN-T	Uncoded											
XH	Extracts hard											

XHB	Extractor hits bbl
HI	High
LO	Low
LEFT	Left
RIGHT	Right
DG	Doesn't Group
FSST	Front sight tipped
RSTT	Rear sight tipped
RSBR	Rear sight base raised
FSTR	Front sight raised
FSTL	Front sight loose
RSTL	Rear sight loose
MGPT-G	Missing parts at target
UNCN-G	Uncoded nonconformity at target
AI-P	Assembly incomplete at proof
BC-P	Blows cases at proof
BEB-P	Barrel extension broken at proof
BLP-P	Blanked primer at proof
BP-P	Blown primer at proof
BS-P	Barrel split at proof
DLOS-P	Doesn't lock over shells at proof
ESB-P	Ejector sticks back at proof
FCB-P	Fore-end cracked at proof
FESO-P	Fore-end shot off at proof
FF-P	Fails to fire at proof

GCSO-P	Gas cylinder shot off at proof
GRSO-P	Guide ring shot off at proof
MCSO-P	Magazine cap shot off at proof
MSI-P	Magnaflex stamp illegible or bbl
MSM-P	Magnaflex stamp missing on bbl
PP-P	Pierced primer at proof
SCB-P	Stock cracked or broken at proof
UNCM-P	Uncoded proof malfunctions

<b><i>Test Date:</i></b>					
0	0	0	0	0	0
0	0	0	0	0	0
0	0	0	0	0	0

[illegible]












<b>Summary</b>	Total Test + Proof Failures	0
	Total Rejected:	0
	Overall Reject Rate:	

**Proof**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

**Test**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

**Target**

Shot:										
Rejected:	0	0	0	0	0	0	0	0	0	0
Percent:										

CODE	MALFUNCTION INDEX	1187 Super Mag	1187 12Ga	1187 20Ga	1100 12Ga	1100 16Ga	1100 20Ga	1100 28Ga	1100 410Ga	870 12Ga	870 16Ga
AB	Action binds										
ASFB	Action spring follower binds										
BABS	Bulge at body shoulder										
BAC	Burr at chamber										
BB	Bolt binds/catches										
BCOE	Bolt catches on ejector										
BC	Blows cases										
BLOP	Bar lock or disconnecter out of position										
BSCO	Barrel support came out										
CBS-F	Shells catch on bbl support-feeding										
CBS-L	Shells catch on bbl support-loading										
CC	Carrier catches on shells,mag,receiver										
CD	Case dented										
CH	Closes hard										

CHAB	Carrier hits action bar											
CLM	Can't load magazine											
CO	Cut-off											
CR	Cuts rim											
CS	Cases swell											
CTOG	Chamber torn or gouged											
CTP	Creepy trigger pull											
CWSB	Cams wrong side of action bar											
DBB	Doesn't blow back											
DCS	Double click in safety switch											
DCT	Double click in trigger											
DCU	Doesn't close-up											
DE	Doesn't eject											
DEL	Doesn't eject live round											
DFU	Doesn't feed up											
DLO	Doesn't lock open (after last shell)											
DLU	Doesn't lock-up											
DS	Dead safe											
DSM	Drops shell-magazine											
DTL	Doesn't trip latch											
DX	Doesn't extract											
DXL	Doesn't extract live round											
EDS	Extractor drops shell											
ESB	Ejector sticks back											
ESS	Extractor stems shell											
FA	Fires automatically											
FB	Follower binds											

FC	Fails to connect											
FCB	Fore-end cracked or broken											
FD	Follows-down											
FF	Fails to fire											
FFM	Fails to feed from magazine											
FFP	Flat firing pin											
FOS	Fires on safe											
FSR	Fires when safe is released											
GCSO	Gas cyl shot off											
GRSO	Guide ring shot off											
HPA	High pressure ammo											
HUE	Hard under extractor											
ILOP	Int. latch out of position											
ILRM	Int. latch ret. Missing											
ILSB	Int. latch stud broken											
ILSP	Int. latch spring out of position											
JL	Jumps latch											
JO	Jars off											
LB	Light blow											
MCSO	Magazine cap shot off											
MCW	Magazine capacity wrong											
MFA	Misfires (ammo)											
MFOP	Magazine follower out of position											
MLH	Magazine loads hard											
OH	Opens hard											
PH	Pulls hard											
PSI	Proof stamp illegible											

PSM	Proof stamp missing											
RBOC	Rings and bulges on case											
RDW	(Action) release doesn't work											
RIC	Rings in chamber											
SBC	Stems bottom chambers											
SBCL	Shell binds carrier latch											
SBE	Stems bbl extension											
SCB	Stock cracked or broken											
SCX	Shell catches											
SHI	Short indent											
SIC	Stems in chamber											
SL	shaves lead											
SLC	Stems left side of chamber											
SMOC	Stretch marks on case											
SRC	Stems right side of chamber											
SRIC	Specific rings in chamber											
SSC	shell stems carrier											
STC	Stems top chamber											
SWE	Safety switch works too easily											
SWH	Safety switch works too hard											
SWW	Safety ewitxh won't work											
TD	Tips down											
TU	Tips up											
TWP	Trigger won't pull											
TWR	Trigger won't retract											
UNCN-T	Uncoded											
XH	Extracts hard											

XHB	Extractor hits bbl												
HI	High												
LO	Low												
LEFT	Left												
RIGHT	Right												
DG	Doesn't Group												
FSST	Front sight tipped												
RSTT	Rear sight tipped												
RSBR	Rear sight base raised												
FSTR	Front sight raised												
FSTL	Front sight loose												
RSTL	Rear sight loose												
MGPT-G	Missing parts at target												
UNCN-G	Uncoded nonconformity at target												
AI-P	Assembly incomplete at proof												
BC-P	Blows cases at proof												
BEB-P	Barrel extension broken at proof												
BLP-P	Blanked primer at proof												
BP-P	Blown primer at proof												
BS-P	Barrel split at proof												
DLOS-P	Doesn't lock over shells at proof												
ESB-P	Ejector sticks back at proof												
FCB-P	Fore-end cracked at proof												
FESO-P	Fore-end shot off at proof												
FF-P	Fails to fire at proof												

GCSO-P								Gas cylinder shot off at proof
CPSO-P								Guide ring shot off at proof
MCSO-P								Magazine cap shot off at proof
MSI-P								Magnaflex stamp illegible or bbl
MSM-P								Magniflux stamp missing or bbl
PFP-P								Pierced primer at proof
SCB-P								Stock cracked or broken at proof
UNCM-P								Uncoded proof malfunctions



<i><b>Test Date:</b></i>					
0	0	0	0	0	0
0	0	0	0	0	0
0	0	0	0	0	0
0	0	0	0	0	0

[illegible]









CONFIDENTIAL
