

### Employee Technical Test 870

1. What is the function of the right shell latch?
  - A. Feeds the shells from the magazine tube on to the carrier.
  - B. Stop the action bars from coming out of the firearm.
  - C. Holds the shells in the magazine tube until the bolt is open.
  - D. Acts as the stop latch to stop the shells from feeding back on to the carrier when the action is open.
2. What contains the pressure of the fired round?
  - A. The action bar lock
  - B. The left and right connectors
  - C. The foreword pressure of the shooters hand
  - D. The bolt and barrel assembly
3. To put the bolt, Fore-end assembly, and slide back into the action:
  - A. You must put the barrel on first.
  - B. Depress the left latch then the right.
  - C. Depress the right then left latch.
  - D. Depress the left latch only.
4. When replacing the fore-end assembly on a pre-93' shotgun you must also order what part/parts?
  - A. "Flexi-tab" kit
  - B. Bolt assembly
  - C. Carrier assembly
  - D. Slide assembly
5. There are two types of magazine caps. Explain why/when one is used over the other.
6. What magazine spring retainer is used on an 870 EXP HD 7 shot?
  - A. F97616
  - B. F91657
  - C. F93515
  - D. None of the above
7. What prevents the firing pin from reaching the primer until the gun is lock up?
  - A. The action bar lock
  - B. The left connector
  - C. The locking block
  - D. None of the above

**Employee Technical Test 870**

8. What part/s could be malfunctioning if when removing the barrel, the fore-end, bolt assembly, and slide assembly keep "falling out" of the shotgun?
  - A. The action bar lock.
  - B. The left shell latch, and the action bar.
  - C. The action bar, and bolt assembly
  - D. The right connector
9. If the trigger plate pins keep falling out on there own what part could be missing?
  - A. Sear spring
  - B. Trigger plate detent spring
  - C. Carrier dog spring
  - D. Hammer plunger
10. When firing the shotgun without supporting the fore-end the bolt opens and sometimes extracts the fired hull. What part/s could be damaged?
  - A. Action bar lock
  - B. Bolt assembly
  - C. Locking block
  - D. None this normal on some shotguns
11. Explain how to disassemble the 870 as outlined in the owner's manual.

### Employee Technical Test 870

1. What is the function of the right shell latch?
  - a. Feeds the shells from the magazine tube on to the carrier.
  - b. Stop the action bars from coming out of the firearm.
  - c. ~~Holds the shells in the magazine tube until the bolt is open~~
  - d. Acts as the stop latch to stop the shells from feeding back on to the carrier when the action is open.
2. What contains the pressure of the fired round?
  - a. The action bar lock
  - b. The left and right connectors
  - c. The foreword pressure of the shooters hand
  - d. ~~The bolt and barrel assembly~~
3. To put the bolt, Fore-end assembly, and slide back into the receiver:
  - a. You must put the barrel on first.
  - b. Depress the left latch then the right.
  - c. ~~Depress the right then left latch.~~
  - d. Depress the left latch only
4. When replacing the fore-end assembly on a pre-93' shotgun you must also order what part/parts?
  - a. "Flexi-tab" kit
  - b. Bolt assembly
  - c. Carrier assembly
  - d. ~~Slide assembly~~
5. There are two types of magazine caps. Explain why/when one is used over the other.  
~~O/S magazine caps still used on police shotguns and any shot made before '87.  
The N/S magazine cap is used on all shotguns made after '87 Exp. 870 police shotguns.~~
6. What magazine spring retainer is used on an 870 EXP HD 7 shot?
  - a. F97616
  - b. F91657
  - c. F93515
  - d. ~~None of the above~~
7. What prevents the firing pin from reaching the primer until the gun is lock up?
  - a. The action bar lock
  - b. The left connector
  - c. ~~The locking block~~
  - d. None of the above

**Employee Technical Test 870**

8. What part/s could be malfunctioning if when removing the barrel, the fore-end, bolt assembly, and slide assembly keep "falling out" of the shotgun?
- a. The action bar lock.
  - b. ~~The left shell latch, and the action bar.~~
  - c. The action bar, and bolt assembly
  - d. The right connector
9. If the trigger plate pins keep falling out on there own what part could be missing?
- a. Sear spring
  - b. ~~Trigger plate detent spring~~
  - c. Carrier dog spring
  - d. Hammer plunger
10. When firing the shotgun without supporting the fore-end the bolt opens and sometimes extracts the fired hull. What part/s could be damaged?
- a. Action bar lock
  - b. Bolt assembly
  - c. Locking block
  - d. ~~None this normal on some shotguns~~
11. Explain how to disassemble the 870 as outlined in the owner's manual.

~~See owners manual~~