


SAFETY INFORMATION

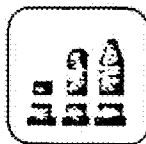

NEVER USE THE WRONG AMMUNITION:

- Only use ammunition of the correct caliber, that is in good condition.
- Before loading, check the caliber shown on the ammunition, and caliber shown on the firearm. They must be the same caliber.
- Handloads can be dangerous. Remington Arms Company, Inc., is not responsible for accidents or damage caused by badly loaded handloads.



NEVER MAKE ADJUSTMENTS:

- Do not make changes or alterations to any parts of a firearm. Use only REMINGTON parts.
- Never make an adjustment to the trigger, or change the shape or size of the sear, sear notch, or other parts.



EYE PROTECTION:

- Wear safety glasses when using a firearm.



EAR PROTECTION:

- Wear hearing protectors when firing to adjust the sights.

3



IMPORTANT PARTS OF THE FIREARM

THE SAFETY SWITCH

The safety switch provides protection against accidental or unintentional discharge under normal usage when properly engaged.

To engage the safety switch, put the switch in the "S" position. See picture 3.

Always put the safety switch in the "S" position when the firearm is loaded and not ready for firing.

The bolt handle cannot be lifted when the safety switch is in the "S" position. See picture 3.



When you are ready to fire the firearm, put the safety switch in the "F" position. See picture 4.

Never pull the trigger when the safety switch is in the "S" position.

WARNING: The firearm will fire when the trigger is pulled and the safety switch is in the "F" position.



Even when the safety switch is in the "S" position, careless handling can cause the firearm to fire.

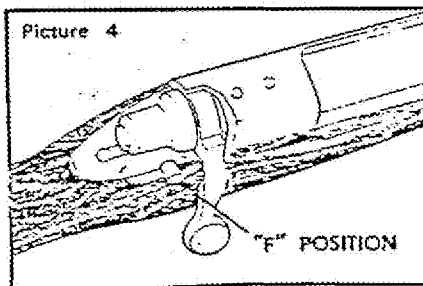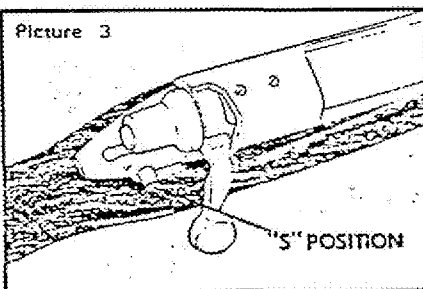

4



NTBOOK275