

TO CLEAN THE BARREL

WARNING: Check the chamber and magazine to make sure there are no cartridges in the firearm.

- 1. Use the instructions and the equipment provided in a good cleaning kit.
- 2. Remove the bolt assembly. See page 5.
- Select the correct caliber cleaning brush and attach the brush to the cleaning rod.
- 4. Put the cleaning brush into the gun cleaning solvent.
- Push the cleaning rod through the barrel several times. NOTE: Always clean the barrel from the chamber end to the muzzle.
- 6. Push the correct cleaning patch through the bore.
- Repeat several times using a new cleaning patch each time, until the patch is not dirty.
- 3. Apply a thin coat of oil to the outside of the barrel with a soft cloth.
- Clean the varmint models with a wire brush and cleaning patches after firing 25 cartridges.

WARNING: Before you replace the bolt assembly, make sure the barrel is free of obstructions.

WARNING: This firearm should be checked periodically by The Remington Arms Company Inc. or a REMINGTON RECOMMENDED GUNSMITH. This will insure proper inspection and any necessary replacement of worn or damaged parts.

TO CLEAN THE ACTION

- 1. Remove the bolt assembly. See page 5.
- 2. Turn the rifle poside down.
- Remove the screws from the trigger guard. See picture 12, or picture 13.
- 4. Lift the stock away from the action.

NOTE: MODELS WITHOUT A FLOOR PLATE: Remove the magazine soring and follower from the magazine.

NOTE: MODELS WITH A FLOOR PLATE:
Remove the magazine spring and follower from the

- 5. Clean the action with a gun cleaning solvent and dry /
- 6. Apply a thin coat of oil to prevent rust.

TO ASSEMBLE THE MODELS WITHOUT A FLOOR PLATE

- Put the magazine follower and the spring into the magazine.
- 2. Put the stock over the action.
- 3. Replace and tighten the screws on the trigger guard.
- 4. Replace the bolt assembly.

TO ASSEMBLE THE MODELS WITH A FLOOR PLATE

- Put the magazine all the way into the bottom of the receiver.
- 2. Assemble the trigger guard assembly on the stock.
- 3. Put the stock over the action.
- 4. Replace and tighten the trigger guard screws.
- 5. Replace the bolt assembly.





