

TO CLEAN THE RECEIVER AND TRIGGER ASSEMBLY

TO CLEAN THE RECEIVER AND TRIGGER ASSEMBLY

1. Put safety switch to "S" position.
2. Remove the bolt assembly. See Instructions on Page 5.
3. Turn the rifle upside down.
4. Remove the screws from the trigger guard. See Picture 10.
5. Lift the stock away from the receiver and trigger assembly.



MODELS WITHOUT A FLOOR PLATE:

Remove the magazine spring and follower from the receiver.

NOTE: Clean the receiver and trigger assembly as a unit with Remtm Oil.

6. Spray the receiver and the four points of the trigger assembly with Remtm Oil (see Picture 11). Let stand for 15 minutes. Spray again to wash off components. Shake off excess lubricant.

WARNING: Excessive use of a non-recommended lubricant may cause serious function problems possibly leading to accidental firing.

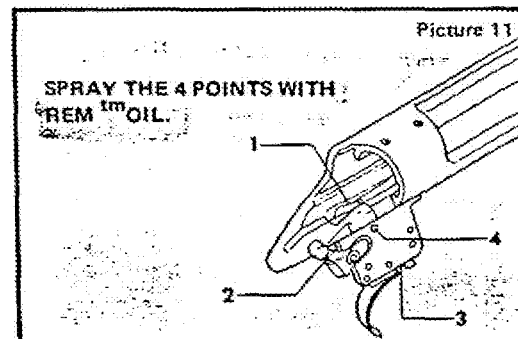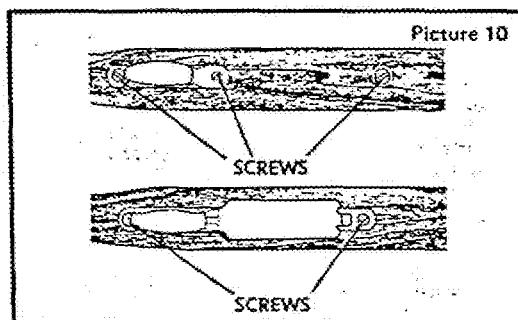

NTBOOK279

FOR INFORMATION ONLY: THIS BOOK IS NOT TO BE USED FOR ANY OTHER PURPOSE