


86

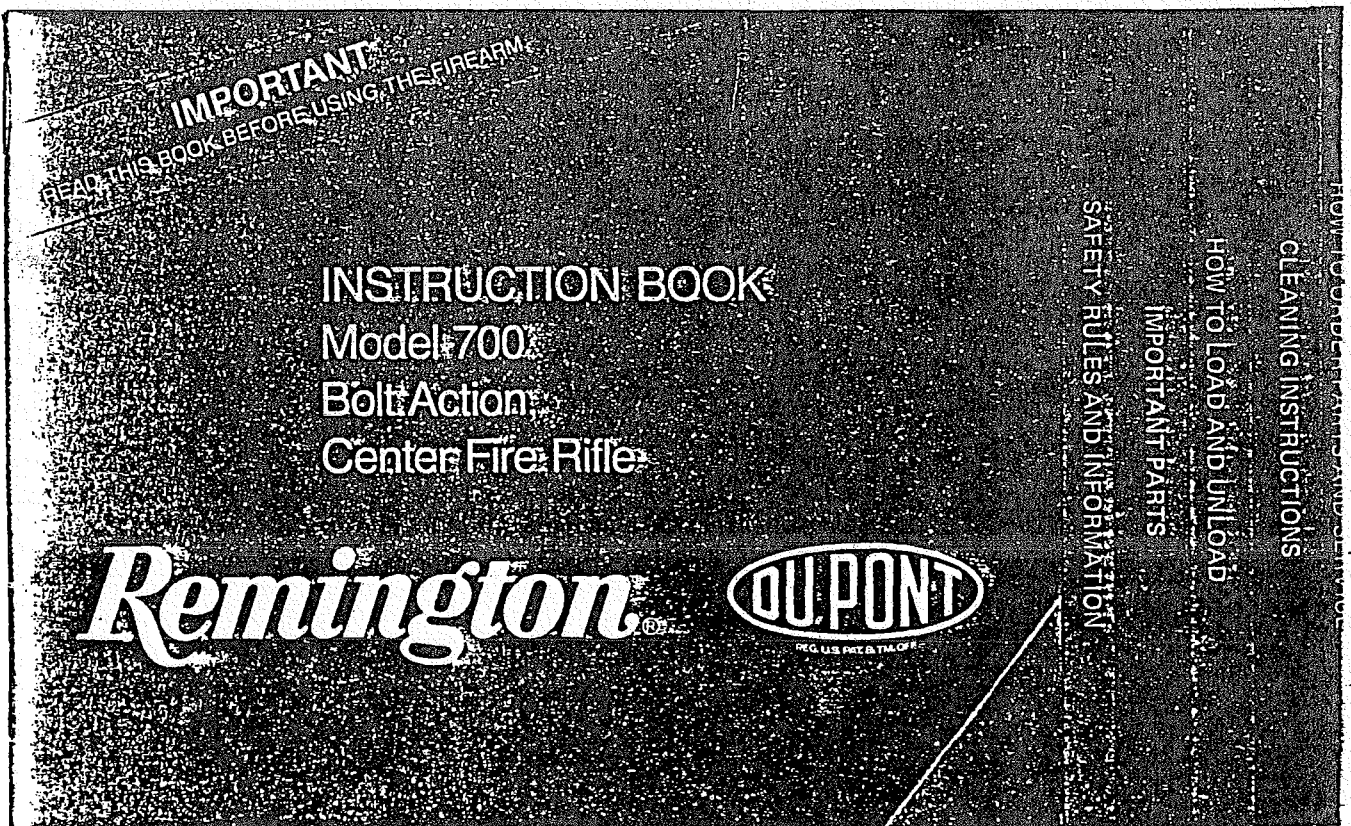


1986

MODEL 700 BOLT ACTION RIFLE

SAFE


PICTURE 1

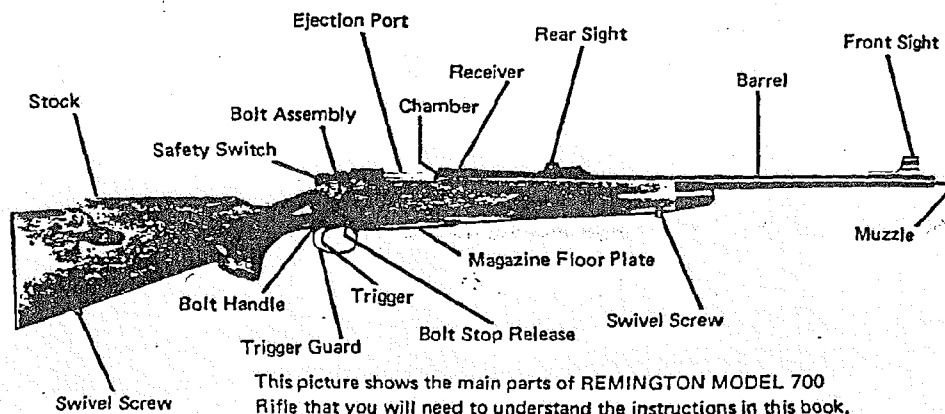

This picture shows the main parts of REMINGTON MODEL 700 Rifle that you will need to understand the instructions in this book.

This picture shows the parts of the ammunition:

PICTURE 2
AMMUNITION

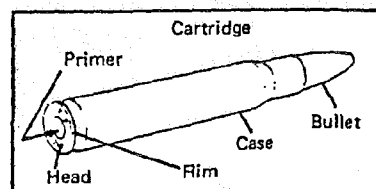

SAFETY RULES


WARNING

READ THESE BASIC SAFETY RULES. Learn how to handle your firearm safely. Failure to obey these rules can result in serious personal injuries. Only you can prevent accidents.



KNOW YOUR FIREARM. To use it correctly and safely, read and follow the instructions in the enclosed firearms safety booklet and this instruction book.

TREAT EVERY FIREARM AS IF IT WERE LOADED. Don't rely on the safety switch. Use it as shown in this book.

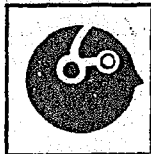

NEVER MAKE ADJUSTMENTS. Do not make changes or alterations to any parts of a firearm. Use only REMINGTON parts. Never make an adjustment to the trigger, or change the shape or size of the sear, sear notch, or other parts.

MAKE YOURSELF SAFE. Wear eye protection, such as glasses or sunglasses, when shooting. Wear ear protection, such as ear plugs or muffs, when target shooting or plinking. Repeated exposure to shooting noise can cause permanent hearing loss. Never drink alcoholic beverages before or during shooting.



TAKE CARE OF YOUR FIREARM. Keep the barrel clean and free of obstructions. Clean and have the firearm checked periodically to make sure it is mechanically correct. Worn, damaged or missing parts may be dangerous.

WATCH YOUR MUZZLE. Always keep the firearm pointed in a safe direction.

WATCH THAT MUZZLE

Front Sight

Muzzle

Bullet

SAFETY RULES AND INFORMATION

IMPORTANT PARTS

HOW TO LOAD AND UNLOAD



CLEANING INSTRUCTIONS

HOW TO ORDER PARTS AND SERVICE

SAFETY RULES



**RANGE
1/2 TO 5
MILES**

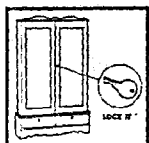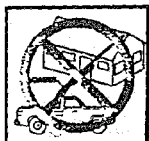

NEVER USE THE WRONG AMMUNITION. Only use ammunition that exactly matches the caliber or gauge markings on your firearm. Handloads can be dangerous. Remington Arms Company, Inc. is not responsible for accidents or damage caused by badly-loaded handloads.

LOAD YOUR FIREARM SAFELY. Never load a firearm until you are in a location where it is safe to shoot, and you are ready to shoot.

KNOW YOUR TARGET. Before you pull the trigger, make sure you can see the target clearly, and the path of the bullet, slug, or shot charge beyond the target. Never shoot at water, rocks, or any hard surface. Bullets may glance off such surfaces and cause injuries.

KNOW THE RANGE OF YOUR FIREARM. Remember, shotgun pellets can travel 500 yards and shotgun slugs have a range of more than one-half mile. Rimfire bullets can travel more than 1 1/2 miles. Centerfire bullets can travel up to 5 miles.

IF FIREARM FAILS TO FIRE keep it pointed in safe direction, then unload carefully avoiding exposure to breach. If firearm fires but report or recoil seems weak, unload and then make sure the barrel is not obstructed.

UNLOAD YOUR FIREARM WHENEVER YOU ARE NOT SHOOTING. Never carry or store a loaded firearm in a building or a vehicle. Unload your firearm before climbing up or over a fallen tree, fence or slippery area.

STORE YOUR FIREARM SAFELY. Keep firearms and ammunition away from children. Lock unloaded firearms and ammunition securely in separate locations.

IMPORTANT

THE SAFETY SWITCH

The safety switch prevents unintentional discharge when engaged.

To engage the safety switch, see picture.

Always put the safety switch in the "F" position when handling, loading or unloading.

When you are ready to shoot, move the safety switch to the "R" position.

Do not touch the trigger when the safety switch is engaged.

Never pull the trigger when the safety switch is engaged.

WARNING: The firearm is not safe to handle when the safety switch is engaged.



Even when the safety switch is engaged, the firearm is not safe to handle.

IMPORTANT PARTS OF THE FIREARM

THE SAFETY SWITCH

The safety switch provides protection against accidental or unintentional discharge under normal usage when properly engaged.

To engage the safety switch, put the switch in the "S" position. See picture 3.

Always put the safety switch in the "S" position before handling, loading or unloading the firearm.

When you are ready to fire the firearm, put the safety switch in the "F" position. See picture 4.

Do not touch the trigger while moving the safety switch.


Never pull the trigger when the safety switch is in the "S" position.

WARNING: The firearm will fire when the trigger is pulled and the safety switch is in the "F" position.




Even when the safety switch is in the "S" position, careless handling can cause the firearm to fire.

Picture 3

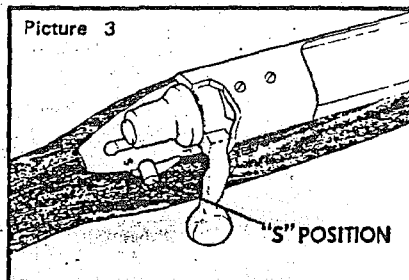


Picture 4

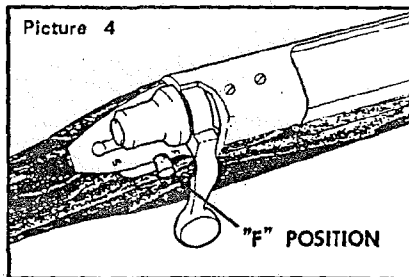

HOW TO ORDER PARTS AND SERVICE
CLEANING INSTRUCTIONS
HOW TO LOAD AND UNLOAD
IMPORTANT PARTS

THE BOLT ASSEMBLY

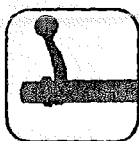


The bolt assembly locks the cartridge into the chamber.

TO INSTALL THE BOLT ASSEMBLY:

1. Point the firearm in a safe direction.
2. Put the safety switch in the "S" position.
3. Align the lugs on the bolt assembly with the receiver. See picture 5.
4. Slide the bolt assembly into the receiver and push all the way in.
5. To lock the bolt assembly into position push the bolt handle down.

TO REMOVE THE BOLT ASSEMBLY:

1. Point the firearm in a safe direction.
2. Put the safety switch in the "S" position.
3. Do not touch the trigger while moving the safety switch.
4. Raise the bolt handle.
5. Pull the bolt handle all the way back.
6. Push the bolt stop release. See picture 5.
7. As you push the bolt stop release, slide the bolt from the firearm.

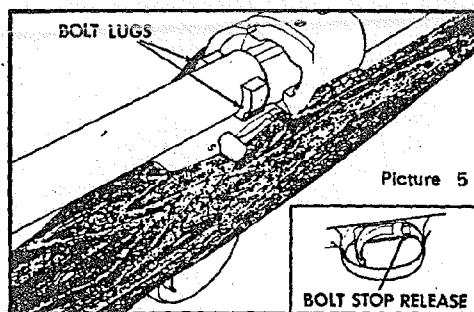

THE TRIGGER ASSEMBLY

Pulling the trigger fires the firearm.

The trigger is adjusted at the factory. All adjustments to the trigger must be made by the factory or a REMINGTON RECOMMENDED GUNSMITH.



Never remove the trigger mechanism, or make adjustments to the trigger or trigger assembly.



NEVER put your finger on the trigger unless you are going to fire the firearm.

THE BARREL



Picture 5



BOLT RELEASE



Trigger guard adjust

Trigger guard
firearm.

The inside of the barrel must be clean and free of obstructions.

I. TO CHECK THE INSIDE OF THE BARREL:

1. Point the firearm in a safe direction.
2. Put the safety switch in the "S" position.
3. Raise the bolt handle.
4. Pull the bolt handle all the way back.
5. Remove any ammunition from the chamber or magazine. See page 8.
6. Remove the bolt. See page 5.
7. Look through the inside of the barrel from the chamber end to the muzzle. See picture 1.

II. TO REMOVE OBJECT FROM INSIDE THE BARREL:

1. Use the correct size cleaning rod.
2. Push the cleaning rod from the chamber end all the way through the barrel, until the rod comes out the muzzle.
3. If an object cannot be easily pushed out of the barrel with a cleaning rod, return the firearm to the factory or a REMINGTON RECOMMENDED GUNSMITH.



NEVER try to remove an object from the barrel by loading another cartridge and firing.

III. TO CLEAN THE BARREL FOLLOW INSTRUCTIONS SHOWN ON PAGE 11.

Before loading the firearm make sure the inside of the barrel is free of dirt, or other objects.

HOW TO ORDER PARTS AND SERVICE
CLEANING INSTRUCTIONS
HOW TO LOAD AND UNLOAD

TO LOAD THE FIREARM

I TO LOAD THE MAGAZINE AND CHAMBER:

1. Point the firearm in a safe direction.
2. Put the safety switch in the "S" position.
3. Raise the bolt handle.
4. Pull the bolt handle all the way back.
5. Push four cartridges of the correct caliber, one at a time into the magazine. If the firearm is a magnum, you only load three cartridges. Keep the bullets aligned toward the chamber. See picture 6.
6. Put one cartridge into the chamber.
7. Use your fingers to push the cartridges in the magazine all the way down. Slowly slide the bolt assembly forward, so that the bolt slides over the top of the cartridges in the magazine.
8. Push the bolt handle down.

THE FIREARM IS NOW LOADED.

9. To fire the firearm put the safety switch in the "F" position.

THE FIREARM IS READY TO FIRE.

II TO LOAD ONE CARTRIDGE ONLY:

1. Point the firearm in a safe direction.
2. Put the safety switch in the "S" position.
3. Raise the bolt handle.

7


4. Pull the bolt handle all the way back.
5. Put one cartridge of the correct caliber on the magazine follower, or in the chamber. See picture 6.
6. Slide the bolt handle forward, then push the bolt handle down to lock the cartridge into the chamber.

THE FIREARM IS NOW LOADED.

7. To fire the firearm put the safety switch in the "F" position.

THE FIREARM IS READY TO FIRE.

WARNING: Always check the cartridge for the correct caliber before loading the firearm.

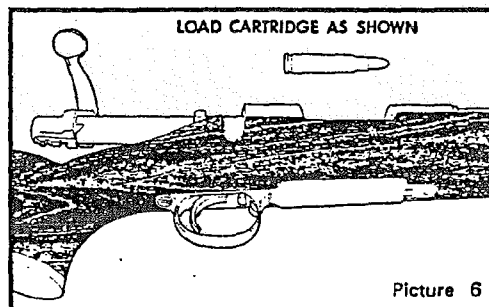

TO

There ar
FLOOR

INSTRUC
PLATE

1. Polr
2. Put
3. Rais
4. Put
5. Slov
- hanc
6. Hold
7. Put
8. Push
- See
- The
- from
9. Rem
10. Push
- plate

WARNIN
chamber c

INSTRUC
FLOOR PI

1. Point
2. Put ti
3. Raise
4. Put c
5. Slowl
- hand
6. Hold

ok.
caliber on the
chamber. See
n push the bolt
ridge into the

switch in the

idge for the
l.



Picture 6

TO UNLOAD THE FIREARM

There are two types of Model 700 rifles, one with a FLOOR PLATE and one without a FLOOR PLATE.

INSTRUCTIONS FOR THE MODELS WITH A FLOOR PLATE

1. Point the muzzle in a safe direction.
2. Put the safety switch in the "S" position.
3. Raise the bolt handle.
4. Put one hand over the top of the ejection port.
5. Slowly pull the bolt handle back with your other hand to remove the cartridge from the chamber.
6. Hold the cartridge and remove it from the firearm.
7. Put your hand under the floor plate.
8. Push the floor plate latch to release the floor plate. See picture 7.
9. The magazine spring and follower will be released from the magazine.
10. Remove released cartridges.
11. Push in the magazine follower, then close the floor plate.

WARNING: Make sure there are no cartridges in the chamber or magazine.


INSTRUCTIONS FOR THE MODELS WITHOUT A FLOOR PLATE

1. Point the muzzle in a safe direction.
2. Put the safety switch in the "S" position.
3. Raise the bolt handle.
4. Put one hand over the top of the ejection port.
5. Slowly pull the bolt handle back with your other hand to remove the cartridge from the chamber.
6. Hold the cartridge and remove it from the firearm.

7. Keep the muzzle pointed up, push the bolt handle slowly forward until the cartridge is released from the magazine. **CAUTION:** The cartridge may slide into the chamber, if the bolt is pushed too far forward. See note below.
8. Pull the bolt handle fully back and remove the cartridge from the ejection port.
9. Repeat this action until the magazine is empty.

WARNING: Check the chamber and the magazine to make sure there are no cartridges in the firearm.

NOTE: If the bolt is pushed all the way forward, and a cartridge slides into the chamber, the gun can be fired. Normally, the cartridges will slide out of the chamber when the bolt is pulled back. If the cartridge remains in the chamber, point the muzzle in a safe direction, slide the bolt forward all the way and push the bolt handle down to lock the bolt. Then repeat steps 2 through 9 above.

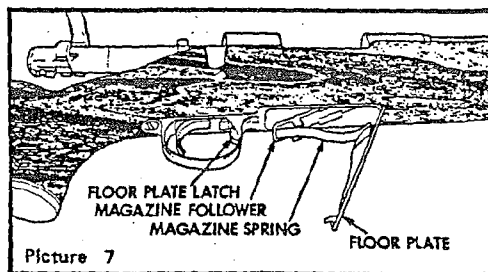

Picture 7


TO ADJUST THE SIGHTS



The sights are adjusted at the factory to hit a target at 100 yards. **NOTE:** For all models except the Varmint and Classic Grade.

TO ADJUST THE REAR SIGHT

Move the rear sight in the same direction as you need to move the bullet on the target.

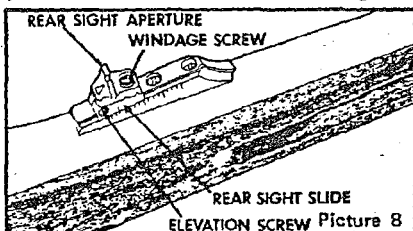


NOTE: For more information on ballistics and trajectory, see the REMINGTON catalog.


TELESCOPIC SIGHTS

The top of the receiver has holes for the installation of telescopic sights.


POSITION ON TARGET

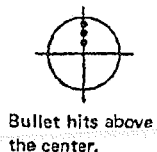


Bullet hits above the center.

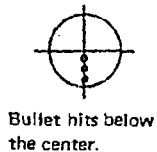

Bullet hits below the center.

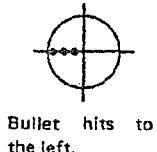

Bullet hits to the left.

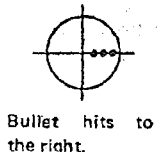

Bullet hits to the right.

ADJUSTMENTS

- Loosen the elevation screw on the rear sight.
- Slide the rear sight down (backward) on the ramp.
- Tighten the elevation screw.

- Loosen the elevation screw on the rear sight.
- Slide the rear sight up (forward) on the ramp.
- Tighten the elevation screw.

- Loosen the windage screw on the rear sight.
- Slide the rear sight aperture to the right.
- Tighten the windage screw.

- Loosen the windage screw on the rear sight.
- Slide the rear sight aperture to the left.
- Tighten the windage screw.

TO ASSEMBLE

See picture 9 for

- Slide the sight into the receiver.
- Push the sight into the receiver.
- Slide the sight into the receiver.
- Push the sight into the receiver.
- Push the sight into the receiver.
- Align the sight with the brass fitting.

TO ATTACH TO THE STOCK

See picture 9 for

- Push the sight into the receiver and is free to move.
- Push the sight into the receiver.
- Close the sight to the swivel.
- To adjust the sight through the receiver.

TO REMOVE

To remove the sight, repeat step 7.

TO ASSEMBLE THE SLING STRAP

See picture 9 for the location of parts:

1. Slide the strap through the band.
2. Push the strap up through the first swivel.
3. Slide the strap back through the band.
4. Push the strap into and through the buckle.
5. Push the strap down and through the second swivel.
6. Align the slots in the strap and fasten with the brass fastener.


TO ATTACH THE SLING STRAP ASSEMBLY TO THE STOCK.

See picture 9 for location of parts:

7. Push plunger on swivel until the small plate lifts and is free of the stud.
8. Push the stud into the center of the swivel screw.
9. Close the plate on the swivel to lock the swivel to the swivel screw.
10. To adjust the length of the strap, pull the strap through the buckle.

TO REMOVE THE SLING FROM THE STOCK

To remove the sling strap assembly from the stock repeat step 7.

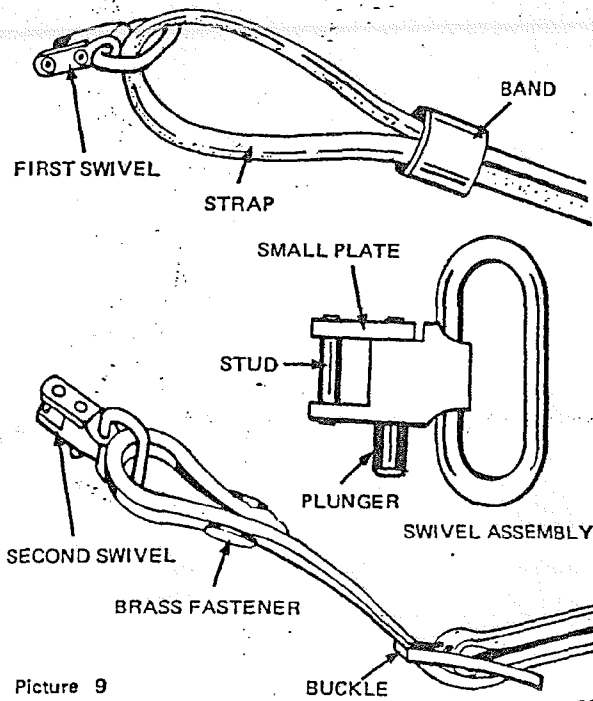

Picture 9

HOW TO ORDER PARTS AND SERVICE
CLEANING INSTRUCTIONS

LUBRICATION AND MAINTENANCE



LUBRICATION:

Over-lubrication should be avoided at all times. A thin coat of Remtm Oil is all that is needed to prevent the possibility of rusting. See note below.

When the firearm is to be stored, it should be carefully cleaned and thoroughly oiled. Outside surfaces should be wiped with a light coat of Remtm Oil occasionally.

When firearm is to be reused, all excess lubrication must be removed. The chamber and bore must be thoroughly wiped dry.

NOTE: Remington Remtm Oil with DuPont Teflon Wet Lubricant is available from your local dealer. If your dealer is out of stock, ask him to order Remtm Oil from his Remington distributor.

TO CLEAN THE BARREL

WARNING: Check the chamber and magazine to make sure there are no cartridges in the firearm.

1. Use the equipment provided in a good cleaning kit.
2. Remove the bolt assembly. See instructions on Page 5.

3. Select the correct caliber cleaning brush and attach the brush to the cleaning rod.
4. Put the cleaning brush into the gun cleaning solvent.

NOTE: Barrel should lay horizontally with the ejection port facing down during cleaning. Always clean the barrel from the chamber end to the muzzle.

5. Push the cleaning brush through the barrel several times.
6. Remove brush from rod, attach tip with patch, and push through the bore.
7. Repeat several times, using a new cleaning patch each time, until the patch is not dirty.
8. Push a clean patch saturated with Remtm Oil through the barrel.
9. Push a clean dry patch through the barrel to remove excess lubricant.
10. Apply a thin coat of Remtm Oil to the outside of the barrel with a soft clean cloth.
11. After cleaning the barrel, clean the receiver and the trigger assembly.

WARNING: This firearm should be checked periodically by the Remington Arms Company, Inc. or a REMINGTON RECOMMENDED GUNSMITH. This will insure proper inspection and any necessary replacement of worn or damaged parts.

TO CLEAN

TO CLEAN:

1. Put sa
2. Remo
3. Turn t
4. Remov
5. Lift th ly.

MODEL
Remove

NOTE:
with Re

6. Spray th bly with minutes. excess lu

WARNING:
could cause
accidental fi

TO CLEAN THE RECEIVER AND TRIGGER ASSEMBLY

TO CLEAN THE RECEIVER AND TRIGGER ASSEMBLY

1. Put safety switch to "S" position.
2. Remove the bolt assembly. See Instructions on Page 5.
3. Turn the rifle upside down.
4. Remove the screws from the trigger guard. See Picture 10.
5. Lift the stock away from the receiver and trigger assembly.



MODELS WITHOUT A FLOOR PLATE:

Remove the magazine spring and follower from the receiver.

NOTE: Clean the receiver and trigger assembly as a unit with Remtm Oil.

6. Spray the receiver and the four points of the trigger assembly with Remtm Oil (see Picture 11). Let stand for 15 minutes. Spray again to wash off components. Shake off excess lubricant.

WARNING: Excessive use of a non-recommended lubricant could cause serious function problems possibly leading to accidental firing.

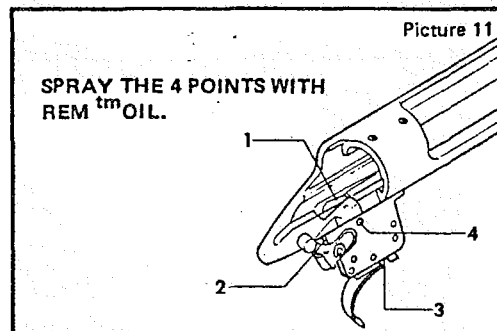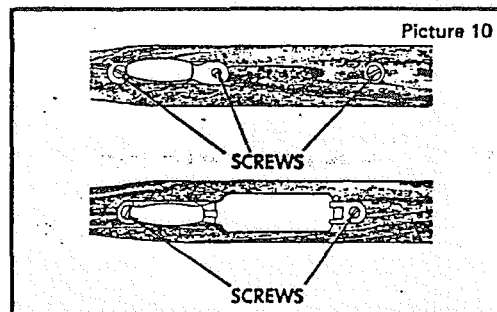

TO ASSEMBLE THE MODELS WITHOUT A FLOOR PLATE

TO ASSEMBLE THE MODELS WITHOUT A FLOOR PLATE

1. Put the magazine follower and the spring into the magazine.
2. Put the stock over the receiver and trigger assembly.
3. Replace and tighten the screws on the trigger guard.

WARNING: Before you replace the bolt assembly, make sure the barrel is free of obstructions.

4. Replace the bolt assembly. See Instruction on Page 5.

WARNING: After cleaning the trigger assembly, check the chamber and magazine to make sure there are no cartridges in the firearm. Put the safety switch in the "F" position. Close the bolt smartly. The firing pin must remain cocked. To check, pull the trigger. The firing pin must fall. Repeat the test at least ten times. If the firing pin will not remain cocked when the bolt is closed smartly, return the firearm to the factory, or a REMINGTON RECOMMENDED GUNSMITH.

TO ASSEMBLE THE MODELS WITH A FLOOR PLATE

1. Put the magazine all the way into the bottom of the receiver.
2. Assemble the trigger guard assembly on the stock.
3. Put the stock over the receiver and trigger assembly.
4. Replace and tighten the trigger guard screws.

5. Close the Floor Plate.

WARNING: Before you replace the bolt assembly, make sure the barrel is free of obstructions.

6. Replace the bolt assembly. See Instruction on Page 5.

WARNING: After cleaning the trigger assembly, check the chamber and magazine to make sure there are no cartridges in the firearm. Put the safety switch in the "F" position. Close the bolt smartly. The firing pin must remain cocked. To check, pull the trigger. The firing pin must fall. Repeat the test at least ten times. If the firing pin will not remain cocked when the bolt is closed smartly, return the firearm to the factory, or a REMINGTON RECOMMENDED GUNSMITH.

CLEANING FREQUENCY

1. Before and after long term storage.
2. If the rifle has been subjected to adverse conditions: such as, shooting in the rain, snow, sleet, or in salt water areas.
3. If the rifle is exposed to dirty conditions: such as, laying on the ground outdoors, dropped in mud, etc.

TO I
1.

2.

3.

CAU
4.

5.
TO A
1.

2.

3.
4.

5.

INSTRUCTIONS FOR CLEANING THE BOLT ASSEMBLY

TO DISASSEMBLE THE BOLT FOR CLEANING

1. Remove the bolt assembly from the firearm. See Instruction on Page 5.
2. Put the notch on the firing pin head over a metal edge. Pull the bolt assembly away from the firing pin. Put a coin into the slot near the back edge of the firing pin head. See Picture 12.
3. Hold the bolt assembly and turn the bolt plug counter clockwise until the firing pin assembly can be removed from the bolt assembly.

CAUTION: Clean the firing pin assembly as a unit.



4. Clean all parts with gun cleaning solvent. Dry with a clean cloth.
5. Apply a thin coat of Remtm Oil.

TO ASSEMBLE

1. Put the firing pin assembly into the rear of the bolt assembly.
2. Tighten the bolt plug into the bolt assembly with your hand.
3. Pull the coin from the slot in the firing pin head.
4. Turn the bolt plug until the firing pin head goes into the small notch on the rear rim of the bolt. The bolt is now cocked. See Picture 13.

NOTE: The bolt must be cocked to be assembled into the rifle.

5. Assemble the bolt assembly into the rifle. See Instructions on Page 5.

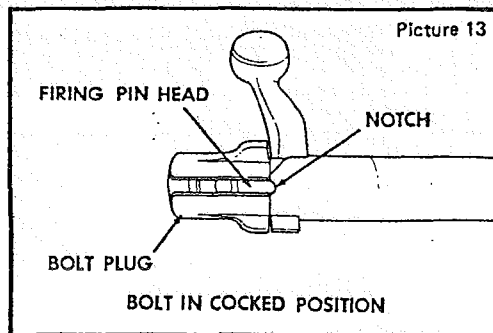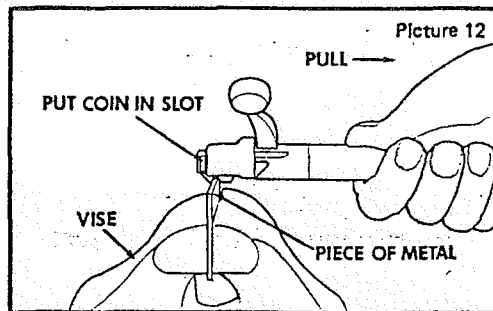

HOW TO ORDER PARTS FROM THE REMINGTON FACTORY

TO ORDER PARTS:

1. Use the picture on page 16 to find the correct part name and number.
2. Write the model and serial number of your firearm, and the part name and number on the parts order.
3. Send parts order to:
Arms Service Division
Remington Arms Company, Inc.
Ilion, New York 13357
4. We can ship your order on a C.O.D. basis or provide an estimate of your required remittance.
NOTE: Bolts, barrels or receivers for centerfire rifles, pistols and rimfire rifles are not sold separately. Repairs or replacements for these parts must be done by Remington Arms Company, Inc. Barrels and bolts for shotguns are available as parts.

WARNING: Use only Remington parts in Remington firearms.

TO ORDER FACTORY SERVICE:

Write a short description of the problem.

1. Give the model and serial number. Make a copy of this note. Attach the original note to the firearm, and put the copy in an envelope attached to the outside of the shipping box.
2. Make sure the gun is unloaded. Never include any ammunition in the package with the firearm.
3. Send by either United Parcel Service or Parcel Post.
NOTE: Make sure the gun is unloaded, and there is no ammunition in the box.
4. Get insurance for the firearm.
5. Record serial number, it is required when calling factory to inquire if firearm has been received for repairs.

INSTRUCTION BOOKS:

To get instruction books for any Remington firearm, write to Remington Arms Company, Inc., Arms Service Division, Ilion, New York 13357. Give the model, serial number, gauge or caliber.

REMINGTON RECOMMENDED GUNSMITHS:

A listing is available from Remington Arms Company, Inc. 939 Barnum Avenue, Bridgeport, Conn. 05601.


copy of
rearm,
e out-
e any
Post.
is no

22'
2C

rearm,
ervice
serial

pany,

MODEL 700 Bolt Action Center Fire Rifle

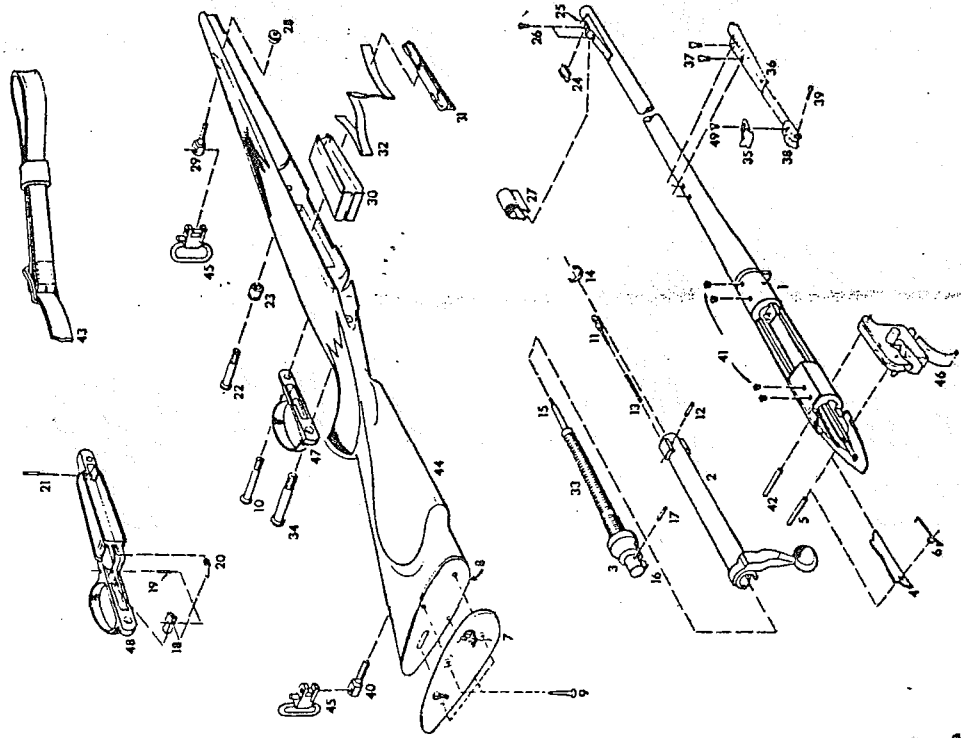

HOW TO ORDER PARTS AND SERVICE

MODEL 700 • PARTS LIST

PARTS SUBJECT TO CHANGE WITHOUT NOTICE:
FOB Ilion, N.Y.

View No.	Part No.	NAME	View No.	Part No.	NAME	View No.
		NOTE: Basic 30-06 Caliber listed below.	13	17017	Ejector Spring	27
			14	91816	Extractor	29
1		Barrel Assembly	15	22020	Firing Pin	
2		Bolt Assembly	16	22043	Firing Pin Assembly, ADL Grade	
		Bolt Final Assembly		22040	Firing Pin Assembly BDL Grade	
3	92510	Bolt Plug ADL	17	17022	Firing Pin Cross Pin	30
	17012	Bolt Plug BDL	18	15291	Floor Plate Latch, BDL Grade	
4	17013	Bolt Stop (Restricted)	19	16451	Floor Plate Latch Pin, BDL Grade	31
5	24475	Bolt Stop Pin (Restricted)	20	16452	Floor Plate Latch Spring, BDL Grade	
6	15224	Bolt Stop Spring (Restricted)	21	16453	Floor Plate Pivot Pin, BDL Grade	
7	90953	Butt Plate	22	22035	Front Guard Screw	32
8	90954	Butt Plate Spacer BDL Grade	23	15161	Front Guard Screw Bushing, ADL Grade	
9	25380	Butt Plate Screw	24	15373	Front Sight	33
10	15287	Center Guard Screw ADL Grade		15719	Front Sight (Low)	34
11	17017	Ejector	25	28510	Front Sight Ramp	35
12	17676	Ejector Pin		15635	Front Sight Ramp, BDL Grade	
			26	28505	Front Sight Ramp Screw	36

NOTICE:
lion, N.Y.

	View No.	Part No.	NAME	View No.	Part No.	NAME
.....	27	15363	Front Sight Hood, BDL Grade	37	28505	Rear Sight Base Screw (2)
.....	29	15358	Front Swivel Screw	38	90905	Rear Sight Slide
.....		90957	Grip Cap, BDL Grade (not shown)	39	90906	Elevation Screw
.....		25380	Grip Cap Screw	40	15358	Rear Swivel Screw
.....		90958	Grip Cap Spacer, BDL Grade (not shown)	41	17034	Receiver Plug Screw
.....	30	15284	Magazine, ADL Grade	42	24476	Sear Pin (Restricted)
.....		16430	Magazine, BDL Grade (not shown)	43	30855	Sling Strap Assembly, BDL Grade
.....	31	92492	Magazine Follower, ADL		26990	Sling Strap Assembly & Mountings Comp
de		91017	Magazine Follower, BDL	44	100021	Stock Assembly, ADL Grade
.....		15940	Magazine Tab Screw, ADL Grade		33371	Stock Assembly, BDL Grade
.....	32	17028	Magazine Spring		18186	Stock Reinforcing Screw (not shown) ...
Grade		15677	Magazine Spring, BDL Grade		16970	Stock Reinforcing Screw Dowel (not shown)
.....	33	17029	Main Spring			
.....	34	26365	Rear Guard Screw	45	26555	Swivel Assembly, BDL Grade (Q.D.)
.....	35	32510	Rear Sight Aperture		26990	Sling Strap Assembly & Mountings Comp
.....		32524	Rear Sight Assembly	46	26345	Trigger Assembly (Restricted)
.....	36	91595	Rear Sight Base	47	15281	Trigger Guard 18

View No.	Part No.	NAME	View No.	Part No.	NAME
48	26371	Trigger Guard Assembly, BDL Grade. . . .		22041	Firing Pin Assembly, 222 Rem., 17 Rem.,
49	90904	Windage Screw			243 Win., 308 Win., 6mm Rem., 22-250
		ADDITIONAL CALIBERS			Rem., 223 Rem., BDL Grade
		See 30-06 list for parts not listed below		22037	Front Guard Screw, 222 Rem., 223 Rem.,
		Barrel Assembly.			243 & 308 Win., 6mm Rem., 22-250
	15850	Extractor 222 Rem., 223 Rem.			Rem., 17.
	14669	Extractor 308 Win., 7mm-08 Rem., 243		14659	Front Sight, 7mm Rem. Mag., 264 Win . .
		Win., 6mm Rem		28511	Front Sight Ramp, ADL Grade
	15709	Extractor Magnum Calibers		15992	Front Sight Ramp, BDL Grade
	27342	Extractor Rivet 222 Rem., 223 Rem. . . .		15282	Magazine, ADL Grade, 222 Rem., 223, 17
	27340	Extractor Rivet 308 Win., 7mm-08 Rem.,			Rem
		243 Win., 6mm Rem		16716	Magazine, BDL Grade, 222 Rem., 223, 17
	27431	Extractor Rivet Magnum Calibers.			Rem
	22021	Firing Pin, 222 Rem., 243-308 Win., 6mm		15283	Magazine, ADL Grade, 243 & 308, 6mm
		Rem., 22-250 Rem., 223 Rem., 17 Rem.			Rem., 22-250 Rem
	22042	Firing Pin Assembly, 222 Rem., 17		16715	Magazine, BDL Grade, 243 & 308, 6mm
19		Rem., 243 Win., 308 Win., 6mm Rem.,			Rem., 22-250 Rem
		22-250 Rem., ADL Grade			

	View No.	Part No.	NAME	View No.	Part No.	NAME
7 Rem.,		92508	Magazine Follower, 222 ADL		17891	Magazine Spring, 243 & 308 Win., 6mm
22-250		90951	Magazine Follower, 222 Rem., BDL			Rem
.		92455	Magazine Follower, 243, 308, 6mm, 22-		15698	Magazine Spring, 22-250 Rem., 6mm
3 Rem.,			250 ADL.			Rem., 243 Win., BDL Grade.
22-250		90982	Magazine Follower, 243 & 308 Win., 6mm		17058	Main Spring, 222 Rem., 223 Rem., 308
.			Rem., 22-250 Rem., BDL			Win., 17 Rem
Win . .		90951	Magazine Follower, 223, 17 Rem., BDL . .		90949	Recoil Pad, 7mm Rem. Mag., 264 & 300
.		91017	Magazine Follower, 270, 25-06, 30-06			Win., Mag., 8mm Rem. Mag
.			(BDL Grade).		25410	Recoil Pad Screw, 7mm Rem. Mag., 264 &
223, 17		90952	Magazine Follower, 8mm Rem. Mag., BDL			300 Win. Mag., 8mm Rem. Mag
.			Grade.		100022	Stock Assembly, 7mm Rem. Mag., ADL
223, 17		15286	Magazine Spacer, 222 Rem., BDL Grade. .			Grade.
.		15742	Magazine Spacer, 222 Rem., ADL Grade. .		100020	Stock Assembly, 222 Rem., 243 Win., 308
3, 6mm		15286	Magazine Spacer, 223 Rem., BDL Grade,			Win., 6mm Rem., 22-250 Rem., ADL
.			17 Rem.			Grade.
3, 6mm		91133	Magazine Spring, 222 Rem., 223 Rem.,		33365	Stock Assembly, 222 Rem., 243 Win., 308
.			17 Rem.			Win., 6mm Rem., 22-250 Rem., ADL
						Grade. 20

View No.	Part No.	NAME	View No.	Part No.	NAME	View No.
21	33385	Stock Assembly, 7mm Rem., Mag., 264-300 Win., Mag., BDL Grade, 8mm Rem., Mag.		33375	Stock Assembly, 222 Rem., 223 Rem., 243 Win., 6mm Rem., 22-250 Rem. . . .	
	33370	Stock Assembly, 222 Rem., 243 Win., 308 Win., 6mm Rem., 22-250 Rem., BDL Grade, 17 Rem		33375	Stock Assembly, 25-06.	
	26370	Trigger Guard Assembly, BDL Grade, 222 Rem., 17 Rem., 223 Rem., 243 Win., 308 Win., 6mm Rem., 22-250 Rem. . . .			MODEL 700 "CLASSIC"	
		MODEL 700 VARMINT			See 30-06 list for parts not listed below	
		See 30-06 list for parts not listed below			Barrel Assembly.	
		Barrel Assembly.		91544	Recoil Pad, 22-250 Rem., 243 Win., 6mm Rem., 270 Win., 30-06.	
	16204	Front Scope Base.		91556	Recoil Pad, 7mm Rem., Mag.	
	18843	Rear Scope Base.		25410	Recoil Pad Screw	
	16205	Scope Base Screw, Front.		34591	Stock Assembly, 270 Win., 30-06.	
	18842	Scope Base Screw, Rear		34590	Stock Assembly, 22-250 Rem., 6mm Rem., 243 Win	
				34592	Stock Assembly, 7mm Rem. Mag.	

	View No.	Part No.	NAME	View No.	Part No.	NAME
Item.,			MODEL 700 MOUNTAIN RIFLE			
...			See 30-06 BDL list for parts not listed below.			
...						
		92510	Bolt Plug			
		22043	Firing Pin Assembly			
W		92755	Grip Cap			
		92762	Recoil Pad			
...		25410	Recoil Pad Screw			
6m		100565	Stock Assembly			
...						
...						
...						
6mm						
...						
...						

Remington®



Remington is a trademark registered in the United States Patent
and Trademark Office by Remington-Union Company, Inc.
Savageport, Connecticut 06660

Printed in U.S.A.

700418-214
3/7/68