


L

U

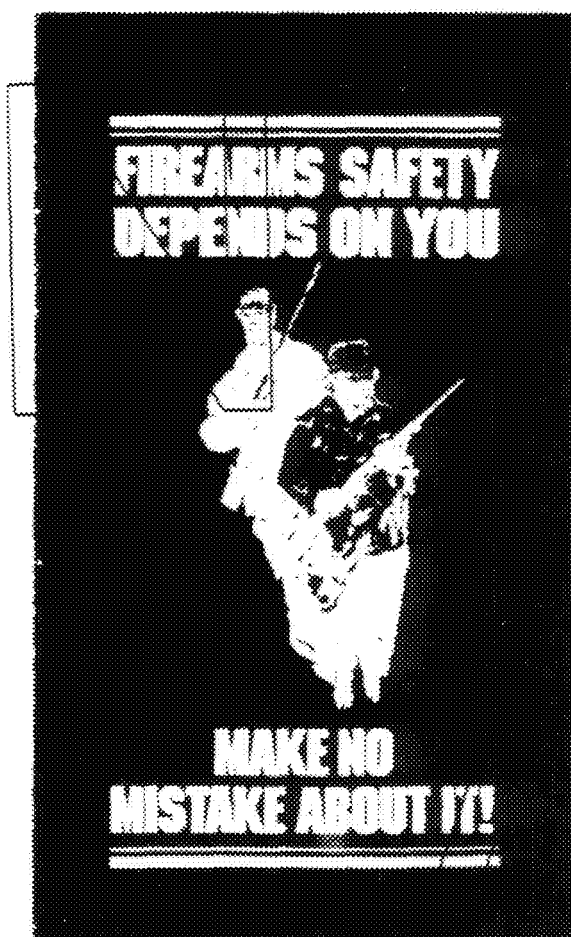

REM 0035537

LUN 0007905

INTRODUCTION

There is a sentence in a pilot's flight manual that reads, "When you enter the cockpit of this aircraft, you become part of a system over which you have control — both in terms of operation and safe handling. You are the only one that can make the system safe or unsafe."

The same is true of the shooter, whether a hunter, target shooter or casual weekend plinker. From the time he picks up a firearm, the shooter becomes a part of a system over which he has complete control. He is the only part of the system that can make a gun safe — or unsafe.




Hunting and target shooting are among the safest of all sports. This booklet is intended to make them even safer — by re-emphasizing and reaffirming the basics of safe gun handling and storage and by reminding each individual shooter that he or she is the key to firearms safety.

Please read this booklet carefully and follow the safety procedures outlined. Firearms safety is up to you. Make no mistake about it.

**KNOW YOUR GUN — READ
YOUR INSTRUCTION MANUAL**

1628 003553c 1


1628 000790c 1

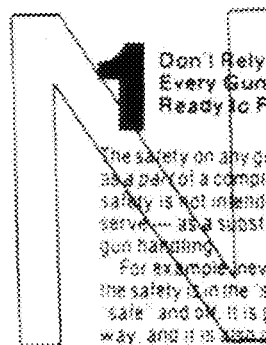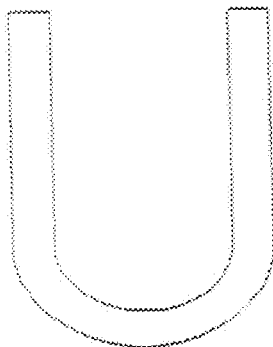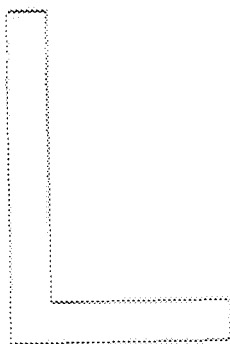

Don't Rely on Your Gun's Safety. Treat Every Gun as if It Were Loaded and Ready to Fire

The safety on any gun is a mechanical device that serves as a part of a complete system of safe gun handling. The safety is not intended to serve — nor can it possibly serve — as a substitute for common sense or safe gun handling.

For example, never pull the trigger on a firearm when the safety is in the "safe" position or anywhere in between "safe" and "off." It is possible that the gun could fire anyway, and it is also possible that the gun could fire later when you release the safety — without your ever touching the trigger again. Always place the safety completely in the "fire" or "safe" positions. Never in between. Half-safe is unsafe. Don't play with your safety, putting it on and off. Leave it on until you are absolutely ready to fire. You and the safe gun handling procedures you have learned are your gun's primary safeties. To rely entirely upon a mechanical device is unsafe. Use your safety safely.

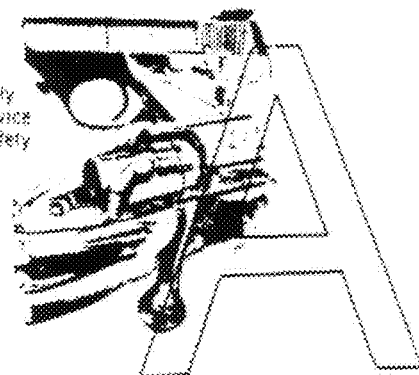


12EM 003553 1

1LON 0007907 1

L

U

N

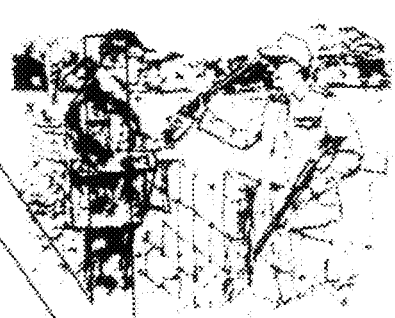

2 Never Cross a Fence, Climb a Tree or Jump a Ditch With a Loaded Gun

There are times during nearly all hunting trips when common sense and the basic rules of firearms safety will require you to unload your gun for maximum safety.

Anytime there is an added risk that you might lose your balance and drop or lose control of your gun, you should unload. Before climbing a fence or crossing a stream are perfect examples. If you need to climb a slippery hill and certainly if you are going to climb a tree to hunt from a tree stand, you should unload first. Then should you lose your balance and lose control of your gun, you will not jeopardize your safety or the safety of your companions by dropping a loaded gun which could discharge.

The chances of missing a shot at game by unloading at such times are slim and more than offset by the added safety of unloading.

[REM 0035540]

[LON 0007908]

L

U

3

Never Load or Carry a Loaded Gun Until You Are Ready To Use It


One of the cardinal rules of shooting safety is to load your gun only when ready to use it — and to unload as soon as you are through. A loaded gun has no place in — or near — a car or truck or building. Keep your fingers off the trigger while loading or unloading.

For shotgun shooting, don't load until you've started into the field or are well settled in a blind. Unload before you leave.

Many big game hunters will not chamber a cartridge until they have actually sighted game and decided to shoot. This is especially true when hunting from tree stands.

Target shooters should never load until it is their turn to shoot, and they should unload immediately if there is a delay in the shooting progression.

Think of yourself and your gun as part of a system whose safe operation depends on you. Your gun can't think. You can. Don't load until ready to shoot — and unload as soon as you're done.

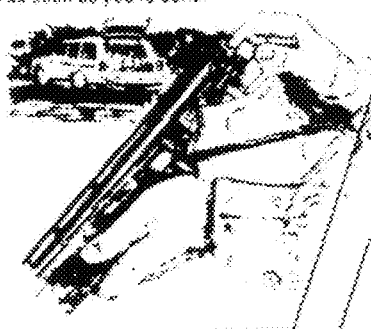

1 668 003554 1

1 LUN 0007909 1

L

U

N



4

Watch Your Muzzle So the Other Fellow Doesn't Have To

If everyone handled his gun so carefully that the muzzle never pointed at something the gunner didn't intend to shoot, we'd have no firearms accidents. It's as simple as that, and it's up to you.

Learn to keep your muzzle always pointed in a safe direction. That may be in the air on some occasions, at the ground on others, but never at anyone or at anything not intended as a target.

You can always tell an experienced shooter by how he or she handles a gun. A knowledgeable shooter always opens the action on a gun before handing it to someone else and always checks to make sure the gun is unloaded if it is handed to him.

Handle guns so others will want to hunt with you, not away from you. You and your gun are part of a system whose safe operation depends on you. Your gun can't think, but you can.


HEB 0035542

LDH 0007910

5

Keep Guns and Ammunition Separately and in Locked Storage

There's really only one basic way to safely store guns and ammunition. They should both be kept locked separate from one another, with the keys under the control of a responsible adult. Casual visitors and children should find it impossible to handle either without the direct approval, action and supervision of an experienced person familiar with the principles of safe gun handling. This may take some extra time and effort on your part, but consider the potential consequences of the wrong hands putting guns and ammunition together.

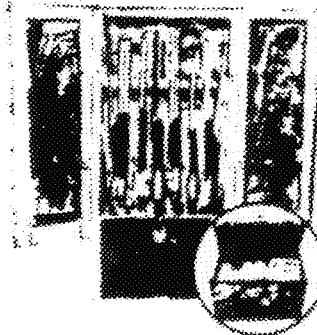


1628 0035543 1

JLON 0007911 1

L

U

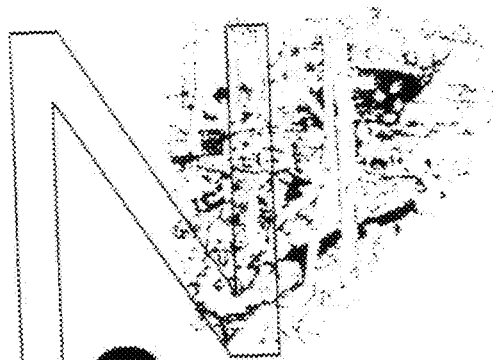

6

**Don't Shoot Unless Absolutely Sure
of Your Target and What is Beyond it**

You can't call a bullet back. And you can't change its direction.




Once you've pulled the trigger on your rifle, shotgun or handgun, you have given up all control over where the bullet will go or what it will strike. Every shooter — whether a big game hunter, upland gunner or plinker — owes it to himself and to everyone within range of his firearm to be absolutely sure of his target. Make certain there are no hunters, buildings or other objects behind or near your target.

And make absolutely sure of the target itself. Particularly during the low-light periods of dawn and dusk, it is easy to mistake one shape for another. Scientists call it "Early Blur," and it is one reason you should be totally sure of your target before pulling the trigger.

Firearms safety is up to you. Make no mistake about it.

1648 0035544

1LUN 0007912 1

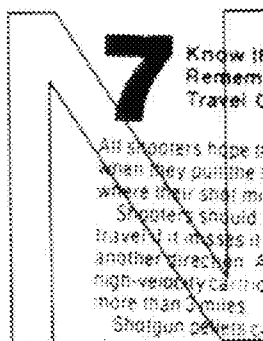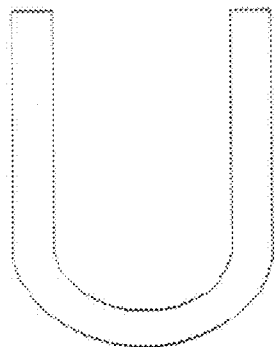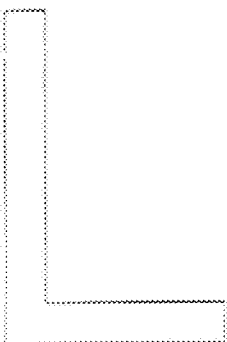

7 Know the Range of Your Gun. Remember, Even a 22 Rimfire Can Travel Over One Mile



All shooters hope they will hit what they are aiming at when they pull the trigger. Safe shooters also consider where their shot might go if they miss.

Shooters should keep in mind how far a bullet will travel if it misses its intended target or ricochets in another direction. A 22 short can travel 1 1/2 miles, and a high-velocity carbide such as a 20-06 can send its bullet more than 3 miles.

Shotgun pellets can travel 500 yards, and shotgun slugs have a range of one-half mile.

Before firing at game or other targets, shooters should be certain there are no roads, buildings or livestock in the course of fire, should the bullet go astray.

Guns and ammunition cannot think. You can.

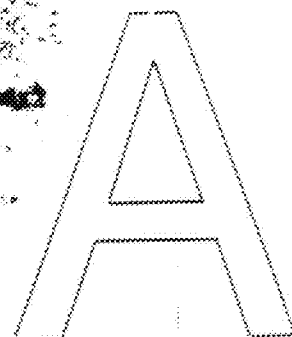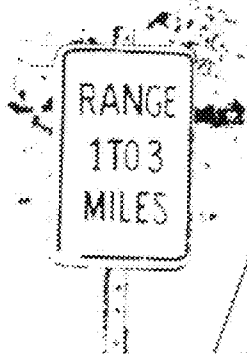


182M 0035548

182M 0007913 1

L

U

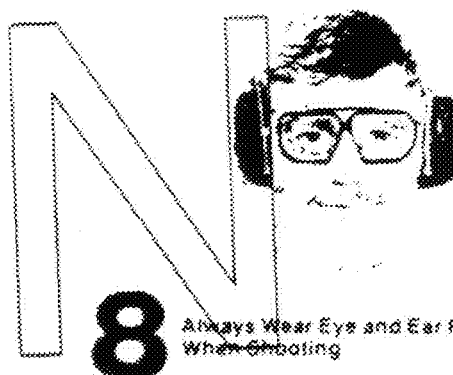

Always Wear Eye and Ear Protection When Shooting

Most rules of shooting safety are intended to protect you and others around you, but there are two rules that are for your protection alone.

These rules involve the wearing of eye and ear protection. Eye protection can take the form of inexpensive plastic safety glasses, sunglasses, the shooter's own prescription lenses or specialized shooting glasses. They guard against twigs, falling shot, clay target chips and the rare ruptured case or firearm malfunction.

Heavy repeated exposure to shooting noise is not only uncomfortable at the time, it can also cause permanent hearing loss that may not be detected until it is too late.

There are a wide variety of hearing protectors available, ranging from throwaway or reusable ear plugs to sound-attenuating muffs that cover the entire ear. No target shooter, plinker or hunter sighting-in should ever be without them.

Obey the safety rules that are intended to protect you. Wear ear and eye protection.

1688 0035342 1

1208 0007914 1

L

U

N⁹ Always Be Sure the Barrel is Clear of Obstructions. Only Carry Ammunition of the Proper Size for the Gun You Are Using


It might be mud, snow or a shotshell wad. It could even be a cleaning patch or the wrong size ammunition placed in your gun's chamber by mistake. All are obstructions that can block a gun barrel and cause serious injury to the shooter if not detected. These obstructions may have become lodged in your gun barrel by careless gun handling — as in the case of mud or snow. Or they may have been left there accidentally by someone else.

Proper safety procedures require that all gun barrels be checked for obstructions before firing.

Carry only the proper ammunition for the gun you are shooting. Mixing ammunition causes problems. A 20 gauge shotshell, for example, will pass through the chamber of a 12 gauge and lodge in the barrel.

Never allow different types of ammunition to get mixed up in the buckets of your hunting or shooting coat.

It is a simple and basic safety step to check your barrel for obstructions before shooting — for your own safety and to prevent damage to your gun.

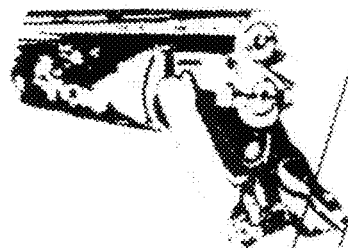


18E2 0035547 1

120N 0007915 1

U

N
10

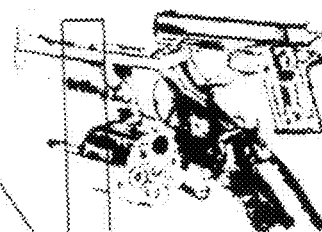

Always Carry Handguns With the Hammer Down on an Empty Chamber

Handgun safety is largely a matter of common sense and the development of safe habits. For example:

- Carry loaded revolvers with empty chamber under the hammer
- Carry loaded pistols with the magazine inserted but with an empty chamber
- Always empty handguns before carrying into a house, car, boat or RV
- Never point a handgun at anything you don't intend to shoot
- Never handle a handgun without opening it yourself to check to see if it's loaded
- Always open your handgun and keep it open after firing
- Be sure of your backstop and what lies beyond it before you shoot

Refer to the instruction manual you received with your gun.

S A A M I

SPORTING ARMS AND AMMUNITION MANUFACTURING, INCORPORATED, INC.
Safety Series 1076 Paper Road, Riverside, CT 06878

[BEM 0035548]

[LUN 0007916]

FIREARMS SAFETY MAKE NO
DEPENDS ON YOU MISTAKE
ABOUT IT!

A

1688 0035549

1 LUN 0007917 1



*National
Safety
Council*

Inter-Office
Correspondence

To: Fred Potenza

From: Peggy Brock
Public Safety Department

Date: December 3, 1979

RE: Firearms Safety Program


A firearms safety program developed by the Sporting Arms and Ammunition Manufacturers' Institute, Inc. to be administered by the National Shooting Sports Foundation has been thoroughly reviewed by the Public Safety's Shooting Committee. The program will include booklets, posters, press releases, T.V. spots and radio spots. The program will be broken down to feature three categories including use of the safety, eye and ear protection and overall safe firearm handling. The slogans chosen for the program are "Firearm Safety Starts with You, Make no Mistake about it," and "We're trying to make a Safe Sport Safer."

The Public Safety Division's Executive Committee upon recommendation by the shooting committee has approved this program for possible National Safety Council endorsement. This endorsement would not include any financial responsibility or time loss on the part of the staff. Since firearms are here to stay, the Public Safety Division feels this is a worthwhile program of promoting gun safety at all levels.

If Council Management feels it's necessary, a representative from NSSF, Bob Delfay, is willing to fully explain the program for Council's understanding and approval.

Material is available for review upon request, notify Peggy Brock.

cc: L. Urban
C. Vance

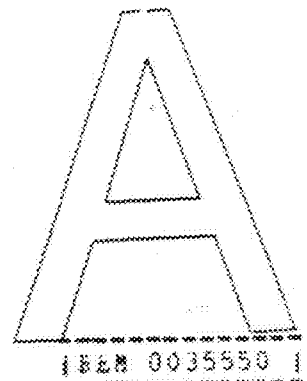

1558 0007416 1