

TO CLEAN THE BARREL:

WARNING: Check the chamber and magazine to make sure there are no cartridges in the firearm. Never try to clean a loaded firearm.

NOTE: Remington® recommends that chlorinated solvents **NOT** be used to clean this firearm.

1. Use the equipment provided in a good cleaning kit. For recommendations, see your Remington Authorized Gunsmith.
2. Point the muzzle of the firearm in a safe direction.
3. Put the safety mechanism in the **S-SAFE** position.
4. Turn the key to the **OFF/DISABLED (0)** position.
5. He move the bolt assembly. See instructions on page 11.
6. Select the proper caliber cleaning brush and attach the brush to the cleaning rod.
7. Put the cleaning brush into the gun cleaning solvent.

NOTE: The barrel should lay horizontally with the ejection port facing down during cleaning. Always clean the barrel from the chamber end to the muzzle.

8. Push the cleaning brush through the barrel several times.
9. He move brush from rod a inch (1) with cleaning patch and push through the bore.
10. Repeat several times using a new cleaning patch each time. Until this patch is not dirty.
11. Push a clean patch saturated with Rem™ Oil through the barrel.
12. Push a clean, dry patch through the barrel to remove excess lubricant.
13. Apply a thin coat of Rem™ Oil to the outside of the barrel with a soft cleaning cloth.
14. After cleaning the barrel, clean the receiver and the trigger assembly.

WARNING: This firearm should be checked periodically by a Remington Authorized Gunsmith, to check a REMINGTON RECOMMENDED GUNSMITH. This will ensure proper maintenance and any necessary replacement of worn or damaged parts.

TO CLEAN THE RECEIVER AND TRIGGER ASSEMBLY:

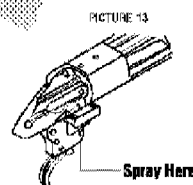
WARNING: Check the chamber and the magazine to make sure there are no cartridges in the firearm.

1. Disassemble the firearm. See instructions on page 11.

NOTE: Clean the receiver and trigger assembly as a unit with Rem™ Oil.

2. Spray the receiver and the ejection port of the trigger assembly with Rem™ Oil. See Picture 13. Let stand for 15 minutes. Spray again to wash off the components. Shake off any excess lubricant.

WARNING: Do not use a high-pressure detergent solution or any other harsh cleaning agent when the trigger and ejection port of your firearm.

**TO ASSEMBLE:**

1. Reassemble the firearm. See instructions on page 11.

WARNING: After cleaning the trigger assembly, check the magazine. The magazine to make sure there are no cartridges in the firearm. Pull the trigger and make sure the bolt of the trigger is pulled. If no click is heard or felt when the trigger is pulled, stop and see your Remington Authorized Gunsmith or a REMINGTON RECOMMENDED GUNSMITH.

CLEANING FREQUENCY:

1. Before and after long-term storage.
2. When the rifle has been subjected to adverse conditions such as shooting in the rain, snow, salt or saltwater areas.
3. When the rifle is exposed to dirty conditions such as lying on the ground outdoors, being dropped in the mud, etc.

NOTE: While the stainless steel versions of the Model 700™ Rifle have been designed and manufactured to provide improved corrosion protection, only proper care will keep your firearm in good operating condition and maintain the appearance. After extensive use, the protective coating on plated parts may be worn sufficiently to reduce corrosion protection. Such worn parts should be replaced to assure the integrity of the corrosion protection.