


TO CLEAN THE CHAMBER:

Use the chamber brush that comes with the firearm.

WARNING: Check the chamber and magazine and make sure that there are no cartridges in the firearm.

1. Engage the safety mechanism. **RED BAND WILL NOT SHOW.**
2. Pull the operating handle rearward until held open by the magazine follower.
3. Put the brush into the cleaning solvent.
4. Push the brush into the chamber through the ejection port. Repeat several times. See Picture 13.
5. Using the rear of the cleaning brush with attached cleaning patch, dry chamber. Repeat using a clean patch each time, until patch is not dry.

WARNING: After cleaning, make sure the barrel is free of obstructive.

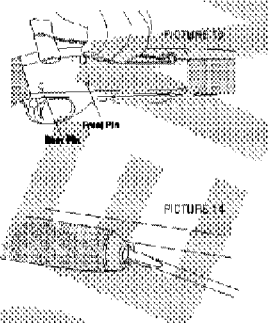**TO CLEAN THE ACTION SPRING AND ACTION TUBE:**


WARNING: Check the chamber and magazine and make sure there are no cartridges in the firearm.

1. Loosen the fore-end screw and remove the fore-end. See Picture 14.
2. Brush action spring and action tube with gun cleaning solvent. See Picture 15.
3. Dry with clean cloth.
4. Apply a thin coat of Rem™ Oil to prevent rusting.
5. Replace the fore-end and tighten fore-end screw.

**TO CLEAN THE TRIGGER PLATE ASSEMBLY:**

WARNING: Make sure there are no cartridges in the chamber or magazine.

1. Engage the safety mechanism. **RED BAND WILL NOT SHOW.**
2. Close the action.
3. Tap out front and rear trigger plate pins. See Picture 16.
4. Lift rear of the trigger plate assembly and remove the assembly from the receiver.

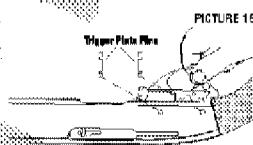

NOTE: Clean trigger plate assembly as a unit with Rem™ Oil.

5. Spray the trigger plate assembly with Rem™ Oil as shown. See Picture 17. Let stand for 15 minutes. Spray again to wet all connections. Shake off excess lubricant.

WARNING: Excessive use of a non-leak proofing lubricant may adversely affect the function and safe operation of your firearm.

6. Check to make sure that the end of the disconnect is below end of ball connector. See Picture 18.
7. Carefully insert the trigger plate assembly into the receiver.
8. Position to align holes in gap in front and rear trigger plate pins.

WARNING: This firearm must be checked periodically by a Remington Arms Company, Inc. or a REMINGTON RECOMMENDED GUNSMITH. This will assure proper function and safety of the firearm and prevent wear or damage to it.

