

# Centerfire

	A	B	D	E	F	G	H	I	J	P	Q
1	<b>Summary</b>	<b>Total Tested</b>	<b>13233</b>								
2		<b>Total Rejected:</b>	<b>594</b>								
3		<b>Overall Reject Rate:</b>	<b>4.49</b>								<b>Grand totals</b>
5		Shot:	8964	1078	1426	604	1028	386	20		13806
6	<b>Proof</b>	Rejected:	10	2	1	1	5	0	0	0	19
7		Percent:	0.1	0.2	0.1	0.2	0.5	0.0	0.0		0.1
9											
10	<b>Test</b>	Shot:	7152	1229	3264	359	896	252		81	13233
11		Rejected:	270	82	163	20	21	14	0	5	578
12		Percent:	3.8	6.7	5.0	5.6	2.3	5.6		6.2	4.3
13	<b>Target</b>	Shot:	682	118	282	31	81	307		6	1507
14		Rejected:	0	0	0	0	0	0	0	0	0
15		Percent:	0.0	0.0	0.0	0.0	0.0	0.0		0.0	0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>	<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>Rimfire</b>	<b>totals</b>
18											
19	AB	Action binds									
20	BABS	Bulge at body shoulder									
21	BAC	Burr at chamber	4		1		1				6
22	BBMA	BBL-to-bolt misalignment									
23	BB	Bolt binds/catches	5		6		4				15
24	BCOAB	Bolt catches on anti-bind									
25	BCOBS	Bolt catches on bolt stop									
26	BCOF	Bolt catches on follower									
27	BC	Blows cases									
28	BHR	Bolt hits receiver									
29	BHS	Bolt plug hits safety switch									
30	BLOP	Bar lock or disconnecter out of position									
31	BLSO	Barrel lug shot off									
32	BPO	Bolt pulls out									
33	BSSM	Bolt stems shell in magazine									
34	BWCD	Bolt won't cam down		2							2
35	BWCFM	Bolt won't close over full magazine	8	2	1		1				12
36	CD	Case dented									
37	CH	Closes hard	5	1	6			1			13
38	CLM	Can't load magazine	8	6	2	2	1	1			20
39	CO	Cut-off									
40	CR	Cuts rim									

# Centerfire

	A	B	D	E	F	G	H	I	J	P	Q
17	CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7	Rimfire	totals
41	CS	Cases swell									
42	CTOG	Chamber torn or gouged									
43	CTP	Creepy trigger pull									
44	CWSB	Cams wrong side of action bar									
45	DBB	Doesn't blow back									
46	DCS	Double click in safety switch									
47	DCT	Double click in trigger									
48	DCU	Doesn't close-up									
49	DE	Doesn't eject	10	9	7						26
50	DEL	Doesn't eject live round									
51	DFB	Doesn't feed back									
52	DFU	Doesn't feed up									
53	DLO	Doesn't lock open (after last shell)									
54	DLU	Doesn't lock-up									
55	DS	Dead safe			1						1
56	DX	Doesn't extract	15	3	3						21
57	DXL	Doesn't extract live round	1								1
58	EDS	Extractor drops shell	45	2	3	1					51
59	ESB	Ejector sticks back	9		8						17
60	ESCR	Empty shell catches receiver									
61	ESS	Extractor stems shell									
62	FA	Fires automatically									
63	FB	Follower binds									
64	FC	Fails to connect								4	4
65	FCB	Fore-end cracked or broken									
66	FD	Follows-down									
67	FF	Fails to fire	1		1		1				3
68	FFP	Flat firing pin									
69	FOS	Fires on safe									
70	FPHB	Firing pin hits bbl									
71	FPHI	Firing pin hits inside rim									
72	FPO	Floor plate opens	2	1	5	2	1				11
73	FPOH	Floor plate opens hard									



# Centerfire


	A	B	D	E	F	G	H	I	J	P	Q
17	CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7	Rimfire	totals
74	FSR	Fires when safe is released									
75	FT	Follower tips	17	12	5			4			38
76	GCSO	Gas cyl shot off									
77	HBL	Heavy bolt lift	3		3						6
78	HMSC	Heading mismatch-steps on case									
79	HPA	High pressure ammo									
80	HUR	Hard under rail	14	2	21	1					38
81	JCS	Jumps cartridge									
82	JM	Jumps magazine	12	1	1						14
83	JO	Jars off									
84	LB	Light blow					1				1
85	MAH	Magazine assembles hard									
86	MCW	Magazine capacity wrong									
87	MFA	Misfires (ammo)									
88	MFOP	Magazine follower out of position								1	1
89	ML	Magazine loose	1								1
90	MLH	Magazine loads hard									
91	MRH	Magazine removes hard	1								1
92	OH	Opens hard	2		6			1			9
93	OR	Over-rides	18	5	14	2					39
94	PH	Pulls hard									
95	PSI	Proof stamp illegible									
96	PSM	Proof stamp missing									
97	RBOC	Rings and bulges on case									
98	RDW	(Action) release doesn't work									
99	RIC	Rings in chamber	5	1	7	2	1				16
100	RIS	Ring in sholder									
101	RS	Rim srem									
102	SBC	Stems bottom chambers	17	10	19		6				52
103	SBE	Stems bbl extension									
104	SCB	Stock cracked or broken									
105	SCX	Shell catches									
106	SHI	Short indent									

# Centerfire

	A	B	D	E	F	G	H	I	J	P	Q
17	CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7	Rimfire	totals
107	SI	Stems incline	4	12	3						19
108	SIC	Stems in chamber	4	4	7	5					20
109	SL	shaves lead									
110	SLC	Stems left side of chamber									
111	SMOC	Stretch marks on case									
112	SOR	Stem over-ride	28	6	20	5	1	5			65
113	SP	Stems port									
114	SR	Shoulder rough									
115	SRC	Stems right side of chamber									
116	SRIC	Specific rings in chamber									
117	SSOC	Surface scratches on case									
118	STC	Stems top chamber	13	3	8		1				25
119	SWE	Safety switch works too easily			1						1
120	SWH	Safety switch works too hard									
121	SWW	Safety Switch won't work									
122	TD	Tips down									
123	TU	Tips up									
124	TWP	Trigger won't pull									
125	TWR	Trigger won't retract									
126	UNCN-T	Uncoded									
127	XH	Extracts hard	18		4		2	2			26
128											
129	HI	High									
130	LO	Low									
131	LEFT	Left									
132	RIGHT	Right									
133	DG	Doesn't Group									
134	FSST	Front sight tipped									
135	RSTT	Rear sight tipped									
136	RSBR	Rear sight base raised									
137	FSTR	Front sight raised									
138	FSTL	Front sight loose									
139	RSTL	Rear sight loose									

# Centerfire

	A	B	D	E	F	G	H	I	J	P	Q
17	CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7	Rimfire	totals
140	MGPT-G	Missing parts at target									
141	UNCN-G	Uncoded nonconformity at target									
142											
143	AI-P	Assembly incomplete at proof									
144	BBB	Barrel bracket cracked or broken at proof									
145	BC-P	Blows cases at proof									
146	BEB-P	Barrel extension broken at proof									
147	BLP-P	Blanked primer at proof									
148	BLSO-P	Barrel lug shot off at proof									
149	BP-P	Blown primer at proof									
150	BS-P	Barrel split at proof									
151	DBF-P	Damaged Bolt Face	8	1	1	1	1				12
152	DLOS-P	Doesn't lock over shells at proof									
153	ESBBP-P	Ejector sticks back -Blown Primer cup									
154	ESBEC-P	Ejector sticks back - Ejector Cresent									
155	FCB-P	Fore-end cracked at proof		1							1
156	FESO-P	Fore-end shot off at proof									
157	FF-P	Fails to fire at proof					4				4
158	GCSO-P	Gas cylinder shot off at proof									
159	MSI-P	Magnaflux stamp illegible on bbl									
160	MSM-P	Magnaflux stamp missing on bbl	1								1
161	PP-P	Pierced primer at proof									
162	SCB-P	Stock cracked or broken at proof									
163	UNCM-P	Uncoded proof malfunctions	1								1

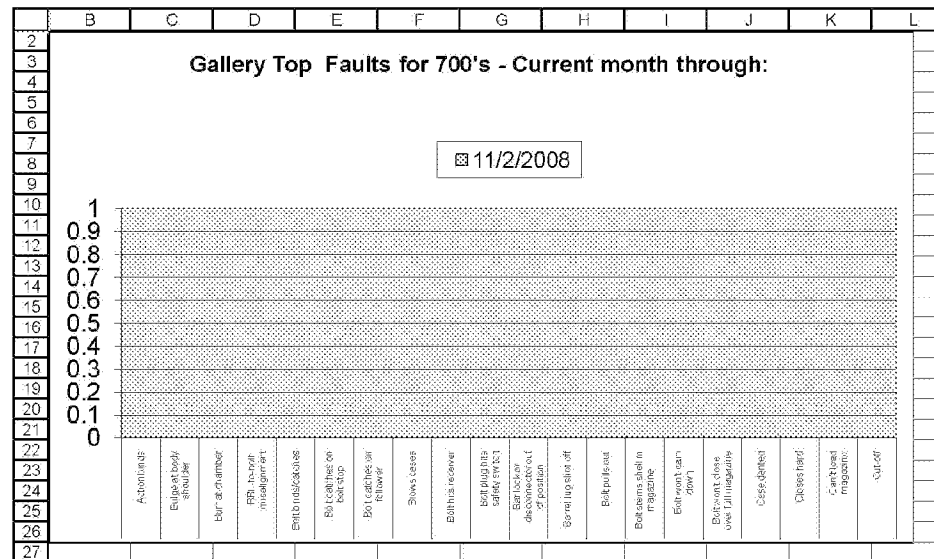

	A	B	C
1	AB	Action binds	0
2	BABS	Bulge at body shoulder	0
3	BAC	Burr at chamber	0
4	BBMA	BBL-to-bolt misalignment	0
5	BB	Bolt binds/catches	0
6	BCOBS	Bolt catches on bolt stop	0
7	BCOF	Bolt catches on follower	0
8	BC	Blows cases	0
9	BHR	Bolt hits receiver	0
10	BHS	Bolt plug hits safety switch	0
11	BLOP	Bar lock or disconnecter out of position	0
12	BLSO	Barrel lug shot off	0
13	BPO	Bolt pulls out	0
14	BSSM	Bolt stems shell in magazine	0
15	BWCD	Bolt won't cam down	0
16	BWCFM	Bolt won't close over full magazine	0
17	CD	Case dented	0
18	CH	Closes hard	0
19	CLM	Can't load magazine	0
20	CO	Cut-off	0
21	CR	Cuts rim	0
22	CS	Cases swell	0
23	CTOG	Chamber torn or gouged	0
24	CTP	Creepy trigger pull	0
25	CWSB	Cams wrong side of action bar	0
26	DBB	Doesn't blow back	0
27	DCS	Double click in safety switch	0
28	DCT	Double click in trigger	0
29	DCU	Doesn't close-up	0
30	DE	Doesn't eject	0
31	DEL	Doesn't eject live round	0
32	DFB	Doesn't feed back	0
33	DFU	Doesn't feed up	0
34	DLO	Doesn't lock open (after last shell)	0
35	DLU	Doesn't lock-up	0
36	DS	Dead safe	0
37	DX	Doesn't extract	0
38	DXL	Doesn't extract live round	0
39	EDS	Extractor drops shell	0
40	ESB	Ejector sticks back	0
41	ESCR	Empty shell catches receiver	0
42	ESS	Extractor stems shell	0
43	FA	Fires automatically	0
44	FB	Follower binds	0
45	FC	Fails to connect	0
46	FCB	Fore-end cracked or broken	0
47	FD	Follows-down	0
48	FF	Fails to fire	0
49	FFP	Flat firing pin	0
50	FOS	Fires on safe	0
51	FPHB	Firing pin hits bbl	0
52	FPHI	Firing pin hits inside rim	0
53	FPO	Floor plate opens	0
54	FPOH	Floor plate opens hard	0
55	FSR	Fires when safe is released	0
56	FT	Follower tips	0

	A	B	C
57	GCSO	Gas cyl shot off	0
58	HBL	Heavy bolt lift	0
59	HMSC	Heading mismatch-steps on case	0
60	HPA	High pressure ammo	0
61	HUR	Hard under rail	0
62	JCS	Jumps cartridge	0
63	JM	Jumps magazine	0
64	JO	Jars off	0
65	LB	Light blow	0
66	MAH	Magazine assembles hard	0
67	MCW	Magazine capacity wrong	0
68	MFA	Misfires (ammo)	0
69	MFOP	Magazine follower out of position	0
70	ML	Magazine loose	0
71	MLH	Magazine loads hard	0
72	MRH	Magazine removes hard	0
73	OH	Opens hard	0
74	OR	Over-rides	0
75	PH	Pulls hard	0
76	PSI	Proof stamp illegible	0
77	PSM	Proof stamp missing	0
78	RBOC	Rings and bulges on case	0
79	RDW	(Action) release doesn't work	0
80	RIC	Rings in chamber	0
81	RIS	Ring in sholder	0
82	RS	Rim srem	0
83	SBC	Stems bottom chambers	0
84	SBE	Stems bbl extension	0
85	SCB	Stock cracked or broken	0
86	SCX	Shell catches	0
87	SHI	Short indent	0
88	SI	Stems incline	0
89	SIC	Stems in chamber	0
90	SL	shaves lead	0
91	SIC	Stems left side of chamber	0
92	SMOC	Stretch marks on case	0
93	SOR	Stem over-ride	0
94	SP	Stems port	0
95	SR	Shoulder rough	0
96	SRC	Stems right side of chamber	0
97	SRIC	Specific rings in chamber	0
98	SSOC	Surface scratches on case	0
99	STC	Stems top chamber	0
100	SWE	Safety switch works too easily	0
101	SWH	Safety switch works too hard	0
102	SWW	Safety Switch won't work	0
103	TD	Tips down	0
104	TU	Tips up	0
105	TWP	Trigger won't pull	0
106	TWR	Trigger won't retract	0
107	UNCN-T	Uncoded	0
108	XH	Extracts hard	0
109			0
110	HI	High	0
111	LO	Low	0
112	LEFT	Left	0

	A	B	C
113	RIGHT	Right	0
114	DG	Doesn't Group	0
115	FSST	Front sight tipped	0
116	RSTT	Rear sight tipped	0
117	RSBR	Rear sight base raised	0
118	FSTR	Front sight raised	0
119	FSTL	Front sight loose	0
120	RSTL	Rear sight loose	0
121	MGPT-G	Missing parts at target	0
122	UNCN-G	Uncoded nonconformity at target	0
123			0
124	AI-P	Assembly incomplete at proof	0
125	BBB	Barrel bracket cracked or broken at proof	0
126	BC-P	Blows cases at proof	0
127	BEB-P	Barrel extension broken at proof	0
128	BLP-P	Blanked primer at proof	0
129	BLSO-P	Barrel lug shot off at proof	0
130	BP-P	Blown primer at proof	0
131	BS-P	Barrel split at proof	0
132	DBF-P	Damaged Bolt Face	0
133	DLOS-P	Doesn't lock over shells at proof	0
134	ESBBP-P	Ejector sticks back -Blown Primer cup	0
135	ESBEC-P	Ejector sticks back - Ejector Crescent	0
136	FCB-P	Fore-end cracked at proof	0
137	FESO-P	Fore-end shot off at proof	0
138	FF-P	Fails to fire at proof	0
139	GCSO-P	Gas cylinder shot off at proof	0
140	MSI-P	Magnaflux stamp illegible on bbl	0
141	MSM-P	Magnaflux stamp missing on bbl	0
142	PP-P	Pierced primer at proof	0
143	SCB-P	Stock cracked or broken at proof	0
144	BCOAB	Bolt catches on anti-bind	
145	BCOAB	Bolt catches on anti-bind	
146			
147			
148			
149			
150	11/2/2008		

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>541</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>42</b>													
3		<b>Overall Reject Rate:</b>		<b>7.76</b>													<i>totals</i>
5		Shot:		452	8	24	3	38	39	1							565
6		Rejected:		2	0	0	0	0	0	0	0	0	0	0	0	0	2
7		Percent:		0.4	0.0	0.0	0.0	0.0	0.0	0.0							0.4
9		Shot:		296		154	11	39	41								541
10		Rejected:		18	0	20	1	0	1	0	0	0	0	0	0	0	40
11		Percent:		6.1		13.0	9.1	0.0	2.4								7.4
13		Shot:		18		13	1	58									88
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0		0.0	0.0	0.0	0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber		1													1
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches				1											1
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard		2		3			1								6
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cam wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift				1											1
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail		4		5											3
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard		1		3											4
93	OR	Over-rides		1		1											2
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber		3		3	1										?
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers				2											2
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber		2													2
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard		4		1											3
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		1													1
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl		1													1
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>484</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>25</b>													
3		<b>Overall Reject Rate:</b>		<b>5.17</b>													<i>totals</i>
5		Shot:		289		57		104									450
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:		0.0		0.0		0.0									0.0
9		Shot:		230		175		79									484
10		Rejected:		15	0	9	0	1	0	0	0	0	0	0	0	0	26
11		Percent:		6.5		5.1		1.3									5.2
13		Shot:		22		14		8									44
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0		0.0		0.0									0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber		1													1
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		1													1
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		1													1
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		10													10
59	ESB	Ejector sticks back		1		7											8
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides		1													1
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber				2											2
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride						1									1
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>457</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>19</b>													
3		<b>Overall Reject Rate:</b>		<b>4.16</b>													<i>totals</i>
5		Shot:		362		196		30									588
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:		0.0		0.0		0.0									0.0
9		Shot:		312		145											457
10		Rejected:		3	0	16	0	0	0	0	0	0	0	0	0	0	19
11		Percent:		1.0		11.0											4.2
13		Shot:		31													31
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0													0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine				1											1
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine		1													1
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject		1													1
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		1													1
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips				1											1
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail				10											10
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard				1											1
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline				2											2
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber				1											1
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>612</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>37</b>													
3		<b>Overall Reject Rate:</b>		<b>6.05</b>													<i>totals</i>
5		Shot:		467	36	98	39										640
6		Rejected:		2	0	0	0	0	0	0	0	0	0	0	0	0	2
7		Percent:		0.4	0.0	0.0	0.0										0.3
9		Shot:		422	36	109	44	1									612
10		Rejected:		28	5	1	1	0	0	0	0	0	0	0	0	0	36
11		Percent:		6.6	13.9	0.9	2.3	0.0									5.7
13		Shot:		41	4	6	5										56
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0										0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		1													1
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject		1													1
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift		3													3
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail		2													2
81	JCS	Jumps cartridge															
82	JM	Jumps magazine		2													2
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers		9													9
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride		5	4		1										10
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber		2	1												3
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard		3		1											4
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		1													1
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions		1													1

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>631</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>45</b>													
3		<b>Overall Reject Rate:</b>		<b>7.13</b>													<i>totals</i>
5		Shot:		314	104	138		1									557
6		Rejected:		0	1	0	0	0	0	0	0	0	0	0	0	0	1
7		Percent:		0.0	1.0	0.0		0.0									0.2
9		Shot:		385	103	143											631
10		Rejected:		9	20	15	0	0	0	0	0	0	0	0	0	0	44
11		Percent:		2.3	19.4	10.5											7.0
13		Shot:		40	11	9											60
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0											0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches				3											3
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine			2												2
36	CD	Case dented															
37	CH	Closes hard			1	2											3
38	CLM	Can't load magazine			2												2
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject		1	8	3											12
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell			1	2											3
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift				2											2
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail		1													1
81	JCS	Jumps cartridge															
82	JM	Jumps magazine		1													1
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard		1													1
93	OR	Over-rides			3												3
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber				1											1
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers		4	1												5
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride			2	2											4
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber		1													1
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof			1												1
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>620</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>4</b>													
3		<b>Overall Reject Rate:</b>		<b>0.65</b>													<i>totals</i>
5		Shot:		375	77	7	4	93	39	4							539
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:		0.0	0.0	0.0	0.0	0.0	0.0	0.0							0.0
9		Shot:		300	79	81		79	39							42	850
10		Rejected:		0	0	2	0	1	0	0	0	0	0	0	0	1	4
11		Percent:		0.0	0.0	2.5		1.3	0.0						2.4		0.8
13		Shot:		29	8	8		10									55
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0		0.0									0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches			1												1
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cam wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire						1									1
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail				1											1
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position														1	1
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>612</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>28</b>													
3		<b>Overall Reject Rate:</b>		<b>4.58</b>													<i>totals</i>
5		Shot:		368	181	65		52									666
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:		0.0	0.0	0.0		0.0									0.0
9		Shot:		182	136	212	30	52									812
10		Rejected:		15	5	6	2	0	0	0	0	0	0	0	0	0	28
11		Percent:		8.2	3.7	2.8	6.7	0.0									3.8
13		Shot:		18	11	18	3	3	39								92
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0	0.0	0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard		1		1											2
38	CLM	Can't load magazine					1										1
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		1	1												2
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		2													2
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire				1											1
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips		3													3
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail		2	1	2											5
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber					1										1
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers			1												1
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline			2												2
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride		1		1											2
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily				1											1
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard		5													5
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>716</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>26</b>													
3		<b>Overall Reject Rate:</b>		<b>3.63</b>													<i>totals</i>
5		Shot:		424		55	132	95									706
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:		0.0		0.0	0.0	0.0									0.0
9		Shot:		393	105	88	77	53									716
10		Rejected:		7	7	0	6	6	0	0	0	0	0	0	0	0	26
11		Percent:		1.8	6.7	0.0	7.8	11.3									3.6
13		Shot:		42	11	8	8	3									72
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0	0.0									0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down			2												2
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard		1													1
38	CLM	Can't load magazine			1												1
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject			1												1
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		3													3
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail			1												1
81	JCS	Jumps cartridge															
82	JM	Jumps magazine			1												1
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides		1	1												2
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers						5									5
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber					5										5
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride					1										1
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber		2				1									3
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>683</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>51</b>													
3		<b>Overall Reject Rate:</b>		<b>7.47</b>													<i>totals</i>
5		Shot:		588				90									678
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:		0.0				0.0									0.0
9		Shot:		391	1	149	10	132									883
10		Rejected:		35	0	7	5	4	0	0	0	0	0	0	0	0	81
11		Percent:		9.0	0.0	4.7	50.0	3.0									7.5
13		Shot:		36		15	2	14									67
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0		0.0	0.0	0.0									0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber						1									1
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches						1									1
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine						1									1
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine						1									1
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject		3													3
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		3													3
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		20			1										21
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail		4			1										5
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides		2													2
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers				5											5
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride				1	3										4
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard		3		1											4
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>668</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>42</b>													
3		<b>Overall Reject Rate:</b>		<b>6.29</b>													<i>totals</i>
5		Shot:		377	13	218	3	47	23								681
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:		0.0	0.0	0.0	0.0	0.0	0.0								0.0
9		Shot:		264	5	344		55									868
10		Rejected:		24	0	16	0	2	0	0	0	0	0	0	0	0	42
11		Percent:		9.1	0.0	4.7		3.6									6.3
13		Shot:		27	1	35		7									70
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0		0.0									0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard		1													1
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject		2													2
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe				1											1
56	DX	Doesn't extract		3													3
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		7													7
59	ESB	Ejector sticks back		1													1
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips		5													5
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine		2													2
83	JO	Jars off															
84	LB	Light blow						1									1
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides		1		1											2
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers				4		1									5
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber				6											8
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride		2		1											3
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber				3											3
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>601</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>24</b>													
3		<b>Overall Reject Rate:</b>		<b>3.99</b>													<i>totals</i>
5		Shot:		518	12	5		50	118								705
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:		0.0	0.0	0.0		0.0	0.0								0.0
9		Shot:		360		208		3	30								591
10		Rejected:		20	0	4	0	0	0	0	0	0	0	0	0	0	24
11		Percent:		5.6		1.9		0.0	0.0								3.9
13		Shot:		35		21											56
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0		0.0											0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		1													1
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject		1													1
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		3													3
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens		1		1											2
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips		1													1
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine		5													5
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose		1													1

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard		1													1
92	OH	Opens hard															
93	OR	Over-rides		1													1
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber		2													2
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers		1		1											2
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride		1		1											2
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber				1											1
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard		1													1
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>667</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>30</b>													
3		<b>Overall Reject Rate:</b>		<b>4.50</b>													<i>totals</i>
5		Shot:		527	15	50	53	69	7								721
6		Rejected:		1	1	0	0	1	0	0	0	0	0	0	0	0	3
7		Percent:		0.2	6.7	0.0	0.0	1.4	0.0								84.4
9		Shot:		241	8	267	69	82									847
10		Rejected:		6	0	21	0	0	0	0	0	0	0	0	0	0	27
11		Percent:		2.5	0.0	7.9	0.0	0.0									3.2
13		Shot:		22		25	4	3								6	60
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0		0.0	0.0	0.0								0.0	0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches				1											1
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject				2											2
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract				2											2
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell				1											1
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips				1											1
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail				1											1
81	JCS	Jumps cartridge															
82	JM	Jumps magazine				1											1
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard				1											1
93	OR	Over-rides				1											1
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers		1		6											7
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride		4		4											8
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard		1													1
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		1	1												2
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof						1									1
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>654</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>26</b>													
3		<b>Overall Reject Rate:</b>		<b>3.98</b>													<i>totals</i>
5		Shot:		358	16	38	3	130	56	1							604
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:		0.0	0.0	0.0	0.0	0.0	0.0	0.0							0.0
9		Shot:		238	15	233		112	56								554
10		Rejected:		0	2	14	0	3	7	0	0	0	0	0	0	0	26
11		Percent:		0.0	13.3	6.0		2.7	12.5								3.9
13		Shot:		22	2	21		12	30								67
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0		0.0	0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber				1											1
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches						2									2
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine							1								1
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract			1	1											2
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell			1												1
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens				2											2
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail				2											2
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber						1									1
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers				1											1
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride				5			5								10
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber				1											1
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard				1			1								2
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>602</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>30</b>													
3		<b>Overall Reject Rate:</b>		<b>4.98</b>													<i>totals</i>
5		Shot:		319	39	101	24	58	43								584
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:		0.0	0.0	0.0	0.0	0.0	0.0								0.0
9		Shot:		479	1	59	24	39									592
10		Rejected:		20	1	6	2	1	0	0	0	0	0	0	0	0	30
11		Percent:		4.2	100.0	10.2	8.3	2.6									5.0
13		Shot:		57		6	2	4	64								133
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0		0.0	0.0	0.0	0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber		1													1
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		2				1									3
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine		6													6
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine		4													4
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips		2													2
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine		1													1
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides		4		4	2										10
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber			1												1
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride				2											2
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>508</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>26</b>													
3		<b>Overall Reject Rate:</b>		<b>5.12</b>													<i>totals</i>
5		Shot:		404	1	74	18	38									535
6		Rejected:		5	0	0	0	1	0	0	0	0	0	0	0	0	6
7		Percent:		1.2	0.0	0.0	0.0	2.6									1.1
9		Shot:		304		140		29	35								508
10		Rejected:		16	0	3	0	1	0	0	0	0	0	0	0	0	20
11		Percent:		5.3		2.1		3.4	0.0								3.9
13		Shot:		32		16		3	65								116
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0		0.0		0.0	0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cam wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		1													1
57	DXL	Doesn't extract live round		1													1
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back		2													2
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens						1									1
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips		3		1											4
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine		1													1
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides		6													6
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber				1											1
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers		1													1
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride		1		1											2
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		5				1									\$
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>503</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>43</b>													
3		<b>Overall Reject Rate:</b>		<b>8.55</b>													<i>totals</i>
5		Shot:		93	237	201		8	4	6							549
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:		0.0	0.0	0.0		0.0	0.0	0.0							0.0
9		Shot:		215	241	45		2									503
10		Rejected:		4	35	4	0	0	0	0	0	0	0	0	0	0	43
11		Percent:		1.9	14.5	8.9		0.0									8.5
13		Shot:		22	24	4											50
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0											0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine			2	2											4
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject				1											1
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		1													1
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens			1												1
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips			12												12
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides			1	1											2
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber			1												1
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers			8												8
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline			10												10
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride		3													3
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>514</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>9</b>													
3		<b>Overall Reject Rate:</b>		<b>1.75</b>													<i>totals</i>
5		Shot:		492	71		35										538
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:		0.0	0.0		0.0										0.0
9		Shot:		373	77	64											514
10		Rejected:		6	3	0	0	0	0	0	0	0	0	0	0	0	9
11		Percent:		1.6	3.9	0.0											1.8
13		Shot:		39	7	6											52
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0											0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire		1													1
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens		1													1
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stook cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber		1	3												4
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride		3													3
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>676</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>22</b>													
3		<b>Overall Reject Rate:</b>		<b>3.25</b>													<i>totals</i>
5		Shot:		600	4	3	5	8	19								639
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:		0.0	0.0	0.0	0.0	0.0	0.0								0.0
9		Shot:		494	15	106		22								39	87%
10		Rejected:		16	2	0	0	0	0	0	0	0	0	0	0	4	22
11		Percent:		3.2	13.3	0.0		0.0							10.3		3.3
13		Shot:		45	1	10		3									58
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0		0.0									0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber		1													1
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine		2													2
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cam wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject		1													1
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		1													1
59	ESB	Ejector sticks back		1													1
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect														4	4
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips		1													1
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail		1													1
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers		1													1
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline		4													4
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber		2	2												4
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard		1													1
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>545</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>12</b>													
3		<b>Overall Reject Rate:</b>		<b>2.20</b>													<i>totals</i>
5		Shot:		131	155	9	119	15									329
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:		0.0	0.0	0.0	0.0	0.0									0.0
9		Shot:		216	205	82	29	13									545
10		Rejected:		3	1	7	1	0	0	0	0	0	0	0	0	0	12
11		Percent:		1.4	0.5	8.5	3.4	0.0									2.2
13		Shot:		9	20	7		1									37
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0		0.0									0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine		1			1										2
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject				1											1
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract			1												1
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		1													1
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips				1											1
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides		1		4											5
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber				1											1
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>640</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>16</b>													
3		<b>Overall Reject Rate:</b>		<b>2.50</b>													<i>totals</i>
5		Shot:		516	32	11		7		8							574
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:		0.0	0.0	0.0		0.0		0.0							0.0
9		Shot:		376	31	206		8	19								540
10		Rejected:		11	1	4	0	0	0	0	0	0	0	0	0	0	16
11		Percent:		2.9	3.2	1.9		0.0	0.0								2.5
13		Shot:		32	3	13											48
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0											0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine		2													2
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine			1												1
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		1													1
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens				1											1
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard				1											1
93	OR	Over-rides				1											1
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline				1											1
108	SIC	Stems in chamber		3													3
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride		5													5
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>538</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>8</b>													
3		<b>Overall Reject Rate:</b>		<b>1.49</b>													<i>totals</i>
5		Shot:		341	67	6	112	32	21								579
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:		0.0	0.0	0.0	0.0	0.0	0.0								0.0
9		Shot:		214	126	110	57	31									538
10		Rejected:		4	0	2	2	0	0	0	0	0	0	0	0	0	8
11		Percent:		1.9	0.0	1.8	3.5	0.0									1.5
13		Shot:		21	11	12	6	3	34								87
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0	0.0	0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back		3		1											4
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens					2										2
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride		1		1											2
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>594</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>19</b>													
3		<b>Overall Reject Rate:</b>		<b>3.20</b>													<i>totals</i>
5		Shot:		598		46	49	27									729
6		Rejected:		0	0	1	1	0	0	0	0	0	0	0	0	0	2
7		Percent:		0.0		2.2	2.0	0.0									0.3
9		Shot:		423	45	89	6	10	21								594
10		Rejected:		10	0	3	0	0	4	0	0	0	0	0	0	0	17
11		Percent:		2.4	0.0	3.4	0.0	0.0	19.0								2.9
13		Shot:		40	4	9		1	17								71
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0		0.0	0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		1													1
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back		1													1
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips		2		1			4								?
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride		2		1											3
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber		4		1											5
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face				1	1										2
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															


	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>167</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>10</b>													
3		<b>Overall Reject Rate:</b>		<b>5.99</b>													<i>totals</i>
5		Shot:		51	8	24	5	36	17								141
6		Rejected:		0	0	0	0	3	0	0	0	0	0	0	0	0	3
7		Percent:		0.0	0.0	0.0	0.0	8.3	0.0								2.1
9		Shot:		44		55	2	55	11								147
10		Rejected:		0	0	3	0	2	2	0	0	0	0	0	0	0	7
11		Percent:		0.0		5.5	0.0	3.6	18.2								4.2
13		Shot:		4		6		6									16
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	6
15		Percent:		0.0		0.0		0.0									0.6
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															





	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens				1											1
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard							1								1
93	OR	Over-rides				1											1
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber				1											1
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard						2	1								3
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof						3									3
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

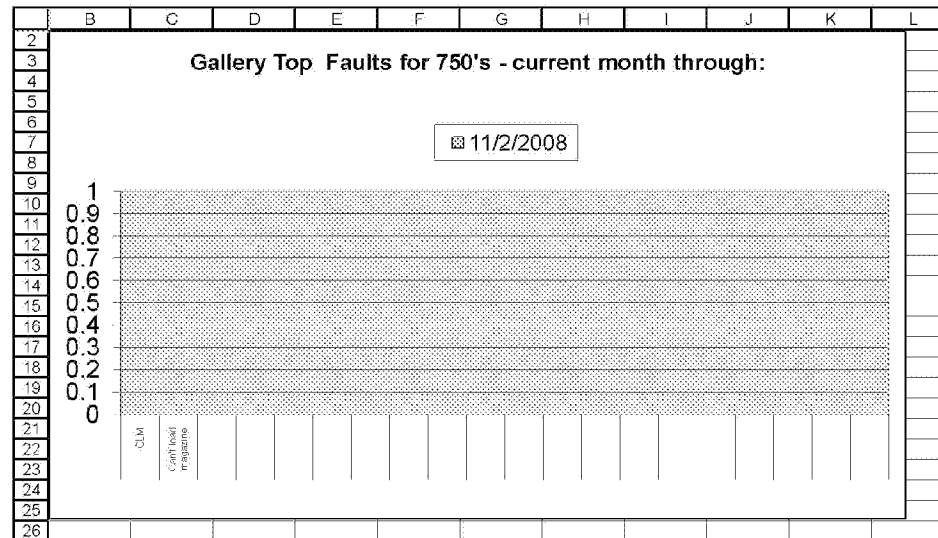

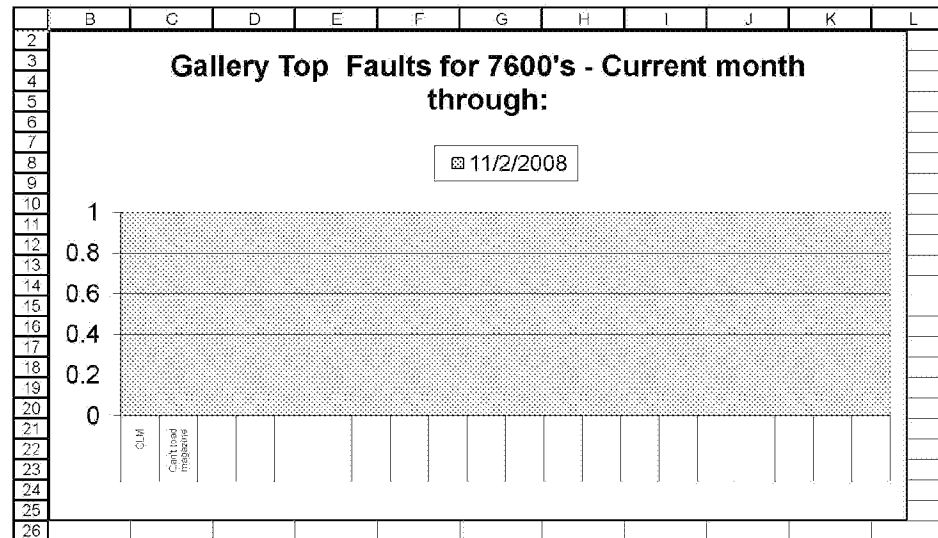

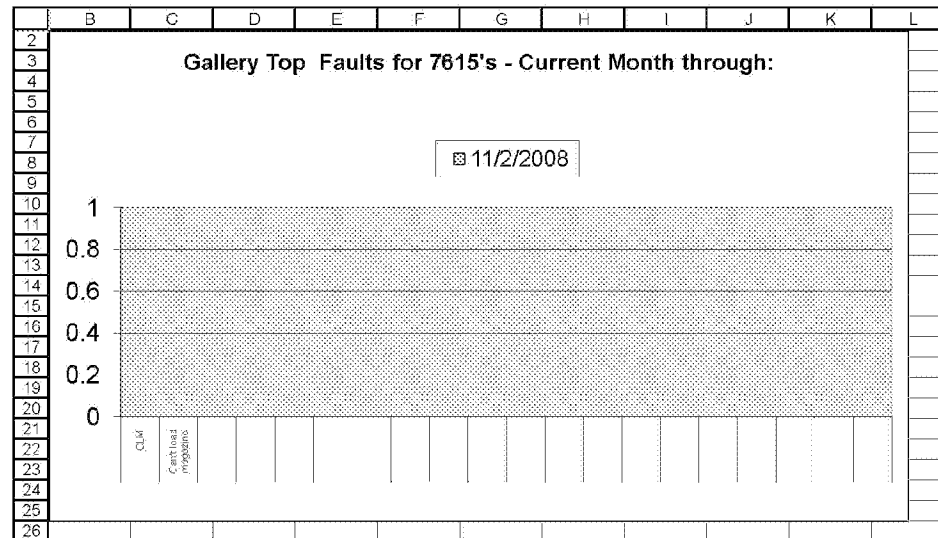

	A	B	C
1	AB	Action binds	0
2	BABS	Bulge at body shoulder	0
3	BAC	Burr at chamber	0
4	BBMA	BBL-to-bolt misalignment	0
5	BB	Bolt binds/catches	0
6	BCOAB	Bolt catches on anti-bind	0
7	BCOBS	Bolt catches on bolt stop	0
8	BCOF	Bolt catches on follower	0
9	BC	Blows cases	0
10	BHR	Bolt hits receiver	0
11	BHS	Bolt plug hits safety switch	0
12	BLOP	Bar lock or disconnecter out of position	0
13	BLSO	Barrel lug shot off	0
14	BPO	Bolt pulls out	0
15	BSSM	Bolt stems shell in magazine	0
16	BWCD	Bolt won't cam down	0
17	BWCFM	Bolt won't close over full magazine	0
18	CD	Case dented	0
19	CH	Closes hard	0
20	CLM	Can't load magazine	0
21	CO	Cut-off	0
22	CR	Cuts rim	0
23	CS	Cases swell	0
24	CTOG	Chamber torn or gouged	0
25	CTP	Creepy trigger pull	0
26	CWSB	Cams wrong side of action bar	0
27	DBB	Doesn't blow back	0
28	DCS	Double click in safety switch	0
29	DCT	Double click in trigger	0
30	DCU	Doesn't close-up	0
31	DE	Doesn't eject	0
32	DEL	Doesn't eject live round	0
33	DFB	Doesn't feed back	0
34	DFU	Doesn't feed up	0
35	DLO	Doesn't lock open (after last shell)	0
36	DLU	Doesn't lock-up	0
37	DS	Dead safe	0
38	DX	Doesn't extract	0
39	DXL	Doesn't extract live round	0
40	EDS	Extractor drops shell	0
41	ESB	Ejector sticks back	0
42	ESCR	Empty shell catches receiver	0
43	ESS	Extractor stems shell	0
44	FA	Fires automatically	0
45	FB	Follower binds	0
46	FC	Fails to connect	0
47	FCB	Fore-end cracked or broken	0
48	FD	Follows-down	0
49	FF	Fails to fire	0
50	FFP	Flat firing pin	0
51	FOS	Fires on safe	0
52	FPHB	Firing pin hits bbl	0
53	FPHI	Firing pin hits inside rim	0
54	FPO	Floor plate opens	0
55	FPOH	Floor plate opens hard	0
56	FSR	Fires when safe is released	0

	A	B	C
57	FT	Follower tips	0
58	GCSO	Gas cyl shot off	0
59	HBL	Heavy bolt lift	0
60	HMSC	Heading mismatch-steps on case	0
61	HPA	High pressure ammo	0
62	HUR	Hard under rail	0
63	JCS	Jumps cartridge	0
64	JM	Jumps magazine	0
65	JO	Jars off	0
66	LB	Light blow	0
67	MAH	Magazine assembles hard	0
68	MCW	Magazine capacity wrong	0
69	MFA	Misfires (ammo)	0
70	MFOP	Magazine follower out of position	0
71	ML	Magazine loose	0
72	MLH	Magazine loads hard	0
73	MRH	Magazine removes hard	0
74	OH	Opens hard	0
75	OR	Over-rides	0
76	PH	Pulls hard	0
77	PSI	Proof stamp illegible	0
78	PSM	Proof stamp missing	0
79	RBOC	Rings and bulges on case	0
80	RDVV	(Action) release doesn't work	0
81	RIC	Rings in chamber	0
82	RIS	Ring in sholder	0
83	RS	Rim srem	0
84	SBC	Stems bottom chambers	0
85	SEE	Stems bbl extension	0
86	SCB	Stock cracked or broken	0
87	SCX	Shell catches	0
88	SHI	Short indent	0
89	SI	Stems incline	0
90	SIC	Stems in chamber	0
91	SL	shaves lead	0
92	SLC	Stems left side of chamber	0
93	SMOC	Stretch marks on case	0
94	SOR	Stem over-ride	0
95	SP	Stems port	0
96	SR	Shoulder rough	0
97	SRC	Stems right side of chamber	0
98	SRIC	Specific rings in chamber	0
99	SSOC	Surface scratches on case	0
100	STC	Stems top chamber	0
101	SWE	Safety switch works too easily	0
102	SWH	Safety switch works too hard	0
103	SWW	Safety Switch won't work	0
104	TD	Tips down	0
105	TU	Tips up	0
106	TVWP	Trigger won't pull	0
107	TVWR	Trigger won't retract	0
108	UNCN-T	Uncoded	0
109	XH	Extracts hard	0
110			0
111	HI	High	0
112	LO	Low	0



	A	B	C
113	LEFT	Left	0
114	RIGHT	Right	0
115	DG	Doesn't Group	0
116	FSST	Front sight tipped	0
117	RSTT	Rear sight tipped	0
118	RSBR	Rear sight base raised	0
119	FSTR	Front sight raised	0
120	FSTL	Front sight loose	0
121	RSTL	Rear sight loose	0
122	MGPT-G	Missing parts at target	0
123	UNCN-G	Uncoded nonconformity at target	0
124			0
125	AI-P	Assembly incomplete at proof	0
126	BBB	Barrel bracket cracked or broken at proof	0
127	BC-P	Blows cases at proof	0
128	BEB-P	Barrel extension broken at proof	0
129	BLP-P	Blanked primer at proof	0
130	BLSO-P	Barrel lug shot off at proof	0
131	BP-P	Blown primer at proof	0
132	BS-P	Barrel split at proof	0
133	DBF-P	Damaged Bolt Face	0
134	DLOS-P	Doesn't lock over shells at proof	0
135	ESBBP-P	Ejector sticks back -Blown Primer cup	0
136	ESBEC-P	Ejector sticks back - Ejector Crescent	0
137	FCB-P	Fore-end cracked at proof	0
138	FESO-P	Fore-end shot off at proof	0
139	FF-P	Fails to fire at proof	0
140	GCSO-P	Gas cylinder shot off at proof	0
141	MSI-P	Magnaflux stamp illegible on bbl	0
142	MSM-P	Magnaflux stamp missing on bbl	0
143	PP-P	Pierced primer at proof	0
144	SCB-P	Stock cracked or broken at proof	0

	A	B	C
1	AB	Action binds	0
2	BABS	Bulge at body shoulder	0
3	BAC	Burr at chamber	0
4	BBMA	BBL-to-bolt misalignment	0
5	BB	Bolt binds/catches	0
6	BCOAB	Bolt catches on anti-bind	0
7	BCOBS	Bolt catches on bolt stop	0
8	BCOF	Bolt catches on follower	0
9	BC	Blows cases	0
10	BHR	Bolt hits receiver	0
11	BHS	Bolt plug hits safety switch	0
12	BLOP	Bar lock or disconnecter out of position	0
13	BLSO	Barrel lug shot off	0
14	BPO	Bolt pulls out	0
15	BSSM	Bolt stems shell in magazine	0
16	BWCD	Bolt won't cam down	0
17	BWCFM	Bolt won't close over full magazine	0
18	CD	Case dented	0
19	CH	Closes hard	0
20	CLM	Can't load magazine	0
21	CO	Cut-off	0
22	CR	Cuts rim	0
23	CS	Cases swell	0
24	CTOG	Chamber torn or gouged	0
25	CTP	Creepy trigger pull	0
26	CWSB	Cams wrong side of action bar	0
27	DBB	Doesn't blow back	0
28	DCS	Double click in safety switch	0
29	DCT	Double click in trigger	0
30	DCU	Doesn't close-up	0
31	DE	Doesn't eject	0
32	DEL	Doesn't eject live round	0
33	DFB	Doesn't feed back	0
34	DFU	Doesn't feed up	0
35	DLO	Doesn't lock open (after last shell)	0
36	DLU	Doesn't lock-up	0
37	DS	Dead safe	0
38	DX	Doesn't extract	0
39	DXL	Doesn't extract live round	0
40	EDS	Extractor drops shell	0
41	ESB	Ejector sticks back	0
42	ESCR	Empty shell catches receiver	0
43	ESS	Extractor stems shell	0
44	FA	Fires automatically	0
45	FB	Follower binds	0
46	FC	Fails to connect	0
47	FCB	Fore-end cracked or broken	0
48	FD	Follows-down	0
49	FF	Fails to fire	0
50	FFP	Flat firing pin	0
51	FOS	Fires on safe	0
52	FPHB	Firing pin hits bbl	0
53	FPHI	Firing pin hits inside rim	0
54	FPO	Floor plate opens	0
55	FPOH	Floor plate opens hard	0
56	FSR	Fires when safe is released	0

	A	B	C
57	FT	Follower tips	0
58	GCSO	Gas cyl shot off	0
59	HBL	Heavy bolt lift	0
60	HMSC	Heading mismatch-steps on case	0
61	HPA	High pressure ammo	0
62	HUR	Hard under rail	0
63	JCS	Jumps cartridge	0
64	JM	Jumps magazine	0
65	JO	Jars off	0
66	LB	Light blow	0
67	MAH	Magazine assembles hard	0
68	MCW	Magazine capacity wrong	0
69	MFA	Misfires (ammo)	0
70	MFOP	Magazine follower out of position	0
71	ML	Magazine loose	0
72	MLH	Magazine loads hard	0
73	MRH	Magazine removes hard	0
74	OH	Opens hard	0
75	OR	Over-rides	0
76	PH	Pulls hard	0
77	PSI	Proof stamp illegible	0
78	PSM	Proof stamp missing	0
79	RBOC	Rings and bulges on case	0
80	RDVV	(Action) release doesn't work	0
81	RIC	Rings in chamber	0
82	RIS	Ring in sholder	0
83	RS	Rim srem	0
84	SBC	Stems bottom chambers	0
85	SEE	Stems bbl extension	0
86	SCB	Stock cracked or broken	0
87	SCX	Shell catches	0
88	SHI	Short indent	0
89	SI	Stems incline	0
90	SIC	Stems in chamber	0
91	SL	shaves lead	0
92	SLC	Stems left side of chamber	0
93	SMOC	Stretch marks on case	0
94	SOR	Stem over-ride	0
95	SP	Stems port	0
96	SR	Shoulder rough	0
97	SRC	Stems right side of chamber	0
98	SRIC	Specific rings in chamber	0
99	SSOC	Surface scratches on case	0
100	STC	Stems top chamber	0
101	SWE	Safety switch works too easily	0
102	SWH	Safety switch works too hard	0
103	SWW	Safety Switch won't work	0
104	TD	Tips down	0
105	TU	Tips up	0
106	TWP	Trigger won't pull	0
107	TWR	Trigger won't retract	0
108	UNCN-T	Uncoded	0
109	XH	Extracts hard	0
110			0
111	HI	High	0
112	LO	Low	0

	A	B	C
113	LEFT	Left	0
114	RIGHT	Right	0
115	DG	Doesn't Group	0
116	FSST	Front sight tipped	0
117	RSTT	Rear sight tipped	0
118	RSBR	Rear sight base raised	0
119	FSTR	Front sight raised	0
120	FSTL	Front sight loose	0
121	RSTL	Rear sight loose	0
122	MGPT-G	Missing parts at target	0
123	UNCN-G	Uncoded nonconformity at target	0
124			0
125	AI-P	Assembly incomplete at proof	0
126	BBB	Barrel bracket cracked or broken at proof	0
127	BC-P	Blows cases at proof	0
128	BEB-P	Barrel extension broken at proof	0
129	BLP-P	Blanked primer at proof	0
130	BLSO-P	Barrel lug shot off at proof	0
131	BP-P	Blown primer at proof	0
132	BS-P	Barrel split at proof	0
133	DBF-P	Damaged Bolt Face	0
134	DLOS-P	Doesn't lock over shells at proof	0
135	ESBBP-P	Ejector sticks back -Blown Primer cup	0
136	ESBEC-P	Ejector sticks back - Ejector Crescent	0
137	FCB-P	Fore-end cracked at proof	0
138	FESO-P	Fore-end shot off at proof	0
139	FF-P	Fails to fire at proof	0
140	GCSO-P	Gas cylinder shot off at proof	0
141	MSI-P	Magnaflux stamp illegible on bbl	0
142	MSM-P	Magnaflux stamp missing on bbl	0
143	PP-P	Pierced primer at proof	0
144	SCB-P	Stock cracked or broken at proof	0

	A	B	C
1	AB	Action binds	0
2	BABS	Bulge at body shoulder	0
3	BAC	Burr at chamber	0
4	BBMA	BBL-to-bolt misalignment	0
5	BB	Bolt binds/catches	0
6	BCOAB	Bolt catches on anti-bind	0
7	BCOBS	Bolt catches on bolt stop	0
8	BCOF	Bolt catches on follower	0
9	BC	Blows cases	0
10	BHR	Bolt hits receiver	0
11	BHS	Bolt plug hits safety switch	0
12	BLOP	Bar lock or disconnecter out of position	0
13	BLSO	Barrel lug shot off	0
14	BPO	Bolt pulls out	0
15	BSSM	Bolt stems shell in magazine	0
16	BWCD	Bolt won't cam down	0
17	BWCFM	Bolt won't close over full magazine	0
18	CD	Case dented	0
19	CH	Closes hard	0
20	CLM	Can't load magazine	0
21	CO	Cut-off	0
22	CR	Cuts rim	0
23	CS	Cases swell	0
24	CTOG	Chamber torn or gouged	0
25	CTP	Creepy trigger pull	0
26	CWSB	Cams wrong side of action bar	0
27	DBB	Doesn't blow back	0
28	DCS	Double click in safety switch	0
29	DCT	Double click in trigger	0
30	DCU	Doesn't close-up	0
31	DE	Doesn't eject	0
32	DEL	Doesn't eject live round	0
33	DFB	Doesn't feed back	0
34	DFU	Doesn't feed up	0
35	DLO	Doesn't lock open (after last shell)	0
36	DLU	Doesn't lock-up	0
37	DS	Dead safe	0
38	DX	Doesn't extract	0
39	DXL	Doesn't extract live round	0
40	EDS	Extractor drops shell	0
41	ESB	Ejector sticks back	0
42	ESCR	Empty shell catches receiver	0
43	ESS	Extractor stems shell	0
44	FA	Fires automatically	0
45	FB	Follower binds	0
46	FC	Fails to connect	0
47	FCB	Fore-end cracked or broken	0
48	FD	Follows-down	0
49	FF	Fails to fire	0
50	FFP	Flat firing pin	0
51	FOS	Fires on safe	0
52	FPHB	Firing pin hits bbl	0
53	FPHI	Firing pin hits inside rim	0
54	FPO	Floor plate opens	0
55	FPOH	Floor plate opens hard	0
56	FSR	Fires when safe is released	0

	A	B	C
57	FT	Follower tips	0
58	GCSO	Gas cyl shot off	0
59	HBL	Heavy bolt lift	0
60	HMSC	Heading mismatch-steps on case	0
61	HPA	High pressure ammo	0
62	HUR	Hard under rail	0
63	JCS	Jumps cartridge	0
64	JM	Jumps magazine	0
65	JO	Jars off	0
66	LB	Light blow	0
67	MAH	Magazine assembles hard	0
68	MCW	Magazine capacity wrong	0
69	MFA	Misfires (ammo)	0
70	MFOP	Magazine follower out of position	0
71	ML	Magazine loose	0
72	MLH	Magazine loads hard	0
73	MRH	Magazine removes hard	0
74	OH	Opens hard	0
75	OR	Over-rides	0
76	PH	Pulls hard	0
77	PSI	Proof stamp illegible	0
78	PSM	Proof stamp missing	0
79	RBOC	Rings and bulges on case	0
80	RDVV	(Action) release doesn't work	0
81	RIC	Rings in chamber	0
82	RIS	Ring in sholder	0
83	RS	Rim srem	0
84	SBC	Stems bottom chambers	0
85	SEE	Stems bbl extension	0
86	SCB	Stock cracked or broken	0
87	SCX	Shell catches	0
88	SHI	Short indent	0
89	SI	Stems incline	0
90	SIC	Stems in chamber	0
91	SL	shaves lead	0
92	SLC	Stems left side of chamber	0
93	SMOC	Stretch marks on case	0
94	SOR	Stem over-ride	0
95	SP	Stems port	0
96	SR	Shoulder rough	0
97	SRC	Stems right side of chamber	0
98	SRIC	Specific rings in chamber	0
99	SSOC	Surface scratches on case	0
100	STC	Stems top chamber	0
101	SWE	Safety switch works too easily	0
102	SWH	Safety switch works too hard	0
103	SWW	Safety Switch won't work	0
104	TD	Tips down	0
105	TU	Tips up	0
106	TWP	Trigger won't pull	0
107	TWR	Trigger won't retract	0
108	UNCN-T	Uncoded	0
109	XH	Extracts hard	0
110			0
111	HI	High	0
112	LO	Low	0

	A	B	C
113	LEFT	Left	0
114	RIGHT	Right	0
115	DG	Doesn't Group	0
116	FSST	Front sight tipped	0
117	RSTT	Rear sight tipped	0
118	RSBR	Rear sight base raised	0
119	FSTR	Front sight raised	0
120	FSTL	Front sight loose	0
121	RSTL	Rear sight loose	0
122	MGPT-G	Missing parts at target	0
123	UNCN-G	Uncoded nonconformity at target	0
124			0
125	AI-P	Assembly incomplete at proof	0
126	BBB	Barrel bracket cracked or broken at proof	0
127	BC-P	Blows cases at proof	0
128	BEB-P	Barrel extension broken at proof	0
129	BLP-P	Blanked primer at proof	0
130	BLSO-P	Barrel lug shot off at proof	0
131	BP-P	Blown primer at proof	0
132	BS-P	Barrel split at proof	0
133	DBF-P	Damaged Bolt Face	0
134	DLOS-P	Doesn't lock over shells at proof	0
135	ESBBP-P	Ejector sticks back - Blown Primer cup	0
136	ESBEC-P	Ejector sticks back - Ejector Crescent	0
137	FCB-P	Fore-end cracked at proof	0
138	FESO-P	Fore-end shot off at proof	0
139	FF-P	Fails to fire at proof	0
140	GCSO-P	Gas cylinder shot off at proof	0
141	MSI-P	Magnaflux stamp illegible on bbl	0
142	MSM-P	Magnaflux stamp missing on bbl	0
143	PP-P	Pierced primer at proof	0
144	SCB-P	Stock cracked or broken at proof	0

	A	B	C
1	AB	Action binds	0
2	BABS	Bulge at body shoulder	0
3	BAC	Burr at chamber	0
4	BBMA	BBL-to-bolt misalignment	0
5	BB	Bolt binds/catches	0
6	BCOAB	Bolt catches on anti-bind	0
7	BCOBS	Bolt catches on bolt stop	0
8	BCOF	Bolt catches on follower	0
9	BC	Blows cases	0
10	BHR	Bolt hits receiver	0
11	BHS	Bolt plug hits safety switch	0
12	BLOP	Bar lock or disconnecter out of position	0
13	BLSO	Barrel lug shot off	0
14	BPO	Bolt pulls out	0
15	BSSM	Bolt stems shell in magazine	0
16	BWCD	Bolt won't cam down	0
17	BWCFM	Bolt won't close over full magazine	0
18	CD	Case dented	0
19	CH	Closes hard	0
20	CLM	Can't load magazine	0
21	CO	Cut-off	0
22	CR	Cuts rim	0
23	CS	Cases swell	0
24	CTOG	Chamber torn or gouged	0
25	CTP	Creepy trigger pull	0
26	CWSB	Cams wrong side of action bar	0
27	DBB	Doesn't blow back	0
28	DCS	Double click in safety switch	0
29	DCT	Double click in trigger	0
30	DCU	Doesn't close-up	0
31	DE	Doesn't eject	0
32	DEL	Doesn't eject live round	0
33	DFB	Doesn't feed back	0
34	DFU	Doesn't feed up	0
35	DLO	Doesn't lock open (after last shell)	0
36	DLU	Doesn't lock-up	0
37	DS	Dead safe	0
38	DX	Doesn't extract	0
39	DXL	Doesn't extract live round	0
40	EDS	Extractor drops shell	0
41	ESB	Ejector sticks back	0
42	ESCR	Empty shell catches receiver	0
43	ESS	Extractor stems shell	0
44	FA	Fires automatically	0
45	FB	Follower binds	0
46	FC	Fails to connect	0
47	FCB	Fore-end cracked or broken	0
48	FD	Follows-down	0
49	FF	Fails to fire	0
50	FFP	Flat firing pin	0
51	FOS	Fires on safe	0
52	FPHB	Firing pin hits bbl	0
53	FPHI	Firing pin hits inside rim	0
54	FPO	Floor plate opens	0
55	FPOH	Floor plate opens hard	0
56	FSR	Fires when safe is released	0



	A	B	C
57	FT	Follower tips	0
58	GCSO	Gas cyl shot off	0
59	HBL	Heavy bolt lift	0
60	HMSC	Heading mismatch-steps on case	0
61	HPA	High pressure ammo	0
62	HUR	Hard under rail	0
63	JCS	Jumps cartridge	0
64	JM	Jumps magazine	0
65	JO	Jars off	0
66	LB	Light blow	0
67	MAH	Magazine assembles hard	0
68	MCW	Magazine capacity wrong	0
69	MFA	Misfires (ammo)	0
70	MFOP	Magazine follower out of position	0
71	ML	Magazine loose	0
72	MLH	Magazine loads hard	0
73	MRH	Magazine removes hard	0
74	OH	Opens hard	0
75	OR	Over-rides	0
76	PH	Pulls hard	0
77	PSI	Proof stamp illegible	0
78	PSM	Proof stamp missing	0
79	RBOC	Rings and bulges on case	0
80	RDVV	(Action) release doesn't work	0
81	RIC	Rings in chamber	0
82	RIS	Ring in sholder	0
83	RS	Rim srem	0
84	SBC	Stems bottom chambers	0
85	SEE	Stems bbl extension	0
86	SCB	Stock cracked or broken	0
87	SCX	Shell catches	0
88	SHI	Short indent	0
89	SI	Stems incline	0
90	SIC	Stems in chamber	0
91	SL	shaves lead	0
92	SLC	Stems left side of chamber	0
93	SMOC	Stretch marks on case	0
94	SOR	Stem over-ride	0
95	SP	Stems port	0
96	SR	Shoulder rough	0
97	SRC	Stems right side of chamber	0
98	SRIC	Specific rings in chamber	0
99	SSOC	Surface scratches on case	0
100	STC	Stems top chamber	0
101	SWE	Safety switch works too easily	0
102	SWH	Safety switch works too hard	0
103	SWW	Safety Switch won't work	0
104	TD	Tips down	0
105	TU	Tips up	0
106	TWP	Trigger won't pull	0
107	TWR	Trigger won't retract	0
108	UNCN-T	Uncoded	0
109	XH	Extracts hard	0
110			0
111	HI	High	0
112	LO	Low	0

	A	B	C
113	LEFT	Left	0
114	RIGHT	Right	0
115	DG	Doesn't Group	0
116	FSST	Front sight tipped	0
117	RSTT	Rear sight tipped	0
118	RSBR	Rear sight base raised	0
119	FSTR	Front sight raised	0
120	FSTL	Front sight loose	0
121	RSTL	Rear sight loose	0
122	MGPT-G	Missing parts at target	0
123	UNCN-G	Uncoded nonconformity at target	0
124			0
125	AI-P	Assembly incomplete at proof	0
126	BBB	Barrel bracket cracked or broken at proof	0
127	BC-P	Blows cases at proof	0
128	BEB-P	Barrel extension broken at proof	0
129	BLP-P	Blanked primer at proof	0
130	BLSO-P	Barrel lug shot off at proof	0
131	BP-P	Blown primer at proof	0
132	BS-P	Barrel split at proof	0
133	DBF-P	Damaged Bolt Face	0
134	DLOS-P	Doesn't lock over shells at proof	0
135	ESBBP-P	Ejector sticks back -Blown Primer cup	0
136	ESBEC-P	Ejector sticks back - Ejector Crescent	0
137	FCB-P	Fore-end cracked at proof	0
138	FESO-P	Fore-end shot off at proof	0
139	FF-P	Fails to fire at proof	0
140	GCSO-P	Gas cylinder shot off at proof	0
141	MSI-P	Magnaflux stamp illegible on bbl	0
142	MSM-P	Magnaflux stamp missing on bbl	0
143	PP-P	Pierced primer at proof	0
144	SCB-P	Stock cracked or broken at proof	0

# Centerfire

	A	B	D	E	F	G	H	I	J	P	Q
1	<b>Summary</b>	<b>Total Tested</b>	<b>3042</b>								
2		<b>Total Rejected:</b>	<b>225</b>								
3		<b>Overall Reject Rate:</b>	<b>7.40</b>								<b>Grand totals</b>
5		<b>Shot:</b>	1469	824	134	194	71	268			2360
6	<b>Proof</b>	<b>Rejected:</b>	1	0	0	0	0	0	0	0	1
7		<b>Percent:</b>	0.1	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0
9		<b>Shot:</b>	306	757	1277	228	121	267	1	85	3042
10	<b>Test</b>	<b>Rejected:</b>	30	26	109	24	5	30	0	0	224
11		<b>Percent:</b>	9.8	3.4	8.5	10.5	4.1	11.2	0.0	0.0	7.4
13		<b>Shot:</b>	29	72	121	16	18	237			493
14	<b>Target</b>	<b>Rejected:</b>	0	0	0	0	0	0	0	0	0
15		<b>Percent:</b>	0.0	0.0	0.0	0.0	0.0	0.0			0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>	<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>Rimfire</b>	<b>totals</b>
18											
19	AB	Action binds									
20	BABS	Bulge at body shoulder									
21	BAC	Burr at chamber						6			6
22	BBMA	BBL-to-bolt misalignment									
23	BB	Bolt binds/catches		2	5	1	1	3			12
24	BCOAB	Bolt catches on anti-bind									
25	BCOBS	Bolt catches on bolt stop									
26	BCOF	Bolt catches on follower									
27	BC	Blows cases									
28	BHR	Bolt hits receiver									
29	BHS	Bolt plug hits safety switch									
30	BLOP	Bar lock or disconnecter out of position									
31	BLSO	Barrel lug shot off									
32	BPO	Bolt pulls out									
33	BSSM	Bolt stems shell in magazine									
34	BWCD	Bolt won't cam down									
35	BWCFM	Bolt won't close over full magazine			2						2
36	CD	Case dented									
37	CH	Closes hard			1						1
38	CLM	Can't load magazine		1		2					3
39	CO	Cut-off									
40	CR	Cuts rim									

# Centerfire

	A	B	D	E	F	G	H	I	J	P	Q
17	CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7	Rimfire	totals
41	CS	Cases swell									
42	CTOG	Chamber torn or gouged									
43	CTP	Creepy trigger pull									
44	CWSB	Cams wrong side of action bar									
45	DBB	Doesn't blow back									
46	DCS	Double click in safety switch									
47	DCT	Double click in trigger									
48	DCU	Doesn't close-up									
49	DE	Doesn't eject		3							3
50	DEL	Doesn't eject live round									
51	DFB	Doesn't feed back									
52	DFU	Doesn't feed up									
53	DLO	Doesn't lock open (after last shell)									
54	DLU	Doesn't lock-up									
55	DS	Dead safe									
56	DX	Doesn't extract	3	2	1						6
57	DXL	Doesn't extract live round									
58	EDS	Extractor drops shell	3	7	2		1				13
59	ESB	Ejector sticks back	1	3							4
60	ESCR	Empty shell catches receiver									
61	ESS	Extractor stems shell									
62	FA	Fires automatically									
63	FB	Follower binds									
64	FC	Fails to connect									
65	FCB	Fore-end cracked or broken									
66	FD	Follows-down									
67	FF	Fails to fire									
68	FFP	Flat firing pin									
69	FOS	Fires on safe									
70	FPHB	Firing pin hits bbl									
71	FPHI	Firing pin hits inside rim									
72	FPO	Floor plate opens									
73	FPOH	Floor plate opens hard									

# Centerfire


	A	B	D	E	F	G	H	I	J	P	Q
17	CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7	Rimfire	totals
74	FSR	Fires when safe is released									
75	FT	Follower tips	2		5						7
76	GCSO	Gas cyl shot off									
77	HBL	Heavy bolt lift			2						2
78	HMSC	Heading mismatch-steps on case									
79	HPA	High pressure ammo									
80	HUR	Hard under rail		1	1	3					5
81	JCS	Jumps cartridge									
82	JM	Jumps magazine			17						17
83	JO	Jars off									
84	LB	Light blow									
85	MAH	Magazine assembles hard									
86	MCW	Magazine capacity wrong									
87	MFA	Misfires (ammo)									
88	MFOP	Magazine follower out of position									
89	ML	Magazine loose									
90	MLH	Magazine loads hard									
91	MRH	Magazine removes hard									
92	OH	Opens hard		1		1					2
93	OR	Over-rides	15	2	1			1			19
94	PH	Pulls hard									
95	PSI	Proof stamp illegible									
96	PSM	Proof stamp missing									
97	RBOC	Rings and bulges on case									
98	RDW	(Action) release doesn't work									
99	RIC	Rings in chamber				1					1
100	RIS	Ring in sholder									
101	RS	Rim srem									
102	SBC	Stems bottom chambers	1	1	29	3		11			45
103	SBE	Stems bbl extension									
104	SCB	Stock cracked or broken									
105	SCX	Shell catches									
106	SHI	Short indent									

# Centerfire

	A	B	D	E	F	G	H	I	J	P	Q
17	CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7	Rimfire	totals
107	SI	Stems incline									
108	SIC	Stems in chamber			6						6
109	SL	shaves lead									
110	SLC	Stems left side of chamber									
111	SMOC	Stretch marks on case									
112	SOR	Stem over-ride	3	1	29	9	2	9			53
113	SP	Stems port									
114	SR	Shoulder rough									
115	SRC	Stems right side of chamber									
116	SRIC	Specific rings in chamber									
117	SSOC	Surface scratches on case									
118	STC	Stems top chamber	2		5						7
119	SWE	Safety switch works too easily				1					1
120	SWH	Safety switch works too hard									
121	SWW	Safety Switch won't work									
122	TD	Tips down									
123	TU	Tips up									
124	TWP	Trigger won't pull									
125	TWR	Trigger won't retract									
126	UNCN-T	Uncoded									
127	XH	Extracts hard		2	3	3	1				9
128											
129	HI	High									
130	LO	Low									
131	LEFT	Left									
132	RIGHT	Right									
133	DG	Doesn't Group									
134	FSST	Front sight tipped									
135	RSTT	Rear sight tipped									
136	RSBR	Rear sight base raised									
137	FSTR	Front sight raised									
138	FSTL	Front sight loose									
139	RSTL	Rear sight loose									

# Centerfire

	A	B	D	E	F	G	H	I	J	P	Q
17	CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7	Rimfire	totals
140	MGPT-G	Missing parts at target									
141	UNCN-G	Uncoded nonconformity at target									
142											
143	AI-P	Assembly incomplete at proof									
144	BBB	Barrel bracket cracked or broken at proof									
145	BC-P	Blows cases at proof									
146	BEB-P	Barrel extension broken at proof									
147	BLP-P	Blanked primer at proof									
148	BLSO-P	Barrel lug shot off at proof									
149	BP-P	Blown primer at proof									
150	BS-P	Barrel split at proof									
151	DBF-P	Damaged Bolt Face	1								1
152	DLOS-P	Doesn't lock over shells at proof									
153	ESBBP-P	Ejector sticks back -Blown Primer cup									
154	ESBEC-P	Ejector sticks back - Ejector Crescent									
155	FCB-P	Fore-end cracked at proof									
156	FESO-P	Fore-end shot off at proof									
157	FF-P	Fails to fire at proof									
158	GCSO-P	Gas cylinder shot off at proof									
159	MSI-P	Magnaflux stamp illegible on bbl									
160	MSM-P	Magnaflux stamp missing on bbl									
161	PP-P	Pierced primer at proof									
162	SCB-P	Stock cracked or broken at proof									
163	UNCM-P	Uncoded proof malfunctions									

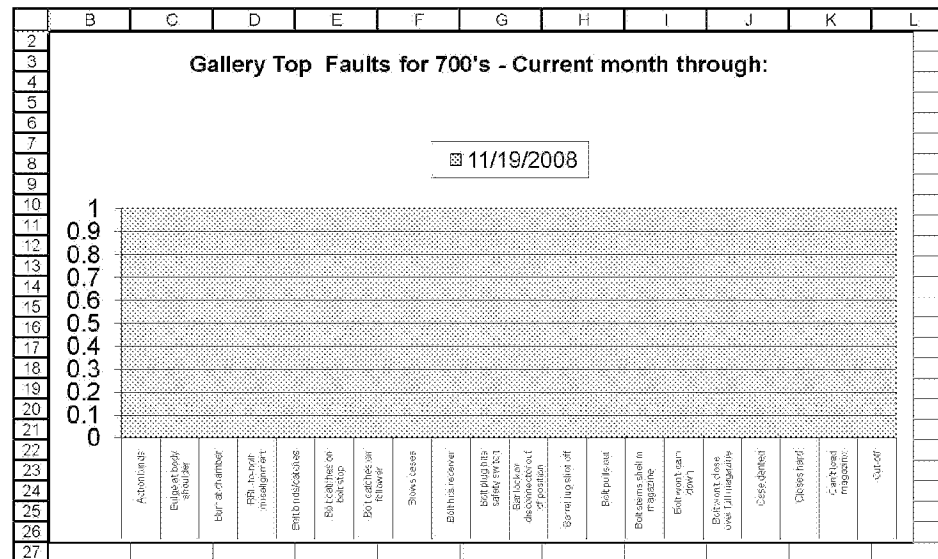



	A	B	C
1	AB	Action binds	0
2	BABS	Bulge at body shoulder	0
3	BAC	Burr at chamber	0
4	BBMA	BBL-to-bolt misalignment	0
5	BB	Bolt binds/catches	0
6	BCCBS	Bolt catches on bolt stop	0
7	BCCF	Bolt catches on follower	0
8	BC	Blows cases	0
9	BHR	Bolt hits receiver	0
10	BHS	Bolt plug hits safety switch	0
11	BLOP	Bar lock or disconnecter out of position	0
12	BLSO	Barrel lug shot off	0
13	BPO	Bolt pulls out	0
14	BSSM	Bolt stems shell in magazine	0
15	BWCD	Bolt won't cam down	0
16	BWCFM	Bolt won't close over full magazine	0
17	CD	Case dented	0
18	CH	Closes hard	0
19	CLM	Can't load magazine	0
20	CO	Cut-off	0
21	CR	Cuts rim	0
22	CS	Cases swell	0
23	CTOG	Chamber torn or gouged	0
24	CTP	Creepy trigger pull	0
25	CWSB	Cams wrong side of action bar	0
26	DBB	Doesn't blow back	0
27	DCS	Double click in safety switch	0
28	DCT	Double click in trigger	0
29	DCU	Doesn't close-up	0
30	DE	Doesn't eject	0
31	DEL	Doesn't eject live round	0
32	DFB	Doesn't feed back	0
33	DFU	Doesn't feed up	0
34	DLO	Doesn't lock open (after last shell)	0
35	DLU	Doesn't lock-up	0
36	DS	Dead safe	0
37	DX	Doesn't extract	0
38	DXL	Doesn't extract live round	0
39	EDS	Extractor drops shell	0
40	ESB	Ejector sticks back	0
41	ESCR	Empty shell catches receiver	0
42	ESS	Extractor stems shell	0
43	FA	Fires automatically	0
44	FB	Follower binds	0
45	FC	Fails to connect	0
46	FCB	Fore-end cracked or broken	0
47	FD	Follows-down	0
48	FF	Fails to fire	0
49	FFP	Flat firing pin	0
50	FOS	Fires on safe	0
51	FPHB	Firing pin hits bbl	0
52	FPHI	Firing pin hits inside rim	0
53	FPO	Floor plate opens	0
54	FPOH	Floor plate opens hard	0
55	FSR	Fires when safe is released	0
56	FT	Follower tips	0

	A	B	C
57	GCSO	Gas cyl shot off	0
58	HBL	Heavy bolt lift	0
59	HMSC	Heading mismatch-steps on case	0
60	HPA	High pressure ammo	0
61	HUR	Hard under rail	0
62	JCS	Jumps cartridge	0
63	JM	Jumps magazine	0
64	JO	Jars off	0
65	LB	Light blow	0
66	MAH	Magazine assembles hard	0
67	MCW	Magazine capacity wrong	0
68	MFA	Misfires (ammo)	0
69	MFOP	Magazine follower out of position	0
70	ML	Magazine loose	0
71	MLH	Magazine loads hard	0
72	MRH	Magazine removes hard	0
73	OH	Opens hard	0
74	OR	Over-rides	0
75	PH	Pulls hard	0
76	PSI	Proof stamp illegible	0
77	PSM	Proof stamp missing	0
78	RBOC	Rings and bulges on case	0
79	RDW	(Action) release doesn't work	0
80	RIC	Rings in chamber	0
81	RIS	Ring in sholder	0
82	RS	Rim srem	0
83	SBC	Stems bottom chambers	0
84	SBE	Stems bbl extension	0
85	SCB	Stock cracked or broken	0
86	SCX	Shell catches	0
87	SHI	Short indent	0
88	SI	Stems incline	0
89	SIC	Stems in chamber	0
90	SL	shaves lead	0
91	SLC	Stems left side of chamber	0
92	SMQC	Stretch marks on case	0
93	SOR	Stem over-ride	0
94	SP	Stems port	0
95	SR	Shoulder rough	0
96	SRC	Stems right side of chamber	0
97	SRIC	Specific rings in chamber	0
98	SSOC	Surface scratches on case	0
99	STC	Stems top chamber	0
100	SWE	Safety switch works too easily	0
101	SWH	Safety switch works too hard	0
102	SWV	Safety Switch won't work	0
103	TD	Tips down	0
104	TU	Tips up	0
105	TWP	Trigger won't pull	0
106	TWR	Trigger won't retract	0
107	UNCN-T	Uncoded	0
108	XH	Extracts hard	0
109			0
110	Hi	High	0
111	LO	Low	0
112	LEFT	Left	0

	A	B	C
113	RIGHT	Right	0
114	DG	Doesn't Group	0
115	FSST	Front sight tipped	0
116	RSTT	Rear sight tipped	0
117	RSBR	Rear sight base raised	0
118	FSTR	Front sight raised	0
119	FSTL	Front sight loose	0
120	RSTL	Rear sight loose	0
121	MGPT-G	Missing parts at target	0
122	UNCN-G	Uncoded nonconformity at target	0
123			0
124	AI-P	Assembly incomplete at proof	0
125	BBB	Barrel bracket cracked or broken at proof	0
126	BC-P	Blows cases at proof	0
127	BEB-P	Barrel extension broken at proof	0
128	BLP-P	Blanked primer at proof	0
129	BLSO-P	Barrel lug shot off at proof	0
130	BP-P	Blown primer at proof	0
131	BS-P	Barrel split at proof	0
132	DBF-P	Damaged Bolt Face	0
133	DLOS-P	Doesn't lock over shells at proof	0
134	ESBBP-P	Ejector sticks back -Blown Primer cup	0
135	ESBEC-P	Ejector sticks back - Ejector Cresent	0
136	FCB-P	Fore-end cracked at proof	0
137	FESC-P	Fore-end shot off at proof	0
138	FF-P	Fails to fire at proof	0
139	GCSO-P	Gas cylinder shot off at proof	0
140	MSI-P	Magnaflux stamp illegible on bbl	0
141	MSM-P	Magnaflux stamp missing on bbl	0
142	PP-P	Pierced primer at proof	0
143	SCB-P	Stock cracked or broken at proof	0
144	BCOAB	Bolt catches on anti-bind	
145	BCOAB	Bolt catches on anti-bind	
146			
147			
148			
149			
150	11/19/2008		

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>278</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>16</b>													
3		<b>Overall Reject Rate:</b>		<b>5.76</b>													<i>totals</i>
5		Shot:		53	201	31		9	15								309
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:		0.0	0.0	0.0		0.0	0.0								0.0
9		Shot:		22	129	75	50	1		1							278
10		Rejected:		6	3	3	4	0	0	0	0	0	0	0	0	0	16
11		Percent:		27.3	2.3	4.0	8.0	0.0		0.0							5.8
13		Shot:		2	13	7	4										28
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0										0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		2		1											3
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		3	3												5
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail					2										2
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber					1										1
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride		1		2											3
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard					1										1
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>451</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>38</b>													
3		<b>Overall Reject Rate:</b>		<b>8.43</b>													<i>totals</i>
5		Shot:		180	82	68	20		163								513
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:		0.0	0.0	0.0	0.0	0.0	0.0								0.0
9		Shot:			81	188		21	112							49	431
10		Rejected:		0	1	16	0	0	21	0	0	0	0	0	0	0	38
11		Percent:			1.2	8.5		0.0	18.8							0.0	8.4
13		Shot:			6	18		3	35								62
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:			0.0	0.0		0.0	0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches							3								3
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cam wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back			1												1
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips				1											1
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides							1								1
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers				1			10								11
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber				2											2
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride				12			7								12
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>470</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>23</b>													
3		<b>Overall Reject Rate:</b>		<b>4.89</b>													<i>totals</i>
5		Shot:		155	100		65	25									345
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:		0.0	0.0		0.0	0.0									0.0
9		Shot:		75	113	179	26	26	51								470
10		Rejected:		7	6	6	3	0	1	0	0	0	0	0	0	0	23
11		Percent:		9.3	5.3	3.4	11.5	0.0	2.0								4.89
13		Shot:		8	11	18	3	3	82								125
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0	0.0	0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches			1	2											3
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine					1										1
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject			2												2
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips		2		3											5
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail				1											1
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides		3	2												5
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride							1								1
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber		2													2
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard			1		2										3
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>307</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>14</b>													
3		<b>Overall Reject Rate:</b>		<b>4.56</b>													<i>totals</i>
5		Shot:		91	102	35	74	12	49								363
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:		0.0	0.0	0.0	0.0	0.0	0.0								0.0
9		Shot:		45	101	82	30	49									307
10		Rejected:		0	3	4	2	5	0	0	0	0	0	0	0	0	14
11		Percent:		0.0	3.0	4.9	6.7	10.2									4.6
13		Shot:		2	9	8		5	24								48
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0		0.0	0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches						1									1
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine				1											1
36	CD	Case dented															
37	CH	Closes hard				1											1
38	CLM	Can't load magazine			1		1										2
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cam wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell				1		1									2
59	ESB	Ejector sticks back			1												1
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride				1		2									3
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily					1										1
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard			1			1									2
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>485</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>51</b>													
3		<b>Overall Reject Rate:</b>		<b>10.52</b>													<i>totals</i>
5		Shot:		284	17		9		37								347
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:		0.0	0.0		0.0		0.0								0.0
9		Shot:		68	17	198	67		99							36	425
10		Rejected:		5	1	22	15	0	8	0	0	0	0	0	0	0	51
11		Percent:		7.4	5.9	11.1	22.4		8.1						0.0		10.5
13		Shot:		7	2	16	3		91								119
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0		0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber							6								6
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches					1										1
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		1													1
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back		1													1
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift				1											1
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail			1		1										2
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard					1										1
93	OR	Over-rides				1											1
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers		1		5	3		1								18
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride		2		8	9		1								20
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber				5											5
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard				2											2
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>528</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>28</b>													
3		<b>Overall Reject Rate:</b>		<b>5.30</b>													<i>totals</i>
5		Shot:		326	197			25	4								552
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:		0.0	0.0			0.0	0.0								0.0
9		Shot:			179	321		24	4								528
10		Rejected:		0	7	21	0	0	0	0	0	0	0	0	0	0	28
11		Percent:			3.9	6.5		0.0	0.0								5.3
13		Shot:			16	31		7	4								60
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:			0.0	0.0		0.0	0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches			2												2
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cam's wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject			1												1
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract			2												2
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell			3												3
59	ESB	Ejector sticks back			1												1
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips				1											1
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift				1											1
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers				8											8
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber				4											4
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride				5											5
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>523</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>55</b>													
3		<b>Overall Reject Rate:</b>		<b>10.52</b>													<i>totals</i>
5		Shot:		380	125		26										531
6		Rejected:		1	0	0	0	0	0	0	0	0	0	0	0	0	1
7		Percent:		0.3	0.0		0.0										0.2
9		Shot:		96	137	234	55		1								523
10		Rejected:		12	5	37	0	0	0	0	0	0	0	0	0	0	54
11		Percent:		12.5	3.6	15.8	0.0		0.0								10.3
13		Shot:		10	13	23	6		1								53
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0		0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches			1	1											2
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine				1											1
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cam wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell			1	1											2
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine				17											17
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard			1												1
93	OR	Over-rides		12													12
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers			1	15											18
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride			1	1											2
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard				1											1
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		1													1
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		<i>Shot:</i>															
6		<b>Proof</b>	<i>Rejected:</i>	0	0	0	0	0	0	0	0	0	0	0	0	0	0
7			<i>Percent:</i>														
9		<i>Shot:</i>															
10		<b>Test</b>	<i>Rejected:</i>	0	0	0	0	0	0	0	0	0	0	0	0	0	0
11			<i>Percent:</i>														
13		<i>Shot:</i>															
14		<b>Target</b>	<i>Rejected:</i>	0	0	0	0	0	0	0	0	0	0	0	0	0	0
15			<i>Percent:</i>														
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															


	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															


	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															


	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

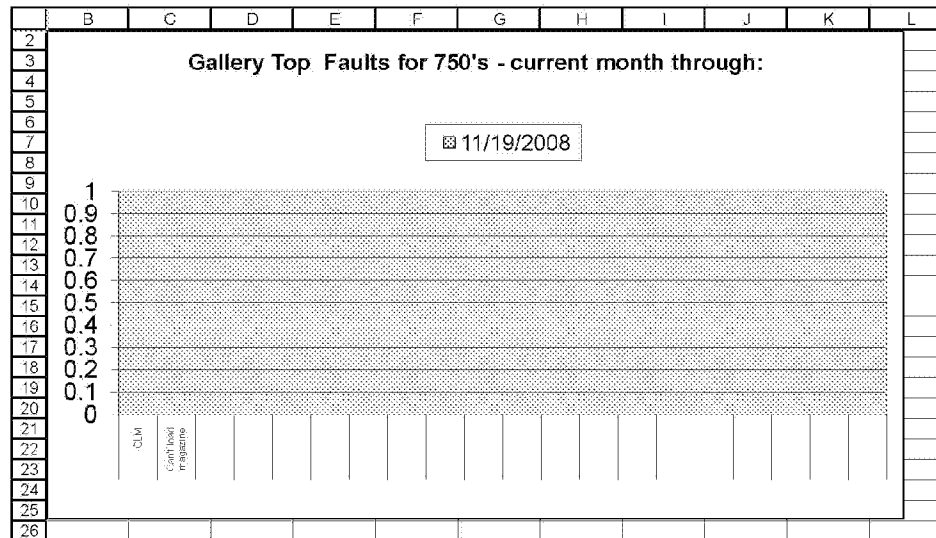



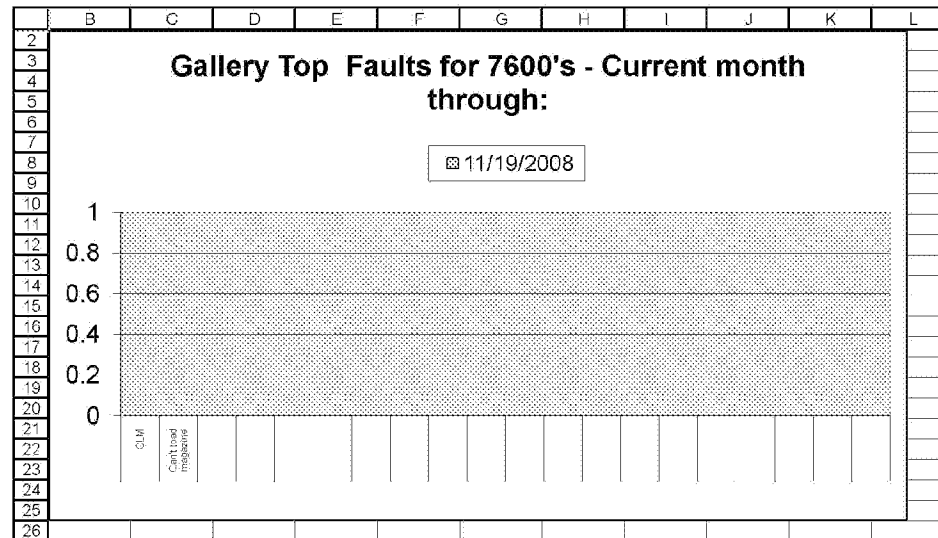

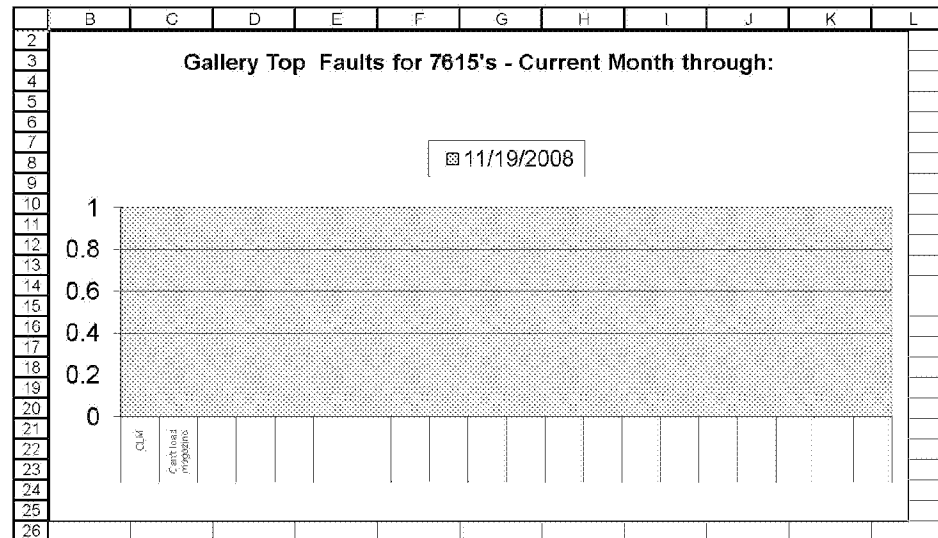

	A	B	C
1	AB	Action binds	0
2	BABS	Bulge at body shoulder	0
3	BAC	Burr at chamber	0
4	BBMA	BBL-to-bolt misalignment	0
5	BB	Bolt binds/catches	0
6	BCOAB	Bolt catches on anti-bind	0
7	BCOBS	Bolt catches on bolt stop	0
8	BCOF	Bolt catches on follower	0
9	BC	Blows cases	0
10	BHR	Bolt hits receiver	0
11	BHS	Bolt plug hits safety switch	0
12	BLOP	Bar lock or disconnecter out of position	0
13	BLSO	Barrel lug shot off	0
14	BPO	Bolt pulls out	0
15	BSSM	Bolt stems shell in magazine	0
16	BWCD	Bolt won't cam down	0
17	BWCFM	Bolt won't close over full magazine	0
18	CD	Case dented	0
19	CH	Closes hard	0
20	CLM	Can't load magazine	0
21	CO	Cut-off	0
22	CR	Cuts rim	0
23	CS	Cases swell	0
24	CTOG	Chamber torn or gouged	0
25	CTP	Creepy trigger pull	0
26	CWSB	Cams wrong side of action bar	0
27	DBB	Doesn't blow back	0
28	DCS	Double click in safety switch	0
29	DCT	Double click in trigger	0
30	DCU	Doesn't close-up	0
31	DE	Doesn't eject	0
32	DEL	Doesn't eject live round	0
33	DFB	Doesn't feed back	0
34	DFU	Doesn't feed up	0
35	DLO	Doesn't lock open (after last shell)	0
36	DLU	Doesn't lock-up	0
37	DS	Dead safe	0
38	DX	Doesn't extract	0
39	DXL	Doesn't extract live round	0
40	EDS	Extractor drops shell	0
41	ESB	Ejector sticks back	0
42	ESCR	Empty shell catches receiver	0
43	ESS	Extractor stems shell	0
44	FA	Fires automatically	0
45	FB	Follower binds	0
46	FC	Fails to connect	0
47	FCB	Fore-end cracked or broken	0
48	FD	Follows-down	0
49	FF	Fails to fire	0
50	FFP	Flat firing pin	0
51	FOS	Fires on safe	0
52	FPHB	Firing pin hits bbl	0
53	FPHI	Firing pin hits inside rim	0
54	FPO	Floor plate opens	0
55	FPOH	Floor plate opens hard	0
56	FSR	Fires when safe is released	0

	A	B	C
57	FT	Follower tips	0
58	GCSO	Gas cyl shot off	0
59	HBL	Heavy bolt lift	0
60	HMSC	Heading mismatch-steps on case	0
61	HPA	High pressure ammo	0
62	HUR	Hard under rail	0
63	JCS	Jumps cartridge	0
64	JM	Jumps magazine	0
65	JO	Jars off	0
66	LB	Light blow	0
67	MAH	Magazine assembles hard	0
68	MCW	Magazine capacity wrong	0
69	MFA	Misfires (ammo)	0
70	MFOP	Magazine follower out of position	0
71	ML	Magazine loose	0
72	MLH	Magazine loads hard	0
73	MRH	Magazine removes hard	0
74	OH	Opens hard	0
75	OR	Over-rides	0
76	PH	Pulls hard	0
77	PSI	Proof stamp illegible	0
78	PSM	Proof stamp missing	0
79	RBOC	Rings and bulges on case	0
80	RDVV	(Action) release doesn't work	0
81	RIC	Rings in chamber	0
82	RIS	Ring in sholder	0
83	RS	Rim srem	0
84	SBC	Stems bottom chambers	0
85	SEE	Stems bbl extension	0
86	SCB	Stock cracked or broken	0
87	SCX	Shell catches	0
88	SHI	Short indent	0
89	SI	Stems incline	0
90	SIC	Stems in chamber	0
91	SL	shaves lead	0
92	SLC	Stems left side of chamber	0
93	SMOC	Stretch marks on case	0
94	SOR	Stem over-ride	0
95	SP	Stems port	0
96	SR	Shoulder rough	0
97	SRC	Stems right side of chamber	0
98	SRIC	Specific rings in chamber	0
99	SSOC	Surface scratches on case	0
100	STC	Stems top chamber	0
101	SWE	Safety switch works too easily	0
102	SWH	Safety switch works too hard	0
103	SWW	Safety Switch won't work	0
104	TD	Tips down	0
105	TU	Tips up	0
106	TWP	Trigger won't pull	0
107	TWR	Trigger won't retract	0
108	UNCN-T	Uncoded	0
109	XH	Extracts hard	0
110			0
111	HI	High	0
112	LO	Low	0

	A	B	C
113	LEFT	Left	0
114	RIGHT	Right	0
115	DG	Doesn't Group	0
116	FSST	Front sight tipped	0
117	RSTT	Rear sight tipped	0
118	RSBR	Rear sight base raised	0
119	FSTR	Front sight raised	0
120	FSTL	Front sight loose	0
121	RSTL	Rear sight loose	0
122	MGPT-G	Missing parts at target	0
123	UNCN-G	Uncoded nonconformity at target	0
124			0
125	AI-P	Assembly incomplete at proof	0
126	BBB	Barrel bracket cracked or broken at proof	0
127	BC-P	Blows cases at proof	0
128	BEB-P	Barrel extension broken at proof	0
129	BLP-P	Blanked primer at proof	0
130	BLSO-P	Barrel lug shot off at proof	0
131	BP-P	Blown primer at proof	0
132	BS-P	Barrel split at proof	0
133	DBF-P	Damaged Bolt Face	0
134	DLOS-P	Doesn't lock over shells at proof	0
135	ESBBP-P	Ejector sticks back -Blown Primer cup	0
136	ESBEC-P	Ejector sticks back - Ejector Crescent	0
137	FCB-P	Fore-end cracked at proof	0
138	FESO-P	Fore-end shot off at proof	0
139	FF-P	Fails to fire at proof	0
140	GCSO-P	Gas cylinder shot off at proof	0
141	MSI-P	Magnaflux stamp illegible on bbl	0
142	MSM-P	Magnaflux stamp missing on bbl	0
143	PP-P	Pierced primer at proof	0
144	SCB-P	Stock cracked or broken at proof	0

	A	B	C
1	AB	Action binds	0
2	BABS	Bulge at body shoulder	0
3	BAC	Burr at chamber	0
4	BBMA	BBL-to-bolt misalignment	0
5	BB	Bolt binds/catches	0
6	BCOAB	Bolt catches on anti-bind	0
7	BCOBS	Bolt catches on bolt stop	0
8	BCOF	Bolt catches on follower	0
9	BC	Blows cases	0
10	BHR	Bolt hits receiver	0
11	BHS	Bolt plug hits safety switch	0
12	BLOP	Bar lock or disconnecter out of position	0
13	BLSO	Barrel lug shot off	0
14	BPO	Bolt pulls out	0
15	BSSM	Bolt stems shell in magazine	0
16	BWCD	Bolt won't cam down	0
17	BWCFM	Bolt won't close over full magazine	0
18	CD	Case dented	0
19	CH	Closes hard	0
20	CLM	Can't load magazine	0
21	CO	Cut-off	0
22	CR	Cuts rim	0
23	CS	Cases swell	0
24	CTOG	Chamber torn or gouged	0
25	CTP	Creepy trigger pull	0
26	CWSB	Cams wrong side of action bar	0
27	DBB	Doesn't blow back	0
28	DCS	Double click in safety switch	0
29	DCT	Double click in trigger	0
30	DCU	Doesn't close-up	0
31	DE	Doesn't eject	0
32	DEL	Doesn't eject live round	0
33	DFB	Doesn't feed back	0
34	DFU	Doesn't feed up	0
35	DLO	Doesn't lock open (after last shell)	0
36	DLU	Doesn't lock-up	0
37	DS	Dead safe	0
38	DX	Doesn't extract	0
39	DXL	Doesn't extract live round	0
40	EDS	Extractor drops shell	0
41	ESB	Ejector sticks back	0
42	ESCR	Empty shell catches receiver	0
43	ESS	Extractor stems shell	0
44	FA	Fires automatically	0
45	FB	Follower binds	0
46	FC	Fails to connect	0
47	FCB	Fore-end cracked or broken	0
48	FD	Follows-down	0
49	FF	Fails to fire	0
50	FFP	Flat firing pin	0
51	FOS	Fires on safe	0
52	FPHB	Firing pin hits bbl	0
53	FPHI	Firing pin hits inside rim	0
54	FPO	Floor plate opens	0
55	FPOH	Floor plate opens hard	0
56	FSR	Fires when safe is released	0

	A	B	C
57	FT	Follower tips	0
58	GCSO	Gas cyl shot off	0
59	HBL	Heavy bolt lift	0
60	HMSC	Heading mismatch-steps on case	0
61	HPA	High pressure ammo	0
62	HUR	Hard under rail	0
63	JCS	Jumps cartridge	0
64	JM	Jumps magazine	0
65	JO	Jars off	0
66	LB	Light blow	0
67	MAH	Magazine assembles hard	0
68	MCW	Magazine capacity wrong	0
69	MFA	Misfires (ammo)	0
70	MFOP	Magazine follower out of position	0
71	ML	Magazine loose	0
72	MLH	Magazine loads hard	0
73	MRH	Magazine removes hard	0
74	OH	Opens hard	0
75	OR	Over-rides	0
76	PH	Pulls hard	0
77	PSI	Proof stamp illegible	0
78	PSM	Proof stamp missing	0
79	RBOC	Rings and bulges on case	0
80	RDVV	(Action) release doesn't work	0
81	RIC	Rings in chamber	0
82	RIS	Ring in sholder	0
83	RS	Rim srem	0
84	SBC	Stems bottom chambers	0
85	SEE	Stems bbl extension	0
86	SCB	Stock cracked or broken	0
87	SCX	Shell catches	0
88	SHI	Short indent	0
89	SI	Stems incline	0
90	SIC	Stems in chamber	0
91	SL	shaves lead	0
92	SLC	Stems left side of chamber	0
93	SMOC	Stretch marks on case	0
94	SOR	Stem over-ride	0
95	SP	Stems port	0
96	SR	Shoulder rough	0
97	SRC	Stems right side of chamber	0
98	SRIC	Specific rings in chamber	0
99	SSOC	Surface scratches on case	0
100	STC	Stems top chamber	0
101	SWE	Safety switch works too easily	0
102	SWH	Safety switch works too hard	0
103	SWW	Safety Switch won't work	0
104	TD	Tips down	0
105	TU	Tips up	0
106	TWP	Trigger won't pull	0
107	TWR	Trigger won't retract	0
108	UNCN-T	Uncoded	0
109	XH	Extracts hard	0
110			0
111	HI	High	0
112	LO	Low	0

	A	B	C
113	LEFT	Left	0
114	RIGHT	Right	0
115	DG	Doesn't Group	0
116	FSST	Front sight tipped	0
117	RSTT	Rear sight tipped	0
118	RSBR	Rear sight base raised	0
119	FSTR	Front sight raised	0
120	FSTL	Front sight loose	0
121	RSTL	Rear sight loose	0
122	MGPT-G	Missing parts at target	0
123	UNCN-G	Uncoded nonconformity at target	0
124			0
125	AI-P	Assembly incomplete at proof	0
126	BBB	Barrel bracket cracked or broken at proof	0
127	BC-P	Blows cases at proof	0
128	BEB-P	Barrel extension broken at proof	0
129	BLP-P	Blanked primer at proof	0
130	BLSO-P	Barrel lug shot off at proof	0
131	BP-P	Blown primer at proof	0
132	BS-P	Barrel split at proof	0
133	DBF-P	Damaged Bolt Face	0
134	DLOS-P	Doesn't lock over shells at proof	0
135	ESBBP-P	Ejector sticks back -Blown Primer cup	0
136	ESBEC-P	Ejector sticks back - Ejector Crescent	0
137	FCB-P	Fore-end cracked at proof	0
138	FESO-P	Fore-end shot off at proof	0
139	FF-P	Fails to fire at proof	0
140	GCSO-P	Gas cylinder shot off at proof	0
141	MSI-P	Magnaflux stamp illegible on bbl	0
142	MSM-P	Magnaflux stamp missing on bbl	0
143	PP-P	Pierced primer at proof	0
144	SCB-P	Stock cracked or broken at proof	0



	A	B	C
1	AB	Action binds	0
2	BABS	Bulge at body shoulder	0
3	BAC	Burr at chamber	0
4	BBMA	BBL-to-bolt misalignment	0
5	BB	Bolt binds/catches	0
6	BCOAB	Bolt catches on anti-bind	0
7	BCOBS	Bolt catches on bolt stop	0
8	BCOF	Bolt catches on follower	0
9	BC	Blows cases	0
10	BHR	Bolt hits receiver	0
11	BHS	Bolt plug hits safety switch	0
12	BLOP	Bar lock or disconnecter out of position	0
13	BLSO	Barrel lug shot off	0
14	BPO	Bolt pulls out	0
15	BSSM	Bolt stems shell in magazine	0
16	BWCD	Bolt won't cam down	0
17	BWCFM	Bolt won't close over full magazine	0
18	CD	Case dented	0
19	CH	Closes hard	0
20	CLM	Can't load magazine	0
21	CO	Cut-off	0
22	CR	Cuts rim	0
23	CS	Cases swell	0
24	CTOG	Chamber torn or gouged	0
25	CTP	Creepy trigger pull	0
26	CWSB	Cams wrong side of action bar	0
27	DBB	Doesn't blow back	0
28	DCS	Double click in safety switch	0
29	DCT	Double click in trigger	0
30	DCU	Doesn't close-up	0
31	DE	Doesn't eject	0
32	DEL	Doesn't eject live round	0
33	DFB	Doesn't feed back	0
34	DFU	Doesn't feed up	0
35	DLO	Doesn't lock open (after last shell)	0
36	DLU	Doesn't lock-up	0
37	DS	Dead safe	0
38	DX	Doesn't extract	0
39	DXL	Doesn't extract live round	0
40	EDS	Extractor drops shell	0
41	ESB	Ejector sticks back	0
42	ESCR	Empty shell catches receiver	0
43	ESS	Extractor stems shell	0
44	FA	Fires automatically	0
45	FB	Follower binds	0
46	FC	Fails to connect	0
47	FCB	Fore-end cracked or broken	0
48	FD	Follows-down	0
49	FF	Fails to fire	0
50	FFP	Flat firing pin	0
51	FOS	Fires on safe	0
52	FPHB	Firing pin hits bbl	0
53	FPHI	Firing pin hits inside rim	0
54	FPO	Floor plate opens	0
55	FPOH	Floor plate opens hard	0
56	FSR	Fires when safe is released	0

	A	B	C
57	FT	Follower tips	0
58	GCSO	Gas cyl shot off	0
59	HBL	Heavy bolt lift	0
60	HMSC	Heading mismatch-steps on case	0
61	HPA	High pressure ammo	0
62	HUR	Hard under rail	0
63	JCS	Jumps cartridge	0
64	JM	Jumps magazine	0
65	JO	Jars off	0
66	LB	Light blow	0
67	MAH	Magazine assembles hard	0
68	MCW	Magazine capacity wrong	0
69	MFA	Misfires (ammo)	0
70	MFOP	Magazine follower out of position	0
71	ML	Magazine loose	0
72	MLH	Magazine loads hard	0
73	MRH	Magazine removes hard	0
74	OH	Opens hard	0
75	OR	Over-rides	0
76	PH	Pulls hard	0
77	PSI	Proof stamp illegible	0
78	PSM	Proof stamp missing	0
79	RBOC	Rings and bulges on case	0
80	RDVV	(Action) release doesn't work	0
81	RIC	Rings in chamber	0
82	RIS	Ring in sholder	0
83	RS	Rim srem	0
84	SBC	Stems bottom chambers	0
85	SEE	Stems bbl extension	0
86	SCB	Stock cracked or broken	0
87	SCX	Shell catches	0
88	SHI	Short indent	0
89	SI	Stems incline	0
90	SIC	Stems in chamber	0
91	SL	shaves lead	0
92	SLC	Stems left side of chamber	0
93	SMOC	Stretch marks on case	0
94	SOR	Stem over-ride	0
95	SP	Stems port	0
96	SR	Shoulder rough	0
97	SRC	Stems right side of chamber	0
98	SRIC	Specific rings in chamber	0
99	SSOC	Surface scratches on case	0
100	STC	Stems top chamber	0
101	SWE	Safety switch works too easily	0
102	SWH	Safety switch works too hard	0
103	SWW	Safety Switch won't work	0
104	TD	Tips down	0
105	TU	Tips up	0
106	TWP	Trigger won't pull	0
107	TWR	Trigger won't retract	0
108	UNCN-T	Uncoded	0
109	XH	Extracts hard	0
110			0
111	HI	High	0
112	LO	Low	0

	A	B	C
113	LEFT	Left	0
114	RIGHT	Right	0
115	DG	Doesn't Group	0
116	FSST	Front sight tipped	0
117	RSTT	Rear sight tipped	0
118	RSBR	Rear sight base raised	0
119	FSTR	Front sight raised	0
120	FSTL	Front sight loose	0
121	RSTL	Rear sight loose	0
122	MGPT-G	Missing parts at target	0
123	UNCN-G	Uncoded nonconformity at target	0
124			0
125	AI-P	Assembly incomplete at proof	0
126	BBB	Barrel bracket cracked or broken at proof	0
127	BC-P	Blows cases at proof	0
128	BEB-P	Barrel extension broken at proof	0
129	BLP-P	Blanked primer at proof	0
130	BLSO-P	Barrel lug shot off at proof	0
131	BP-P	Blown primer at proof	0
132	BS-P	Barrel split at proof	0
133	DBF-P	Damaged Bolt Face	0
134	DLOS-P	Doesn't lock over shells at proof	0
135	ESBBP-P	Ejector sticks back - Blown Primer cup	0
136	ESBEC-P	Ejector sticks back - Ejector Crescent	0
137	FCB-P	Fore-end cracked at proof	0
138	FESO-P	Fore-end shot off at proof	0
139	FF-P	Fails to fire at proof	0
140	GCSO-P	Gas cylinder shot off at proof	0
141	MSI-P	Magnaflux stamp illegible on bbl	0
142	MSM-P	Magnaflux stamp missing on bbl	0
143	PP-P	Pierced primer at proof	0
144	SCB-P	Stock cracked or broken at proof	0

	A	B	C
1	AB	Action binds	0
2	BABS	Bulge at body shoulder	0
3	BAC	Burr at chamber	0
4	BBMA	BBL-to-bolt misalignment	0
5	BB	Bolt binds/catches	0
6	BCOAB	Bolt catches on anti-bind	0
7	BCOBS	Bolt catches on bolt stop	0
8	BCOF	Bolt catches on follower	0
9	BC	Blows cases	0
10	BHR	Bolt hits receiver	0
11	BHS	Bolt plug hits safety switch	0
12	BLOP	Bar lock or disconnecter out of position	0
13	BLSO	Barrel lug shot off	0
14	BPO	Bolt pulls out	0
15	BSSM	Bolt stems shell in magazine	0
16	BWCD	Bolt won't cam down	0
17	BWCFM	Bolt won't close over full magazine	0
18	CD	Case dented	0
19	CH	Closes hard	0
20	CLM	Can't load magazine	0
21	CO	Cut-off	0
22	CR	Cuts rim	0
23	CS	Cases swell	0
24	CTOG	Chamber torn or gouged	0
25	CTP	Creepy trigger pull	0
26	CWSB	Cams wrong side of action bar	0
27	DBB	Doesn't blow back	0
28	DCS	Double click in safety switch	0
29	DCT	Double click in trigger	0
30	DCU	Doesn't close-up	0
31	DE	Doesn't eject	0
32	DEL	Doesn't eject live round	0
33	DFB	Doesn't feed back	0
34	DFU	Doesn't feed up	0
35	DLO	Doesn't lock open (after last shell)	0
36	DLU	Doesn't lock-up	0
37	DS	Dead safe	0
38	DX	Doesn't extract	0
39	DXL	Doesn't extract live round	0
40	EDS	Extractor drops shell	0
41	ESB	Ejector sticks back	0
42	ESCR	Empty shell catches receiver	0
43	ESS	Extractor stems shell	0
44	FA	Fires automatically	0
45	FB	Follower binds	0
46	FC	Fails to connect	0
47	FCB	Fore-end cracked or broken	0
48	FD	Follows-down	0
49	FF	Fails to fire	0
50	FFP	Flat firing pin	0
51	FOS	Fires on safe	0
52	FPHB	Firing pin hits bbl	0
53	FPHI	Firing pin hits inside rim	0
54	FPO	Floor plate opens	0
55	FPOH	Floor plate opens hard	0
56	FSR	Fires when safe is released	0

	A	B	C
57	FT	Follower tips	0
58	GCSO	Gas cyl shot off	0
59	HBL	Heavy bolt lift	0
60	HMSC	Heading mismatch-steps on case	0
61	HPA	High pressure ammo	0
62	HUR	Hard under rail	0
63	JCS	Jumps cartridge	0
64	JM	Jumps magazine	0
65	JO	Jars off	0
66	LB	Light blow	0
67	MAH	Magazine assembles hard	0
68	MCW	Magazine capacity wrong	0
69	MFA	Misfires (ammo)	0
70	MFOP	Magazine follower out of position	0
71	ML	Magazine loose	0
72	MLH	Magazine loads hard	0
73	MRH	Magazine removes hard	0
74	OH	Opens hard	0
75	OR	Over-rides	0
76	PH	Pulls hard	0
77	PSI	Proof stamp illegible	0
78	PSM	Proof stamp missing	0
79	RBOC	Rings and bulges on case	0
80	RDVV	(Action) release doesn't work	0
81	RIC	Rings in chamber	0
82	RIS	Ring in sholder	0
83	RS	Rim srem	0
84	SBC	Stems bottom chambers	0
85	SEE	Stems bbl extension	0
86	SCB	Stock cracked or broken	0
87	SCX	Shell catches	0
88	SHI	Short indent	0
89	SI	Stems incline	0
90	SIC	Stems in chamber	0
91	SL	shaves lead	0
92	SLC	Stems left side of chamber	0
93	SMOC	Stretch marks on case	0
94	SOR	Stem over-ride	0
95	SP	Stems port	0
96	SR	Shoulder rough	0
97	SRC	Stems right side of chamber	0
98	SRIC	Specific rings in chamber	0
99	SSOC	Surface scratches on case	0
100	STC	Stems top chamber	0
101	SWE	Safety switch works too easily	0
102	SWH	Safety switch works too hard	0
103	SWW	Safety Switch won't work	0
104	TD	Tips down	0
105	TU	Tips up	0
106	TWP	Trigger won't pull	0
107	TWR	Trigger won't retract	0
108	UNCN-T	Uncoded	0
109	XH	Extracts hard	0
110			0
111	HI	High	0
112	LO	Low	0

	A	B	C
113	LEFT	Left	0
114	RIGHT	Right	0
115	DG	Doesn't Group	0
116	FSST	Front sight tipped	0
117	RSTT	Rear sight tipped	0
118	RSBR	Rear sight base raised	0
119	FSTR	Front sight raised	0
120	FSTL	Front sight loose	0
121	RSTL	Rear sight loose	0
122	MGPT-G	Missing parts at target	0
123	UNCN-G	Uncoded nonconformity at target	0
124			0
125	AI-P	Assembly incomplete at proof	0
126	BBB	Barrel bracket cracked or broken at proof	0
127	BC-P	Blows cases at proof	0
128	BEB-P	Barrel extension broken at proof	0
129	BLP-P	Blanked primer at proof	0
130	BLSO-P	Barrel lug shot off at proof	0
131	BP-P	Blown primer at proof	0
132	BS-P	Barrel split at proof	0
133	DBF-P	Damaged Bolt Face	0
134	DLOS-P	Doesn't lock over shells at proof	0
135	ESBBP-P	Ejector sticks back - Blown Primer cup	0
136	ESBEC-P	Ejector sticks back - Ejector Crescent	0
137	FCB-P	Fore-end cracked at proof	0
138	FESO-P	Fore-end shot off at proof	0
139	FF-P	Fails to fire at proof	0
140	GCSO-P	Gas cylinder shot off at proof	0
141	MSI-P	Magnaflux stamp illegible on bbl	0
142	MSM-P	Magnaflux stamp missing on bbl	0
143	PP-P	Pierced primer at proof	0
144	SCB-P	Stock cracked or broken at proof	0

# Centerfire

	A	B	D	E	F	G	H	I	J	P	Q
1	<b>Summary</b>	<b>Total Tested</b>	<b>11220</b>								
2		<b>Total Rejected:</b>	<b>400</b>								
3		<b>Overall Reject Rate:</b>	<b>3.57</b>								<b>Grand totals</b>
5		Shot:	6413	1172	989	1740	630	213			11167
6	<b>Proof</b>	Rejected:	17	12	4	12	0	0	0	0	45
7		Percent:	0.3	1.0	0.4	0.7	0.0	0.0			0.4
9		Shot:	4694	676	2830	2042	668	162		148	11220
10	<b>Test</b>	Rejected:	122	28	89	78	22	15	0	1	388
11		Percent:	2.6	4.1	3.1	3.8	3.3	9.3		0.7	3.2
13		Shot:	400	76	252	212	57	154			1181
14	<b>Target</b>	Rejected:	0	0	0	0	0	0	0	0	0
15		Percent:	0.0	0.0	0.0	0.0	0.0	0.0			0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>	<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>Rimfire</b>	<b>totals</b>
18											
19	AB	Action binds			1						1
20	BABS	Bulge at body shoulder									
21	BAC	Burr at chamber	2	1	5	1		1			10
22	BBMA	BBL-to-bolt misalignment									
23	BB	Bolt binds/catches	11	1	12	5	2				31
24	BCOAB	Bolt catches on anti-bind									
25	BCOBS	Bolt catches on bolt stop									
26	BCOF	Bolt catches on follower									
27	BC	Blows cases									
28	BHR	Bolt hits receiver									
29	BHS	Bolt plug hits safety switch									
30	BLOP	Bar lock or disconnecter out of position									
31	BLSO	Barrel lug shot off									
32	BPO	Bolt pulls out				1					1
33	BSSM	Bolt stems shell in magazine									
34	BWCD	Bolt won't cam down									
35	BWCFM	Bolt won't close over full magazine	1		1	1	3	2			6
36	CD	Case dented									
37	CH	Closes hard	2	3	1	3					9
38	CLM	Can't load magazine	3	1		2	1				7
39	CO	Cut-off									
40	CR	Cuts rim									

# Centerfire

	A	B	D	E	F	G	H	I	J	P	Q
17	CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7	Rimfire	totals
41	CS	Cases swell									
42	CTOG	Chamber torn or gouged									
43	CTP	Creepy trigger pull									
44	CWSB	Cams wrong side of action bar									
45	DBB	Doesn't blow back									
46	DCS	Double click in safety switch									
47	DCT	Double click in trigger									
48	DCU	Doesn't close-up									
49	DE	Doesn't eject		1							1
50	DEL	Doesn't eject live round									
51	DFB	Doesn't feed back									
52	DFU	Doesn't feed up									
53	DLO	Doesn't lock open (after last shell)	1								1
54	DLU	Doesn't lock-up						1			1
55	DS	Dead safe									
56	DX	Doesn't extract	6	11		10	2	1			30
57	DXL	Doesn't extract live round	1								1
58	EDS	Extractor drops shell	2	1	3	9	1	3			19
59	ESB	Ejector sticks back	1				2				3
60	ESCR	Empty shell catches receiver									
61	ESS	Extractor stems shell									
62	FA	Fires automatically									
63	FB	Follower binds									
64	FC	Fails to connect	1								1
65	FCB	Fore-end cracked or broken									
66	FD	Follows-down	1								1
67	FF	Fails to fire	1		1	1	1			1	5
68	FFP	Flat firing pin									
69	FOS	Fires on safe									
70	FPHB	Firing pin hits bbl									
71	FPHI	Firing pin hits inside rim									
72	FPO	Floor plate opens			2	1					3
73	FPOH	Floor plate opens hard									



# Centerfire


	A	B	D	E	F	G	H	I	J	P	Q
17	CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7	Rimfire	totals
74	FSR	Fires when safe is released									
75	FT	Follower tips	3	2	5	1	6				17
76	GCSO	Gas cyl shot off									
77	HBL	Heavy bolt lift	1								1
78	HMSC	Heading mismatch-steps on case									
79	HPA	High pressure ammo									
80	HUR	Hard under rail	2		1		2				5
81	JCS	Jumps cartridge									
82	JM	Jumps magazine	2		1	3					6
83	JO	Jars off									
84	LB	Light blow									
85	MAH	Magazine assembles hard									
86	MCW	Magazine capacity wrong									
87	MFA	Misfires (ammo)									
88	MFOP	Magazine follower out of position									
89	ML	Magazine loose									
90	MLH	Magazine loads hard									
91	MRH	Magazine removes hard									
92	OH	Opens hard	2		2	3					7
93	OR	Over-rides	11	2	4	21					38
94	PH	Pulls hard									
95	PSI	Proof stamp illegible									
96	PSM	Proof stamp missing									
97	RBOC	Rings and bulges on case									
98	RDW	(Action) release doesn't work									
99	RIC	Rings in chamber	6		5			1			12
100	RIS	Ring in sholder									
101	RS	Rim srem									
102	SBC	Stems bottom chambers	39		11	1		5			56
103	SBE	Stems bbl extension									
104	SCB	Stock cracked or broken									
105	SCX	Shell catches									
106	SHI	Short indent									

# Centerfire

	A	B	D	E	F	G	H	I	J	P	Q
17	CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7	Rimfire	totals
107	SI	Stems incline	1								1
108	SIC	Stems in chamber			8	1					9
109	SL	shaves lead									
110	SLC	Stems left side of chamber									
111	SMOC	Stretch marks on case									
112	SOR	Stem over-ride	13		10	9	1				33
113	SP	Stems port									
114	SR	Shoulder rough									
115	SRC	Stems right side of chamber	1								1
116	SRIC	Specific rings in chamber									
117	SSOC	Surface scratches on case									
118	STC	Stems top chamber		1	6	1					8
119	SWE	Safety switch works too easily									
120	SWH	Safety switch works too hard				1					1
121	SWW	Safety Switch won't work									
122	TD	Tips down									
123	TU	Tips up									
124	TWP	Trigger won't pull									
125	TWR	Trigger won't retract									
126	UNCN-T	Uncoded			1	1					2
127	XH	Extracts hard	8	4	9	2	1	1			25
128											
129	HI	High									
130	LO	Low									
131	LEFT	Left									
132	RIGHT	Right									
133	DG	Doesn't Group									
134	FSST	Front sight tipped									
135	RSTT	Rear sight tipped									
136	RSBR	Rear sight base raised									
137	FSTR	Front sight raised									
138	FSTL	Front sight loose									
139	RSTL	Rear sight loose									

# Centerfire

	A	B	D	E	F	G	H	I	J	P	Q
17	CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7	Rimfire	totals
140	MGPT-G	Missing parts at target									
141	UNCN-G	Uncoded nonconformity at target									
142											
143	AI-P	Assembly incomplete at proof									
144	BBB	Barrel bracket cracked or broken at proof									
145	BC-P	Blows cases at proof									
146	BEB-P	Barrel extension broken at proof									
147	BLP-P	Blanked primer at proof									
148	BLSO-P	Barrel lug shot off at proof									
149	BP-P	Blown primer at proof									
150	BS-P	Barrel split at proof									
151	DBF-P	Damaged Bolt Face	16	8	4	11					39
152	DLOS-P	Doesn't lock over shells at proof		1							1
153	ESBBP-P	Ejector sticks back -Blown Primer cup				1					1
154	ESBEC-P	Ejector sticks back - Ejector Crescent	1								1
155	FCB-P	Fore-end cracked at proof									
156	FESO-P	Fore-end shot off at proof									
157	FF-P	Fails to fire at proof									
158	GCSO-P	Gas cylinder shot off at proof									
159	MSI-P	Magnaflux stamp illegible on bbl									
160	MSM-P	Magnaflux stamp missing on bbl		3							3
161	PP-P	Pierced primer at proof									
162	SCB-P	Stock cracked or broken at proof									
163	UNCM-P	Uncoded proof malfunctions									

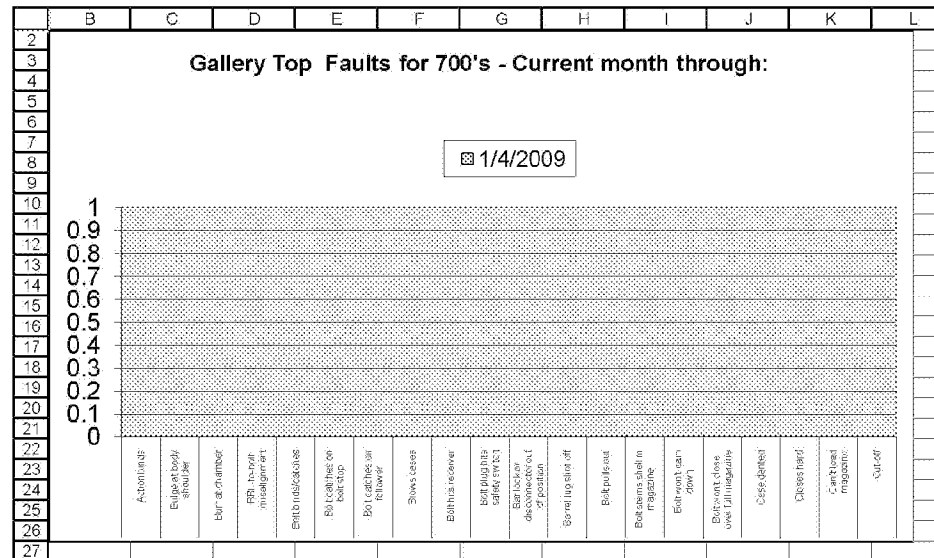

	A	B	C
1	AB	Action binds	0
2	BABS	Bulge at body shoulder	0
3	BAC	Burr at chamber	0
4	BBMA	BBL-to-bolt misalignment	0
5	BB	Bolt binds/catches	0
6	BCOBS	Bolt catches on bolt stop	0
7	BCOF	Bolt catches on follower	0
8	BC	Blows cases	0
9	BHR	Bolt hits receiver	0
10	BHS	Bolt plug hits safety switch	0
11	BLOP	Bar lock or disconnecter out of position	0
12	BLSO	Barrel lug shot off	0
13	BPO	Bolt pulls out	0
14	BSSM	Bolt stems shell in magazine	0
15	BWCD	Bolt won't cam down	0
16	BWCFM	Bolt won't close over full magazine	0
17	CD	Case dented	0
18	CH	Closes hard	0
19	CLM	Can't load magazine	0
20	CO	Cut-off	0
21	CR	Cuts rim	0
22	CS	Cases swell	0
23	CTOG	Chamber torn or gouged	0
24	CTP	Creepy trigger pull	0
25	CWSB	Cams wrong side of action bar	0
26	DBB	Doesn't blow back	0
27	DCS	Double click in safety switch	0
28	DCT	Double click in trigger	0
29	DCU	Doesn't close-up	0
30	DE	Doesn't eject	0
31	DEL	Doesn't eject live round	0
32	DFB	Doesn't feed back	0
33	DFU	Doesn't feed up	0
34	DLO	Doesn't lock open (after last shell)	0
35	DLU	Doesn't lock-up	0
36	DS	Dead safe	0
37	DX	Doesn't extract	0
38	DXL	Doesn't extract live round	0
39	EDS	Extractor drops shell	0
40	ESB	Ejector sticks back	0
41	ESCR	Empty shell catches receiver	0
42	ESS	Extractor stems shell	0
43	FA	Fires automatically	0
44	FB	Follower binds	0
45	FC	Fails to connect	0
46	FCB	Fore-end cracked or broken	0
47	FD	Follows-down	0
48	FF	Fails to fire	0
49	FFP	Flat firing pin	0
50	FOS	Fires on safe	0
51	FPHB	Firing pin hits bbl	0
52	FPHI	Firing pin hits inside rim	0
53	FPO	Floor plate opens	0
54	FPOH	Floor plate opens hard	0
55	FSR	Fires when safe is released	0
56	FT	Follower tips	0

	A	B	C
57	GCSO	Gas cyl shot off	0
58	HBL	Heavy bolt lift	0
59	HMSC	Heading mismatch-steps on case	0
60	HPA	High pressure ammo	0
61	HUR	Hard under rail	0
62	JCS	Jumps cartridge	0
63	JM	Jumps magazine	0
64	JO	Jars off	0
65	LB	Light blow	0
66	MAH	Magazine assembles hard	0
67	MCW	Magazine capacity wrong	0
68	MFA	Misfires (ammo)	0
69	MFOP	Magazine follower out of position	0
70	ML	Magazine loose	0
71	MLH	Magazine loads hard	0
72	MRH	Magazine removes hard	0
73	OH	Opens hard	0
74	OR	Over-rides	0
75	PH	Pulls hard	0
76	PSI	Proof stamp illegible	0
77	PSM	Proof stamp missing	0
78	RBOC	Rings and bulges on case	0
79	RDW	(Action) release doesn't work	0
80	RIC	Rings in chamber	0
81	RIS	Ring in sholder	0
82	RS	Rim srem	0
83	SBC	Stems bottom chambers	0
84	SBE	Stems bbl extension	0
85	SCB	Stock cracked or broken	0
86	SCX	Shell catches	0
87	SHI	Short indent	0
88	SI	Stems incline	0
89	SIC	Stems in chamber	0
90	SL	shaves lead	0
91	SIC	Stems left side of chamber	0
92	SMOC	Stretch marks on case	0
93	SOR	Stem over-ride	0
94	SP	Stems port	0
95	SR	Shoulder rough	0
96	SRC	Stems right side of chamber	0
97	SRIC	Specific rings in chamber	0
98	SSOC	Surface scratches on case	0
99	STC	Stems top chamber	0
100	SWE	Safety switch works too easily	0
101	SWH	Safety switch works too hard	0
102	SWW	Safety Switch won't work	0
103	TD	Tips down	0
104	TU	Tips up	0
105	TWP	Trigger won't pull	0
106	TWR	Trigger won't retract	0
107	UNCN-T	Uncoded	0
108	XH	Extracts hard	0
109			0
110	HI	High	0
111	LO	Low	0
112	LEFT	Left	0

	A	B	C
113	RIGHT	Right	0
114	DG	Doesn't Group	0
115	FSST	Front sight tipped	0
116	RSTT	Rear sight tipped	0
117	RSBR	Rear sight base raised	0
118	FSTR	Front sight raised	0
119	FSTL	Front sight loose	0
120	RSTL	Rear sight loose	0
121	MGPT-G	Missing parts at target	0
122	UNCN-G	Uncoded nonconformity at target	0
123			0
124	AI-P	Assembly incomplete at proof	0
125	BBB	Barrel bracket cracked or broken at proof	0
126	BC-P	Blows cases at proof	0
127	BEB-P	Barrel extension broken at proof	0
128	BLP-P	Blanked primer at proof	0
129	BLSO-P	Barrel lug shot off at proof	0
130	BP-P	Blown primer at proof	0
131	BS-P	Barrel split at proof	0
132	DBF-P	Damaged Bolt Face	0
133	DLOS-P	Doesn't lock over shells at proof	0
134	ESBBP-P	Ejector sticks back -Blown Primer cup	0
135	ESBEC-P	Ejector sticks back - Ejector Crescent	0
136	FCB-P	Fore-end cracked at proof	0
137	FESO-P	Fore-end shot off at proof	0
138	FF-P	Fails to fire at proof	0
139	GCSO-P	Gas cylinder shot off at proof	0
140	MSI-P	Magnaflux stamp illegible on bbl	0
141	MSM-P	Magnaflux stamp missing on bbl	0
142	PP-P	Pierced primer at proof	0
143	SCB-P	Stock cracked or broken at proof	0
144	BCOAB	Bolt catches on anti-bind	
145	BCOAB	Bolt catches on anti-bind	
146			
147			
148			
149			
150	1/4/2009		

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>474</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>16</b>													
3		<b>Overall Reject Rate:</b>		<b>3.38</b>													<i>totals</i>
5		Shot:		340	141		5										486
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:		0.0	0.0		0.0										0.0
9		Shot:		312	115	42	5										474
10		Rejected:		9	4	3	0	0	0	0	0	0	0	0	0	0	16
11		Percent:		2.9	3.5	7.1	0.0										3.4
13		Shot:		34	11	3											48
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0											0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		4		2											8
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract			2												2
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine		2													2
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides		2													2
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber				1											1
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard		1	2												3
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>603</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>28</b>													
3		<b>Overall Reject Rate:</b>		<b>4.64</b>													<i>totals</i>
5		Shot:		476		35	108	30									649
6		Rejected:		1	0	0	1	0	0	0	0	0	0	0	0	0	2
7		Percent:		0.2		0.0	0.9	0.0									0.3
9		Shot:		198	35	299	39	32									843
10		Rejected:		13	0	6	4	3	0	0	0	0	0	0	0	0	26
11		Percent:		6.6	0.0	2.0	10.3	9.4									3.3
13		Shot:		14	3	31	4	4	5								61
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0	0.0	0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		1		1											2
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine						1									1
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		1													1
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back						1									1
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail		1													1
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard		2													2
93	OR	Over-rides		3													3
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber		2		1											3
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers		2													2
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride				1	4	1									6
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber				2											2
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard		1		1											2
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		1													1
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup					1										1
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>698</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>29</b>													
3		<b>Overall Reject Rate:</b>		<b>4.15</b>													<i>totals</i>
5		Shot:		394	147	1	134	28									704
6		Rejected:		0	3	0	0	0	0	0	0	0	0	0	0	0	3
7		Percent:		0.0	2.0	0.0	0.0	0.0									0.4
9		Shot:		174	133	210	132	49									898
10		Rejected:		7	7	2	9	1	0	0	0	0	0	0	0	0	26
11		Percent:		4.0	5.3	1.0	6.8	2.0									3.7
13		Shot:		18	13	24	12	5									72
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0	0.0									0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber		2													2
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		1		2	1										4
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject			1												1
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract			5												5
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		1													1
59	ESB	Ejector sticks back						1									1
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift		1													1
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine					2										2
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides		1			3										3
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber		1													1
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride					3										3
113	SP	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber			1												1
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face			2												2
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl			1												1
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>532</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>40</b>													
3		<b>Overall Reject Rate:</b>		<b>7.52</b>													<i>totals</i>
5		Shot:		252	96		41	107	42								538
6		Rejected:		1	1	0	0	0	0	0	0	0	0	0	0	0	2
7		Percent:		0.4	1.0		0.0	0.0	0.0								0.4
9		Shot:		238		9	136	107	42								532
10		Rejected:		11	0	0	15	6	6	0	0	0	0	0	0	0	38
11		Percent:		4.6		0.0	11.0	5.6	14.3								7.1
13		Shot:		26		1	12	4									43
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0		0.0	0.0	0.0									0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber							1								1
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		1			1										2
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)		1													1
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect		1													1
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips						6									6
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail		1													1
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard					1										1
93	OR	Over-rides					11										11
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber		3													3
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers		1					5								5
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride		2			2										4
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber		1													1
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		1	1												2
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>693</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>15</b>													
3		<b>Overall Reject Rate:</b>		<b>2.16</b>													<i>totals</i>
5		Shot:		483	47	60		27									617
6		Rejected:		1	0	0	0	0	0	0	0	0	0	0	0	0	1
7		Percent:		0.2	0.0	0.0		0.0									0.2
9		Shot:		358		239	15	27								54	693
10		Rejected:		6	0	8	0	0	0	0	0	0	0	0	0	0	14
11		Percent:		1.7		3.3	0.0	0.0								0.0	2.0
13		Shot:		40		21	2	3	36								102
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0		0.0	0.0	0.0	0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber				1											1
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		1													1
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell				1											1
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers		5		4											2
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride				1											1
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard				1											1
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		1													1
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		<i>Shot:</i>															
6		<b>Proof</b>	<i>Rejected:</i>	0	0	0	0	0	0	0	0	0	0	0	0	0	0
7			<i>Percent:</i>														
9		<i>Shot:</i>															
10		<b>Test</b>	<i>Rejected:</i>	0	0	0	0	0	0	0	0	0	0	0	0	0	0
11			<i>Percent:</i>														
13		<i>Shot:</i>															
14		<b>Target</b>	<i>Rejected:</i>	0	0	0	0	0	0	0	0	0	0	0	0	0	0
15			<i>Percent:</i>														
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>639</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>13</b>													
3		<b>Overall Reject Rate:</b>		<b>2.03</b>													<i>totals</i>
5		Shot:		321	54		28	196									539
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:		0.0	0.0	0.0	0.0	0.0									0.0
9		Shot:		79	57	285	77	97								44	839
10		Rejected:		1	1	10	0	0	0	0	0	0	0	0	0	1	13
11		Percent:		1.3	1.8	3.5	0.0	0.0								2.3	2.0
13		Shot:		8	6	18	8	11									51
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0	0.0									0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber			1	2											3
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches				2											2
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		1													1
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire														1	1
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips				2											2
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine				1											1
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides				1											1
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded				1											1
127	XH	Extracts hard				1											1
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

Cell: F126

Comment: illegal:  
broken trigger



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>764</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>32</b>													
3		<b>Overall Reject Rate:</b>		<b>4.19</b>													<i>totals</i>
5		Shot:		484	57	173	113	4	7								838
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:		0.0	0.0	0.0	0.0	0.0	0.0								0.0
9		Shot:		108		457	199										764
10		Rejected:		1	0	21	10	0	0	0	0	0	0	0	0	0	32
11		Percent:		0.9		4.6	5.0										4.2
13		Shot:		10		36	20										66
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0		0.0	0.0										0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds				1											1
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber				1											1
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches				1											1
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine				1											1
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine					1										1
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract					2										2
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell					2										2
59	ESB	Ejector sticks back		1													1
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips				2											2
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail				1											1
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard				1											1
93	OR	Over-rides					5										5
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber				3											3
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers				3											3
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride				2											2
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber				2											2
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard				3											3
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>618</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>11</b>													
3		<b>Overall Reject Rate:</b>		<b>1.78</b>													<i>totals</i>
5		Shot:		409	109	108	78										794
6		Rejected:		0	2	0	1	0	0	0	0	0	0	0	0	0	3
7		Percent:		0.0	1.8	0.0	1.3										0.4
9		Shot:		339	40	93	47	77								22	518
10		Rejected:		2	0	1	3	2	0	0	0	0	0	0	0	0	8
11		Percent:		0.6	0.0	1.1	6.4	2.6							0.0		1.3
13		Shot:		11	5	10	5	8									38
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0	0.0									0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches					1	1									2
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine					1										1
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire						1									1
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard					1										1
93	OR	Over-rides		2													2
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber				1											1
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face			2		1										\$
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>942</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>32</b>													
3		<b>Overall Reject Rate:</b>		<b>3.40</b>													<i>totals</i>
5		Shot:		478	43	9	236	55	9								838
6		Rejected:		3	2	0	5	0	0	0	0	0	0	0	0	0	18
7		Percent:		0.6	4.7	0.0	2.1	0.0	0.0								1.2
9		Shot:		182	73	379	247	61									842
10		Rejected:		2	5	5	8	2	0	0	0	0	0	0	0	0	22
11		Percent:		1.1	6.8	1.3	3.2	3.3									2.3
13		Shot:		19	7	38	24	7									95
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0	0.0									0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber				1	1										2
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches					1	1									2
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out					1										1
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine		1													1
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract					3										3
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell			1												1
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire		1													1
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips			2		1										3
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides			2	3											5
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber					1										1
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard				1		1									2
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		3			5										8
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl			2												2
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>664</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>30</b>													
3		<b>Overall Reject Rate:</b>		<b>4.52</b>													<i>totals</i>
5		Shot:		304	102	159	87		31								685
6		Rejected:		2	3	4	3	0	0	0	0	0	0	0	0	0	12
7		Percent:		0.7	2.9	2.5	3.4		0.0								1.8
9		Shot:		253		233	150									28	864
10		Rejected:		0	0	12	6	0	0	0	0	0	0	0	0	0	18
11		Percent:		0.0		5.2	4.0								0.0		2.7
13		Shot:		11	8	21	15										55
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	8
15		Percent:		0.0	0.0	0.0	0.0										0.6
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches			1												1
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard			1												1
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cam wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract					5										5
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire				1											1
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips				1											1
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard				1											1
93	OR	Over-rides					1										1
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber				1											1
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride				5											5
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard				1											1
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		2	2	4	3										11
152	DLOS-P	Doesn't lock over shells at proof			1												1
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>612</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>11</b>													
3		<b>Overall Reject Rate:</b>		<b>1.80</b>													<i>totals</i>
5		Shot:		305	146	7	118										576
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:		0.0	0.0	0.0	0.0										0.0
9		Shot:		367		34	211										572
10		Rejected:		10	0	0	1	0	0	0	0	0	0	0	0	0	11
11		Percent:		2.7		0.0	0.5										1.8
13		Shot:		28		2	19										49
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0		0.0	0.0										0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides					1										1
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers		1													1
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride		7													7
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard		2													2
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>669</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>20</b>													
3		<b>Overall Reject Rate:</b>		<b>2.99</b>													<i>totals</i>
5		Shot:		451	148	21	12										632
6		Rejected:		4	0	0	0	0	0	0	0	0	0	0	0	0	4
7		Percent:		0.9	0.0	0.0	0.0										0.6
9		Shot:		434	81	92	60	2									569
10		Rejected:		12	1	1	2	0	0	0	0	0	0	0	0	0	16
11		Percent:		2.8	1.2	1.1	3.3	0.0									2.4
13		Shot:		31	8	9	6	1									55
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0	0.0									0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		1			1										2
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		1													1
57	DXL	Doesn't extract live round		1													1
58	EDS	Extractor drops shell				1											1
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down		1													1
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers		7													7
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride		1													1
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard			1		1										2
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		4													4
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>640</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>24</b>													
3		<b>Overall Reject Rate:</b>		<b>3.75</b>													<i>totals</i>
5		Shot:		422	65	119	27	7	97								737
6		Rejected:		5	0	0	0	0	0	0	0	0	0	0	0	0	5
7		Percent:		1.2	0.0	0.0	0.0	0.0	0.0								0.7
9		Shot:		288		196	59		97								540
10		Rejected:		3	0	6	2	0	8	0	0	0	0	0	0	0	19
11		Percent:		1.0		3.1	3.4		8.2								3.2
13		Shot:		21		18	6		91								136
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0		0.0	0.0		0.0								0.6
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches				1											1
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine							2								2
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine		1													1
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up							1								1
55	DS	Dead safe															
56	DX	Doesn't extract		1					1								2
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell							2								2
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire					1										1
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides		1													1
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber							1								1
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers				4											4
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber				1											1
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard					1		1								2
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		4													4
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent		1													1
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>764</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>16</b>													
3		<b>Overall Reject Rate:</b>		<b>2.09</b>													<i>totals</i>
5		Shot:		193	13	109	310	122	6								753
6		Rejected:		0	1	0	0	0	0	0	0	0	0	0	0	0	1
7		Percent:		0.0	7.7	0.0	0.0	0.0	0.0								0.7
9		Shot:		257	42	54	288	123									764
10		Rejected:		4	1	4	4	2	0	0	0	0	0	0	0	0	16
11		Percent:		1.6	2.4	7.4	1.4	1.6									2.2
13		Shot:		26	5		31	6									68
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0		0.0	0.0									0.6
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches			1	1											2
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard		2													2
38	CLM	Can't load magazine					1										1
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract						1									1
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell				1	2										3
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail						1									1
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard					1										1
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride					1										1
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard		2		1											3
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face			1												1
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>654</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>25</b>													
3		<b>Overall Reject Rate:</b>		<b>3.82</b>													<i>totals</i>
5		Shot:		450		174	236										860
6		Rejected:		0	0	0	2	0	0	0	0	0	0	0	0	0	2
7		Percent:		0.0		0.0	0.8										0.2
9		Shot:		337	12	115	190										854
10		Rejected:		17	1	1	4	0	0	0	0	0	0	0	0	0	23
11		Percent:		5.0	8.3	0.9	2.1										3.5
13		Shot:		30	1	11	20										62
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0										0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		1		1											2
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard			1		3										4
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		1													1
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		1													1
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine					1										1
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides		1													1
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers		9													9
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride		3													3
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard		1													1
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face					2										2
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>656</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>33</b>													
3		<b>Overall Reject Rate:</b>		<b>5.03</b>													<i>totals</i>
5		Shot:		466	1	12	106	43	21								649
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:		0.0	0.0	0.0	0.0	0.0	0.0								0.0
9		Shot:		387	24	29	133	62	21								556
10		Rejected:		14	3	7	3	6	0	0	0	0	0	0	0	0	33
11		Percent:		3.6	12.5	24.1	2.3	9.7	0.0								5.0
13		Shot:		36	2	3	22	5									68
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0	0.0									0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		1													1
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine						3									3
36	CD	Case dented															
37	CH	Closes hard			2												2
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract			1			1									2
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell					2	1									3
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail						1									1
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides		1													1
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers		12			1										13
103	SBE	Stems bbl extension															
104	SCB	Stook cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber				7											7
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>598</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>25</b>													
3		<b>Overall Reject Rate:</b>		<b>4.18</b>													<i>totals</i>
5		Shot:		185	3	2	101	11									302
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:		0.0	0.0	0.0	0.0	0.0									0.0
9		Shot:		383	64	64	54	31	2								598
10		Rejected:		10	5	2	7	0	1	0	0	0	0	0	0	0	25
11		Percent:		2.6	7.8	3.1	13.0	0.0	50.0								4.2
13		Shot:		37	7	6	6	3	22								81
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0	0.0	0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		1													1
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine		2	1												3
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract			3												3
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell					3		1								4
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens				2	1										3
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips		3													3
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers		2													2
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline		1													1
108	SIC	Stems in chamber					1										1
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard					1										1
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded					1										1
127	XH	Extracts hard		1	1												2
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

**Cell:** G126

**Comment:** ilngalry:  
bolt handle broke off

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		<i>Shot:</i>															
6		<b>Proof</b>	<i>Rejected:</i>	0	0	0	0	0	0	0	0	0	0	0	0	0	0
7			<i>Percent:</i>														
9		<i>Shot:</i>															
10		<b>Test</b>	<i>Rejected:</i>	0	0	0	0	0	0	0	0	0	0	0	0	0	0
11			<i>Percent:</i>														
13		<i>Shot:</i>															
14		<b>Target</b>	<i>Rejected:</i>	0	0	0	0	0	0	0	0	0	0	0	0	0	0
15			<i>Percent:</i>														
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		<i>Shot:</i>															
6		<b>Proof</b>	<i>Rejected:</i>	0	0	0	0	0	0	0	0	0	0	0	0	0	0
7			<i>Percent:</i>														
9		<i>Shot:</i>															
10		<b>Test</b>	<i>Rejected:</i>	0	0	0	0	0	0	0	0	0	0	0	0	0	0
11			<i>Percent:</i>														
13		<i>Shot:</i>															
14		<b>Target</b>	<i>Rejected:</i>	0	0	0	0	0	0	0	0	0	0	0	0	0	0
15			<i>Percent:</i>														
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		<i>Shot:</i>															
6		<b>Proof</b>	<i>Rejected:</i>	0	0	0	0	0	0	0	0	0	0	0	0	0	0
7			<i>Percent:</i>														
9		<i>Shot:</i>															
10		<b>Test</b>	<i>Rejected:</i>	0	0	0	0	0	0	0	0	0	0	0	0	0	0
11			<i>Percent:</i>														
13		<i>Shot:</i>															
14		<b>Target</b>	<i>Rejected:</i>	0	0	0	0	0	0	0	0	0	0	0	0	0	0
15			<i>Percent:</i>														
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															




	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															


	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															


	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

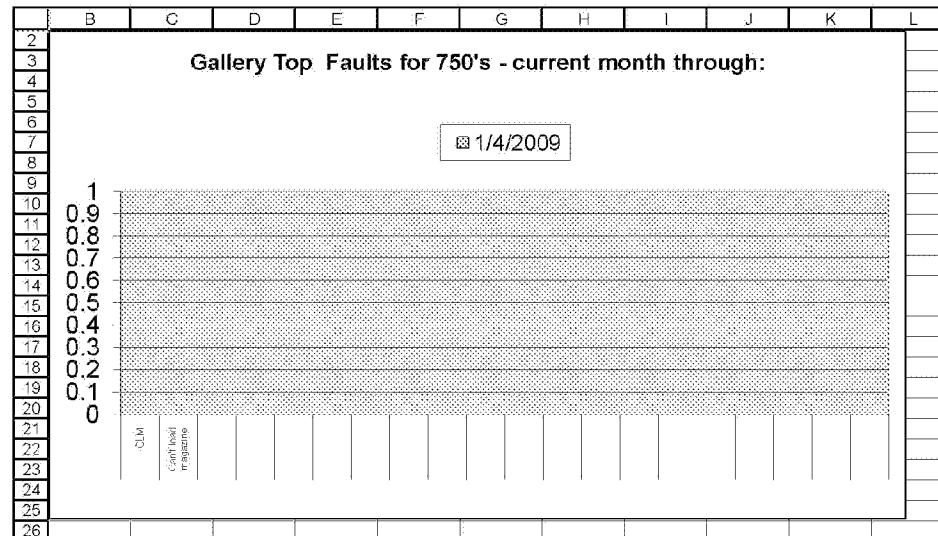

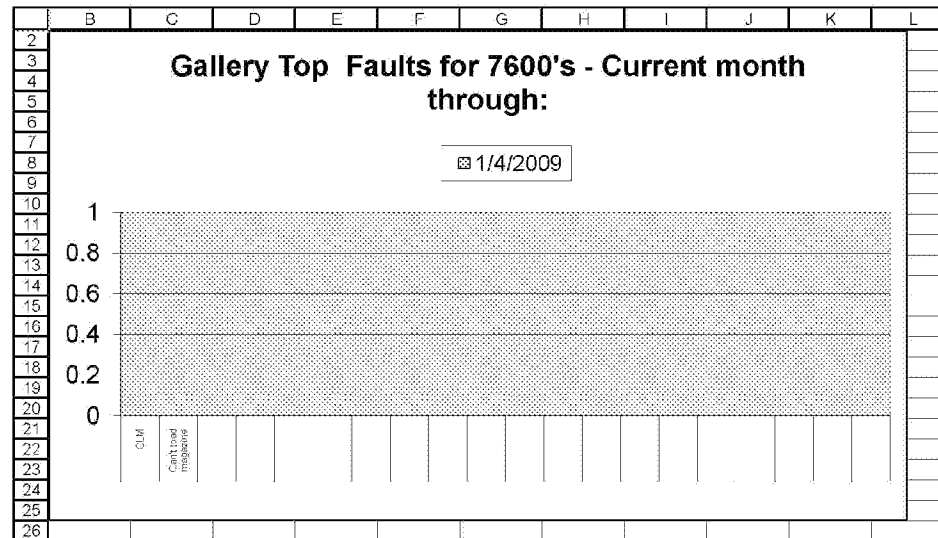

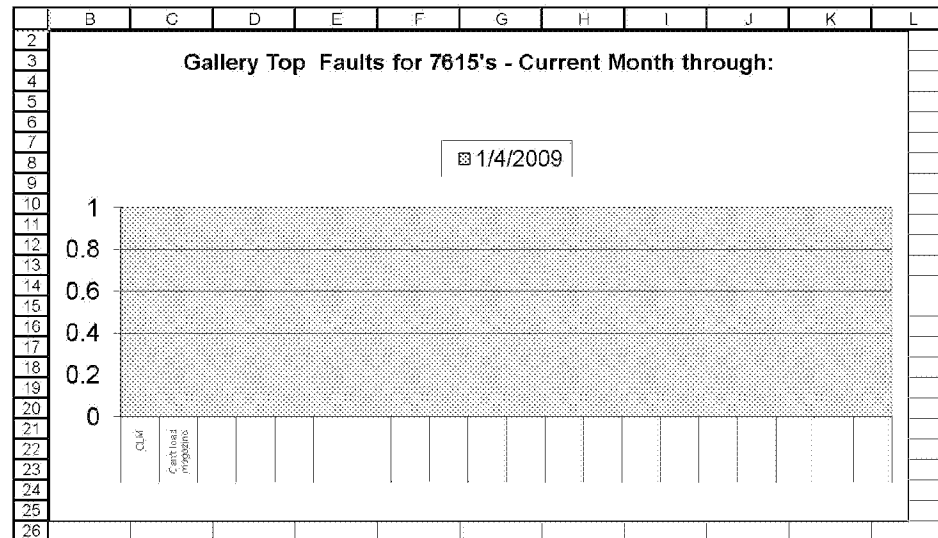



	A	B	C
1	AB	Action binds	0
2	BABS	Bulge at body shoulder	0
3	BAC	Burr at chamber	0
4	BBMA	BBL-to-bolt misalignment	0
5	BB	Bolt binds/catches	0
6	BCOAB	Bolt catches on anti-bind	0
7	BCOBS	Bolt catches on bolt stop	0
8	BCOF	Bolt catches on follower	0
9	BC	Blows cases	0
10	BHR	Bolt hits receiver	0
11	BHS	Bolt plug hits safety switch	0
12	BLOP	Bar lock or disconnecter out of position	0
13	BLSO	Barrel lug shot off	0
14	BPO	Bolt pulls out	0
15	BSSM	Bolt stems shell in magazine	0
16	BWCD	Bolt won't cam down	0
17	BWCFM	Bolt won't close over full magazine	0
18	CD	Case dented	0
19	CH	Closes hard	0
20	CLM	Can't load magazine	0
21	CO	Cut-off	0
22	CR	Cuts rim	0
23	CS	Cases swell	0
24	CTOG	Chamber torn or gouged	0
25	CTP	Creepy trigger pull	0
26	CWSB	Cams wrong side of action bar	0
27	DBB	Doesn't blow back	0
28	DCS	Double click in safety switch	0
29	DCT	Double click in trigger	0
30	DCU	Doesn't close-up	0
31	DE	Doesn't eject	0
32	DEL	Doesn't eject live round	0
33	DFB	Doesn't feed back	0
34	DFU	Doesn't feed up	0
35	DLO	Doesn't lock open (after last shell)	0
36	DLU	Doesn't lock-up	0
37	DS	Dead safe	0
38	DX	Doesn't extract	0
39	DXL	Doesn't extract live round	0
40	EDS	Extractor drops shell	0
41	ESB	Ejector sticks back	0
42	ESCR	Empty shell catches receiver	0
43	ESS	Extractor stems shell	0
44	FA	Fires automatically	0
45	FB	Follower binds	0
46	FC	Fails to connect	0
47	FCB	Fore-end cracked or broken	0
48	FD	Follows-down	0
49	FF	Fails to fire	0
50	FFP	Flat firing pin	0
51	FOS	Fires on safe	0
52	FPHB	Firing pin hits bbl	0
53	FPHI	Firing pin hits inside rim	0
54	FPO	Floor plate opens	0
55	FPOH	Floor plate opens hard	0
56	FSR	Fires when safe is released	0

	A	B	C
57	FT	Follower tips	0
58	GCSO	Gas cyl shot off	0
59	HBL	Heavy bolt lift	0
60	HMSC	Heading mismatch-steps on case	0
61	HPA	High pressure ammo	0
62	HUR	Hard under rail	0
63	JCS	Jumps cartridge	0
64	JM	Jumps magazine	0
65	JO	Jars off	0
66	LB	Light blow	0
67	MAH	Magazine assembles hard	0
68	MCW	Magazine capacity wrong	0
69	MFA	Misfires (ammo)	0
70	MFOP	Magazine follower out of position	0
71	ML	Magazine loose	0
72	MLH	Magazine loads hard	0
73	MRH	Magazine removes hard	0
74	OH	Opens hard	0
75	OR	Over-rides	0
76	PH	Pulls hard	0
77	PSI	Proof stamp illegible	0
78	PSM	Proof stamp missing	0
79	RBOC	Rings and bulges on case	0
80	RDVV	(Action) release doesn't work	0
81	RIC	Rings in chamber	0
82	RIS	Ring in sholder	0
83	RS	Rim srem	0
84	SBC	Stems bottom chambers	0
85	SEE	Stems bbl extension	0
86	SCB	Stock cracked or broken	0
87	SCX	Shell catches	0
88	SHI	Short indent	0
89	SI	Stems incline	0
90	SIC	Stems in chamber	0
91	SL	shaves lead	0
92	SLC	Stems left side of chamber	0
93	SMOC	Stretch marks on case	0
94	SOR	Stem over-ride	0
95	SP	Stems port	0
96	SR	Shoulder rough	0
97	SRC	Stems right side of chamber	0
98	SRIC	Specific rings in chamber	0
99	SSOC	Surface scratches on case	0
100	STC	Stems top chamber	0
101	SWE	Safety switch works too easily	0
102	SWH	Safety switch works too hard	0
103	SWW	Safety Switch won't work	0
104	TD	Tips down	0
105	TU	Tips up	0
106	TWP	Trigger won't pull	0
107	TWR	Trigger won't retract	0
108	UNCN-T	Uncoded	0
109	XH	Extracts hard	0
110			0
111	HI	High	0
112	LO	Low	0

	A	B	C
113	LEFT	Left	0
114	RIGHT	Right	0
115	DG	Doesn't Group	0
116	FSST	Front sight tipped	0
117	RSTT	Rear sight tipped	0
118	RSBR	Rear sight base raised	0
119	FSTR	Front sight raised	0
120	FSTL	Front sight loose	0
121	RSTL	Rear sight loose	0
122	MGPT-G	Missing parts at target	0
123	UNCN-G	Uncoded nonconformity at target	0
124			0
125	AI-P	Assembly incomplete at proof	0
126	BBB	Barrel bracket cracked or broken at proof	0
127	BC-P	Blows cases at proof	0
128	BEB-P	Barrel extension broken at proof	0
129	BLP-P	Blanked primer at proof	0
130	BLSO-P	Barrel lug shot off at proof	0
131	BP-P	Blown primer at proof	0
132	BS-P	Barrel split at proof	0
133	DBF-P	Damaged Bolt Face	0
134	DLOS-P	Doesn't lock over shells at proof	0
135	ESBBP-P	Ejector sticks back - Blown Primer cup	0
136	ESBEC-P	Ejector sticks back - Ejector Crescent	0
137	FCB-P	Fore-end cracked at proof	0
138	FESO-P	Fore-end shot off at proof	0
139	FF-P	Fails to fire at proof	0
140	GCSO-P	Gas cylinder shot off at proof	0
141	MSI-P	Magnaflux stamp illegible on bbl	0
142	MSM-P	Magnaflux stamp missing on bbl	0
143	PP-P	Pierced primer at proof	0
144	SCB-P	Stock cracked or broken at proof	0

	A	B	C
1	AB	Action binds	0
2	BABS	Bulge at body shoulder	0
3	BAC	Burr at chamber	0
4	BBMA	BBL-to-bolt misalignment	0
5	BB	Bolt binds/catches	0
6	BCOAB	Bolt catches on anti-bind	0
7	BCOBS	Bolt catches on bolt stop	0
8	BCOF	Bolt catches on follower	0
9	BC	Blows cases	0
10	BHR	Bolt hits receiver	0
11	BHS	Bolt plug hits safety switch	0
12	BLOP	Bar lock or disconnecter out of position	0
13	BLSO	Barrel lug shot off	0
14	BPO	Bolt pulls out	0
15	BSSM	Bolt stems shell in magazine	0
16	BWCD	Bolt won't cam down	0
17	BWCFM	Bolt won't close over full magazine	0
18	CD	Case dented	0
19	CH	Closes hard	0
20	CLM	Can't load magazine	0
21	CO	Cut-off	0
22	CR	Cuts rim	0
23	CS	Cases swell	0
24	CTOG	Chamber torn or gouged	0
25	CTP	Creepy trigger pull	0
26	CWSB	Cams wrong side of action bar	0
27	DBB	Doesn't blow back	0
28	DCS	Double click in safety switch	0
29	DCT	Double click in trigger	0
30	DCU	Doesn't close-up	0
31	DE	Doesn't eject	0
32	DEL	Doesn't eject live round	0
33	DFB	Doesn't feed back	0
34	DFU	Doesn't feed up	0
35	DLO	Doesn't lock open (after last shell)	0
36	DLU	Doesn't lock-up	0
37	DS	Dead safe	0
38	DX	Doesn't extract	0
39	DXL	Doesn't extract live round	0
40	EDS	Extractor drops shell	0
41	ESB	Ejector sticks back	0
42	ESCR	Empty shell catches receiver	0
43	ESS	Extractor stems shell	0
44	FA	Fires automatically	0
45	FB	Follower binds	0
46	FC	Fails to connect	0
47	FCB	Fore-end cracked or broken	0
48	FD	Follows-down	0
49	FF	Fails to fire	0
50	FFP	Flat firing pin	0
51	FOS	Fires on safe	0
52	FPHB	Firing pin hits bbl	0
53	FPHI	Firing pin hits inside rim	0
54	FPO	Floor plate opens	0
55	FPOH	Floor plate opens hard	0
56	FSR	Fires when safe is released	0

	A	B	C
57	FT	Follower tips	0
58	GCSO	Gas cyl shot off	0
59	HBL	Heavy bolt lift	0
60	HMSC	Heading mismatch-steps on case	0
61	HPA	High pressure ammo	0
62	HUR	Hard under rail	0
63	JCS	Jumps cartridge	0
64	JM	Jumps magazine	0
65	JO	Jars off	0
66	LB	Light blow	0
67	MAH	Magazine assembles hard	0
68	MCW	Magazine capacity wrong	0
69	MFA	Misfires (ammo)	0
70	MFOP	Magazine follower out of position	0
71	ML	Magazine loose	0
72	MLH	Magazine loads hard	0
73	MRH	Magazine removes hard	0
74	OH	Opens hard	0
75	OR	Over-rides	0
76	PH	Pulls hard	0
77	PSI	Proof stamp illegible	0
78	PSM	Proof stamp missing	0
79	RBOC	Rings and bulges on case	0
80	RDVV	(Action) release doesn't work	0
81	RIC	Rings in chamber	0
82	RIS	Ring in sholder	0
83	RS	Rim srem	0
84	SBC	Stems bottom chambers	0
85	SEE	Stems bbl extension	0
86	SCB	Stock cracked or broken	0
87	SCX	Shell catches	0
88	SHI	Short indent	0
89	SI	Stems incline	0
90	SIC	Stems in chamber	0
91	SL	shaves lead	0
92	SLC	Stems left side of chamber	0
93	SMOC	Stretch marks on case	0
94	SOR	Stem over-ride	0
95	SP	Stems port	0
96	SR	Shoulder rough	0
97	SRC	Stems right side of chamber	0
98	SRIC	Specific rings in chamber	0
99	SSOC	Surface scratches on case	0
100	STC	Stems top chamber	0
101	SWE	Safety switch works too easily	0
102	SWH	Safety switch works too hard	0
103	SWW	Safety Switch won't work	0
104	TD	Tips down	0
105	TU	Tips up	0
106	TWP	Trigger won't pull	0
107	TWR	Trigger won't retract	0
108	UNCN-T	Uncoded	0
109	XH	Extracts hard	0
110			0
111	HI	High	0
112	LO	Low	0

	A	B	C
113	LEFT	Left	0
114	RIGHT	Right	0
115	DG	Doesn't Group	0
116	FSST	Front sight tipped	0
117	RSTT	Rear sight tipped	0
118	RSBR	Rear sight base raised	0
119	FSTR	Front sight raised	0
120	FSTL	Front sight loose	0
121	RSTL	Rear sight loose	0
122	MGPT-G	Missing parts at target	0
123	UNCN-G	Uncoded nonconformity at target	0
124			0
125	AI-P	Assembly incomplete at proof	0
126	BBB	Barrel bracket cracked or broken at proof	0
127	BC-P	Blows cases at proof	0
128	BEB-P	Barrel extension broken at proof	0
129	BLP-P	Blanked primer at proof	0
130	BLSO-P	Barrel lug shot off at proof	0
131	BP-P	Blown primer at proof	0
132	BS-P	Barrel split at proof	0
133	DBF-P	Damaged Bolt Face	0
134	DLOS-P	Doesn't lock over shells at proof	0
135	ESBBP-P	Ejector sticks back -Blown Primer cup	0
136	ESBEC-P	Ejector sticks back - Ejector Crescent	0
137	FCB-P	Fore-end cracked at proof	0
138	FESO-P	Fore-end shot off at proof	0
139	FF-P	Fails to fire at proof	0
140	GCSO-P	Gas cylinder shot off at proof	0
141	MSI-P	Magnaflux stamp illegible on bbl	0
142	MSM-P	Magnaflux stamp missing on bbl	0
143	PP-P	Pierced primer at proof	0
144	SCB-P	Stock cracked or broken at proof	0

	A	B	C
1	AB	Action binds	0
2	BABS	Bulge at body shoulder	0
3	BAC	Burr at chamber	0
4	BBMA	BBL-to-bolt misalignment	0
5	BB	Bolt binds/catches	0
6	BCOAB	Bolt catches on anti-bind	0
7	BCOBS	Bolt catches on bolt stop	0
8	BCOF	Bolt catches on follower	0
9	BC	Blows cases	0
10	BHR	Bolt hits receiver	0
11	BHS	Bolt plug hits safety switch	0
12	BLOP	Bar lock or disconnecter out of position	0
13	BLSO	Barrel lug shot off	0
14	BPO	Bolt pulls out	0
15	BSSM	Bolt stems shell in magazine	0
16	BWCD	Bolt won't cam down	0
17	BWCFM	Bolt won't close over full magazine	0
18	CD	Case dented	0
19	CH	Closes hard	0
20	CLM	Can't load magazine	0
21	CO	Cut-off	0
22	CR	Cuts rim	0
23	CS	Cases swell	0
24	CTOG	Chamber torn or gouged	0
25	CTP	Creepy trigger pull	0
26	CWSB	Cams wrong side of action bar	0
27	DBB	Doesn't blow back	0
28	DCS	Double click in safety switch	0
29	DCT	Double click in trigger	0
30	DCU	Doesn't close-up	0
31	DE	Doesn't eject	0
32	DEL	Doesn't eject live round	0
33	DFB	Doesn't feed back	0
34	DFU	Doesn't feed up	0
35	DLO	Doesn't lock open (after last shell)	0
36	DLU	Doesn't lock-up	0
37	DS	Dead safe	0
38	DX	Doesn't extract	0
39	DXL	Doesn't extract live round	0
40	EDS	Extractor drops shell	0
41	ESB	Ejector sticks back	0
42	ESCR	Empty shell catches receiver	0
43	ESS	Extractor stems shell	0
44	FA	Fires automatically	0
45	FB	Follower binds	0
46	FC	Fails to connect	0
47	FCB	Fore-end cracked or broken	0
48	FD	Follows-down	0
49	FF	Fails to fire	0
50	FFP	Flat firing pin	0
51	FOS	Fires on safe	0
52	FPHB	Firing pin hits bbl	0
53	FPHI	Firing pin hits inside rim	0
54	FPO	Floor plate opens	0
55	FPOH	Floor plate opens hard	0
56	FSR	Fires when safe is released	0

	A	B	C
57	FT	Follower tips	0
58	GCSO	Gas cyl shot off	0
59	HBL	Heavy bolt lift	0
60	HMSC	Heading mismatch-steps on case	0
61	HPA	High pressure ammo	0
62	HUR	Hard under rail	0
63	JCS	Jumps cartridge	0
64	JM	Jumps magazine	0
65	JO	Jars off	0
66	LB	Light blow	0
67	MAH	Magazine assembles hard	0
68	MCW	Magazine capacity wrong	0
69	MFA	Misfires (ammo)	0
70	MFOP	Magazine follower out of position	0
71	ML	Magazine loose	0
72	MLH	Magazine loads hard	0
73	MRH	Magazine removes hard	0
74	OH	Opens hard	0
75	OR	Over-rides	0
76	PH	Pulls hard	0
77	PSI	Proof stamp illegible	0
78	PSM	Proof stamp missing	0
79	RBOC	Rings and bulges on case	0
80	RDVV	(Action) release doesn't work	0
81	RIC	Rings in chamber	0
82	RIS	Ring in sholder	0
83	RS	Rim srem	0
84	SBC	Stems bottom chambers	0
85	SEE	Stems bbl extension	0
86	SCB	Stock cracked or broken	0
87	SCX	Shell catches	0
88	SHI	Short indent	0
89	SI	Stems incline	0
90	SIC	Stems in chamber	0
91	SL	shaves lead	0
92	SLC	Stems left side of chamber	0
93	SMOC	Stretch marks on case	0
94	SOR	Stem over-ride	0
95	SP	Stems port	0
96	SR	Shoulder rough	0
97	SRC	Stems right side of chamber	0
98	SRIC	Specific rings in chamber	0
99	SSOC	Surface scratches on case	0
100	STC	Stems top chamber	0
101	SWE	Safety switch works too easily	0
102	SWH	Safety switch works too hard	0
103	SWW	Safety Switch won't work	0
104	TD	Tips down	0
105	TU	Tips up	0
106	TWP	Trigger won't pull	0
107	TWR	Trigger won't retract	0
108	UNCN-T	Uncoded	0
109	XH	Extracts hard	0
110			0
111	HI	High	0
112	LO	Low	0



	A	B	C
113	LEFT	Left	0
114	RIGHT	Right	0
115	DG	Doesn't Group	0
116	FSST	Front sight tipped	0
117	RSTT	Rear sight tipped	0
118	RSBR	Rear sight base raised	0
119	FSTR	Front sight raised	0
120	FSTL	Front sight loose	0
121	RSTL	Rear sight loose	0
122	MGPT-G	Missing parts at target	0
123	UNCN-G	Uncoded nonconformity at target	0
124			0
125	AI-P	Assembly incomplete at proof	0
126	BBB	Barrel bracket cracked or broken at proof	0
127	BC-P	Blows cases at proof	0
128	BEB-P	Barrel extension broken at proof	0
129	BLP-P	Blanked primer at proof	0
130	BLSO-P	Barrel lug shot off at proof	0
131	BP-P	Blown primer at proof	0
132	BS-P	Barrel split at proof	0
133	DBF-P	Damaged Bolt Face	0
134	DLOS-P	Doesn't lock over shells at proof	0
135	ESBBP-P	Ejector sticks back -Blown Primer cup	0
136	ESBEC-P	Ejector sticks back - Ejector Crescent	0
137	FCB-P	Fore-end cracked at proof	0
138	FESO-P	Fore-end shot off at proof	0
139	FF-P	Fails to fire at proof	0
140	GCSO-P	Gas cylinder shot off at proof	0
141	MSI-P	Magnaflux stamp illegible on bbl	0
142	MSM-P	Magnaflux stamp missing on bbl	0
143	PP-P	Pierced primer at proof	0
144	SCB-P	Stock cracked or broken at proof	0

	A	B	C
1	AB	Action binds	0
2	BABS	Bulge at body shoulder	0
3	BAC	Burr at chamber	0
4	BBMA	BBL-to-bolt misalignment	0
5	BB	Bolt binds/catches	0
6	BCOAB	Bolt catches on anti-bind	0
7	BCOBS	Bolt catches on bolt stop	0
8	BCOF	Bolt catches on follower	0
9	BC	Blows cases	0
10	BHR	Bolt hits receiver	0
11	BHS	Bolt plug hits safety switch	0
12	BLOP	Bar lock or disconnecter out of position	0
13	BLSO	Barrel lug shot off	0
14	BPO	Bolt pulls out	0
15	BSSM	Bolt stems shell in magazine	0
16	BWCD	Bolt won't cam down	0
17	BWCFM	Bolt won't close over full magazine	0
18	CD	Case dented	0
19	CH	Closes hard	0
20	CLM	Can't load magazine	0
21	CO	Cut-off	0
22	CR	Cuts rim	0
23	CS	Cases swell	0
24	CTOG	Chamber torn or gouged	0
25	CTP	Creepy trigger pull	0
26	CWSB	Cams wrong side of action bar	0
27	DBB	Doesn't blow back	0
28	DCS	Double click in safety switch	0
29	DCT	Double click in trigger	0
30	DCU	Doesn't close-up	0
31	DE	Doesn't eject	0
32	DEL	Doesn't eject live round	0
33	DFB	Doesn't feed back	0
34	DFU	Doesn't feed up	0
35	DLO	Doesn't lock open (after last shell)	0
36	DLU	Doesn't lock-up	0
37	DS	Dead safe	0
38	DX	Doesn't extract	0
39	DXL	Doesn't extract live round	0
40	EDS	Extractor drops shell	0
41	ESB	Ejector sticks back	0
42	ESCR	Empty shell catches receiver	0
43	ESS	Extractor stems shell	0
44	FA	Fires automatically	0
45	FB	Follower binds	0
46	FC	Fails to connect	0
47	FCB	Fore-end cracked or broken	0
48	FD	Follows-down	0
49	FF	Fails to fire	0
50	FFP	Flat firing pin	0
51	FOS	Fires on safe	0
52	FPHB	Firing pin hits bbl	0
53	FPHI	Firing pin hits inside rim	0
54	FPO	Floor plate opens	0
55	FPOH	Floor plate opens hard	0
56	FSR	Fires when safe is released	0

	A	B	C
57	FT	Follower tips	0
58	GCSO	Gas cyl shot off	0
59	HBL	Heavy bolt lift	0
60	HMSC	Heading mismatch-steps on case	0
61	HPA	High pressure ammo	0
62	HUR	Hard under rail	0
63	JCS	Jumps cartridge	0
64	JM	Jumps magazine	0
65	JO	Jars off	0
66	LB	Light blow	0
67	MAH	Magazine assembles hard	0
68	MCW	Magazine capacity wrong	0
69	MFA	Misfires (ammo)	0
70	MFOP	Magazine follower out of position	0
71	ML	Magazine loose	0
72	MLH	Magazine loads hard	0
73	MRH	Magazine removes hard	0
74	OH	Opens hard	0
75	OR	Over-rides	0
76	PH	Pulls hard	0
77	PSI	Proof stamp illegible	0
78	PSM	Proof stamp missing	0
79	RBOC	Rings and bulges on case	0
80	RDVV	(Action) release doesn't work	0
81	RIC	Rings in chamber	0
82	RIS	Ring in sholder	0
83	RS	Rim srem	0
84	SBC	Stems bottom chambers	0
85	SEE	Stems bbl extension	0
86	SCB	Stock cracked or broken	0
87	SCX	Shell catches	0
88	SHI	Short indent	0
89	SI	Stems incline	0
90	SIC	Stems in chamber	0
91	SL	shaves lead	0
92	SLC	Stems left side of chamber	0
93	SMOC	Stretch marks on case	0
94	SOR	Stem over-ride	0
95	SP	Stems port	0
96	SR	Shoulder rough	0
97	SRC	Stems right side of chamber	0
98	SRIC	Specific rings in chamber	0
99	SSOC	Surface scratches on case	0
100	STC	Stems top chamber	0
101	SWE	Safety switch works too easily	0
102	SWH	Safety switch works too hard	0
103	SWW	Safety Switch won't work	0
104	TD	Tips down	0
105	TU	Tips up	0
106	TWP	Trigger won't pull	0
107	TWR	Trigger won't retract	0
108	UNCN-T	Uncoded	0
109	XH	Extracts hard	0
110			0
111	HI	High	0
112	LO	Low	0

	A	B	C
113	LEFT	Left	0
114	RIGHT	Right	0
115	DG	Doesn't Group	0
116	FSST	Front sight tipped	0
117	RSTT	Rear sight tipped	0
118	RSBR	Rear sight base raised	0
119	FSTR	Front sight raised	0
120	FSTL	Front sight loose	0
121	RSTL	Rear sight loose	0
122	MGPT-G	Missing parts at target	0
123	UNCN-G	Uncoded nonconformity at target	0
124			0
125	AI-P	Assembly incomplete at proof	0
126	BBB	Barrel bracket cracked or broken at proof	0
127	BC-P	Blows cases at proof	0
128	BEB-P	Barrel extension broken at proof	0
129	BLP-P	Blanked primer at proof	0
130	BLSO-P	Barrel lug shot off at proof	0
131	BP-P	Blown primer at proof	0
132	BS-P	Barrel split at proof	0
133	DBF-P	Damaged Bolt Face	0
134	DLOS-P	Doesn't lock over shells at proof	0
135	ESBBP-P	Ejector sticks back - Blown Primer cup	0
136	ESBEC-P	Ejector sticks back - Ejector Crescent	0
137	FCB-P	Fore-end cracked at proof	0
138	FESO-P	Fore-end shot off at proof	0
139	FF-P	Fails to fire at proof	0
140	GCSO-P	Gas cylinder shot off at proof	0
141	MSI-P	Magnaflux stamp illegible on bbl	0
142	MSM-P	Magnaflux stamp missing on bbl	0
143	PP-P	Pierced primer at proof	0
144	SCB-P	Stock cracked or broken at proof	0

# Centerfire

	A	B	D	E	F	G	H	I	J	P	Q
1	<b>Summary</b>	<b>Total Tested</b>	<b>10124</b>								
2		<b>Total Rejected:</b>	<b>380</b>								
3		<b>Overall Reject Rate:</b>	<b>3.75</b>								<b>Grand totals</b>
5		Shot:	5052	742	1362	1397	435	690	7		9885
6	<b>Proof</b>	Rejected:	43	1	20	11	2	13	0	0	90
7		Percent:	0.9	0.1	1.5	0.8	0.5	1.9	0.0		0.9
9											
10	<b>Test</b>	Shot:	5149	797	1443	1489	442	680	7	117	10124
11		Rejected:	132	36	46	47	10	18	0	1	290
12		Percent:	2.6	4.5	3.2	3.2	2.3	2.6	0.0	0.9	2.9
13	<b>Target</b>	Shot:	480	78	102	128	49	748	7		1592
14		Rejected:	0	0	0	0	0	0	0	0	0
15		Percent:	0.0	0.0	0.0	0.0	0.0	0.0	0.0		0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>	<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>Rimfire</b>	<b>totals</b>
18											
19	AB	Action binds									
20	BABS	Bulge at body shoulder									
21	BAC	Burr at chamber	1		1						2
22	BBMA	BBL-to-bolt misalignment									
23	BB	Bolt binds/catches	9	9	2	3	1				24
24	BCOAB	Bolt catches on anti-bind									
25	BCOBS	Bolt catches on bolt stop									
26	BCOF	Bolt catches on follower			1	2					3
27	BC	Blows cases									
28	BHR	Bolt hits receiver									
29	BHS	Bolt plug hits safety switch									
30	BLOP	Bar lock or disconnecter out of position									
31	BLSO	Barrel lug shot off									
32	BPO	Bolt pulls out		1				1			2
33	BSSM	Bolt stems shell in magazine									
34	BWCD	Bolt won't cam down									
35	BWCFM	Bolt won't close over full magazine									
36	CD	Case dented									
37	CH	Closes hard	2	2		5	1				10
38	CLM	Can't load magazine	2	3		3		5			13
39	CO	Cut-off									
40	CR	Cuts rim									

# Centerfire

	A	B	D	E	F	G	H	I	J	P	Q
17	CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7	Rimfire	totals
41	CS	Cases swell									
42	CTOG	Chamber torn or gouged									
43	CTP	Creepy trigger pull									
44	CWSB	Cams wrong side of action bar									
45	DBB	Doesn't blow back									
46	DCS	Double click in safety switch									
47	DCT	Double click in trigger									
48	DCU	Doesn't close-up									
49	DE	Doesn't eject				1					1
50	DEL	Doesn't eject live round									
51	DFB	Doesn't feed back									
52	DFU	Doesn't feed up									
53	DLO	Doesn't lock open (after last shell)									
54	DLU	Doesn't lock-up									
55	DS	Dead safe		1	2						3
56	DX	Doesn't extract	13	3	6	4					26
57	DXL	Doesn't extract live round									
58	EDS	Extractor drops shell	16	1	7	8		1			33
59	ESB	Ejector sticks back	1	2		1					4
60	ESCR	Empty shell catches receiver									
61	ESS	Extractor stems shell									
62	FA	Fires automatically									
63	FB	Follower binds								1	1
64	FC	Fails to connect									
65	FCB	Fore-end cracked or broken									
66	FD	Follows-down									
67	FF	Fails to fire			1		1				2
68	FFP	Flat firing pin									
69	FOS	Fires on safe									
70	FPHB	Firing pin hits bbl									
71	FPHI	Firing pin hits inside rim									
72	FPO	Floor plate opens	37	1							38
73	FPOH	Floor plate opens hard									

# Centerfire

	A	B	D	E	F	G	H	I	J	P	Q
17	CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7	Rimfire	totals
74	FSR	Fires when safe is released									
75	FT	Follower tips									
76	GCSO	Gas cyl shot off									
77	HBL	Heavy bolt lift	1		1						2
78	HMSC	Heading mismatch-steps on case									
79	HPA	High pressure ammo									
80	HUR	Hard under rail	1		2	5	1	2			11
81	JCS	Jumps cartridge									
82	JM	Jumps magazine	2			1		1			4
83	JO	Jars off									
84	LB	Light blow									
85	MAH	Magazine assembles hard									
86	MCW	Magazine capacity wrong									
87	MFA	Misfires (ammo)									
88	MFOP	Magazine follower out of position									
89	ML	Magazine loose						3			3
90	MLH	Magazine loads hard									
91	MRH	Magazine removes hard									
92	OH	Opens hard		2							2
93	OR	Over-rides	7	3	10	1					21
94	PH	Pulls hard									
95	PSI	Proof stamp illegible									
96	PSM	Proof stamp missing									
97	RBOC	Rings and bulges on case									
98	RDW	(Action) release doesn't work				1		1			2
99	RIC	Rings in chamber	2								2
100	RIS	Ring in sholder		3							3
101	RS	Rim srem									
102	SBC	Stems bottom chambers	5		2	1	2	1			11
103	SBE	Stems bbl extension									
104	SCB	Stock cracked or broken						1			1
105	SCX	Shell catches									
106	SHI	Short indent									


# Centerfire

	A	B	D	E	F	G	H	I	J	P	Q
17	CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7	Rimfire	totals
107	SI	Stems incline	4	2	1						7
108	SIC	Stems in chamber	1			2					3
109	SL	shaves lead									
110	SLC	Stems left side of chamber	6					1			7
111	SMOC	Stretch marks on case									
112	SOR	Stem over-ride	11	2	3	9	4				29
113	SP	Stems port									
114	SR	Shoulder rough									
115	SRC	Stems right side of chamber									
116	SRIC	Specific rings in chamber									
117	SSOC	Surface scratches on case									
118	STC	Stems top chamber	7		4						11
119	SWE	Safety switch works too easily									
120	SWH	Safety switch works too hard									
121	SWW	Safety Switch won't work									
122	TD	Tips down									
123	TU	Tips up									
124	TWP	Trigger won't pull									
125	TWR	Trigger won't retract									
126	UNCN-T	Uncoded	1								1
127	XH	Extracts hard	3	1	3			1			8
128											
129	HI	High									
130	LO	Low									
131	LEFT	Left									
132	RIGHT	Right									
133	DG	Doesn't Group									
134	FSST	Front sight tipped									
135	RSTT	Rear sight tipped									
136	RSBR	Rear sight base raised									
137	FSTR	Front sight raised									
138	FSTL	Front sight loose									
139	RSTL	Rear sight loose									



# Centerfire

	A	B	D	E	F	G	H	I	J	P	Q
17	CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7	Rimfire	totals
140	MGPT-G	Missing parts at target									
141	UNCN-G	Uncoded nonconformity at target									
142											
143	AI-P	Assembly incomplete at proof									
144	BBB	Barrel bracket cracked or broken at proof									
145	BC-P	Blows cases at proof									
146	BEB-P	Barrel extension broken at proof									
147	BLP-P	Blanked primer at proof									
148	BLSO-P	Barrel lug shot off at proof									
149	BP-P	Blown primer at proof									
150	BS-P	Barrel split at proof									
151	DBF-P	Damaged Bolt Face	41	1	16	9	2	13			82
152	DLOS-P	Doesn't lock over shells at proof									
153	ESBBP-P	Ejector sticks back -Blown Primer cup									
154	ESBEC-P	Ejector sticks back - Ejector Cresent	1		1						2
155	FCB-P	Fore-end cracked at proof									
156	FESO-P	Fore-end shot off at proof									
157	FF-P	Fails to fire at proof									
158	GCSO-P	Gas cylinder shot off at proof									
159	MSI-P	Magnaflux stamp illegible on bbl									
160	MSM-P	Magnaflux stamp missing on bbl									
161	PP-P	Pierced primer at proof	1								1
162	SCB-P	Stock cracked or broken at proof									
163	UNCM-P	Uncoded proof malfunctions			3	2					5

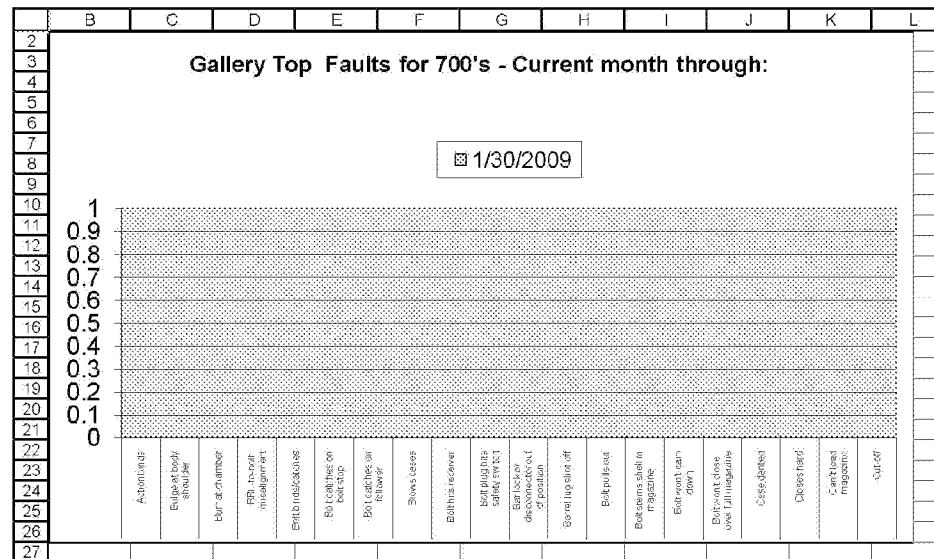

	A	B	C
1	AB	Action binds	0
2	BABS	Bulge at body shoulder	0
3	BAC	Burr at chamber	0
4	BBMA	BBL-to-bolt misalignment	0
5	BB	Bolt binds/catches	0
6	BCOBS	Bolt catches on bolt stop	0
7	BCOF	Bolt catches on follower	0
8	BC	Blows cases	0
9	BHR	Bolt hits receiver	0
10	BHS	Bolt plug hits safety switch	0
11	BLOP	Bar lock or disconnecter out of position	0
12	BLSO	Barrel lug shot off	0
13	BPO	Bolt pulls out	0
14	BSSM	Bolt stems shell in magazine	0
15	BWCD	Bolt won't cam down	0
16	BWCFM	Bolt won't close over full magazine	0
17	CD	Case dented	0
18	CH	Closes hard	0
19	CLM	Can't load magazine	0
20	CO	Cut-off	0
21	CR	Cuts rim	0
22	CS	Cases swell	0
23	CTOG	Chamber torn or gouged	0
24	CTP	Creepy trigger pull	0
25	CWSB	Cams wrong side of action bar	0
26	DBB	Doesn't blow back	0
27	DCS	Double click in safety switch	0
28	DCT	Double click in trigger	0
29	DCU	Doesn't close-up	0
30	DE	Doesn't eject	0
31	DEL	Doesn't eject live round	0
32	DFB	Doesn't feed back	0
33	DFU	Doesn't feed up	0
34	DLO	Doesn't lock open (after last shell)	0
35	DLU	Doesn't lock-up	0
36	DS	Dead safe	0
37	DX	Doesn't extract	0
38	DXL	Doesn't extract live round	0
39	EDS	Extractor drops shell	0
40	ESB	Ejector sticks back	0
41	ESCR	Empty shell catches receiver	0
42	ESS	Extractor stems shell	0
43	FA	Fires automatically	0
44	FB	Follower binds	0
45	FC	Fails to connect	0
46	FCB	Fore-end cracked or broken	0
47	FD	Follows-down	0
48	FF	Fails to fire	0
49	FFP	Flat firing pin	0
50	FOS	Fires on safe	0
51	FPHB	Firing pin hits bbl	0
52	FPHI	Firing pin hits inside rim	0
53	FPO	Floor plate opens	0
54	FPOH	Floor plate opens hard	0
55	FSR	Fires when safe is released	0
56	FT	Follower tips	0

	A	B	C
57	GCSO	Gas cyl shot off	0
58	HBL	Heavy bolt lift	0
59	HMSC	Heading mismatch-steps on case	0
60	HPA	High pressure ammo	0
61	HUR	Hard under rail	0
62	JCS	Jumps cartridge	0
63	JM	Jumps magazine	0
64	JO	Jars off	0
65	LB	Light blow	0
66	MAH	Magazine assembles hard	0
67	MCW	Magazine capacity wrong	0
68	MFA	Misfires (ammo)	0
69	MFOP	Magazine follower out of position	0
70	ML	Magazine loose	0
71	MLH	Magazine loads hard	0
72	MRH	Magazine removes hard	0
73	OH	Opens hard	0
74	OR	Over-rides	0
75	PH	Pulls hard	0
76	PSI	Proof stamp illegible	0
77	PSM	Proof stamp missing	0
78	RBOC	Rings and bulges on case	0
79	RDW	(Action) release doesn't work	0
80	RIC	Rings in chamber	0
81	RIS	Ring in sholder	0
82	RS	Rim srem	0
83	SBC	Stems bottom chambers	0
84	SBE	Stems bbl extension	0
85	SCB	Stock cracked or broken	0
86	SCX	Shell catches	0
87	SHI	Short indent	0
88	SI	Stems incline	0
89	SIC	Stems in chamber	0
90	SL	shaves lead	0
91	SIC	Stems left side of chamber	0
92	SMOC	Stretch marks on case	0
93	SOR	Stem over-ride	0
94	SP	Stems port	0
95	SR	Shoulder rough	0
96	SRC	Stems right side of chamber	0
97	SRIC	Specific rings in chamber	0
98	SSOC	Surface scratches on case	0
99	STC	Stems top chamber	0
100	SWE	Safety switch works too easily	0
101	SWH	Safety switch works too hard	0
102	SWW	Safety Switch won't work	0
103	TD	Tips down	0
104	TU	Tips up	0
105	TWP	Trigger won't pull	0
106	TWR	Trigger won't retract	0
107	UNCN-T	Uncoded	0
108	XH	Extracts hard	0
109			0
110	HI	High	0
111	LO	Low	0
112	LEFT	Left	0

	A	B	C
113	RIGHT	Right	0
114	DG	Doesn't Group	0
115	FSST	Front sight tipped	0
116	RSTT	Rear sight tipped	0
117	RSBR	Rear sight base raised	0
118	FSTR	Front sight raised	0
119	FSTL	Front sight loose	0
120	RSTL	Rear sight loose	0
121	MGPT-G	Missing parts at target	0
122	UNCN-G	Uncoded nonconformity at target	0
123			0
124	AI-P	Assembly incomplete at proof	0
125	BBB	Barrel bracket cracked or broken at proof	0
126	BC-P	Blows cases at proof	0
127	BEB-P	Barrel extension broken at proof	0
128	BLP-P	Blanked primer at proof	0
129	BLSO-P	Barrel lug shot off at proof	0
130	BP-P	Blown primer at proof	0
131	BS-P	Barrel split at proof	0
132	DBF-P	Damaged Bolt Face	0
133	DLOS-P	Doesn't lock over shells at proof	0
134	ESBBP-P	Ejector sticks back -Blown Primer cup	0
135	ESBEC-P	Ejector sticks back - Ejector Crescent	0
136	FCB-P	Fore-end cracked at proof	0
137	FESO-P	Fore-end shot off at proof	0
138	FF-P	Fails to fire at proof	0
139	GCSO-P	Gas cylinder shot off at proof	0
140	MSI-P	Magnaflux stamp illegible on bbl	0
141	MSM-P	Magnaflux stamp missing on bbl	0
142	PP-P	Pierced primer at proof	0
143	SCB-P	Stock cracked or broken at proof	0
144	BCOAB	Bolt catches on anti-bind	
145	BCOAB	Bolt catches on anti-bind	
146			
147			
148			
149			
150	1/30/2009		

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>318</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>14</b>													
3		<b>Overall Reject Rate:</b>		<b>4.40</b>													<i>totals</i>
5		Shot:		114	74	21	3	35									247
6		Rejected:		3	0	0	0	0	0	0	0	0	0	0	0	0	3
7		Percent:		2.6	0.0	0.0	0.0	0.0									1.2
9		Shot:		114	48	31	48	54	23								318
10		Rejected:		4	1	4	0	1	1	0	0	0	0	0	0	0	11
11		Percent:		3.5	2.1	12.9	0.0	1.9	4.3								3.5
13		Shot:		12	5	3	5	6	22								53
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0	0.0	0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard			1			1									2
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract				3											3
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		2													2
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers		2					1								3
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard				1											1
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		3													\$
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>173</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>12</b>													
3		<b>Overall Reject Rate:</b>		<b>6.94</b>													<i>totals</i>
5		Shot:		58	26	52	14										148
6		Rejected:		1	0	3	0	0	0	0	0	0	0	0	0	0	4
7		Percent:		1.8	0.0	5.8	0.0										2.7
9		Shot:		60	29	61	22		1								173
10		Rejected:		0	0	5	2	0	1	0	0	0	0	0	0	0	8
11		Percent:		0.0	0.0	8.2	9.1		100.0								4.6
13		Shot:		6	3	7	2										18
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0										0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches				1											1
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe				1											1
56	DX	Doesn't extract					1										1
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell				2											2
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail				1	1		1								3
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		1		3											4
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>534</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>20</b>													
3		<b>Overall Reject Rate:</b>		<b>3.75</b>													<i>totals</i>
5		Shot:		353		129	18										500
6		Rejected:		7	0	3	0	0	0	0	0	0	0	0	0	0	10
7		Percent:		2.0		2.3	0.0										2.0
9		Shot:		351		129	20									34	534
10		Rejected:		0	0	10	0	0	0	0	0	0	0	0	0	0	10
11		Percent:		0.0		7.8	0.0								0.0		1.9
13		Shot:		33			2										35
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0			0.0										0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract				1											1
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell				4											4
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift				1											1
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides				2											2
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers				1											1
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline				1											1
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		7		3											10
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>454</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>41</b>													
3		<b>Overall Reject Rate:</b>		<b>9.03</b>													<i>totals</i>
5		Shot:	292	4	58	41	7	47									489
6		Rejected:	7	0	0	0	0	2	0	0	0	0	0	0	0	0	2
7		Percent:	2.4	0.0	0.0	0.0	0.0	4.3									2.0
9		Shot:	292	1	73	38	3	47									454
10		Rejected:	26	0	3	3	0	0	0	0	0	0	0	0	0	0	32
11		Percent:	8.9	0.0	4.1	7.9	0.0	0.0									7.2
13		Shot:	32		2			47									81
14		Rejected:	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:	0.0		0.0			0.0									0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches			1												1
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower			1												1
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine				1											1
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract				1											1
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		6			2										\$
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens		18													18
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers		2													2
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		7					2								3
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>584</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>37</b>													
3		<b>Overall Reject Rate:</b>		<b>6.34</b>													<i>totals</i>
5		Shot:		435	63	11	32	15	3								559
6		Rejected:		4	0	0	0	0	0	0	0	0	0	0	0	0	4
7		Percent:		0.9	0.0	0.0	0.0	0.0	0.0								0.7
9		Shot:		444	66	21	35	15	3								564
10		Rejected:		28	0	2	2	1	0	0	0	0	0	0	0	0	33
11		Percent:		6.3	0.0	9.5	5.7	6.7	0.0								5.7
13		Shot:		45	6	2	4	2									58
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0	0.0									0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine		1													1
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe				1											1
56	DX	Doesn't extract		1													1
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		5													5
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire				1											1
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens		18													18
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift		1													1
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail					2	1									3
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard		2													2
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		3													3
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof		1													1
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>549</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>9</b>													
3		<b>Overall Reject Rate:</b>		<b>1.64</b>													<i>totals</i>
5		Shot:		355	16	10	39	16									438
6		Rejected:		1	0	3	0	0	0	0	0	0	0	0	0	0	4
7		Percent:		0.3	0.0	30.0	0.0	0.0									8.9
9		Shot:		361	39	56	77	16									549
10		Rejected:		5	0	0	0	0	0	0	0	0	0	0	0	0	5
11		Percent:		1.4	0.0	0.0	0.0	0.0									8.9
13		Shot:		25	4	3	3										35
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0										0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber		1													1
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		2													2
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens		1													1
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers		1													1
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		1													1
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions				3											3

Cell: F163

Comment: illegal:  
broken triggers

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>494</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>25</b>													
3		<b>Overall Reject Rate:</b>		<b>5.06</b>													<i>totals</i>
5		Shot:		491		10			33								534
6		Rejected:		3	0	0	0	0	0	0	0	0	0	0	0	0	3
7		Percent:		0.6		0.0			0.0								0.6
9		Shot:		403		10	34	22	25								494
10		Rejected:		13	0	0	2	0	7	0	0	0	0	0	0	0	22
11		Percent:		3.2		0.0	5.9	0.0	28.0								4.5
13		Shot:		39			3	15	15								72
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0			0.0	0.0	0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		1			1										2
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine							5								5
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		5													%
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell							1								1
59	ESB	Ejector sticks back		1													1
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine		1					1								2
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides		1													1
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber		1													1
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers					1										1
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline		2													2
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride		1													1
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		3													3
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>705</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>10</b>													
3		<b>Overall Reject Rate:</b>		<b>1.42</b>													<i>totals</i>
5		Shot:		268	8	278	46	45									645
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:		0.0	0.0	0.0	0.0	0.0									0.0
9		Shot:		457	34	89	63	30	32								795
10		Rejected:		2	1	6	1	0	0	0	0	0	0	0	0	0	10
11		Percent:		0.4	2.9	6.7	1.6	0.0	0.0								1.4
13		Shot:		58	4	9	8	3	32								114
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0	0.0	0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber				1											1
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out			1												1
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cam wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract				1											1
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail				1	1										2
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride		1													1
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber				2											2
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard		1		1											2
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>562</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>23</b>													
3		<b>Overall Reject Rate:</b>		<b>4.09</b>													<i>totals</i>
5		Shot:		281	35	87	112	16	16								587
6		Rejected:		5	0	3	3	0	0	0	0	0	0	0	0	0	11
7		Percent:		1.8	0.0	3.4	2.7	0.0	0.0								3.0
9		Shot:		279	57	86	124	16									562
10		Rejected:		4	2	0	6	0	0	0	0	0	0	0	0	0	12
11		Percent:		1.4	3.5	0.0	4.8	0.0									2.1
13		Shot:		24	2	9	6		16								57
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0		0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower					1										1
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard					4										4
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract			1												1
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens			1												1
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine					1										1
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride		1													1
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber		3													3
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		5		3	3										11
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

**Cell:** D151

**Comment:** ilngalry:  
shell stuck to bolt face

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>617</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>26</b>													
3		<b>Overall Reject Rate:</b>		<b>4.21</b>													<i>totals</i>
5		Shot:		350	35		4	47	43								879
6		Rejected:		2	0	1	0	0	1	0	0	0	0	0	0	0	8
7		Percent:		0.6	0.0		0.0	0.0	2.3								0.8
9		Shot:		363	35	107	6	52	54								817
10		Rejected:		10	0	3	2	5	2	0	0	0	0	0	0	0	22
11		Percent:		2.8	0.0	2.8	33.3	9.6	3.7								3.8
13		Shot:		37	4	11			67								119
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0			0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches					1	1									2
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out							1								1
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard		1													1
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cam wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		1													1
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell				1											1
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire						1									1
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail					1										1
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stook cracked or broken							1								1
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber		6													6
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride		1				3									4
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber		1		2											3
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		2		1			1								4
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>543</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>10</b>													
3		<b>Overall Reject Rate:</b>		<b>1.84</b>													<i>totals</i>
5		Shot:		220	111	52	85	132	3								603
6		Rejected:		4	0	2	0	1	0	0	0	0	0	0	0	0	7
7		Percent:		1.8	0.0	3.8	0.0	0.8	0.0								1.2
9		Shot:		153	113	78	77	122									543
10		Rejected:		1	0	0	1	1	0	0	0	0	0	0	0	0	3
11		Percent:		0.7	0.0	0.0	1.3	0.8									0.8
13		Shot:		13	11	9	7	11	7								58
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0	0.0	0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard					1										1
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		1													1
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride						1									1
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		3		2		1									\$
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent		1													1
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>376</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>9</b>													
3		<b>Overall Reject Rate:</b>		<b>2.39</b>													<i>totals</i>
5		Shot:		32	145		94	5	130								406
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:		0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0
9		Shot:		44	114		82	6	130								376
10		Rejected:		1	4	0	1	0	3	0	0	0	0	0	0	0	9
11		Percent:		2.3	3.5		1.2	0.0	2.3								2.4
13		Shot:		5	12		8		100								125
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0		0.0		0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		1	2		1										4
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine			1												1
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cam wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell			1												1
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work							1								1
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber							1								1
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard							1								1
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>464</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>16</b>													
3		<b>Overall Reject Rate:</b>		<b>3.45</b>													<i>totals</i>
5		Shot:		112	119	65	138	8	120								562
6		Rejected:		0	0	0	2	0	0	0	0	0	0	0	0	0	2
7		Percent:		0.0	0.0	0.0	1.4	0.0	0.0								0.4
9		Shot:		97	118	77	112		40							20	464
10		Rejected:		0	13	1	0	0	0	0	0	0	0	0	0	0	14
11		Percent:		0.0	11.0	1.3	0.0		0.0						0.0		3.0
13		Shot:		10	11		12		144								177
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0		0.0		0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract			2												2
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back			2												2
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard			2												2
93	OR	Over-rides			2												2
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline			2												2
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride			2	1											3
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard			1												1
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions					2										2

Cell: G163

Comment: illegal:  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>620</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>20</b>													
3		<b>Overall Reject Rate:</b>		<b>3.23</b>													<i>totals</i>
5		Shot:		408		52	103	12	28								601
6		Rejected:		3	0	0	1	0	0	0	0	0	0	0	0	0	4
7		Percent:		0.7		0.0	1.0	0.0	0.0								0.7
9		Shot:		428		52	102	12	26								620
10		Rejected:		11	0	1	1	0	3	0	0	0	0	0	0	0	16
11		Percent:		2.6		1.9	1.0	0.0	11.5								2.6
13		Shot:		34		3	6	2									45
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0		0.0	0.0	0.0									0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		2													2
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine		1													1
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose								3							3

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides		4													4
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work					1										1
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers				1											1
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride		4													4
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		3			1										4
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															



Cell: 189  
Comment: lingalry  
falls out

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>574</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>29</b>													
3		<b>Overall Reject Rate:</b>		<b>5.05</b>													<i>totals</i>
5		Shot:		155	26	122	171	2	69								545
6		Rejected:		0	0	2	4	0	1	0	0	0	0	0	0	0	7
7		Percent:		0.0	0.0	1.6	2.3	0.0	1.4								1.3
9		Shot:		214	39	79	176		66								574
10		Rejected:		10	6	2	4	0	0	0	0	0	0	0	0	0	22
11		Percent:		4.7	15.4	2.5	2.3		0.0								3.8
13		Shot:		17	5	6	7		66								101
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0		0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		2	2												4
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cam wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		2			1										3
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		1													1
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail		1													1
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides			1	2											3
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder			3												3
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline		2													2
108	SIC	Stems in chamber					2										2
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride					1										1
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber		1													1
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded		1													1
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face				2	4		1								7
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

Cell: D126

Comment: illegal:  
bad bolt release

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>414</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>11</b>													
3		<b>Overall Reject Rate:</b>		<b>2.66</b>													<i>totals</i>
5		Shot:		116		48	180		47								331
6		Rejected:		0	0	0	0	0	2	0	0	0	0	0	0	0	2
7		Percent:		0.0		0.0	0.0		4.3								0.5
9		Shot:		77		104	188		45								414
10		Rejected:		0	0	0	9	0	0	0	0	0	0	0	0	0	9
11		Percent:		0.0		0.0	4.8		0.0								2.2
13		Shot:		5		8	31		45								89
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0		0.0	0.0		0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject					1										1
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract					2										2
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell					6										6
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face							2								2
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>560</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>13</b>													
3		<b>Overall Reject Rate:</b>		<b>2.32</b>													<i>totals</i>
5		Shot:		136		195	117		49								837
6		Rejected:		0	0	2	1	0	2	0	0	0	0	0	0	0	5
7		Percent:		0.0		1.0	0.9		4.1								1.0
9		Shot:		159		179	116		64							42	580
10		Rejected:		4	0	2	0	0	1	0	0	0	0	0	0	1	2
11		Percent:		2.5		1.1	0.0		1.6						2.4		1.4
13		Shot:		15		8	12		63								98
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0		0.0	0.0		0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		1													1
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds														1	1
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail							1								1
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides		2		2											3
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber		1													1
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face				2	1		2								3
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>491</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>15</b>													
3		<b>Overall Reject Rate:</b>		<b>3.05</b>													<i>totals</i>
5		Shot:		329		69	24										322
6		Rejected:		1	0	1	0	0	0	0	0	0	0	0	0	0	2
7		Percent:		0.3		1.4	0.0										0.5
9		Shot:		327		94	24		25							21	431
10		Rejected:		3	0	6	2	2	0	0	0	0	0	0	0	0	13
11		Percent:		0.9		6.4	8.3		0.0							0.0	2.8
13		Shot:		35		12	3		25								75
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0		0.0	0.0		0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard		1													1
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		1													1
59	ESB	Ejector sticks back					1										1
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides				4	1										5
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers						2									2
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride		1		2											3
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		1													1
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent				1											1
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>565</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>14</b>													
3		<b>Overall Reject Rate:</b>		<b>2.48</b>													<i>totals</i>
5		Shot:		300		70	124	95		7							536
6		Rejected:		2	0	0	0	1	0	0	0	0	0	0	0	0	3
7		Percent:		0.7		0.0	0.0	1.1		0.0							0.5
9		Shot:		280		71	113	94		7							565
10		Rejected:		9	0	1	1	0	0	0	0	0	0	0	0	0	11
11		Percent:		3.2		1.4	0.9	0.0		0.0							1.9
13		Shot:		14		7	6	10		7							44
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0		0.0	0.0	0.0		0.0							0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		2													2
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower					1										1
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cam wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		1													1
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine		1													1
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber		1													1
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride		2													2
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber		2													2
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard				1											1
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		2				1									\$
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>527</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>26</b>													
3		<b>Overall Reject Rate:</b>		<b>4.93</b>													<i>totals</i>
5		Shot:		249	76	33	52		104								516
6		Rejected:		0	1	0	0	0	5	0	0	0	0	0	0	0	6
7		Percent:		0.0	1.3	0.0	0.0		4.8								1.2
9		Shot:		246	104	46	32		99								527
10		Rejected:		1	9	0	10	0	0	0	0	0	0	0	0	0	20
11		Percent:		0.4	8.7	0.0	31.3		0.0								3.8
13		Shot:		21	11	3	3		99								137
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0		0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches			5												5
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard			1												1
38	CLM	Can't load magazine			2		2										4
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe			1												1
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		1													1
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride					8										8
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															


	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face			1				5								\$
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															


	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															


	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

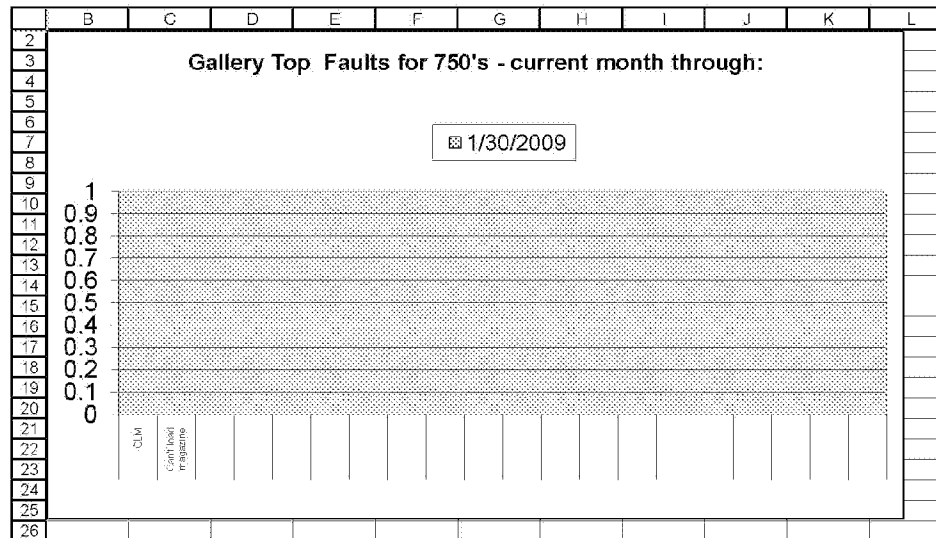

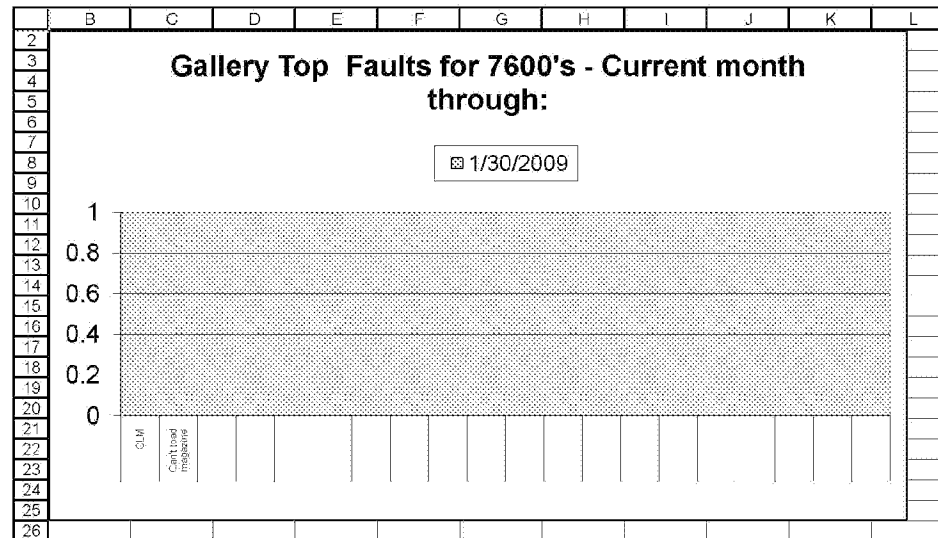



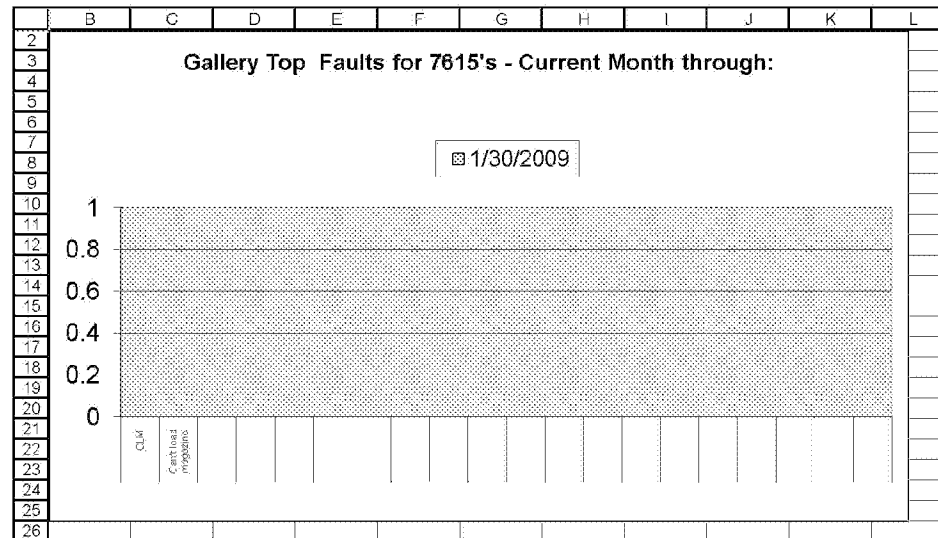

	A	B	C
1	AB	Action binds	0
2	BABS	Bulge at body shoulder	0
3	BAC	Burr at chamber	0
4	BBMA	BBL-to-bolt misalignment	0
5	BB	Bolt binds/catches	0
6	BCOAB	Bolt catches on anti-bind	0
7	BCOBS	Bolt catches on bolt stop	0
8	BCOF	Bolt catches on follower	0
9	BC	Blows cases	0
10	BHR	Bolt hits receiver	0
11	BHS	Bolt plug hits safety switch	0
12	BLOP	Bar lock or disconnecter out of position	0
13	BLSO	Barrel lug shot off	0
14	BPO	Bolt pulls out	0
15	BSSM	Bolt stems shell in magazine	0
16	BWCD	Bolt won't cam down	0
17	BWCFM	Bolt won't close over full magazine	0
18	CD	Case dented	0
19	CH	Closes hard	0
20	CLM	Can't load magazine	0
21	CO	Cut-off	0
22	CR	Cuts rim	0
23	CS	Cases swell	0
24	CTOG	Chamber torn or gouged	0
25	CTP	Creepy trigger pull	0
26	CWSB	Cams wrong side of action bar	0
27	DBB	Doesn't blow back	0
28	DCS	Double click in safety switch	0
29	DCT	Double click in trigger	0
30	DCU	Doesn't close-up	0
31	DE	Doesn't eject	0
32	DEL	Doesn't eject live round	0
33	DFB	Doesn't feed back	0
34	DFU	Doesn't feed up	0
35	DLO	Doesn't lock open (after last shell)	0
36	DLU	Doesn't lock-up	0
37	DS	Dead safe	0
38	DX	Doesn't extract	0
39	DXL	Doesn't extract live round	0
40	EDS	Extractor drops shell	0
41	ESB	Ejector sticks back	0
42	ESCR	Empty shell catches receiver	0
43	ESS	Extractor stems shell	0
44	FA	Fires automatically	0
45	FB	Follower binds	0
46	FC	Fails to connect	0
47	FCB	Fore-end cracked or broken	0
48	FD	Follows-down	0
49	FF	Fails to fire	0
50	FFP	Flat firing pin	0
51	FOS	Fires on safe	0
52	FPHB	Firing pin hits bbl	0
53	FPHI	Firing pin hits inside rim	0
54	FPO	Floor plate opens	0
55	FPOH	Floor plate opens hard	0
56	FSR	Fires when safe is released	0

	A	B	C
57	FT	Follower tips	0
58	GCSO	Gas cyl shot off	0
59	HBL	Heavy bolt lift	0
60	HMSC	Heading mismatch-steps on case	0
61	HPA	High pressure ammo	0
62	HUR	Hard under rail	0
63	JCS	Jumps cartridge	0
64	JM	Jumps magazine	0
65	JO	Jars off	0
66	LB	Light blow	0
67	MAH	Magazine assembles hard	0
68	MCW	Magazine capacity wrong	0
69	MFA	Misfires (ammo)	0
70	MFOP	Magazine follower out of position	0
71	ML	Magazine loose	0
72	MLH	Magazine loads hard	0
73	MRH	Magazine removes hard	0
74	OH	Opens hard	0
75	OR	Over-rides	0
76	PH	Pulls hard	0
77	PSI	Proof stamp illegible	0
78	PSM	Proof stamp missing	0
79	RBOC	Rings and bulges on case	0
80	RDVV	(Action) release doesn't work	0
81	RIC	Rings in chamber	0
82	RIS	Ring in sholder	0
83	RS	Rim srem	0
84	SBC	Stems bottom chambers	0
85	SEE	Stems bbl extension	0
86	SCB	Stock cracked or broken	0
87	SCX	Shell catches	0
88	SHI	Short indent	0
89	SI	Stems incline	0
90	SIC	Stems in chamber	0
91	SL	shaves lead	0
92	SLC	Stems left side of chamber	0
93	SMOC	Stretch marks on case	0
94	SOR	Stem over-ride	0
95	SP	Stems port	0
96	SR	Shoulder rough	0
97	SRC	Stems right side of chamber	0
98	SRIC	Specific rings in chamber	0
99	SSOC	Surface scratches on case	0
100	STC	Stems top chamber	0
101	SWE	Safety switch works too easily	0
102	SWH	Safety switch works too hard	0
103	SWW	Safety Switch won't work	0
104	TD	Tips down	0
105	TU	Tips up	0
106	TWP	Trigger won't pull	0
107	TWR	Trigger won't retract	0
108	UNCN-T	Uncoded	0
109	XH	Extracts hard	0
110			0
111	HI	High	0
112	LO	Low	0

	A	B	C
113	LEFT	Left	0
114	RIGHT	Right	0
115	DG	Doesn't Group	0
116	FSST	Front sight tipped	0
117	RSTT	Rear sight tipped	0
118	RSBR	Rear sight base raised	0
119	FSTR	Front sight raised	0
120	FSTL	Front sight loose	0
121	RSTL	Rear sight loose	0
122	MGPT-G	Missing parts at target	0
123	UNCN-G	Uncoded nonconformity at target	0
124			0
125	AI-P	Assembly incomplete at proof	0
126	BBB	Barrel bracket cracked or broken at proof	0
127	BC-P	Blows cases at proof	0
128	BEB-P	Barrel extension broken at proof	0
129	BLP-P	Blanked primer at proof	0
130	BLSO-P	Barrel lug shot off at proof	0
131	BP-P	Blown primer at proof	0
132	BS-P	Barrel split at proof	0
133	DBF-P	Damaged Bolt Face	0
134	DLOS-P	Doesn't lock over shells at proof	0
135	ESBBP-P	Ejector sticks back -Blown Primer cup	0
136	ESBEC-P	Ejector sticks back - Ejector Crescent	0
137	FCB-P	Fore-end cracked at proof	0
138	FESO-P	Fore-end shot off at proof	0
139	FF-P	Fails to fire at proof	0
140	GCSO-P	Gas cylinder shot off at proof	0
141	MSI-P	Magnaflux stamp illegible on bbl	0
142	MSM-P	Magnaflux stamp missing on bbl	0
143	PP-P	Pierced primer at proof	0
144	SCB-P	Stock cracked or broken at proof	0

	A	B	C
1	AB	Action binds	0
2	BABS	Bulge at body shoulder	0
3	BAC	Burr at chamber	0
4	BBMA	BBL-to-bolt misalignment	0
5	BB	Bolt binds/catches	0
6	BCOAB	Bolt catches on anti-bind	0
7	BCOBS	Bolt catches on bolt stop	0
8	BCOF	Bolt catches on follower	0
9	BC	Blows cases	0
10	BHR	Bolt hits receiver	0
11	BHS	Bolt plug hits safety switch	0
12	BLOP	Bar lock or disconnecter out of position	0
13	BLSO	Barrel lug shot off	0
14	BPO	Bolt pulls out	0
15	BSSM	Bolt stems shell in magazine	0
16	BWCD	Bolt won't cam down	0
17	BWCFM	Bolt won't close over full magazine	0
18	CD	Case dented	0
19	CH	Closes hard	0
20	CLM	Can't load magazine	0
21	CO	Cut-off	0
22	CR	Cuts rim	0
23	CS	Cases swell	0
24	CTOG	Chamber torn or gouged	0
25	CTP	Creepy trigger pull	0
26	CWSB	Cams wrong side of action bar	0
27	DBB	Doesn't blow back	0
28	DCS	Double click in safety switch	0
29	DCT	Double click in trigger	0
30	DCU	Doesn't close-up	0
31	DE	Doesn't eject	0
32	DEL	Doesn't eject live round	0
33	DFB	Doesn't feed back	0
34	DFU	Doesn't feed up	0
35	DLO	Doesn't lock open (after last shell)	0
36	DLU	Doesn't lock-up	0
37	DS	Dead safe	0
38	DX	Doesn't extract	0
39	DXL	Doesn't extract live round	0
40	EDS	Extractor drops shell	0
41	ESB	Ejector sticks back	0
42	ESCR	Empty shell catches receiver	0
43	ESS	Extractor stems shell	0
44	FA	Fires automatically	0
45	FB	Follower binds	0
46	FC	Fails to connect	0
47	FCB	Fore-end cracked or broken	0
48	FD	Follows-down	0
49	FF	Fails to fire	0
50	FFP	Flat firing pin	0
51	FOS	Fires on safe	0
52	FPHB	Firing pin hits bbl	0
53	FPHI	Firing pin hits inside rim	0
54	FPO	Floor plate opens	0
55	FPOH	Floor plate opens hard	0
56	FSR	Fires when safe is released	0

	A	B	C
57	FT	Follower tips	0
58	GCSO	Gas cyl shot off	0
59	HBL	Heavy bolt lift	0
60	HMSC	Heading mismatch-steps on case	0
61	HPA	High pressure ammo	0
62	HUR	Hard under rail	0
63	JCS	Jumps cartridge	0
64	JM	Jumps magazine	0
65	JO	Jars off	0
66	LB	Light blow	0
67	MAH	Magazine assembles hard	0
68	MCW	Magazine capacity wrong	0
69	MFA	Misfires (ammo)	0
70	MFOP	Magazine follower out of position	0
71	ML	Magazine loose	0
72	MLH	Magazine loads hard	0
73	MRH	Magazine removes hard	0
74	OH	Opens hard	0
75	OR	Over-rides	0
76	PH	Pulls hard	0
77	PSI	Proof stamp illegible	0
78	PSM	Proof stamp missing	0
79	RBOC	Rings and bulges on case	0
80	RDVV	(Action) release doesn't work	0
81	RIC	Rings in chamber	0
82	RIS	Ring in sholder	0
83	RS	Rim srem	0
84	SBC	Stems bottom chambers	0
85	SEE	Stems bbl extension	0
86	SCB	Stock cracked or broken	0
87	SCX	Shell catches	0
88	SHI	Short indent	0
89	SI	Stems incline	0
90	SIC	Stems in chamber	0
91	SL	shaves lead	0
92	SLC	Stems left side of chamber	0
93	SMOC	Stretch marks on case	0
94	SOR	Stem over-ride	0
95	SP	Stems port	0
96	SR	Shoulder rough	0
97	SRC	Stems right side of chamber	0
98	SRIC	Specific rings in chamber	0
99	SSOC	Surface scratches on case	0
100	STC	Stems top chamber	0
101	SWE	Safety switch works too easily	0
102	SWH	Safety switch works too hard	0
103	SWW	Safety Switch won't work	0
104	TD	Tips down	0
105	TU	Tips up	0
106	TWP	Trigger won't pull	0
107	TWR	Trigger won't retract	0
108	UNCN-T	Uncoded	0
109	XH	Extracts hard	0
110			0
111	HI	High	0
112	LO	Low	0

	A	B	C
113	LEFT	Left	0
114	RIGHT	Right	0
115	DG	Doesn't Group	0
116	FSST	Front sight tipped	0
117	RSTT	Rear sight tipped	0
118	RSBR	Rear sight base raised	0
119	FSTR	Front sight raised	0
120	FSTL	Front sight loose	0
121	RSTL	Rear sight loose	0
122	MGPT-G	Missing parts at target	0
123	UNCN-G	Uncoded nonconformity at target	0
124			0
125	AI-P	Assembly incomplete at proof	0
126	BBB	Barrel bracket cracked or broken at proof	0
127	BC-P	Blows cases at proof	0
128	BEB-P	Barrel extension broken at proof	0
129	BLP-P	Blanked primer at proof	0
130	BLSO-P	Barrel lug shot off at proof	0
131	BP-P	Blown primer at proof	0
132	BS-P	Barrel split at proof	0
133	DBF-P	Damaged Bolt Face	0
134	DLOS-P	Doesn't lock over shells at proof	0
135	ESBBP-P	Ejector sticks back -Blown Primer cup	0
136	ESBEC-P	Ejector sticks back - Ejector Crescent	0
137	FCB-P	Fore-end cracked at proof	0
138	FESO-P	Fore-end shot off at proof	0
139	FF-P	Fails to fire at proof	0
140	GCSO-P	Gas cylinder shot off at proof	0
141	MSI-P	Magnaflux stamp illegible on bbl	0
142	MSM-P	Magnaflux stamp missing on bbl	0
143	PP-P	Pierced primer at proof	0
144	SCB-P	Stock cracked or broken at proof	0

	A	B	C
1	AB	Action binds	0
2	BABS	Bulge at body shoulder	0
3	BAC	Burr at chamber	0
4	BBMA	BBL-to-bolt misalignment	0
5	BB	Bolt binds/catches	0
6	BCOAB	Bolt catches on anti-bind	0
7	BCOBS	Bolt catches on bolt stop	0
8	BCOF	Bolt catches on follower	0
9	BC	Blows cases	0
10	BHR	Bolt hits receiver	0
11	BHS	Bolt plug hits safety switch	0
12	BLOP	Bar lock or disconnecter out of position	0
13	BLSO	Barrel lug shot off	0
14	BPO	Bolt pulls out	0
15	BSSM	Bolt stems shell in magazine	0
16	BWCD	Bolt won't cam down	0
17	BWCFM	Bolt won't close over full magazine	0
18	CD	Case dented	0
19	CH	Closes hard	0
20	CLM	Can't load magazine	0
21	CO	Cut-off	0
22	CR	Cuts rim	0
23	CS	Cases swell	0
24	CTOG	Chamber torn or gouged	0
25	CTP	Creepy trigger pull	0
26	CWSB	Cams wrong side of action bar	0
27	DBB	Doesn't blow back	0
28	DCS	Double click in safety switch	0
29	DCT	Double click in trigger	0
30	DCU	Doesn't close-up	0
31	DE	Doesn't eject	0
32	DEL	Doesn't eject live round	0
33	DFB	Doesn't feed back	0
34	DFU	Doesn't feed up	0
35	DLO	Doesn't lock open (after last shell)	0
36	DLU	Doesn't lock-up	0
37	DS	Dead safe	0
38	DX	Doesn't extract	0
39	DXL	Doesn't extract live round	0
40	EDS	Extractor drops shell	0
41	ESB	Ejector sticks back	0
42	ESCR	Empty shell catches receiver	0
43	ESS	Extractor stems shell	0
44	FA	Fires automatically	0
45	FB	Follower binds	0
46	FC	Fails to connect	0
47	FCB	Fore-end cracked or broken	0
48	FD	Follows-down	0
49	FF	Fails to fire	0
50	FFP	Flat firing pin	0
51	FOS	Fires on safe	0
52	FPHB	Firing pin hits bbl	0
53	FPHI	Firing pin hits inside rim	0
54	FPO	Floor plate opens	0
55	FPOH	Floor plate opens hard	0
56	FSR	Fires when safe is released	0



	A	B	C
57	FT	Follower tips	0
58	GCSO	Gas cyl shot off	0
59	HBL	Heavy bolt lift	0
60	HMSC	Heading mismatch-steps on case	0
61	HPA	High pressure ammo	0
62	HUR	Hard under rail	0
63	JCS	Jumps cartridge	0
64	JM	Jumps magazine	0
65	JO	Jars off	0
66	LB	Light blow	0
67	MAH	Magazine assembles hard	0
68	MCW	Magazine capacity wrong	0
69	MFA	Misfires (ammo)	0
70	MFOP	Magazine follower out of position	0
71	ML	Magazine loose	0
72	MLH	Magazine loads hard	0
73	MRH	Magazine removes hard	0
74	OH	Opens hard	0
75	OR	Over-rides	0
76	PH	Pulls hard	0
77	PSI	Proof stamp illegible	0
78	PSM	Proof stamp missing	0
79	RBOC	Rings and bulges on case	0
80	RDVV	(Action) release doesn't work	0
81	RIC	Rings in chamber	0
82	RIS	Ring in sholder	0
83	RS	Rim srem	0
84	SBC	Stems bottom chambers	0
85	SEE	Stems bbl extension	0
86	SCB	Stock cracked or broken	0
87	SCX	Shell catches	0
88	SHI	Short indent	0
89	SI	Stems incline	0
90	SIC	Stems in chamber	0
91	SL	shaves lead	0
92	SLC	Stems left side of chamber	0
93	SMOC	Stretch marks on case	0
94	SOR	Stem over-ride	0
95	SP	Stems port	0
96	SR	Shoulder rough	0
97	SRC	Stems right side of chamber	0
98	SRIC	Specific rings in chamber	0
99	SSOC	Surface scratches on case	0
100	STC	Stems top chamber	0
101	SWE	Safety switch works too easily	0
102	SWH	Safety switch works too hard	0
103	SWW	Safety Switch won't work	0
104	TD	Tips down	0
105	TU	Tips up	0
106	TWP	Trigger won't pull	0
107	TWR	Trigger won't retract	0
108	UNCN-T	Uncoded	0
109	XH	Extracts hard	0
110			0
111	HI	High	0
112	LO	Low	0

	A	B	C
113	LEFT	Left	0
114	RIGHT	Right	0
115	DG	Doesn't Group	0
116	FSST	Front sight tipped	0
117	RSTT	Rear sight tipped	0
118	RSBR	Rear sight base raised	0
119	FSTR	Front sight raised	0
120	FSTL	Front sight loose	0
121	RSTL	Rear sight loose	0
122	MGPT-G	Missing parts at target	0
123	UNCN-G	Uncoded nonconformity at target	0
124			0
125	AI-P	Assembly incomplete at proof	0
126	BBB	Barrel bracket cracked or broken at proof	0
127	BC-P	Blows cases at proof	0
128	BEB-P	Barrel extension broken at proof	0
129	BLP-P	Blanked primer at proof	0
130	BLSO-P	Barrel lug shot off at proof	0
131	BP-P	Blown primer at proof	0
132	BS-P	Barrel split at proof	0
133	DBF-P	Damaged Bolt Face	0
134	DLOS-P	Doesn't lock over shells at proof	0
135	ESBBP-P	Ejector sticks back - Blown Primer cup	0
136	ESBEC-P	Ejector sticks back - Ejector Crescent	0
137	FCB-P	Fore-end cracked at proof	0
138	FESO-P	Fore-end shot off at proof	0
139	FF-P	Fails to fire at proof	0
140	GCSO-P	Gas cylinder shot off at proof	0
141	MSI-P	Magnaflux stamp illegible on bbl	0
142	MSM-P	Magnaflux stamp missing on bbl	0
143	PP-P	Pierced primer at proof	0
144	SCB-P	Stock cracked or broken at proof	0

	A	B	C
1	AB	Action binds	0
2	BABS	Bulge at body shoulder	0
3	BAC	Burr at chamber	0
4	BBMA	BBL-to-bolt misalignment	0
5	BB	Bolt binds/catches	0
6	BCOAB	Bolt catches on anti-bind	0
7	BCOBS	Bolt catches on bolt stop	0
8	BCOF	Bolt catches on follower	0
9	BC	Blows cases	0
10	BHR	Bolt hits receiver	0
11	BHS	Bolt plug hits safety switch	0
12	BLOP	Bar lock or disconnecter out of position	0
13	BLSO	Barrel lug shot off	0
14	BPO	Bolt pulls out	0
15	BSSM	Bolt stems shell in magazine	0
16	BWCD	Bolt won't cam down	0
17	BWCFM	Bolt won't close over full magazine	0
18	CD	Case dented	0
19	CH	Closes hard	0
20	CLM	Can't load magazine	0
21	CO	Cut-off	0
22	CR	Cuts rim	0
23	CS	Cases swell	0
24	CTOG	Chamber torn or gouged	0
25	CTP	Creepy trigger pull	0
26	CWSB	Cams wrong side of action bar	0
27	DBB	Doesn't blow back	0
28	DCS	Double click in safety switch	0
29	DCT	Double click in trigger	0
30	DCU	Doesn't close-up	0
31	DE	Doesn't eject	0
32	DEL	Doesn't eject live round	0
33	DFB	Doesn't feed back	0
34	DFU	Doesn't feed up	0
35	DLO	Doesn't lock open (after last shell)	0
36	DLU	Doesn't lock-up	0
37	DS	Dead safe	0
38	DX	Doesn't extract	0
39	DXL	Doesn't extract live round	0
40	EDS	Extractor drops shell	0
41	ESB	Ejector sticks back	0
42	ESCR	Empty shell catches receiver	0
43	ESS	Extractor stems shell	0
44	FA	Fires automatically	0
45	FB	Follower binds	0
46	FC	Fails to connect	0
47	FCB	Fore-end cracked or broken	0
48	FD	Follows-down	0
49	FF	Fails to fire	0
50	FFP	Flat firing pin	0
51	FOS	Fires on safe	0
52	FPHB	Firing pin hits bbl	0
53	FPHI	Firing pin hits inside rim	0
54	FPO	Floor plate opens	0
55	FPOH	Floor plate opens hard	0
56	FSR	Fires when safe is released	0

	A	B	C
57	FT	Follower tips	0
58	GCSO	Gas cyl shot off	0
59	HBL	Heavy bolt lift	0
60	HMSC	Heading mismatch-steps on case	0
61	HPA	High pressure ammo	0
62	HUR	Hard under rail	0
63	JCS	Jumps cartridge	0
64	JM	Jumps magazine	0
65	JO	Jars off	0
66	LB	Light blow	0
67	MAH	Magazine assembles hard	0
68	MCW	Magazine capacity wrong	0
69	MFA	Misfires (ammo)	0
70	MFOP	Magazine follower out of position	0
71	ML	Magazine loose	0
72	MLH	Magazine loads hard	0
73	MRH	Magazine removes hard	0
74	OH	Opens hard	0
75	OR	Over-rides	0
76	PH	Pulls hard	0
77	PSI	Proof stamp illegible	0
78	PSM	Proof stamp missing	0
79	RBOC	Rings and bulges on case	0
80	RDVV	(Action) release doesn't work	0
81	RIC	Rings in chamber	0
82	RIS	Ring in sholder	0
83	RS	Rim srem	0
84	SBC	Stems bottom chambers	0
85	SEE	Stems bbl extension	0
86	SCB	Stock cracked or broken	0
87	SCX	Shell catches	0
88	SHI	Short indent	0
89	SI	Stems incline	0
90	SIC	Stems in chamber	0
91	SL	shaves lead	0
92	SLC	Stems left side of chamber	0
93	SMOC	Stretch marks on case	0
94	SOR	Stem over-ride	0
95	SP	Stems port	0
96	SR	Shoulder rough	0
97	SRC	Stems right side of chamber	0
98	SRIC	Specific rings in chamber	0
99	SSOC	Surface scratches on case	0
100	STC	Stems top chamber	0
101	SWE	Safety switch works too easily	0
102	SWH	Safety switch works too hard	0
103	SWW	Safety Switch won't work	0
104	TD	Tips down	0
105	TU	Tips up	0
106	TWP	Trigger won't pull	0
107	TWR	Trigger won't retract	0
108	UNCN-T	Uncoded	0
109	XH	Extracts hard	0
110			0
111	HI	High	0
112	LO	Low	0

	A	B	C
113	LEFT	Left	0
114	RIGHT	Right	0
115	DG	Doesn't Group	0
116	FSST	Front sight tipped	0
117	RSTT	Rear sight tipped	0
118	RSBR	Rear sight base raised	0
119	FSTR	Front sight raised	0
120	FSTL	Front sight loose	0
121	RSTL	Rear sight loose	0
122	MGPT-G	Missing parts at target	0
123	UNCN-G	Uncoded nonconformity at target	0
124			0
125	AI-P	Assembly incomplete at proof	0
126	BBB	Barrel bracket cracked or broken at proof	0
127	BC-P	Blows cases at proof	0
128	BEB-P	Barrel extension broken at proof	0
129	BLP-P	Blanked primer at proof	0
130	BLSO-P	Barrel lug shot off at proof	0
131	BP-P	Blown primer at proof	0
132	BS-P	Barrel split at proof	0
133	DBF-P	Damaged Bolt Face	0
134	DLOS-P	Doesn't lock over shells at proof	0
135	ESBBP-P	Ejector sticks back - Blown Primer cup	0
136	ESBEC-P	Ejector sticks back - Ejector Crescent	0
137	FCB-P	Fore-end cracked at proof	0
138	FESO-P	Fore-end shot off at proof	0
139	FF-P	Fails to fire at proof	0
140	GCSO-P	Gas cylinder shot off at proof	0
141	MSI-P	Magnaflux stamp illegible on bbl	0
142	MSM-P	Magnaflux stamp missing on bbl	0
143	PP-P	Pierced primer at proof	0
144	SCB-P	Stock cracked or broken at proof	0

# Centerfire

	A	B	D	E	F	G	H	I	J	P	Q
1	<b>Summary</b>	<b>Total Tested</b>	<b>12266</b>								
2		<b>Total Rejected:</b>	<b>408</b>								
3		<b>Overall Reject Rate:</b>	<b>3.33</b>								<b>Grand totals</b>
5		<b>Shot:</b>	5665	893	2327	853	826	793	158		11815
6	<b>Proof</b>	<b>Rejected:</b>	35	0	15	5	5	5	0	0	65
7		<b>Percent:</b>	0.6	0.0	0.6	0.6	0.6	0.6	0.0	0.0	0.6
9		<b>Shot:</b>	5827	887	2572	1124	870	728	154	104	12266
10	<b>Test</b>	<b>Rejected:</b>	162	20	55	29	63	4	5	2	340
11		<b>Percent:</b>	2.8	2.3	2.1	2.6	7.2	0.5	3.2	1.9	2.8
13		<b>Shot:</b>	483	89	173	81	70	696	16		1808
14	<b>Target</b>	<b>Rejected:</b>	3	0	0	0	0	0	0	0	3
15		<b>Percent:</b>	0.6	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.2
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>	<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>Rimfire</b>	<b>totals</b>
18											
19	AB	Action binds									
20	BABS	Bulge at body shoulder									
21	BAC	Burr at chamber									
22	BBMA	BBL-to-bolt misalignment									
23	BB	Bolt binds/catches	14		8	2	3	2	1		30
24	BCOAB	Bolt catches on anti-bind									
25	BCOBS	Bolt catches on bolt stop									
26	BCOF	Bolt catches on follower			1						1
27	BC	Blows cases									
28	BHR	Bolt hits receiver									
29	BHS	Bolt plug hits safety switch									
30	BLOP	Bar lock or disconnecter out of position									
31	BLSO	Barrel lug shot off									
32	BPO	Bolt pulls out			1						1
33	BSSM	Bolt stems shell in magazine									
34	BWCD	Bolt won't cam down			1		1				2
35	BWCFM	Bolt won't close over full magazine	4			2					6
36	CD	Case dented									
37	CH	Closes hard	4	1	4		5		1		15
38	CLM	Can't load magazine	10			2	8				20
39	CO	Cut-off									
40	CR	Cuts rim									

# Centerfire

	A	B	D	E	F	G	H	I	J	P	Q
17	CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7	Rimfire	totals
41	CS	Cases swell									
42	CTOG	Chamber torn or gouged									
43	CTP	Creepy trigger pull									
44	CWSB	Cams wrong side of action bar									
45	DBB	Doesn't blow back									
46	DCS	Double click in safety switch									
47	DCT	Double click in trigger									
48	DCU	Doesn't close-up									
49	DE	Doesn't eject	4	4		3	2				13
50	DEL	Doesn't eject live round									
51	DFB	Doesn't feed back									
52	DFU	Doesn't feed up									
53	DLO	Doesn't lock open (after last shell)									
54	DLU	Doesn't lock-up								1	1
55	DS	Dead safe					1				1
56	DX	Doesn't extract	35	6	13	6	27		1		98
57	DXL	Doesn't extract live round									
58	EDS	Extractor drops shell	21	4	4	5	6				40
59	ESB	Ejector sticks back	2	1	2						5
60	ESCR	Empty shell catches receiver									
61	ESS	Extractor stems shell									
62	FA	Fires automatically									
63	FB	Follower binds									
64	FC	Fails to connect								1	1
65	FCB	Fore-end cracked or broken									
66	FD	Follows-down	1		1						2
67	FF	Fails to fire			1	1					2
68	FFP	Flat firing pin									
69	FOS	Fires on safe									
70	FPHB	Firing pin hits bbl									
71	FPHI	Firing pin hits inside rim									
72	FPO	Floor plate opens	2				2				4
73	FPOH	Floor plate opens hard									

# Centerfire

	A	B	D	E	F	G	H	I	J	P	Q
17	CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7	Rimfire	totals
74	FSR	Fires when safe is released									
75	FT	Follower tips									
76	GCSO	Gas cyl shot off									
77	HBL	Heavy bolt lift	4								4
78	HMSC	Heading mismatch-steps on case									
79	HPA	High pressure ammo									
80	HUR	Hard under rail	6	1			1				8
81	JCS	Jumps cartridge									
82	JM	Jumps magazine	1		1						2
83	JO	Jars off									
84	LB	Light blow									
85	MAH	Magazine assembles hard									
86	MCW	Magazine capacity wrong									
87	MFA	Misfires (ammo)									
88	MFOP	Magazine follower out of position									
89	ML	Magazine loose	14								14
90	MLH	Magazine loads hard									
91	MRH	Magazine removes hard	5								5
92	OH	Opens hard	1			1			1		3
93	OR	Over-rides	3		3	2	6				14
94	PH	Pulls hard									
95	PSI	Proof stamp illegible									
96	PSM	Proof stamp missing									
97	RBOC	Rings and bulges on case									
98	RDW	(Action) release doesn't work		1				2			3
99	RIC	Rings in chamber									
100	RIS	Ring in sholder									
101	RS	Rim srem									
102	SBC	Stems bottom chambers	2		1						3
103	SBE	Stems bbl extension									
104	SCB	Stock cracked or broken									
105	SCX	Shell catches									
106	SHI	Short indent									




# Centerfire

	A	B	D	E	F	G	H	I	J	P	Q
17	CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7	Rimfire	totals
107	SI	Stems incline	2								2
108	SIC	Stems in chamber		1	1				1		3
109	SL	shaves lead									
110	SLC	Stems left side of chamber									
111	SMOC	Stretch marks on case									
112	SOR	Stem over-ride	24	1	7	4	1				37
113	SP	Stems port									
114	SR	Shoulder rough									
115	SRC	Stems right side of chamber									
116	SRIC	Specific rings in chamber									
117	SSOC	Surface scratches on case									
118	STC	Stems top chamber	3		4						7
119	SWE	Safety switch works too easily									
120	SWH	Safety switch works too hard									
121	SWW	Safety Switch won't work									
122	TD	Tips down									
123	TU	Tips up									
124	TWP	Trigger won't pull									
125	TWR	Trigger won't retract									
126	UNCN-T	Uncoded									
127	XH	Extracts hard			2	1					3
128											
129	HI	High									
130	LO	Low									
131	LEFT	Left									
132	RIGHT	Right									
133	DG	Doesn't Group									
134	FSST	Front sight tipped									
135	RSTT	Rear sight tipped									
136	RSBR	Rear sight base raised									
137	FSTR	Front sight raised									
138	FSTL	Front sight loose									
139	RSTL	Rear sight loose									

# Centerfire

	A	B	D	E	F	G	H	I	J	P	Q
17	CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7	Rimfire	totals
140	MGPT-G	Missing parts at target									
141	UNCN-G	Uncoded nonconformity at target	3								3
142											
143	AI-P	Assembly incomplete at proof									
144	BBB	Barrel bracket cracked or broken at proof									
145	BC-P	Blows cases at proof									
146	BEB-P	Barrel extension broken at proof									
147	BLP-P	Blanked primer at proof									
148	BLSO-P	Barrel lug shot off at proof									
149	BP-P	Blown primer at proof									
150	BS-P	Barrel split at proof									
151	DBF-P	Damaged Bolt Face	18		9	3	1	4			35
152	DLOS-P	Doesn't lock over shells at proof									
153	ESBBP-P	Ejector sticks back -Blown Primer cup	1								1
154	ESBEC-P	Ejector sticks back - Ejector Cresent	2		1						3
155	FCB-P	Fore-end cracked at proof									
156	FESO-P	Fore-end shot off at proof									
157	FF-P	Fails to fire at proof	2					1			3
158	GCSO-P	Gas cylinder shot off at proof									
159	MSI-P	Magnaflux stamp illegible on bbl									
160	MSM-P	Magnaflux stamp missing on bbl									
161	PP-P	Pierced primer at proof									
162	SCB-P	Stock cracked or broken at proof									
163	UNCM-P	Uncoded proof malfunctions	12		5	2	4				23

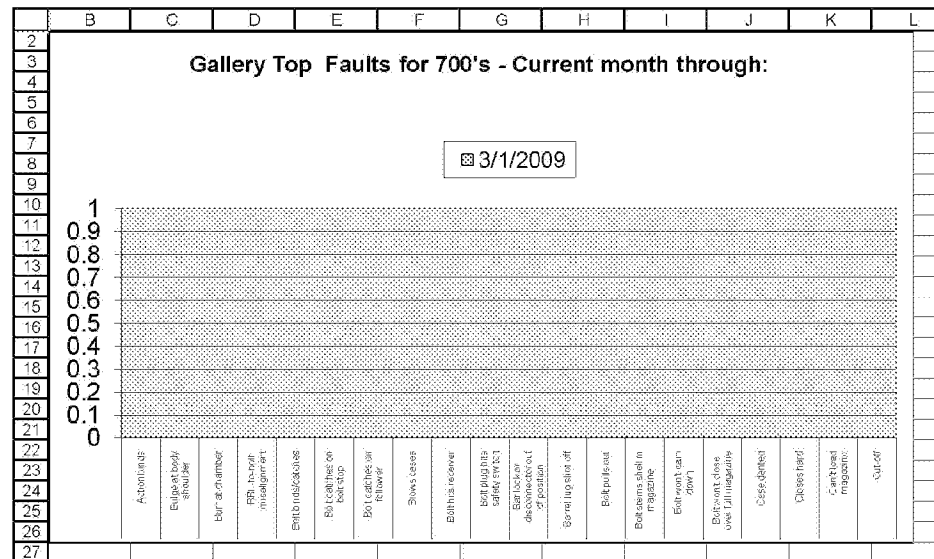

	A	B	C
1	AB	Action binds	0
2	BABS	Bulge at body shoulder	0
3	BAC	Burr at chamber	0
4	BBMA	BBL-to-bolt misalignment	0
5	BB	Bolt binds/catches	0
6	BCOBS	Bolt catches on bolt stop	0
7	BCOF	Bolt catches on follower	0
8	BC	Blows cases	0
9	BHR	Bolt hits receiver	0
10	BHS	Bolt plug hits safety switch	0
11	BLOP	Bar lock or disconnecter out of position	0
12	BLSO	Barrel lug shot off	0
13	BPO	Bolt pulls out	0
14	BSSM	Bolt stems shell in magazine	0
15	BWCD	Bolt won't cam down	0
16	BWCFM	Bolt won't close over full magazine	0
17	CD	Case dented	0
18	CH	Closes hard	0
19	CLM	Can't load magazine	0
20	CO	Cut-off	0
21	CR	Cuts rim	0
22	CS	Cases swell	0
23	CTOG	Chamber torn or gouged	0
24	CTP	Creepy trigger pull	0
25	CWSB	Cams wrong side of action bar	0
26	DBB	Doesn't blow back	0
27	DCS	Double click in safety switch	0
28	DCT	Double click in trigger	0
29	DCU	Doesn't close-up	0
30	DE	Doesn't eject	0
31	DEL	Doesn't eject live round	0
32	DFB	Doesn't feed back	0
33	DFU	Doesn't feed up	0
34	DLO	Doesn't lock open (after last shell)	0
35	DLU	Doesn't lock-up	0
36	DS	Dead safe	0
37	DX	Doesn't extract	0
38	DXL	Doesn't extract live round	0
39	EDS	Extractor drops shell	0
40	ESB	Ejector sticks back	0
41	ESCR	Empty shell catches receiver	0
42	ESS	Extractor stems shell	0
43	FA	Fires automatically	0
44	FB	Follower binds	0
45	FC	Fails to connect	0
46	FCB	Fore-end cracked or broken	0
47	FD	Follows-down	0
48	FF	Fails to fire	0
49	FFP	Flat firing pin	0
50	FOS	Fires on safe	0
51	FPHB	Firing pin hits bbl	0
52	FPHI	Firing pin hits inside rim	0
53	FPO	Floor plate opens	0
54	FPOH	Floor plate opens hard	0
55	FSR	Fires when safe is released	0
56	FT	Follower tips	0

	A	B	C
57	GCSO	Gas cyl shot off	0
58	HBL	Heavy bolt lift	0
59	HMSC	Heading mismatch-steps on case	0
60	HPA	High pressure ammo	0
61	HUR	Hard under rail	0
62	JCS	Jumps cartridge	0
63	JM	Jumps magazine	0
64	JO	Jars off	0
65	LB	Light blow	0
66	MAH	Magazine assembles hard	0
67	MCW	Magazine capacity wrong	0
68	MFA	Misfires (ammo)	0
69	MFOP	Magazine follower out of position	0
70	ML	Magazine loose	0
71	MLH	Magazine loads hard	0
72	MRH	Magazine removes hard	0
73	OH	Opens hard	0
74	OR	Over-rides	0
75	PH	Pulls hard	0
76	PSI	Proof stamp illegible	0
77	PSM	Proof stamp missing	0
78	RBOC	Rings and bulges on case	0
79	RDW	(Action) release doesn't work	0
80	RIC	Rings in chamber	0
81	RIS	Ring in sholder	0
82	RS	Rim srem	0
83	SBC	Stems bottom chambers	0
84	SBE	Stems bbl extension	0
85	SCB	Stock cracked or broken	0
86	SCX	Shell catches	0
87	SHI	Short indent	0
88	SI	Stems incline	0
89	SIC	Stems in chamber	0
90	SL	shaves lead	0
91	SIC	Stems left side of chamber	0
92	SMOC	Stretch marks on case	0
93	SOR	Stem over-ride	0
94	SP	Stems port	0
95	SR	Shoulder rough	0
96	SRC	Stems right side of chamber	0
97	SRIC	Specific rings in chamber	0
98	SSOC	Surface scratches on case	0
99	STC	Stems top chamber	0
100	SWE	Safety switch works too easily	0
101	SWH	Safety switch works too hard	0
102	SWW	Safety Switch won't work	0
103	TD	Tips down	0
104	TU	Tips up	0
105	TWP	Trigger won't pull	0
106	TWR	Trigger won't retract	0
107	UNCN-T	Uncoded	0
108	XH	Extracts hard	0
109			0
110	HI	High	0
111	LO	Low	0
112	LEFT	Left	0

	A	B	C
113	RIGHT	Right	0
114	DG	Doesn't Group	0
115	FSST	Front sight tipped	0
116	RSTT	Rear sight tipped	0
117	RSBR	Rear sight base raised	0
118	FSTR	Front sight raised	0
119	FSTL	Front sight loose	0
120	RSTL	Rear sight loose	0
121	MGPT-G	Missing parts at target	0
122	UNCN-G	Uncoded nonconformity at target	0
123			0
124	AI-P	Assembly incomplete at proof	0
125	BBB	Barrel bracket cracked or broken at proof	0
126	BC-P	Blows cases at proof	0
127	BEB-P	Barrel extension broken at proof	0
128	BLP-P	Blanked primer at proof	0
129	BLSO-P	Barrel lug shot off at proof	0
130	BP-P	Blown primer at proof	0
131	BS-P	Barrel split at proof	0
132	DBF-P	Damaged Bolt Face	0
133	DLOS-P	Doesn't lock over shells at proof	0
134	ESBBP-P	Ejector sticks back -Blown Primer cup	0
135	ESBEC-P	Ejector sticks back - Ejector Crescent	0
136	FCB-P	Fore-end cracked at proof	0
137	FESO-P	Fore-end shot off at proof	0
138	FF-P	Fails to fire at proof	0
139	GCSO-P	Gas cylinder shot off at proof	0
140	MSI-P	Magnaflux stamp illegible on bbl	0
141	MSM-P	Magnaflux stamp missing on bbl	0
142	PP-P	Pierced primer at proof	0
143	SCB-P	Stock cracked or broken at proof	0
144	BCOAB	Bolt catches on anti-bind	
145	BCOAB	Bolt catches on anti-bind	
146			
147			
148			
149			
150	3/1/2009		

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>597</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>12</b>													
3		<b>Overall Reject Rate:</b>		<b>2.01</b>													<i>totals</i>
5		Shot:		194	40	98	123	96	50								601
6		Rejected:		0	0	0	1	0	0	0	0	0	0	0	0	0	1
7		Percent:		0.0	0.0	0.0	0.8	0.0	0.0								0.2
9		Shot:		187	39	105	104	112	50								597
10		Rejected:		1	0	5	0	5	0	0	0	0	0	0	0	0	11
11		Percent:		0.5	0.0	4.8	0.0	4.5	0.0								1.8
13		Shot:		17	3	11	11	9	50								101
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0	0.0	0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches				1											1
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower				1											1
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard				1											1
38	CLM	Can't load magazine						5									5
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		1		1											2
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride				1											1
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face					1										1
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>651</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>14</b>													
3		<b>Overall Reject Rate:</b>		<b>2.15</b>													<i>totals</i>
5		Shot:		183	200	89	75	28	77								652
6		Rejected:		2	0	3	0	0	1	0	0	0	0	0	0	0	6
7		Percent:		1.1	0.0	3.4	0.0	0.0	1.3								0.9
9		Shot:		161	211	104	75	33	67								851
10		Rejected:		2	0	2	3	0	1	0	0	0	0	0	0	0	8
11		Percent:		1.2	0.0	1.9	4.0	0.0	1.5								1.2
13		Shot:		14	22	6	2	3	66								113
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0	0.0	0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches							1								1
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		1													1
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		1			1										2
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire					1										1
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides				1											1
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber				1											1
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard					1										1
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		1		2			1								4
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent				1											1
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof		1													1
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>562</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>37</b>													
3		<b>Overall Reject Rate:</b>		<b>6.58</b>													<i>totals</i>
5		Shot:		376		28	29	52	42								527
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:		0.0		0.0	0.0	0.0	0.0								0.0
9		Shot:		376	11	45	44	71								15	542
10		Rejected:		20	2	2	3	9	0	0	0	0	0	0	0	1	37
11		Percent:		5.3	18.2	4.4	6.8	12.7								6.7	6.6
13		Shot:		20	1	5	5	7									38
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0	0.0									0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		1				2									3
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine		3													3
36	CD	Case dented															
37	CH	Closes hard			1	1											2
38	CLM	Can't load magazine						1									1
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject					3										3
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up														1	1
55	DS	Dead safe															
56	DX	Doesn't extract		3													3
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		1													1
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down		1													1
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail			1												1
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides						6									6
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride		11		1											12
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

**Cell:** D66

**Comment:** lingalry;  
308

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>645</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>19</b>													
3		<b>Overall Reject Rate:</b>		<b>2.95</b>													<i>totals</i>
5		Shot:		370		67	51	47	48	24							607
6		Rejected:		5	0	0	0	0	0	0	0	0	0	0	0	0	5
7		Percent:		1.4		0.0	0.0	0.0	0.0	0.0							0.8
9		Shot:		365		136	51	21	29	24						19	845
10		Rejected:		4	0	1	4	2	1	1	0	0	0	0	0	1	14
11		Percent:		1.1		0.7	7.8	9.5	3.4	4.2						5.3	2.2
13		Shot:		38		16	6	2	28	2							92
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0		0.0	0.0	0.0	0.0	0.0							0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches				1		1		1							3
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine						1									1
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		2													2
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell					1										1
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect														1	1
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens		1													1
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides					2										2
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work							1								1
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers		1													1
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride					1										1
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions		5													5

Cell: D163

Comment: illegal:  
broken triggers

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>679</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>14</b>													
3		<b>Overall Reject Rate:</b>		<b>2.06</b>													<i>totals</i>
5		Shot:		290	80	217	44										631
6		Rejected:		2	0	3	0	0	0	0	0	0	0	0	0	0	\$
7		Percent:		0.7	0.0	1.4	0.0										0.8
9		Shot:		288	80	232	69		10								879
10		Rejected:		3	3	1	2	0	0	0	0	0	0	0	0	0	\$
11		Percent:		1.0	3.8	0.4	2.9		0.0								1.3
13		Shot:		23	7	17	3		10								60
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0		0.0								0.6
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine					2										2
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject		1													1
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell			1												1
59	ESB	Ejector sticks back		2													2
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire				1											1
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber			1												1
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride			1												1
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		1		3											4
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent		1													1
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>274</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>9</b>													
3		<b>Overall Reject Rate:</b>		<b>3.28</b>													<i>totals</i>
5		Shot:		23			14	25									62
6		Rejected:	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:		0.0			0.0	0.0									0.0
9		Shot:	67	52		36	68	51									274
10		Rejected:	0	5	0	0	4	0	0	0	0	0	0	0	0	0	9
11		Percent:	0.0	9.6		0.0	5.9	0.0									3.3
13		Shot:	3				2	25									30
14		Rejected:	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:	0.0				0.0	0.0									0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard						4									4
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject			4												\$
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work			1												1
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>683</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>7</b>													
3		<b>Overall Reject Rate:</b>		<b>1.02</b>													<i>totals</i>
5		Shot:		100		269	21		79								869
6		Rejected:		1	0	1	0	0	3	0	0	0	0	0	0	0	5
7		Percent:		1.0		0.4	0.0		3.8								1.1
9		Shot:		177		253	148	7	98								883
10		Rejected:		0	0	1	0	0	1	0	0	0	0	0	0	0	2
11		Percent:		0.0		0.4	0.0	0.0	1.0								0.3
13		Shot:		14		16			55								85
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0		0.0			0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work							1								1
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber				1											1
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		1		1			3								3
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>715</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>28</b>													
3		<b>Overall Reject Rate:</b>		<b>3.92</b>													<i>totals</i>
5		Shot:		360	109	31	104										604
6		Rejected:		0	0	0	3	0	0	0	0	0	0	0	0	0	3
7		Percent:		0.0	0.0	0.0	2.9										0.5
9		Shot:		361	118	92	142	2									715
10		Rejected:		16	4	1	4	0	0	0	0	0	0	0	0	0	26
11		Percent:		4.4	3.4	1.1	2.8	0.0									3.5
13		Shot:		36	15	3	15										69
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0										0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		1			1										2
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard				1											1
38	CLM	Can't load magazine		1													1
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		6			3										\$
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		6	3												\$
59	ESB	Ejector sticks back			1												\$
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard		1													1
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride		1													1
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face					2										2
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions					1										1



**Cell:** G163

**Comment:** illegal;  
safety arm broke off

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>618</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>10</b>													
3		<b>Overall Reject Rate:</b>		<b>1.62</b>													<i>totals</i>
5		Shot:		147	57	280	60		20	2							566
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:		0.0	0.0	0.0	0.0	0.0	0.0	0.0							0.0
9		Shot:		174	57	293	74		20								518
10		Rejected:		4	0	5	1	0	0	0	0	0	0	0	0	0	10
11		Percent:		2.3	0.0	1.7	1.4		0.0								1.8
13		Shot:		18	7	17	8		20								70
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0		0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		1													1
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline		1													1
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride		2		1	1										4
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber				3											3
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard				1											1
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>591</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>14</b>													
3		<b>Overall Reject Rate:</b>		<b>2.37</b>													<i>totals</i>
5		Shot:		339		268			58								665
6		Rejected:		2	0	0	0	0	0	0	0	0	0	0	0	0	2
7		Percent:		0.6		0.0			0.0								0.3
9		Shot:		249		255	29		58								591
10		Rejected:		3	0	4	5	0	0	0	0	0	0	0	0	0	12
11		Percent:		1.2		1.6	17.2		0.0								2.0
13		Shot:		22		14	2		58								96
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0		0.0	0.0		0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		3													3
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard				1											1
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell					3										3
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down				1											1
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard					1										1
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride				2	1										3
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		1													1
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions		1													1

Cell: D163

Comment: illegal:  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>641</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>27</b>													
3		<b>Overall Reject Rate:</b>		<b>4.21</b>													<i>totals</i>
5		Shot:		422		166	22	3	9	2							624
6		Rejected:		5	0	5	0	0	0	0	0	0	0	0	0	0	10
7		Percent:		1.2		3.0	0.0	0.0	0.0	0.0							1.6
9		Shot:		405		160	44	23	9								641
10		Rejected:		13	0	4	0	0	0	0	0	0	0	0	0	0	17
11		Percent:		3.2		2.5	0.0	0.0	0.0								2.7
13		Shot:		26		9	5	2	9								51
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0		0.0	0.0	0.0	0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		4		3											7
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine		1													1
36	CD	Case dented															
37	CH	Closes hard		1													1
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		3													3
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail		2													2
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline		1													1
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride		1		1											2
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		1													1
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent		1													1
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof		1													1
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions		2		5											7

**Cell:** F126  
**Comment:** ilngalry:

**Cell:** D163  
**Comment:** ilngalry:  
broken trigger

**Cell:** F163  
**Comment:** ilngalry:  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested:</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>685</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>16</b>													
3		<b>Overall Reject Rate:</b>		<b>2.34</b>													<i>totals</i>
5		Shot:		324	162	37	14	20	78								635
6		Rejected:		9	0	0	0	0	0	0	0	0	0	0	0	0	9
7		Percent:		2.8	0.0	0.0	0.0	0.0	0.0								1.4
9		Shot:		325	139	37	14	20	78							22	845
10		Rejected:		6	1	0	0	0	0	0	0	0	0	0	0	0	7
11		Percent:		1.8	0.5	0.0	0.0	0.0	0.0						0.0		1.2
13		Shot:		28	21	4		2	78								133
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0		0.0	0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		1													1
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard		1													1
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject		1													1
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		1	1												2
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail		2													2
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		5													5
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions		4													4

Cell: D163

Comment: illegal:  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>561</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>20</b>													
3		<b>Overall Reject Rate:</b>		<b>3.57</b>													<i>totals</i>
5		Shot:		352		110	10	4	53								529
6		Rejected:		1	0	3	0	0	0	0	0	0	0	0	0	0	4
7		Percent:		0.3		2.7	0.0	0.0	0.0								0.8
9		Shot:		388		104	16		53								561
10		Rejected:		4	0	9	0	0	0	0	0	0	0	0	0	0	13
11		Percent:		1.0		8.7	0.0		0.0								2.3
13		Shot:		24		11	2		53								90
14		Rejected:		3	0	0	0	0	0	0	0	0	0	0	0	0	3
15		Percent:		12.5		0.0	0.0		0.0								3.3
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches				1											1
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out				1											1
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard		1													1
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		1		4											5
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell				2											2
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPHB	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens		1													1
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail		1													1
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides				1											1
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target		3													3
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		1		3											4
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															



Cell: D141

Comment: illegal:  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>440</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>10</b>													
3		<b>Overall Reject Rate:</b>		<b>2.27</b>													<i>totals</i>
5		Shot:		253				87	36								376
6		Rejected:		0	0	0	0	3	0	0	0	0	0	0	0	0	3
7		Percent:		0.0				3.4	0.0								0.8
9		Shot:		285		25		84	28							13	440
10		Rejected:		5	0	0	0	2	0	0	0	0	0	0	0	0	7
11		Percent:		1.8		0.0		2.4	0.0						0.0		1.8
13		Shot:		5		3		9	28								45
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0		0.0		0.0	0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down						1									1
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe						1									1
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		3													3
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine		1													1
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides		1													1
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions						3									3

Cell: H163

Comment: illegal:  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>520</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>33</b>													
3		<b>Overall Reject Rate:</b>		<b>6.35</b>													<i>totals</i>
5		Shot:		342		97	20	4	91								554
6		Rejected:		0	0	0	1	0	0	0	0	0	0	0	0	0	1
7		Percent:		0.0		0.0	5.0	0.0	0.0								0.2
9		Shot:		323		111			74							12	520
10		Rejected:		21	0	9	2	0	0	0	0	0	0	0	0	0	32
11		Percent:		6.5		8.1			0.0							0.0	6.2
13		Shot:		29		5			74								108
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0		0.0			0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down				1											1
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine		1													1
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject		1													1
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		9		4	2										15
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		8		1											8
59	ESB	Ejector sticks back				1											1
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides		2													2
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers				1											1
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard				1											1
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions					1										1

Cell: G163

Comment: illegal:  
broken safe arm

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>669</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>25</b>													
3		<b>Overall Reject Rate:</b>		<b>3.74</b>													<i>totals</i>
5		Shot:		350		105	11	206									672
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:		0.0		0.0	0.0	0.0									0.0
9		Shot:		359		103	11	196									669
10		Rejected:		4	0	1	0	20	0	0	0	0	0	0	0	0	25
11		Percent:		1.1		1.0	0.0	10.2									3.7
13		Shot:		39		8		9									56
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0		0.0		0.0									0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches			1												1
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard		1				1									2
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract						14									14
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell						3									3
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens						2									2
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift		1													1
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers		1													1
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride		1													1
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		<i>Shot:</i>															
6		<b>Proof</b>	<i>Rejected:</i>	0	0	0	0	0	0	0	0	0	0	0	0	0	0
7			<i>Percent:</i>														
9		<i>Shot:</i>															
10		<b>Test</b>	<i>Rejected:</i>	0	0	0	0	0	0	0	0	0	0	0	0	0	0
11			<i>Percent:</i>														
13		<i>Shot:</i>															
14		<b>Target</b>	<i>Rejected:</i>	0	0	0	0	0	0	0	0	0	0	0	0	0	0
15			<i>Percent:</i>														
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>434</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>12</b>													
3		<b>Overall Reject Rate:</b>		<b>2.76</b>													<i>totals</i>
5		Shot:		238	92		30	77	52								439
6		Rejected:		0	0	0	0	1	0	0	0	0	0	0	0	0	1
7		Percent:		0.0	0.0		0.0	1.3	0.0								0.2
9		Shot:		297			45	92									434
10		Rejected:		0	0	0	0	11	0	0	0	0	0	0	0	0	11
11		Percent:		0.0			0.0	12.0									2.5
13		Shot:		28			3	9									40
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0			0.0	0.0									0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract						11									11
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions						1									1

Cell: H163

Comment: illegal:  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>686</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>33</b>													
3		<b>Overall Reject Rate:</b>		<b>4.81</b>													<i>totals</i>
5		Shot:		405	16	18	97	73	28								639
6		Rejected:		4	0	0	0	1	1	0	0	0	0	0	0	0	6
7		Percent:		1.0	0.0	0.0	0.0	1.4	3.6								8.9
9		Shot:		404	18	79	85	26	56							13	886
10		Rejected:		22	0	1	2	2	0	0	0	0	0	0	0	0	27
11		Percent:		5.4	0.0	1.3	2.4	7.7	0.0							0.0	3.0
13		Shot:		38	2	8	9	3	96								156
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0	0.0	0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches					1										1
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		3			1										4
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		1				1									2
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift		1													1
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail		1													1
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose		12													12

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard		4													3
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride				1		1									2
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		4				1									3
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof							1								1
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															



**Cell:** D89

**Comment:** illegalry:

11- 338 lapua- box fell out

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>541</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>21</b>													
3		<b>Overall Reject Rate:</b>		<b>3.88</b>													<i>totals</i>
5		Shot:		190	49	129	84	24	19	37							532
6		Rejected:		3	0	0	0	0	0	0	0	0	0	0	0	0	3
7		Percent:		1.6	0.0	0.0	0.0	0.0	0.0	0.0							0.6
9		Shot:		187	49	146	79	24	19	37							541
10		Rejected:		5	0	9	2	1	0	1	0	0	0	0	0	0	18
11		Percent:		2.7	0.0	6.2	2.5	4.2	0.0	2.7							3.3
13		Shot:		19	6	15	8	4	19	4							75
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0	0.0	0.0	0.0							0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches				1											1
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard								1							1
38	CLM	Can't load magazine					2										2
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cam wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject		1													1
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		3		4											7
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		1		1		1									3
59	ESB	Ejector sticks back				1											1
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine				1											1
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides				1											1
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		2													2
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup		1													1
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>606</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>26</b>													
3		<b>Overall Reject Rate:</b>		<b>4.29</b>													<i>totals</i>
5		Shot:		171	40	218	58	73		52							612
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:		0.0	0.0	0.0	0.0	0.0		0.0							0.0
9		Shot:		191	40	218	58	73		26							606
10		Rejected:		17	0	0	1	7	0	1	0	0	0	0	0	0	26
11		Percent:		8.9	0.0	0.0	1.7	9.6		3.8							4.3
13		Shot:		18	5	2	2	7		3							37
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0	0.0		0.0							0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		1													1
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine		8				1									9
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject						2									2
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		1				2									3
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell						1									1
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail						1									1
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose		2													2

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard		1													1
92	OH	Opens hard								1							1
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride		4			1										5
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>468</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>21</b>													
3		<b>Overall Reject Rate:</b>		<b>4.49</b>													<i>totals</i>
5		Shot:		259	23	100		18	28	41							369
6		Rejected:		1	0	0	0	0	0	0	0	0	0	0	0	0	1
7		Percent:		0.4	0.0	0.0		0.0	0.0	0.0							0.2
9		Shot:		256	23	74		18	28	67							488
10		Rejected:		12	5	0	0	0	1	2	0	0	0	0	0	0	20
11		Percent:		4.7	21.7	0.0		0.0	3.6	3.0							4.3
13		Shot:		24		3		2	27	7							63
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0		0.0		0.0	0.0	0.0							0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		3					1								4
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract			5					1							6
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift		2													3
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber								1							1
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride		4													4
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber		3													3
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		1													1
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		<i>Shot:</i>															
6		<b>Proof</b>	<i>Rejected:</i>	0	0	0	0	0	0	0	0	0	0	0	0	0	0
7			<i>Percent:</i>														
9		<i>Shot:</i>															
10		<b>Test</b>	<i>Rejected:</i>	0	0	0	0	0	0	0	0	0	0	0	0	0	0
11			<i>Percent:</i>														
13		<i>Shot:</i>															
14		<b>Target</b>	<i>Rejected:</i>	0	0	0	0	0	0	0	0	0	0	0	0	0	0
15			<i>Percent:</i>														
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															




	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															


	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															


	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

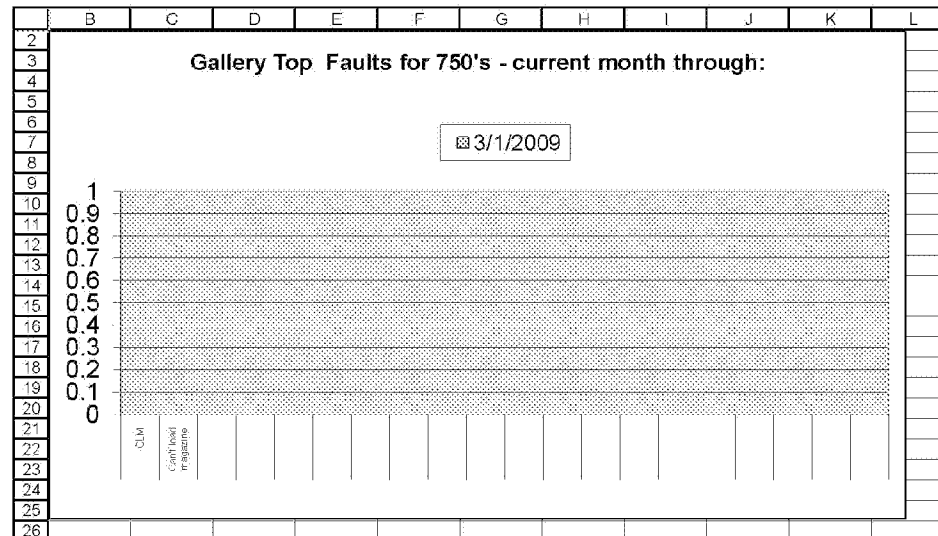

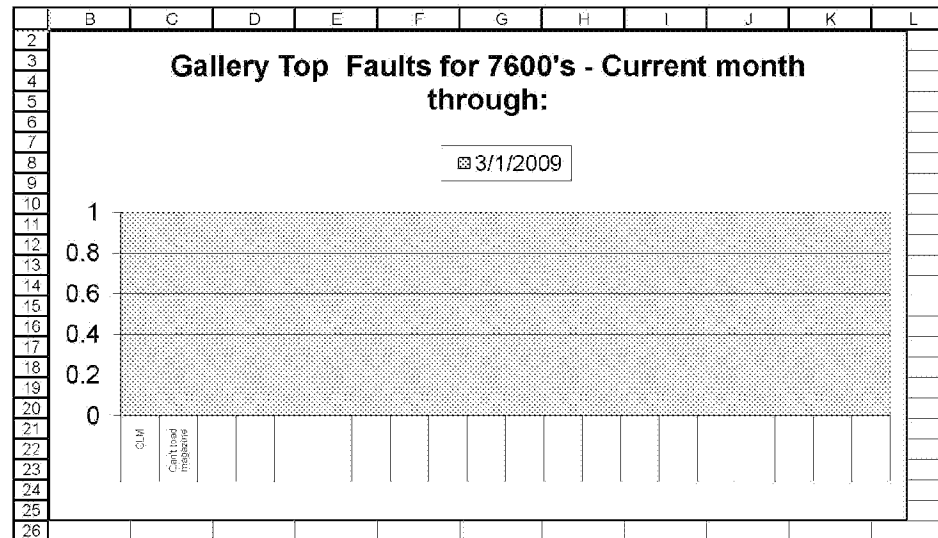

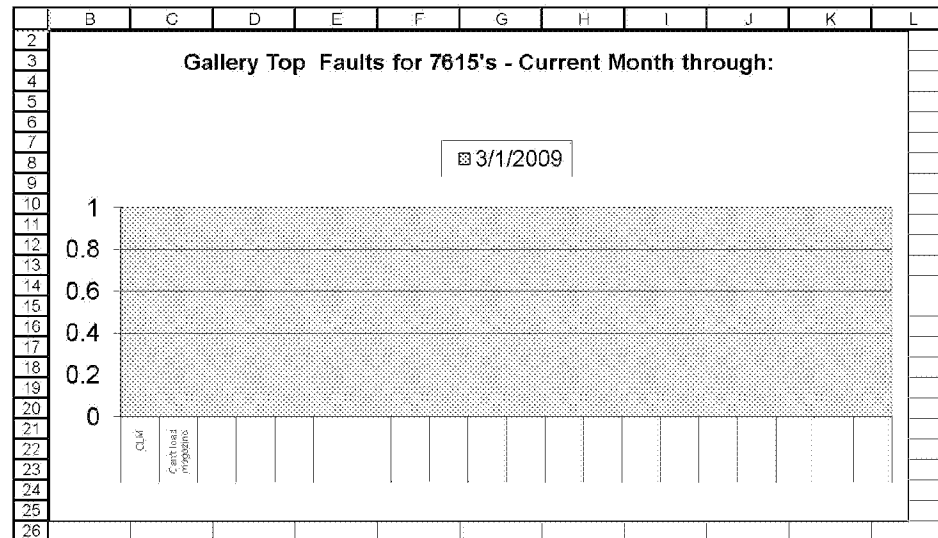



	A	B	C
1	AB	Action binds	0
2	BABS	Bulge at body shoulder	0
3	BAC	Burr at chamber	0
4	BBMA	BBL-to-bolt misalignment	0
5	BB	Bolt binds/catches	0
6	BCOAB	Bolt catches on anti-bind	0
7	BCOBS	Bolt catches on bolt stop	0
8	BCOF	Bolt catches on follower	0
9	BC	Blows cases	0
10	BHR	Bolt hits receiver	0
11	BHS	Bolt plug hits safety switch	0
12	BLOP	Bar lock or disconnecter out of position	0
13	BLSO	Barrel lug shot off	0
14	BPO	Bolt pulls out	0
15	BSSM	Bolt stems shell in magazine	0
16	BWCD	Bolt won't cam down	0
17	BWCFM	Bolt won't close over full magazine	0
18	CD	Case dented	0
19	CH	Closes hard	0
20	CLM	Can't load magazine	0
21	CO	Cut-off	0
22	CR	Cuts rim	0
23	CS	Cases swell	0
24	CTOG	Chamber torn or gouged	0
25	CTP	Creepy trigger pull	0
26	CWSB	Cams wrong side of action bar	0
27	DBB	Doesn't blow back	0
28	DCS	Double click in safety switch	0
29	DCT	Double click in trigger	0
30	DCU	Doesn't close-up	0
31	DE	Doesn't eject	0
32	DEL	Doesn't eject live round	0
33	DFB	Doesn't feed back	0
34	DFU	Doesn't feed up	0
35	DLO	Doesn't lock open (after last shell)	0
36	DLU	Doesn't lock-up	0
37	DS	Dead safe	0
38	DX	Doesn't extract	0
39	DXL	Doesn't extract live round	0
40	EDS	Extractor drops shell	0
41	ESB	Ejector sticks back	0
42	ESCR	Empty shell catches receiver	0
43	ESS	Extractor stems shell	0
44	FA	Fires automatically	0
45	FB	Follower binds	0
46	FC	Fails to connect	0
47	FCB	Fore-end cracked or broken	0
48	FD	Follows-down	0
49	FF	Fails to fire	0
50	FFP	Flat firing pin	0
51	FOS	Fires on safe	0
52	FPHB	Firing pin hits bbl	0
53	FPHI	Firing pin hits inside rim	0
54	FPO	Floor plate opens	0
55	FPOH	Floor plate opens hard	0
56	FSR	Fires when safe is released	0

	A	B	C
57	FT	Follower tips	0
58	GCSO	Gas cyl shot off	0
59	HBL	Heavy bolt lift	0
60	HMSC	Heading mismatch-steps on case	0
61	HPA	High pressure ammo	0
62	HUR	Hard under rail	0
63	JCS	Jumps cartridge	0
64	JM	Jumps magazine	0
65	JO	Jars off	0
66	LB	Light blow	0
67	MAH	Magazine assembles hard	0
68	MCW	Magazine capacity wrong	0
69	MFA	Misfires (ammo)	0
70	MFOP	Magazine follower out of position	0
71	ML	Magazine loose	0
72	MLH	Magazine loads hard	0
73	MRH	Magazine removes hard	0
74	OH	Opens hard	0
75	OR	Over-rides	0
76	PH	Pulls hard	0
77	PSI	Proof stamp illegible	0
78	PSM	Proof stamp missing	0
79	RBOC	Rings and bulges on case	0
80	RDVV	(Action) release doesn't work	0
81	RIC	Rings in chamber	0
82	RIS	Ring in sholder	0
83	RS	Rim srem	0
84	SBC	Stems bottom chambers	0
85	SEE	Stems bbl extension	0
86	SCB	Stock cracked or broken	0
87	SCX	Shell catches	0
88	SHI	Short indent	0
89	SI	Stems incline	0
90	SIC	Stems in chamber	0
91	SL	shaves lead	0
92	SLC	Stems left side of chamber	0
93	SMOC	Stretch marks on case	0
94	SOR	Stem over-ride	0
95	SP	Stems port	0
96	SR	Shoulder rough	0
97	SRC	Stems right side of chamber	0
98	SRIC	Specific rings in chamber	0
99	SSOC	Surface scratches on case	0
100	STC	Stems top chamber	0
101	SWE	Safety switch works too easily	0
102	SWH	Safety switch works too hard	0
103	SWW	Safety Switch won't work	0
104	TD	Tips down	0
105	TU	Tips up	0
106	TWP	Trigger won't pull	0
107	TWR	Trigger won't retract	0
108	UNCN-T	Uncoded	0
109	XH	Extracts hard	0
110			0
111	HI	High	0
112	LO	Low	0

	A	B	C
113	LEFT	Left	0
114	RIGHT	Right	0
115	DG	Doesn't Group	0
116	FSST	Front sight tipped	0
117	RSTT	Rear sight tipped	0
118	RSBR	Rear sight base raised	0
119	FSTR	Front sight raised	0
120	FSTL	Front sight loose	0
121	RSTL	Rear sight loose	0
122	MGPT-G	Missing parts at target	0
123	UNCN-G	Uncoded nonconformity at target	0
124			0
125	AI-P	Assembly incomplete at proof	0
126	BBB	Barrel bracket cracked or broken at proof	0
127	BC-P	Blows cases at proof	0
128	BEB-P	Barrel extension broken at proof	0
129	BLP-P	Blanked primer at proof	0
130	BLSO-P	Barrel lug shot off at proof	0
131	BP-P	Blown primer at proof	0
132	BS-P	Barrel split at proof	0
133	DBF-P	Damaged Bolt Face	0
134	DLOS-P	Doesn't lock over shells at proof	0
135	ESBBP-P	Ejector sticks back -Blown Primer cup	0
136	ESBEC-P	Ejector sticks back - Ejector Crescent	0
137	FCB-P	Fore-end cracked at proof	0
138	FESO-P	Fore-end shot off at proof	0
139	FF-P	Fails to fire at proof	0
140	GCSO-P	Gas cylinder shot off at proof	0
141	MSI-P	Magnaflux stamp illegible on bbl	0
142	MSM-P	Magnaflux stamp missing on bbl	0
143	PP-P	Pierced primer at proof	0
144	SCB-P	Stock cracked or broken at proof	0

	A	B	C
1	AB	Action binds	0
2	BABS	Bulge at body shoulder	0
3	BAC	Burr at chamber	0
4	BBMA	BBL-to-bolt misalignment	0
5	BB	Bolt binds/catches	0
6	BCOAB	Bolt catches on anti-bind	0
7	BCOBS	Bolt catches on bolt stop	0
8	BCOF	Bolt catches on follower	0
9	BC	Blows cases	0
10	BHR	Bolt hits receiver	0
11	BHS	Bolt plug hits safety switch	0
12	BLOP	Bar lock or disconnecter out of position	0
13	BLSO	Barrel lug shot off	0
14	BPO	Bolt pulls out	0
15	BSSM	Bolt stems shell in magazine	0
16	BWCD	Bolt won't cam down	0
17	BWCFM	Bolt won't close over full magazine	0
18	CD	Case dented	0
19	CH	Closes hard	0
20	CLM	Can't load magazine	0
21	CO	Cut-off	0
22	CR	Cuts rim	0
23	CS	Cases swell	0
24	CTOG	Chamber torn or gouged	0
25	CTP	Creepy trigger pull	0
26	CWSB	Cams wrong side of action bar	0
27	DBB	Doesn't blow back	0
28	DCS	Double click in safety switch	0
29	DCT	Double click in trigger	0
30	DCU	Doesn't close-up	0
31	DE	Doesn't eject	0
32	DEL	Doesn't eject live round	0
33	DFB	Doesn't feed back	0
34	DFU	Doesn't feed up	0
35	DLO	Doesn't lock open (after last shell)	0
36	DLU	Doesn't lock-up	0
37	DS	Dead safe	0
38	DX	Doesn't extract	0
39	DXL	Doesn't extract live round	0
40	EDS	Extractor drops shell	0
41	ESB	Ejector sticks back	0
42	ESCR	Empty shell catches receiver	0
43	ESS	Extractor stems shell	0
44	FA	Fires automatically	0
45	FB	Follower binds	0
46	FC	Fails to connect	0
47	FCB	Fore-end cracked or broken	0
48	FD	Follows-down	0
49	FF	Fails to fire	0
50	FFP	Flat firing pin	0
51	FOS	Fires on safe	0
52	FPHB	Firing pin hits bbl	0
53	FPHI	Firing pin hits inside rim	0
54	FPO	Floor plate opens	0
55	FPOH	Floor plate opens hard	0
56	FSR	Fires when safe is released	0

	A	B	C
57	FT	Follower tips	0
58	GCSO	Gas cyl shot off	0
59	HBL	Heavy bolt lift	0
60	HMSC	Heading mismatch-steps on case	0
61	HPA	High pressure ammo	0
62	HUR	Hard under rail	0
63	JCS	Jumps cartridge	0
64	JM	Jumps magazine	0
65	JO	Jars off	0
66	LB	Light blow	0
67	MAH	Magazine assembles hard	0
68	MCW	Magazine capacity wrong	0
69	MFA	Misfires (ammo)	0
70	MFOP	Magazine follower out of position	0
71	ML	Magazine loose	0
72	MLH	Magazine loads hard	0
73	MRH	Magazine removes hard	0
74	OH	Opens hard	0
75	OR	Over-rides	0
76	PH	Pulls hard	0
77	PSI	Proof stamp illegible	0
78	PSM	Proof stamp missing	0
79	RBOC	Rings and bulges on case	0
80	RDVV	(Action) release doesn't work	0
81	RIC	Rings in chamber	0
82	RIS	Ring in sholder	0
83	RS	Rim srem	0
84	SBC	Stems bottom chambers	0
85	SEE	Stems bbl extension	0
86	SCB	Stock cracked or broken	0
87	SCX	Shell catches	0
88	SHI	Short indent	0
89	SI	Stems incline	0
90	SIC	Stems in chamber	0
91	SL	shaves lead	0
92	SLC	Stems left side of chamber	0
93	SMOC	Stretch marks on case	0
94	SOR	Stem over-ride	0
95	SP	Stems port	0
96	SR	Shoulder rough	0
97	SRC	Stems right side of chamber	0
98	SRIC	Specific rings in chamber	0
99	SSOC	Surface scratches on case	0
100	STC	Stems top chamber	0
101	SWE	Safety switch works too easily	0
102	SWH	Safety switch works too hard	0
103	SWW	Safety Switch won't work	0
104	TD	Tips down	0
105	TU	Tips up	0
106	TWP	Trigger won't pull	0
107	TWR	Trigger won't retract	0
108	UNCN-T	Uncoded	0
109	XH	Extracts hard	0
110			0
111	HI	High	0
112	LO	Low	0

	A	B	C
113	LEFT	Left	0
114	RIGHT	Right	0
115	DG	Doesn't Group	0
116	FSST	Front sight tipped	0
117	RSTT	Rear sight tipped	0
118	RSBR	Rear sight base raised	0
119	FSTR	Front sight raised	0
120	FSTL	Front sight loose	0
121	RSTL	Rear sight loose	0
122	MGPT-G	Missing parts at target	0
123	UNCN-G	Uncoded nonconformity at target	0
124			0
125	AI-P	Assembly incomplete at proof	0
126	BBB	Barrel bracket cracked or broken at proof	0
127	BC-P	Blows cases at proof	0
128	BEB-P	Barrel extension broken at proof	0
129	BLP-P	Blanked primer at proof	0
130	BLSO-P	Barrel lug shot off at proof	0
131	BP-P	Blown primer at proof	0
132	BS-P	Barrel split at proof	0
133	DBF-P	Damaged Bolt Face	0
134	DLOS-P	Doesn't lock over shells at proof	0
135	ESBBP-P	Ejector sticks back -Blown Primer cup	0
136	ESBEC-P	Ejector sticks back - Ejector Crescent	0
137	FCB-P	Fore-end cracked at proof	0
138	FESO-P	Fore-end shot off at proof	0
139	FF-P	Fails to fire at proof	0
140	GCSO-P	Gas cylinder shot off at proof	0
141	MSI-P	Magnaflux stamp illegible on bbl	0
142	MSM-P	Magnaflux stamp missing on bbl	0
143	PP-P	Pierced primer at proof	0
144	SCB-P	Stock cracked or broken at proof	0

	A	B	C
1	AB	Action binds	0
2	BABS	Bulge at body shoulder	0
3	BAC	Burr at chamber	0
4	BBMA	BBL-to-bolt misalignment	0
5	BB	Bolt binds/catches	0
6	BCOAB	Bolt catches on anti-bind	0
7	BCOBS	Bolt catches on bolt stop	0
8	BCOF	Bolt catches on follower	0
9	BC	Blows cases	0
10	BHR	Bolt hits receiver	0
11	BHS	Bolt plug hits safety switch	0
12	BLOP	Bar lock or disconnecter out of position	0
13	BLSO	Barrel lug shot off	0
14	BPO	Bolt pulls out	0
15	BSSM	Bolt stems shell in magazine	0
16	BWCD	Bolt won't cam down	0
17	BWCFM	Bolt won't close over full magazine	0
18	CD	Case dented	0
19	CH	Closes hard	0
20	CLM	Can't load magazine	0
21	CO	Cut-off	0
22	CR	Cuts rim	0
23	CS	Cases swell	0
24	CTOG	Chamber torn or gouged	0
25	CTP	Creepy trigger pull	0
26	CWSB	Cams wrong side of action bar	0
27	DBB	Doesn't blow back	0
28	DCS	Double click in safety switch	0
29	DCT	Double click in trigger	0
30	DCU	Doesn't close-up	0
31	DE	Doesn't eject	0
32	DEL	Doesn't eject live round	0
33	DFB	Doesn't feed back	0
34	DFU	Doesn't feed up	0
35	DLO	Doesn't lock open (after last shell)	0
36	DLU	Doesn't lock-up	0
37	DS	Dead safe	0
38	DX	Doesn't extract	0
39	DXL	Doesn't extract live round	0
40	EDS	Extractor drops shell	0
41	ESB	Ejector sticks back	0
42	ESCR	Empty shell catches receiver	0
43	ESS	Extractor stems shell	0
44	FA	Fires automatically	0
45	FB	Follower binds	0
46	FC	Fails to connect	0
47	FCB	Fore-end cracked or broken	0
48	FD	Follows-down	0
49	FF	Fails to fire	0
50	FFP	Flat firing pin	0
51	FOS	Fires on safe	0
52	FPHB	Firing pin hits bbl	0
53	FPHI	Firing pin hits inside rim	0
54	FPO	Floor plate opens	0
55	FPOH	Floor plate opens hard	0
56	FSR	Fires when safe is released	0

	A	B	C
57	FT	Follower tips	0
58	GCSO	Gas cyl shot off	0
59	HBL	Heavy bolt lift	0
60	HMSC	Heading mismatch-steps on case	0
61	HPA	High pressure ammo	0
62	HUR	Hard under rail	0
63	JCS	Jumps cartridge	0
64	JM	Jumps magazine	0
65	JO	Jars off	0
66	LB	Light blow	0
67	MAH	Magazine assembles hard	0
68	MCW	Magazine capacity wrong	0
69	MFA	Misfires (ammo)	0
70	MFOP	Magazine follower out of position	0
71	ML	Magazine loose	0
72	MLH	Magazine loads hard	0
73	MRH	Magazine removes hard	0
74	OH	Opens hard	0
75	OR	Over-rides	0
76	PH	Pulls hard	0
77	PSI	Proof stamp illegible	0
78	PSM	Proof stamp missing	0
79	RBOC	Rings and bulges on case	0
80	RDVV	(Action) release doesn't work	0
81	RIC	Rings in chamber	0
82	RIS	Ring in sholder	0
83	RS	Rim srem	0
84	SBC	Stems bottom chambers	0
85	SEE	Stems bbl extension	0
86	SCB	Stock cracked or broken	0
87	SCX	Shell catches	0
88	SHI	Short indent	0
89	SI	Stems incline	0
90	SIC	Stems in chamber	0
91	SL	shaves lead	0
92	SLC	Stems left side of chamber	0
93	SMOC	Stretch marks on case	0
94	SOR	Stem over-ride	0
95	SP	Stems port	0
96	SR	Shoulder rough	0
97	SRC	Stems right side of chamber	0
98	SRIC	Specific rings in chamber	0
99	SSOC	Surface scratches on case	0
100	STC	Stems top chamber	0
101	SWE	Safety switch works too easily	0
102	SWH	Safety switch works too hard	0
103	SWW	Safety Switch won't work	0
104	TD	Tips down	0
105	TU	Tips up	0
106	TWP	Trigger won't pull	0
107	TWR	Trigger won't retract	0
108	UNCN-T	Uncoded	0
109	XH	Extracts hard	0
110			0
111	HI	High	0
112	LO	Low	0



	A	B	C
113	LEFT	Left	0
114	RIGHT	Right	0
115	DG	Doesn't Group	0
116	FSST	Front sight tipped	0
117	RSTT	Rear sight tipped	0
118	RSBR	Rear sight base raised	0
119	FSTR	Front sight raised	0
120	FSTL	Front sight loose	0
121	RSTL	Rear sight loose	0
122	MGPT-G	Missing parts at target	0
123	UNCN-G	Uncoded nonconformity at target	0
124			0
125	AI-P	Assembly incomplete at proof	0
126	BBB	Barrel bracket cracked or broken at proof	0
127	BC-P	Blows cases at proof	0
128	BEB-P	Barrel extension broken at proof	0
129	BLP-P	Blanked primer at proof	0
130	BLSO-P	Barrel lug shot off at proof	0
131	BP-P	Blown primer at proof	0
132	BS-P	Barrel split at proof	0
133	DBF-P	Damaged Bolt Face	0
134	DLOS-P	Doesn't lock over shells at proof	0
135	ESBBP-P	Ejector sticks back - Blown Primer cup	0
136	ESBEC-P	Ejector sticks back - Ejector Crescent	0
137	FCB-P	Fore-end cracked at proof	0
138	FESO-P	Fore-end shot off at proof	0
139	FF-P	Fails to fire at proof	0
140	GCSO-P	Gas cylinder shot off at proof	0
141	MSI-P	Magnaflux stamp illegible on bbl	0
142	MSM-P	Magnaflux stamp missing on bbl	0
143	PP-P	Pierced primer at proof	0
144	SCB-P	Stock cracked or broken at proof	0

	A	B	C
1	AB	Action binds	0
2	BABS	Bulge at body shoulder	0
3	BAC	Burr at chamber	0
4	BBMA	BBL-to-bolt misalignment	0
5	BB	Bolt binds/catches	0
6	BCOAB	Bolt catches on anti-bind	0
7	BCOBS	Bolt catches on bolt stop	0
8	BCOF	Bolt catches on follower	0
9	BC	Blows cases	0
10	BHR	Bolt hits receiver	0
11	BHS	Bolt plug hits safety switch	0
12	BLOP	Bar lock or disconnecter out of position	0
13	BLSO	Barrel lug shot off	0
14	BPO	Bolt pulls out	0
15	BSSM	Bolt stems shell in magazine	0
16	BWCD	Bolt won't cam down	0
17	BWCFM	Bolt won't close over full magazine	0
18	CD	Case dented	0
19	CH	Closes hard	0
20	CLM	Can't load magazine	0
21	CO	Cut-off	0
22	CR	Cuts rim	0
23	CS	Cases swell	0
24	CTOG	Chamber torn or gouged	0
25	CTP	Creepy trigger pull	0
26	CWSB	Cams wrong side of action bar	0
27	DBB	Doesn't blow back	0
28	DCS	Double click in safety switch	0
29	DCT	Double click in trigger	0
30	DCU	Doesn't close-up	0
31	DE	Doesn't eject	0
32	DEL	Doesn't eject live round	0
33	DFB	Doesn't feed back	0
34	DFU	Doesn't feed up	0
35	DLO	Doesn't lock open (after last shell)	0
36	DLU	Doesn't lock-up	0
37	DS	Dead safe	0
38	DX	Doesn't extract	0
39	DXL	Doesn't extract live round	0
40	EDS	Extractor drops shell	0
41	ESB	Ejector sticks back	0
42	ESCR	Empty shell catches receiver	0
43	ESS	Extractor stems shell	0
44	FA	Fires automatically	0
45	FB	Follower binds	0
46	FC	Fails to connect	0
47	FCB	Fore-end cracked or broken	0
48	FD	Follows-down	0
49	FF	Fails to fire	0
50	FFP	Flat firing pin	0
51	FOS	Fires on safe	0
52	FPHB	Firing pin hits bbl	0
53	FPHI	Firing pin hits inside rim	0
54	FPO	Floor plate opens	0
55	FPOH	Floor plate opens hard	0
56	FSR	Fires when safe is released	0

	A	B	C
57	FT	Follower tips	0
58	GCSO	Gas cyl shot off	0
59	HBL	Heavy bolt lift	0
60	HMSC	Heading mismatch-steps on case	0
61	HPA	High pressure ammo	0
62	HUR	Hard under rail	0
63	JCS	Jumps cartridge	0
64	JM	Jumps magazine	0
65	JO	Jars off	0
66	LB	Light blow	0
67	MAH	Magazine assembles hard	0
68	MCW	Magazine capacity wrong	0
69	MFA	Misfires (ammo)	0
70	MFOP	Magazine follower out of position	0
71	ML	Magazine loose	0
72	MLH	Magazine loads hard	0
73	MRH	Magazine removes hard	0
74	OH	Opens hard	0
75	OR	Over-rides	0
76	PH	Pulls hard	0
77	PSI	Proof stamp illegible	0
78	PSM	Proof stamp missing	0
79	RBOC	Rings and bulges on case	0
80	RDVV	(Action) release doesn't work	0
81	RIC	Rings in chamber	0
82	RIS	Ring in sholder	0
83	RS	Rim srem	0
84	SBC	Stems bottom chambers	0
85	SEE	Stems bbl extension	0
86	SCB	Stock cracked or broken	0
87	SCX	Shell catches	0
88	SHI	Short indent	0
89	SI	Stems incline	0
90	SIC	Stems in chamber	0
91	SL	shaves lead	0
92	SLC	Stems left side of chamber	0
93	SMOC	Stretch marks on case	0
94	SOR	Stem over-ride	0
95	SP	Stems port	0
96	SR	Shoulder rough	0
97	SRC	Stems right side of chamber	0
98	SRIC	Specific rings in chamber	0
99	SSOC	Surface scratches on case	0
100	STC	Stems top chamber	0
101	SWE	Safety switch works too easily	0
102	SWH	Safety switch works too hard	0
103	SWW	Safety Switch won't work	0
104	TD	Tips down	0
105	TU	Tips up	0
106	TWP	Trigger won't pull	0
107	TWR	Trigger won't retract	0
108	UNCN-T	Uncoded	0
109	XH	Extracts hard	0
110			0
111	HI	High	0
112	LO	Low	0

	A	B	C
113	LEFT	Left	0
114	RIGHT	Right	0
115	DG	Doesn't Group	0
116	FSST	Front sight tipped	0
117	RSTT	Rear sight tipped	0
118	RSBR	Rear sight base raised	0
119	FSTR	Front sight raised	0
120	FSTL	Front sight loose	0
121	RSTL	Rear sight loose	0
122	MGPT-G	Missing parts at target	0
123	UNCN-G	Uncoded nonconformity at target	0
124			0
125	AI-P	Assembly incomplete at proof	0
126	BBB	Barrel bracket cracked or broken at proof	0
127	BC-P	Blows cases at proof	0
128	BEB-P	Barrel extension broken at proof	0
129	BLP-P	Blanked primer at proof	0
130	BLSO-P	Barrel lug shot off at proof	0
131	BP-P	Blown primer at proof	0
132	BS-P	Barrel split at proof	0
133	DBF-P	Damaged Bolt Face	0
134	DLOS-P	Doesn't lock over shells at proof	0
135	ESBBP-P	Ejector sticks back - Blown Primer cup	0
136	ESBEC-P	Ejector sticks back - Ejector Crescent	0
137	FCB-P	Fore-end cracked at proof	0
138	FESO-P	Fore-end shot off at proof	0
139	FF-P	Fails to fire at proof	0
140	GCSO-P	Gas cylinder shot off at proof	0
141	MSI-P	Magnaflux stamp illegible on bbl	0
142	MSM-P	Magnaflux stamp missing on bbl	0
143	PP-P	Pierced primer at proof	0
144	SCB-P	Stock cracked or broken at proof	0

# Centerfire

	A	B	D	E	F	G	H	I	J	P	Q
1	<b>Summary</b>	<b>Total Tested</b>	<b>13226</b>								
2		<b>Total Rejected:</b>	<b>470</b>								
3		<b>Overall Reject Rate:</b>	<b>3.55</b>								
5		Shot:	6892	663	1893	1618	758	448	1104		13276
6	<b>Proof</b>	Rejected:	48	7	15	24	6	2	8	0	110
7		Percent:	0.7	1.1	0.8	1.5	0.8	0.4	0.7		0.8
9											
10	<b>Test</b>	Shot:	6682	612	1861	1669	737	484	1058	123	13226
11		Rejected:	126	22	58	80	30	5	34	4	388
12		Percent:	1.9	3.6	3.1	4.8	4.1	1.0	3.2	3.3	2.7
13	<b>Target</b>	Shot:	650	57	146	168	57	473	94		1645
14		Rejected:	0	0	0	0	0	1	0	0	1
15		Percent:	0.0	0.0	0.0	0.0	0.0	0.2	0.0		0.1
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>	<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>Rimfire</b>	<b>totals</b>
18											
19	AB	Action binds								2	2
20	BABS	Bulge at body shoulder									
21	BAC	Burr at chamber	11	1	1	20					33
22	BBMA	BBL-to-bolt misalignment			5						5
23	BB	Bolt binds/catches	12	3	10	3	1	1	2		32
24	BCOAB	Bolt catches on anti-bind									
25	BCOBS	Bolt catches on bolt stop									
26	BCOF	Bolt catches on follower									
27	BC	Blows cases									
28	BHR	Bolt hits receiver									
29	BHS	Bolt plug hits safety switch									
30	BLOP	Bar lock or disconnecter out of position									
31	BLSO	Barrel lug shot off									
32	BPO	Bolt pulls out							1		1
33	BSSM	Bolt stems shell in magazine									
34	BWCD	Bolt won't cam down	1			5					6
35	BWCFM	Bolt won't close over full magazine	3		1	1	1				6
36	CD	Case dented									
37	CH	Closes hard	22		13	1	4		1		41
38	CLM	Can't load magazine	4		1	15	3		2		25
39	CO	Cut-off									
40	CR	Cuts rim									

# Centerfire

	A	B	D	E	F	G	H	I	J	P	Q
17	CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7	Rimfire	totals
41	CS	Cases swell									
42	CTOG	Chamber torn or gouged									
43	CTP	Creepy trigger pull									
44	CWSB	Cams wrong side of action bar									
45	DBB	Doesn't blow back									
46	DCS	Double click in safety switch									
47	DCT	Double click in trigger									
48	DCU	Doesn't close-up									
49	DE	Doesn't eject	1		1	3					5
50	DEL	Doesn't eject live round									
51	DFB	Doesn't feed back									
52	DFU	Doesn't feed up								1	1
53	DLO	Doesn't lock open (after last shell)									
54	DLU	Doesn't lock-up									
55	DS	Dead safe									
56	DX	Doesn't extract	8	6	2	4	2	1	3		28
57	DXL	Doesn't extract live round									
58	EDS	Extractor drops shell	6	2	2	3	2	1	1		17
59	ESB	Ejector sticks back	5			3					8
60	ESCR	Empty shell catches receiver									
61	ESS	Extractor stems shell									
62	FA	Fires automatically									
63	FB	Follower binds								1	1
64	FC	Fails to connect									
65	FCB	Fore-end cracked or broken									
66	FD	Follows-down									
67	FF	Fails to fire	1	2	1						4
68	FFP	Flat firing pin									
69	FOS	Fires on safe	1								1
70	FPHB	Firing pin hits bbl									
71	FPHI	Firing pin hits inside rim									
72	FPO	Floor plate opens		1	4	2	2				9
73	FPOH	Floor plate opens hard									

# Centerfire

	A	B	D	E	F	G	H	I	J	P	Q
17	CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7	Rimfire	totals
74	FSR	Fires when safe is released									
75	FT	Follower tips									
76	GCSO	Gas cyl shot off									
77	HBL	Heavy bolt lift			1						1
78	HMSC	Heading mismatch-steps on case									
79	HPA	High pressure ammo									
80	HUR	Hard under rail		1							1
81	JCS	Jumps cartridge									
82	JM	Jumps magazine	16		1	1			1		19
83	JO	Jars off									
84	LB	Light blow									
85	MAH	Magazine assembles hard									
86	MCW	Magazine capacity wrong									
87	MFA	Misfires (ammo)									
88	MFOP	Magazine follower out of position									
89	ML	Magazine loose									
90	MLH	Magazine loads hard							4		4
91	MRH	Magazine removes hard	2								2
92	OH	Opens hard		1				2			3
93	OR	Over-rides	22	1	7				1		31
94	PH	Pulls hard									
95	PSI	Proof stamp illegible									
96	PSM	Proof stamp missing									
97	RBOC	Rings and bulges on case									
98	RDW	(Action) release doesn't work									
99	RIC	Rings in chamber									
100	RIS	Ring in sholder									
101	RS	Rim srem									
102	SBC	Stems bottom chambers	1		4				4		9
103	SBE	Stems bbl extension									
104	SCB	Stock cracked or broken									
105	SCX	Shell catches									
106	SHI	Short indent									


# Centerfire

	A	B	D	E	F	G	H	I	J	P	Q
17	CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7	Rimfire	totals
107	SI	Stems incline					5				5
108	SIC	Stems in chamber									
109	SL	shaves lead									
110	SLC	Stems left side of chamber									
111	SMOC	Stretch marks on case									
112	SOR	Stem over-ride	3	3	1	12	9		11		38
113	SP	Stems port									
114	SR	Shoulder rough									
115	SRC	Stems right side of chamber									
116	SRIC	Specific rings in chamber									
117	SSOC	Surface scratches on case									
118	STC	Stems top chamber	2		1	4			3		10
119	SWE	Safety switch works too easily		1							1
120	SWH	Safety switch works too hard				1					1
121	SWW	Safety Switch won't work									
122	TD	Tips down									
123	TU	Tips up									
124	TWP	Trigger won't pull									
125	TWR	Trigger won't retract									
126	UNCN-T	Uncoded									
127	XH	Extracts hard	5		2	2	1				10
128											
129	HI	High									
130	LO	Low									
131	LEFT	Left									
132	RIGHT	Right									
133	DG	Doesn't Group						1			1
134	FSST	Front sight tipped									
135	RSTT	Rear sight tipped									
136	RSBR	Rear sight base raised									
137	FSTR	Front sight raised									
138	FSTL	Front sight loose									
139	RSTL	Rear sight loose									



# Centerfire

	A	B	D	E	F	G	H	I	J	P	Q
17	CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7	Rimfire	totals
140	MGPT-G	Missing parts at target									
141	UNCN-G	Uncoded nonconformity at target									
142											
143	AI-P	Assembly incomplete at proof									
144	BBB	Barrel bracket cracked or broken at proof									
145	BC-P	Blows cases at proof									
146	BEB-P	Barrel extension broken at proof									
147	BLP-P	Blanked primer at proof									
148	BLSO-P	Barrel lug shot off at proof									
149	BP-P	Blown primer at proof									
150	BS-P	Barrel split at proof									
151	DBF-P	Damaged Bolt Face	27	3	15	18	1	2	6		72
152	DLOS-P	Doesn't lock over shells at proof									
153	ESBBP-P	Ejector sticks back -Blown Primer cup	2				1				3
154	ESBEC-P	Ejector sticks back - Ejector Crescent									
155	FCB-P	Fore-end cracked at proof									
156	FESO-P	Fore-end shot off at proof									
157	FF-P	Fails to fire at proof									
158	GCSO-P	Gas cylinder shot off at proof									
159	MSI-P	Magnaflux stamp illegible on bbl									
160	MSM-P	Magnaflux stamp missing on bbl									
161	PP-P	Pierced primer at proof									
162	SCB-P	Stock cracked or broken at proof									
163	UNCM-P	Uncoded proof malfunctions	19	4		6	4		2		35

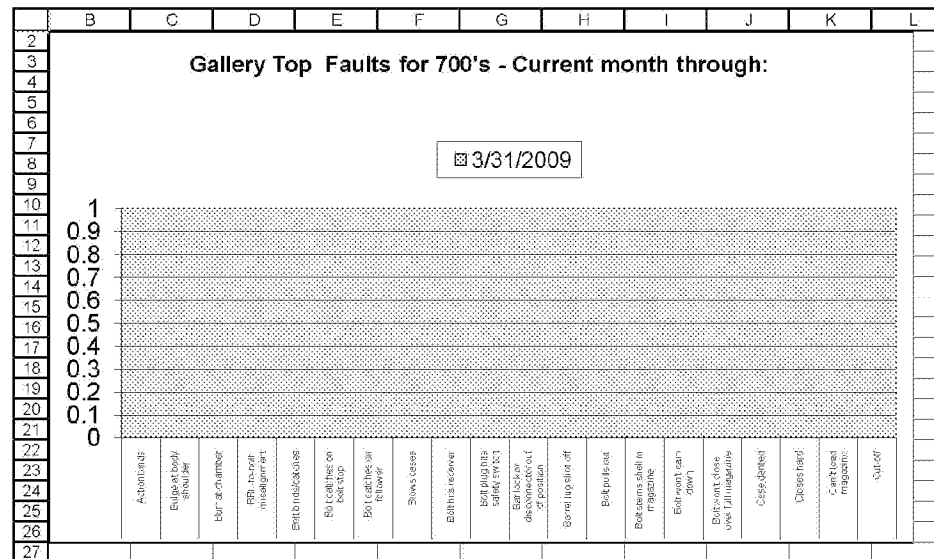

	A	B	C
1	AB	Action binds	0
2	BABS	Bulge at body shoulder	0
3	BAC	Burr at chamber	0
4	BBMA	BBL-to-bolt misalignment	0
5	BB	Bolt binds/catches	0
6	BCOBS	Bolt catches on bolt stop	0
7	BCOF	Bolt catches on follower	0
8	BC	Blows cases	0
9	BHR	Bolt hits receiver	0
10	BHS	Bolt plug hits safety switch	0
11	BLOP	Bar lock or disconnecter out of position	0
12	BLSO	Barrel lug shot off	0
13	BPO	Bolt pulls out	0
14	BSSM	Bolt stems shell in magazine	0
15	BWCD	Bolt won't cam down	0
16	BWCFM	Bolt won't close over full magazine	0
17	CD	Case dented	0
18	CH	Closes hard	0
19	CLM	Can't load magazine	0
20	CO	Cut-off	0
21	CR	Cuts rim	0
22	CS	Cases swell	0
23	CTOG	Chamber torn or gouged	0
24	CTP	Creepy trigger pull	0
25	CWSB	Cams wrong side of action bar	0
26	DBB	Doesn't blow back	0
27	DCS	Double click in safety switch	0
28	DCT	Double click in trigger	0
29	DCU	Doesn't close-up	0
30	DE	Doesn't eject	0
31	DEL	Doesn't eject live round	0
32	DFB	Doesn't feed back	0
33	DFU	Doesn't feed up	0
34	DLO	Doesn't lock open (after last shell)	0
35	DLU	Doesn't lock-up	0
36	DS	Dead safe	0
37	DX	Doesn't extract	0
38	DXL	Doesn't extract live round	0
39	EDS	Extractor drops shell	0
40	ESB	Ejector sticks back	0
41	ESCR	Empty shell catches receiver	0
42	ESS	Extractor stems shell	0
43	FA	Fires automatically	0
44	FB	Follower binds	0
45	FC	Fails to connect	0
46	FCB	Fore-end cracked or broken	0
47	FD	Follows-down	0
48	FF	Fails to fire	0
49	FFP	Flat firing pin	0
50	FOS	Fires on safe	0
51	FPHB	Firing pin hits bbl	0
52	FPHI	Firing pin hits inside rim	0
53	FPO	Floor plate opens	0
54	FPOH	Floor plate opens hard	0
55	FSR	Fires when safe is released	0
56	FT	Follower tips	0

	A	B	C
57	GCSO	Gas cyl shot off	0
58	HBL	Heavy bolt lift	0
59	HMSC	Heading mismatch-steps on case	0
60	HPA	High pressure ammo	0
61	HUR	Hard under rail	0
62	JCS	Jumps cartridge	0
63	JM	Jumps magazine	0
64	JO	Jars off	0
65	LB	Light blow	0
66	MAH	Magazine assembles hard	0
67	MCW	Magazine capacity wrong	0
68	MFA	Misfires (ammo)	0
69	MFOP	Magazine follower out of position	0
70	ML	Magazine loose	0
71	MLH	Magazine loads hard	0
72	MRH	Magazine removes hard	0
73	OH	Opens hard	0
74	OR	Over-rides	0
75	PH	Pulls hard	0
76	PSI	Proof stamp illegible	0
77	PSM	Proof stamp missing	0
78	RBOC	Rings and bulges on case	0
79	RDW	(Action) release doesn't work	0
80	RIC	Rings in chamber	0
81	RIS	Ring in sholder	0
82	RS	Rim srem	0
83	SBC	Stems bottom chambers	0
84	SBE	Stems bbl extension	0
85	SCB	Stock cracked or broken	0
86	SCX	Shell catches	0
87	SHI	Short indent	0
88	SI	Stems incline	0
89	SIC	Stems in chamber	0
90	SL	shaves lead	0
91	SIC	Stems left side of chamber	0
92	SMOC	Stretch marks on case	0
93	SOR	Stem over-ride	0
94	SP	Stems port	0
95	SR	Shoulder rough	0
96	SRC	Stems right side of chamber	0
97	SRIC	Specific rings in chamber	0
98	SSOC	Surface scratches on case	0
99	STC	Stems top chamber	0
100	SWE	Safety switch works too easily	0
101	SWH	Safety switch works too hard	0
102	SWW	Safety Switch won't work	0
103	TD	Tips down	0
104	TU	Tips up	0
105	TWP	Trigger won't pull	0
106	TWR	Trigger won't retract	0
107	UNCN-T	Uncoded	0
108	XH	Extracts hard	0
109			0
110	HI	High	0
111	LO	Low	0
112	LEFT	Left	0

	A	B	C
113	RIGHT	Right	0
114	DG	Doesn't Group	0
115	FSST	Front sight tipped	0
116	RSTT	Rear sight tipped	0
117	RSBR	Rear sight base raised	0
118	FSTR	Front sight raised	0
119	FSTL	Front sight loose	0
120	RSTL	Rear sight loose	0
121	MGPT-G	Missing parts at target	0
122	UNCN-G	Uncoded nonconformity at target	0
123			0
124	AI-P	Assembly incomplete at proof	0
125	BBB	Barrel bracket cracked or broken at proof	0
126	BC-P	Blows cases at proof	0
127	BEB-P	Barrel extension broken at proof	0
128	BLP-P	Blanked primer at proof	0
129	BLSO-P	Barrel lug shot off at proof	0
130	BP-P	Blown primer at proof	0
131	BS-P	Barrel split at proof	0
132	DBF-P	Damaged Bolt Face	0
133	DLOS-P	Doesn't lock over shells at proof	0
134	ESBBP-P	Ejector sticks back -Blown Primer cup	0
135	ESBEC-P	Ejector sticks back - Ejector Crescent	0
136	FCB-P	Fore-end cracked at proof	0
137	FESO-P	Fore-end shot off at proof	0
138	FF-P	Fails to fire at proof	0
139	GCSO-P	Gas cylinder shot off at proof	0
140	MSI-P	Magnaflux stamp illegible on bbl	0
141	MSM-P	Magnaflux stamp missing on bbl	0
142	PP-P	Pierced primer at proof	0
143	SCB-P	Stock cracked or broken at proof	0
144	BCOAB	Bolt catches on anti-bind	
145	BCOAB	Bolt catches on anti-bind	
146			
147			
148			
149			
150	3/31/2009		

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>423</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>11</b>													
3		<b>Overall Reject Rate:</b>		<b>2.60</b>													<i>totals</i>
5		Shot:		354		66	4	114	1								539
6		Rejected:		4	0	0	0	1	0	0	0	0	0	0	0	0	5
7		Percent:		1.1		0.0	0.0	0.9	0.0								0.9
9		Shot:		240		65	4	113	1								433
10		Rejected:		4	0	1	0	1	0	0	0	0	0	0	0	0	6
11		Percent:		1.7		1.5	0.0	0.9	0.0								1.4
13		Shot:		24		6		9									39
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0		0.0		0.0									0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches						1									1
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard				1											1
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		2													2
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back		1													1
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride		1													1
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		2													2
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup		2				1									3
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>639</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>17</b>													
3		<b>Overall Reject Rate:</b>		<b>2.66</b>													<i>totals</i>
5		Shot:		433		42	86	76		22							659
6		Rejected:		5	0	3	5	0	0	0	0	0	0	0	0	0	17
7		Percent:		1.2		7.1	5.8	0.0		0.0							2.6
9		Shot:		432		39	70	76		22							639
10		Rejected:		2	0	0	0	2	0	0	0	0	0	0	0	0	4
11		Percent:		0.5		0.0	0.0	2.6		0.0							6.4
13		Shot:		43		9	2	2		2							58
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0		0.0	0.0	0.0		0.0							0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		1													1
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine						1									1
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine						1									1
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cam wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		1													1
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		2		3	5										10
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions		3													3

Cell: D163

Comment: illegal:  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>655</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>18</b>													
3		<b>Overall Reject Rate:</b>		<b>2.75</b>													<i>totals</i>
5		Shot:		332	35	144	113	16									640
6		Rejected:		0	0	2	11	0	0	0	0	0	0	0	0	0	13
7		Percent:		0.0	0.0	1.4	9.7	0.0									2.0
9		Shot:		311	35	175	104	30									655
10		Rejected:		2	0	3	0	0	0	0	0	0	0	0	0	0	5
11		Percent:		0.6	0.0	1.7	0.0	0.0									0.8
13		Shot:		34	3	17	11	2									67
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0	0.0									0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches				1											1
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back		1													1
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift				1											1
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride		1													1
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard				1											1
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face				2	11										13
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>499</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>19</b>													
3		<b>Overall Reject Rate:</b>		<b>3.81</b>													<i>totals</i>
5		Shot:		313		148		36		38							535
6		Rejected:		1	0	5	0	0	0	0	0	0	0	0	0	0	6
7		Percent:		0.3		3.4		0.0		0.0							1.1
9		Shot:		312		143		6		38							499
10		Rejected:		1	0	8	0	0	0	4	0	0	0	0	0	0	13
11		Percent:		0.3		5.6		0.0		10.5							2.6
13		Shot:		33		3				3							38
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0		0.0				0.0							0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches				2				1							3
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard				3											3
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cam wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell								1							1
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides				1											1
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers		1		2											3
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride								2							2
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		1		5											\$
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>610</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>19</b>													
3		<b>Overall Reject Rate:</b>		<b>3.11</b>													<i>totals</i>
5		Shot:		352	64	139	26			38							619
6		Rejected:		6	0	2	0	0	0	2	0	0	0	0	0	0	19
7		Percent:		1.7	0.0	1.4	0.0			5.3							3.1
9		Shot:		347	64	137	26			36							610
10		Rejected:		1	2	1	5	0	0	0	0	0	0	0	0	0	9
11		Percent:		0.3	3.1	0.7	19.2			0.0							1.5
13		Shot:		35	7	8	2			3							55
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0			0.0							0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches					1										1
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell			2												2
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides		1		1											2
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber					4										4
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		6		2											8
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions								2							2

**Cell:** J163

**Comment:** illegal;  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>535</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>28</b>													
3		<b>Overall Reject Rate:</b>		<b>5.23</b>													<i>totals</i>
5		Shot:		140		52	37	146		137							512
6		Rejected:		0	0	0	0	3	0	5	0	0	0	0	0	0	8
7		Percent:		0.0		0.0	0.0	2.1		3.6							1.6
9		Shot:		140		52	37	143		133						30	535
10		Rejected:		2	0	2	1	4	0	11	0	0	0	0	0	0	20
11		Percent:		1.4		3.8	2.7	2.8		8.3					0.0		3.7
13		Shot:		18		6	5	15		13							55
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0		0.0	0.0	0.0		0.0							0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches	2		1					1							4
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard						3									3
38	CLM	Can't load magazine						1									1
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract					1			1							2
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides								1							1
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers								1							1
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride				1				6							7
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber								1							1
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face								5							5
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions						3									3

Cell: H163

Comment: illegal:  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>734</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>34</b>													
3		<b>Overall Reject Rate:</b>		<b>4.63</b>													<i>totals</i>
5		Shot:		462	4	65	130	63	4	9							737
6		Rejected:		0	0	1	0	1	0	0	0	0	0	0	0	0	2
7		Percent:		0.0	0.0	1.5	0.0	1.6	0.0	0.0							0.3
9		Shot:		462	4	64	128	63	4	9							734
10		Rejected:		20	0	3	8	1	0	0	0	0	0	0	0	0	32
11		Percent:		4.3	0.0	4.7	6.3	1.6	0.0	0.0							4.4
13		Shot:		36		7	11	7	4	1							66
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0		0.0	0.0	0.0	0.0	0.0							0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches	2		1												3
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine					6										6
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject					2										2
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		1													1
59	ESB	Ejector sticks back		1													1
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens						1									1
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine		3													3
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides		12		2											14
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard		1													1
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face				1											1
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions						1									1



Cell: H163

Comment: illegal:  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>550</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>26</b>													
3		<b>Overall Reject Rate:</b>		<b>4.73</b>													<i>totals</i>
5		Shot:		241	75	14	95	35	30	52							542
6		Rejected:		2	1	0	0	0	2	0	0	0	0	0	0	0	5
7		Percent:		0.8	1.3	0.0	0.0	0.0	6.7	0.0							8.9
9		Shot:		241	75	14	96	35	37	52							530
10		Rejected:		3	7	1	0	10	0	0	0	0	0	0	0	0	21
11		Percent:		1.2	9.3	7.1	0.0	28.6	0.0	0.0							3.8
13		Shot:		23	9	2	10	2	37	5							88
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	8
15		Percent:		0.0	0.0	0.0	0.0	0.0	0.0	0.0							8.8
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber		1													1
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		1	1	1											3
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cam's wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract			3			1									4
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard			1												1
93	OR	Over-rides		1													1
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride			2			9									11
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		1					2								3
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions		1	1												2

**Cell:** D163

**Comment:** ilngalry:  
broken trigger

**Cell:** E163

**Comment:** ilngalry:  
broken safe arm

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>652</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>34</b>													
3		<b>Overall Reject Rate:</b>		<b>5.21</b>													<i>totals</i>
5		Shot:		275		150	234	6		10							675
6		Rejected:		0	0	0	3	0	0	0	0	0	0	0	0	0	3
7		Percent:		0.0		0.0	1.3	0.0		0.0							0.4
9		Shot:		252		150	234	6		10							892
10		Rejected:		10	0	7	11	1	0	2	0	0	0	0	0	0	31
11		Percent:		4.0		4.7	4.7	16.7		20.0							3.8
13		Shot:		25		8	24			1							58
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0		0.0	0.0			0.0							0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment				5											5
23	BB	Bolt binds/catches		1			1										2
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard						1									1
38	CLM	Can't load magazine					2										2
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		1		1											2
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		1			1										2
59	ESB	Ejector sticks back					2										2
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire				1											1
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine		6													6
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride		1			3			2							6
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard					1										1
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard					1										1
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions					3										3

Cell: G163

Comment: illegal:  
broken triggers

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>685</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>22</b>													
3		<b>Overall Reject Rate:</b>		<b>3.21</b>													<i>totals</i>
5		Shot:		196	83	163	223	11									676
6		Rejected:		2	1	0	0	0	0	0	0	0	0	0	0	0	3
7		Percent:		1.0	1.2	0.0	0.0	0.0									0.4
9		Shot:		215	73	163	223	11									885
10		Rejected:		8	3	5	2	1	0	0	0	0	0	0	0	0	19
11		Percent:		3.7	4.1	3.1	0.9	9.1									2.8
13		Shot:		14	9	10	24										57
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0										0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		1													1
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine		1				1									2
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject				1											1
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		1	1		1										1
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell					1										1
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens			1												1
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine		2													2
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides		1	1	3											5
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers				1											1
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard		2													2
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		1													1
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions		1	1												2

**Cell:** D163

**Comment:** ilngalry:  
broken trigger

**Cell:** E163

**Comment:** ilngalry:  
broken trigger



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>565</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>22</b>													
3		<b>Overall Reject Rate:</b>		<b>3.89</b>													<i>totals</i>
5		Shot:		527	26	17											570
6		Rejected:		11	0	0	0	0	0	0	0	0	0	0	0	0	11
7		Percent:		2.1	0.0	0.0											1.9
9		Shot:		522	26	17											585
10		Rejected:		11	0	0	0	0	0	0	0	0	0	0	0	0	11
11		Percent:		2.1	0.0	0.0											1.9
13		Shot:		48	3	2											53
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0											0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		2													2
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard		5													5
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		1													1
59	ESB	Ejector sticks back		1													1
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine		2													2
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		8													8
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions		3													3

Cell: D163

Comment: illegal:  
broken triggers

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>613</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>16</b>													
3		<b>Overall Reject Rate:</b>		<b>2.61</b>													<i>totals</i>
5		Shot:		184	96	74	70		140	18							582
6		Rejected:		0	2	0	0	0	0	0	0	0	0	0	0	0	2
7		Percent:		0.0	2.1	0.0	0.0		0.0	0.0							0.3
9		Shot:		184	95	74	70		142	18						30	583
10		Rejected:		2	0	0	10	0	2	0	0	0	0	0	0	0	14
11		Percent:		1.1	0.0	0.0	14.3		1.4	0.0						0.0	2.3
13		Shot:		20	10	8	7		142	2							189
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0		0.0	0.0							0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber		1													1
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down					5										5
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine					3										3
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract					1										1
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		1													1
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard							2								2
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard					1										1
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face			2												2
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>567</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>8</b>													
3		<b>Overall Reject Rate:</b>		<b>1.41</b>													<i>totals</i>
5		Shot:		299	4	34	64	3	107	57							568
6		Rejected:		2	0	0	0	0	0	0	0	0	0	0	0	0	2
7		Percent:		0.7	0.0	0.0	0.0	0.0	0.0	0.0							0.4
9		Shot:		297	4	34	64	3	108	57							597
10		Rejected:		2	1	1	0	0	1	1	0	0	0	0	0	0	6
11		Percent:		0.7	25.0	2.9	0.0	0.0	0.9	1.8							1.1
13		Shot:		33		3	7		108	7							158
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0		0.0	0.0		0.0	0.0							0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches							1								1
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cam wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		1													1
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell				1											1
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride			1					1							2
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard		1													1
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		2													2
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>490</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>13</b>													
3		<b>Overall Reject Rate:</b>		<b>2.65</b>													<i>totals</i>
5		Shot:		280	23	117	5	22	58								505
6		Rejected:		0	0	1	0	0	0	0	0	0	0	0	0	0	1
7		Percent:		0.0	0.0	0.9	0.0	0.0	0.0								0.2
9		Shot:		280	23	102	5	22	58								430
10		Rejected:		5	0	0	0	5	1	0	0	0	0	0	0	0	11
11		Percent:		1.8	0.0	0.0	0.0	22.7	1.7								2.2
13		Shot:		29	2	10		2	58								101
14		Rejected:		0	0	0	0	0	1	0	0	0	0	0	0	0	1
15		Percent:		0.0	0.0	0.0		0.0	1.7								1.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine		3													3
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine		1													1
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject		1													1
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract							1								1
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline						5									5
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group							1								1
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face				1											1
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>648</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>25</b>													
3		<b>Overall Reject Rate:</b>		<b>3.86</b>													<i>totals</i>
5		Shot:		400	59	112	97	20		24							712
6		Rejected:		6	2	0	3	0	0	0	0	0	0	0	0	0	11
7		Percent:		1.5	3.4	0.0	3.1	0.0		0.0							1.5
9		Shot:		336	20	99	161	20		12							848
10		Rejected:		4	0	9	1	0	0	0	0	0	0	0	0	0	14
11		Percent:		1.2	0.0	9.1	0.6	0.0		0.0							2.2
13		Shot:		35	2	9	18	2		1							67
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0	0.0		0.0							0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		1		2											3
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard		1		7											8
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cam wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		1			1										2
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard		1													1
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		3													3
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions		3	2		3										8

**Cell:** D163

**Comment:** ilngalry:  
broken trigger

**Cell:** E163

**Comment:** ilngalry:  
broken trigger

**Cell:** G163

**Comment:** ilngalry:  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>705</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>30</b>													
3		<b>Overall Reject Rate:</b>		<b>4.26</b>													<i>totals</i>
5		Shot:		498		86	33	45	3	10							675
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:		0.0		0.0	0.0	0.0	0.0	0.0							0.0
9		Shot:		498		86	33	45	3	10						30	735
10		Rejected:		18	0	5	1	2	1	0	0	0	0	0	0	3	30
11		Percent:		3.6		5.8	3.0	4.4	33.3	0.0					10.0		4.3
13		Shot:		40		7	3	3	1								54
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0		0.0	0.0	0.0	0.0	0.0							0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds														1	1
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches				2											2
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard		14		2											16
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cam wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject					1										1
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up														1	1
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell						2	1								3
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds														1	1
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine		3													3
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides		1													1
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers				1											1
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>570</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>16</b>													
3		<b>Overall Reject Rate:</b>		<b>2.81</b>													<i>totals</i>
5		Shot:		291	57	167	25	8	18								566
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:		0.0	0.0	0.0	0.0	0.0	0.0								0.0
9		Shot:		296	57	164	25	8	18								570
10		Rejected:		12	2	2	0	0	0	0	0	0	0	0	0	0	16
11		Percent:		4.0	3.5	1.2	0.0	0.0	0.0								2.8
13		Shot:		21	6	21	3	1	18								70
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0	0.0	0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber		8													8
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches			1												1
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine				1											1
36	CD	Case dented															
37	CH	Closes hard		1													1
38	CLM	Can't load magazine		2													2
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cam wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		1													1
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell				1											1
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire			1												1
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		575								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		13													
3		<b>Overall Reject Rate:</b>		2.26													<i>totals</i>
5		Shot:		461		67	17			56							601
6		Rejected:		8	0	0	0	0	0	0	0	0	0	0	0	0	8
7		Percent:		1.7		0.0	0.0			0.0							1.3
9		Shot:		461		67	17			30							575
10		Rejected:		3	0	2	0	0	0	0	0	0	0	0	0	0	5
11		Percent:		0.7		3.0	0.0			0.0							0.9
13		Shot:		59		6	2			3							70
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0		0.0	0.0			0.0							0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		1													1
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine				1											1
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back		1													‡
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire		1													‡
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber				1											1
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions		8													8

Cell: D163

Comment: illegal:  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>709</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>29</b>													
3		<b>Overall Reject Rate:</b>		<b>4.09</b>													<i>totals</i>
5		Shot:		261	82	81	50	5	8	222							709
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:		0.0	0.0	0.0	0.0	0.0	0.0	0.0							0.0
9		Shot:		261	82	81	50	5	8	222							709
10		Rejected:		3	6	5	6	0	0	9	0	0	0	0	0	0	29
11		Percent:		1.1	7.3	6.2	12.0	0.0	0.0	4.1							4.1
13		Shot:		27	5		2			19							53
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0		0.0			0.0							0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber			1		4										5
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches			1												1
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard		1			1										2
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cam wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract			1	1											2
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back					1										1
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire			1												1
68	FFP	Flat firing pin															
69	FOS	Fires on safe		1													1
70	FPHB	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens				4											4
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail			1												1
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard								4							4
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers								3							3
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber		1						2							3
119	SWE	Safety switch works too easily			1												1
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>618</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>27</b>													
3		<b>Overall Reject Rate:</b>		<b>4.37</b>													<i>totals</i>
5		Shot:		36	2	108	147	37	48	222							538
6		Rejected:		0	0	1	0	0	0	0	0	0	0	0	0	0	1
7		Percent:		0.0	0.0	0.9	0.0	0.0	0.0	0.0							0.2
9		Shot:		36	2	88	162	37	71	222							518
10		Rejected:		0	0	2	21	0	0	3	0	0	0	0	0	0	26
11		Percent:		0.0	0.0	2.3	13.0	0.0	0.0	1.4							5.2
13		Shot:		3		9	13	4	71	15							115
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0		0.0	0.0	0.0	0.0	0.0							0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber				1	16										17
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches					1										1
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard								1							1
38	CLM	Can't load magazine					2			2							4
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cam wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract					1										1
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine				1	1										2
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face				1											1
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		<i>Shot:</i>															
6		<b>Proof</b>	<i>Rejected:</i>	0	0	0	0	0	0	0	0	0	0	0	0	0	0
7			<i>Percent:</i>														
9		<i>Shot:</i>															
10		<b>Test</b>	<i>Rejected:</i>	0	0	0	0	0	0	0	0	0	0	0	0	0	0
11			<i>Percent:</i>														
13		<i>Shot:</i>															
14		<b>Target</b>	<i>Rejected:</i>	0	0	0	0	0	0	0	0	0	0	0	0	0	0
15			<i>Percent:</i>														
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>752</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>34</b>													
3		<b>Overall Reject Rate:</b>		<b>4.52</b>													<i>totals</i>
5		Shot:		352	4	29	112	100	32	93							722
6		Rejected:		1	0	0	2	1	0	1	0	0	0	0	0	0	5
7		Percent:		0.3	0.0	0.0	1.8	1.0	0.0	1.1							0.7
9		Shot:		352	4	29	110	99	33	92						33	752
10		Rejected:		7	0	1	14	3	0	3	0	0	0	0	0	1	29
11		Percent:		2.0	0.0	3.4	12.7	3.0	0.0	3.3						3.0	3.9
13		Shot:		32		2	12	10	31	9							96
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0		0.0	0.0	0.0	0.0	0.0							0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds														1	1
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down		1													1
35	BWCFM	Bolt won't close over full magazine					1										1
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine					2										2
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract						1		2							3
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		1													1
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens					2	1									3
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine								1							1
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard		2													2
92	OH	Opens hard															
93	OR	Over-rides		2													2
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride					9										3
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber		1													1
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard				1		1									2
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		1			2	1		1							3
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															


	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>432</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>9</b>													
3		<b>Overall Reject Rate:</b>		<b>2.08</b>													<i>totals</i>
5		Shot:		205	49	18	50	15	1	96							434
6		Rejected:		0	1	0	0	0	0	0	0	0	0	0	0	0	1
7		Percent:		0.0	2.0	0.0	0.0	0.0	0.0	0.0							0.2
9		Shot:		205	48	18	50	15	1	95							432
10		Rejected:		6	1	0	0	0	0	1	0	0	0	0	0	0	2
11		Percent:		2.9	2.1	0.0	0.0	0.0	0.0	1.1							1.8
13		Shot:		20	1	2	5	1	1	9							38
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0	0.0	0.0	0.0							0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber		1													1
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out								1							1
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cam wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															





	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		1	1												2
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides		4													\$
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face			1												1
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

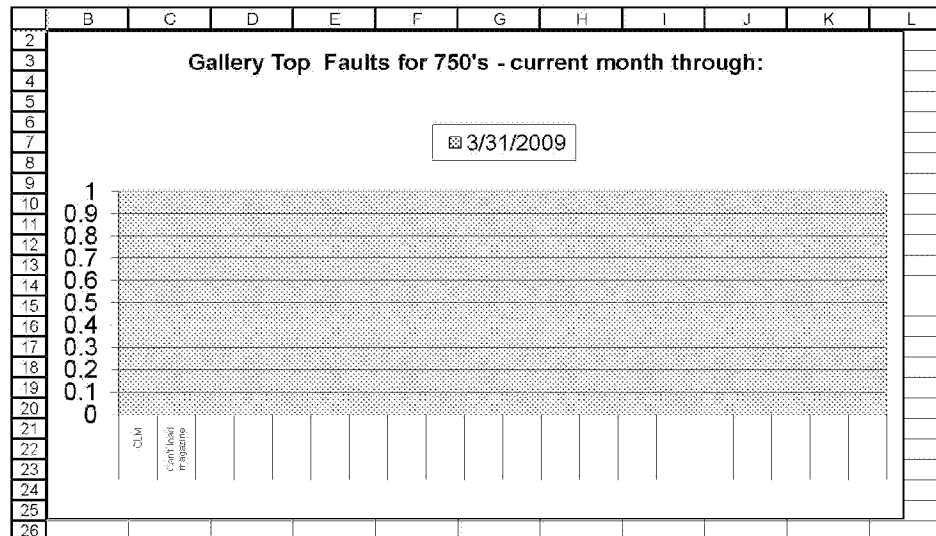

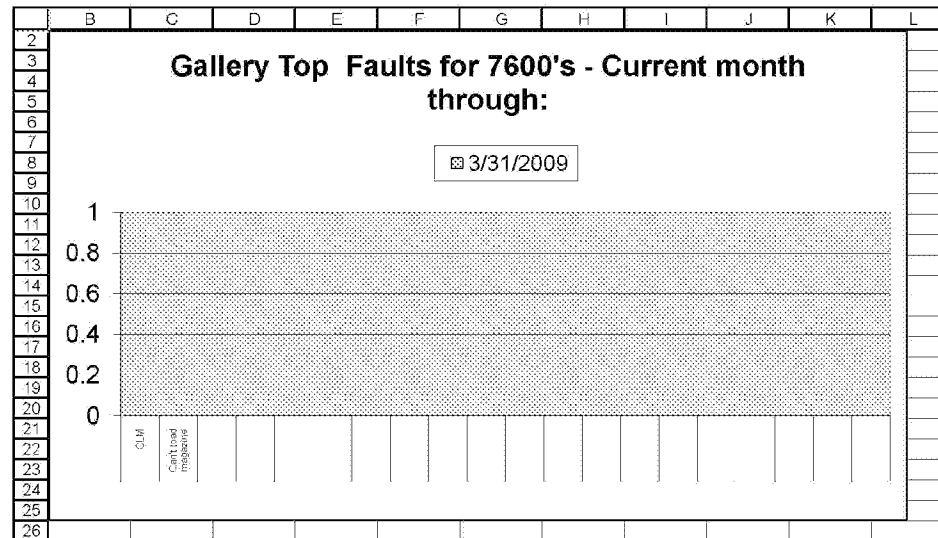

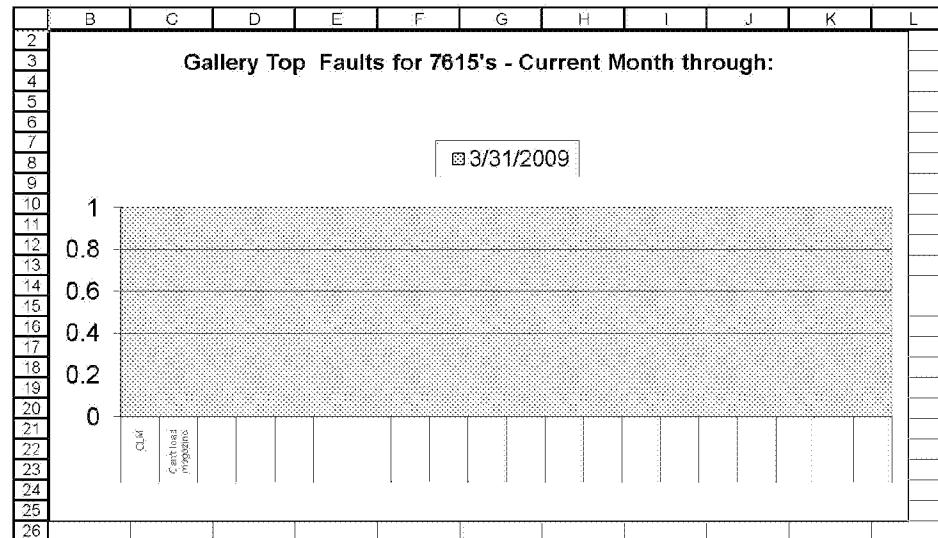

	A	B	C
1	AB	Action binds	0
2	BABS	Bulge at body shoulder	0
3	BAC	Burr at chamber	0
4	BBMA	BBL-to-bolt misalignment	0
5	BB	Bolt binds/catches	0
6	BCOAB	Bolt catches on anti-bind	0
7	BCOBS	Bolt catches on bolt stop	0
8	BCOF	Bolt catches on follower	0
9	BC	Blows cases	0
10	BHR	Bolt hits receiver	0
11	BHS	Bolt plug hits safety switch	0
12	BLOP	Bar lock or disconnecter out of position	0
13	BLSO	Barrel lug shot off	0
14	BPO	Bolt pulls out	0
15	BSSM	Bolt stems shell in magazine	0
16	BWCD	Bolt won't cam down	0
17	BWCFM	Bolt won't close over full magazine	0
18	CD	Case dented	0
19	CH	Closes hard	0
20	CLM	Can't load magazine	0
21	CO	Cut-off	0
22	CR	Cuts rim	0
23	CS	Cases swell	0
24	CTOG	Chamber torn or gouged	0
25	CTP	Creepy trigger pull	0
26	CWSB	Cams wrong side of action bar	0
27	DBB	Doesn't blow back	0
28	DCS	Double click in safety switch	0
29	DCT	Double click in trigger	0
30	DCU	Doesn't close-up	0
31	DE	Doesn't eject	0
32	DEL	Doesn't eject live round	0
33	DFB	Doesn't feed back	0
34	DFU	Doesn't feed up	0
35	DLO	Doesn't lock open (after last shell)	0
36	DLU	Doesn't lock-up	0
37	DS	Dead safe	0
38	DX	Doesn't extract	0
39	DXL	Doesn't extract live round	0
40	EDS	Extractor drops shell	0
41	ESB	Ejector sticks back	0
42	ESCR	Empty shell catches receiver	0
43	ESS	Extractor stems shell	0
44	FA	Fires automatically	0
45	FB	Follower binds	0
46	FC	Fails to connect	0
47	FCB	Fore-end cracked or broken	0
48	FD	Follows-down	0
49	FF	Fails to fire	0
50	FFP	Flat firing pin	0
51	FOS	Fires on safe	0
52	FPHB	Firing pin hits bbl	0
53	FPHI	Firing pin hits inside rim	0
54	FPO	Floor plate opens	0
55	FPOH	Floor plate opens hard	0
56	FSR	Fires when safe is released	0

	A	B	C
57	FT	Follower tips	0
58	GCSO	Gas cyl shot off	0
59	HBL	Heavy bolt lift	0
60	HMSC	Heading mismatch-steps on case	0
61	HPA	High pressure ammo	0
62	HUR	Hard under rail	0
63	JCS	Jumps cartridge	0
64	JM	Jumps magazine	0
65	JO	Jars off	0
66	LB	Light blow	0
67	MAH	Magazine assembles hard	0
68	MCW	Magazine capacity wrong	0
69	MFA	Misfires (ammo)	0
70	MFOP	Magazine follower out of position	0
71	ML	Magazine loose	0
72	MLH	Magazine loads hard	0
73	MRH	Magazine removes hard	0
74	OH	Opens hard	0
75	OR	Over-rides	0
76	PH	Pulls hard	0
77	PSI	Proof stamp illegible	0
78	PSM	Proof stamp missing	0
79	RBOC	Rings and bulges on case	0
80	RDVV	(Action) release doesn't work	0
81	RIC	Rings in chamber	0
82	RIS	Ring in sholder	0
83	RS	Rim srem	0
84	SBC	Stems bottom chambers	0
85	SEE	Stems bbl extension	0
86	SCB	Stock cracked or broken	0
87	SCX	Shell catches	0
88	SHI	Short indent	0
89	SI	Stems incline	0
90	SIC	Stems in chamber	0
91	SL	shaves lead	0
92	SLC	Stems left side of chamber	0
93	SMOC	Stretch marks on case	0
94	SOR	Stem over-ride	0
95	SP	Stems port	0
96	SR	Shoulder rough	0
97	SRC	Stems right side of chamber	0
98	SRIC	Specific rings in chamber	0
99	SSOC	Surface scratches on case	0
100	STC	Stems top chamber	0
101	SWE	Safety switch works too easily	0
102	SWH	Safety switch works too hard	0
103	SWW	Safety Switch won't work	0
104	TD	Tips down	0
105	TU	Tips up	0
106	TWP	Trigger won't pull	0
107	TWR	Trigger won't retract	0
108	UNCN-T	Uncoded	0
109	XH	Extracts hard	0
110			0
111	HI	High	0
112	LO	Low	0



	A	B	C
113	LEFT	Left	0
114	RIGHT	Right	0
115	DG	Doesn't Group	0
116	FSST	Front sight tipped	0
117	RSTT	Rear sight tipped	0
118	RSBR	Rear sight base raised	0
119	FSTR	Front sight raised	0
120	FSTL	Front sight loose	0
121	RSTL	Rear sight loose	0
122	MGPT-G	Missing parts at target	0
123	UNCN-G	Uncoded nonconformity at target	0
124			0
125	AI-P	Assembly incomplete at proof	0
126	BBB	Barrel bracket cracked or broken at proof	0
127	BC-P	Blows cases at proof	0
128	BEB-P	Barrel extension broken at proof	0
129	BLP-P	Blanked primer at proof	0
130	BLSO-P	Barrel lug shot off at proof	0
131	BP-P	Blown primer at proof	0
132	BS-P	Barrel split at proof	0
133	DBF-P	Damaged Bolt Face	0
134	DLOS-P	Doesn't lock over shells at proof	0
135	ESBBP-P	Ejector sticks back -Blown Primer cup	0
136	ESBEC-P	Ejector sticks back - Ejector Crescent	0
137	FCB-P	Fore-end cracked at proof	0
138	FESO-P	Fore-end shot off at proof	0
139	FF-P	Fails to fire at proof	0
140	GCSO-P	Gas cylinder shot off at proof	0
141	MSI-P	Magnaflux stamp illegible on bbl	0
142	MSM-P	Magnaflux stamp missing on bbl	0
143	PP-P	Pierced primer at proof	0
144	SCB-P	Stock cracked or broken at proof	0

	A	B	C
1	AB	Action binds	0
2	BABS	Bulge at body shoulder	0
3	BAC	Burr at chamber	0
4	BBMA	BBL-to-bolt misalignment	0
5	BB	Bolt binds/catches	0
6	BCOAB	Bolt catches on anti-bind	0
7	BCOBS	Bolt catches on bolt stop	0
8	BCOF	Bolt catches on follower	0
9	BC	Blows cases	0
10	BHR	Bolt hits receiver	0
11	BHS	Bolt plug hits safety switch	0
12	BLOP	Bar lock or disconnecter out of position	0
13	BLSO	Barrel lug shot off	0
14	BPO	Bolt pulls out	0
15	BSSM	Bolt stems shell in magazine	0
16	BWCD	Bolt won't cam down	0
17	BWCFM	Bolt won't close over full magazine	0
18	CD	Case dented	0
19	CH	Closes hard	0
20	CLM	Can't load magazine	0
21	CO	Cut-off	0
22	CR	Cuts rim	0
23	CS	Cases swell	0
24	CTOG	Chamber torn or gouged	0
25	CTP	Creepy trigger pull	0
26	CWSB	Cams wrong side of action bar	0
27	DBB	Doesn't blow back	0
28	DCS	Double click in safety switch	0
29	DCT	Double click in trigger	0
30	DCU	Doesn't close-up	0
31	DE	Doesn't eject	0
32	DEL	Doesn't eject live round	0
33	DFB	Doesn't feed back	0
34	DFU	Doesn't feed up	0
35	DLO	Doesn't lock open (after last shell)	0
36	DLU	Doesn't lock-up	0
37	DS	Dead safe	0
38	DX	Doesn't extract	0
39	DXL	Doesn't extract live round	0
40	EDS	Extractor drops shell	0
41	ESB	Ejector sticks back	0
42	ESCR	Empty shell catches receiver	0
43	ESS	Extractor stems shell	0
44	FA	Fires automatically	0
45	FB	Follower binds	0
46	FC	Fails to connect	0
47	FCB	Fore-end cracked or broken	0
48	FD	Follows-down	0
49	FF	Fails to fire	0
50	FFP	Flat firing pin	0
51	FOS	Fires on safe	0
52	FPHB	Firing pin hits bbl	0
53	FPHI	Firing pin hits inside rim	0
54	FPO	Floor plate opens	0
55	FPOH	Floor plate opens hard	0
56	FSR	Fires when safe is released	0

	A	B	C
57	FT	Follower tips	0
58	GCSO	Gas cyl shot off	0
59	HBL	Heavy bolt lift	0
60	HMSC	Heading mismatch-steps on case	0
61	HPA	High pressure ammo	0
62	HUR	Hard under rail	0
63	JCS	Jumps cartridge	0
64	JM	Jumps magazine	0
65	JO	Jars off	0
66	LB	Light blow	0
67	MAH	Magazine assembles hard	0
68	MCW	Magazine capacity wrong	0
69	MFA	Misfires (ammo)	0
70	MFOP	Magazine follower out of position	0
71	ML	Magazine loose	0
72	MLH	Magazine loads hard	0
73	MRH	Magazine removes hard	0
74	OH	Opens hard	0
75	OR	Over-rides	0
76	PH	Pulls hard	0
77	PSI	Proof stamp illegible	0
78	PSM	Proof stamp missing	0
79	RBOC	Rings and bulges on case	0
80	RDVV	(Action) release doesn't work	0
81	RIC	Rings in chamber	0
82	RIS	Ring in sholder	0
83	RS	Rim srem	0
84	SBC	Stems bottom chambers	0
85	SEE	Stems bbl extension	0
86	SCB	Stock cracked or broken	0
87	SCX	Shell catches	0
88	SHI	Short indent	0
89	SI	Stems incline	0
90	SIC	Stems in chamber	0
91	SL	shaves lead	0
92	SLC	Stems left side of chamber	0
93	SMOC	Stretch marks on case	0
94	SOR	Stem over-ride	0
95	SP	Stems port	0
96	SR	Shoulder rough	0
97	SRC	Stems right side of chamber	0
98	SRIC	Specific rings in chamber	0
99	SSOC	Surface scratches on case	0
100	STC	Stems top chamber	0
101	SWE	Safety switch works too easily	0
102	SWH	Safety switch works too hard	0
103	SWW	Safety Switch won't work	0
104	TD	Tips down	0
105	TU	Tips up	0
106	TWP	Trigger won't pull	0
107	TWR	Trigger won't retract	0
108	UNCN-T	Uncoded	0
109	XH	Extracts hard	0
110			0
111	HI	High	0
112	LO	Low	0

	A	B	C
113	LEFT	Left	0
114	RIGHT	Right	0
115	DG	Doesn't Group	0
116	FSST	Front sight tipped	0
117	RSTT	Rear sight tipped	0
118	RSBR	Rear sight base raised	0
119	FSTR	Front sight raised	0
120	FSTL	Front sight loose	0
121	RSTL	Rear sight loose	0
122	MGPT-G	Missing parts at target	0
123	UNCN-G	Uncoded nonconformity at target	0
124			0
125	AI-P	Assembly incomplete at proof	0
126	BBB	Barrel bracket cracked or broken at proof	0
127	BC-P	Blows cases at proof	0
128	BEB-P	Barrel extension broken at proof	0
129	BLP-P	Blanked primer at proof	0
130	BLSO-P	Barrel lug shot off at proof	0
131	BP-P	Blown primer at proof	0
132	BS-P	Barrel split at proof	0
133	DBF-P	Damaged Bolt Face	0
134	DLOS-P	Doesn't lock over shells at proof	0
135	ESBBP-P	Ejector sticks back -Blown Primer cup	0
136	ESBEC-P	Ejector sticks back - Ejector Crescent	0
137	FCB-P	Fore-end cracked at proof	0
138	FESO-P	Fore-end shot off at proof	0
139	FF-P	Fails to fire at proof	0
140	GCSO-P	Gas cylinder shot off at proof	0
141	MSI-P	Magnaflux stamp illegible on bbl	0
142	MSM-P	Magnaflux stamp missing on bbl	0
143	PP-P	Pierced primer at proof	0
144	SCB-P	Stock cracked or broken at proof	0

	A	B	C
1	AB	Action binds	0
2	BABS	Bulge at body shoulder	0
3	BAC	Burr at chamber	0
4	BBMA	BBL-to-bolt misalignment	0
5	BB	Bolt binds/catches	0
6	BCOAB	Bolt catches on anti-bind	0
7	BCOBS	Bolt catches on bolt stop	0
8	BCOF	Bolt catches on follower	0
9	BC	Blows cases	0
10	BHR	Bolt hits receiver	0
11	BHS	Bolt plug hits safety switch	0
12	BLOP	Bar lock or disconnecter out of position	0
13	BLSO	Barrel lug shot off	0
14	BPO	Bolt pulls out	0
15	BSSM	Bolt stems shell in magazine	0
16	BWCD	Bolt won't cam down	0
17	BWCFM	Bolt won't close over full magazine	0
18	CD	Case dented	0
19	CH	Closes hard	0
20	CLM	Can't load magazine	0
21	CO	Cut-off	0
22	CR	Cuts rim	0
23	CS	Cases swell	0
24	CTOG	Chamber torn or gouged	0
25	CTP	Creepy trigger pull	0
26	CWSB	Cams wrong side of action bar	0
27	DBB	Doesn't blow back	0
28	DCS	Double click in safety switch	0
29	DCT	Double click in trigger	0
30	DCU	Doesn't close-up	0
31	DE	Doesn't eject	0
32	DEL	Doesn't eject live round	0
33	DFB	Doesn't feed back	0
34	DFU	Doesn't feed up	0
35	DLO	Doesn't lock open (after last shell)	0
36	DLU	Doesn't lock-up	0
37	DS	Dead safe	0
38	DX	Doesn't extract	0
39	DXL	Doesn't extract live round	0
40	EDS	Extractor drops shell	0
41	ESB	Ejector sticks back	0
42	ESCR	Empty shell catches receiver	0
43	ESS	Extractor stems shell	0
44	FA	Fires automatically	0
45	FB	Follower binds	0
46	FC	Fails to connect	0
47	FCB	Fore-end cracked or broken	0
48	FD	Follows-down	0
49	FF	Fails to fire	0
50	FFP	Flat firing pin	0
51	FOS	Fires on safe	0
52	FPHB	Firing pin hits bbl	0
53	FPHI	Firing pin hits inside rim	0
54	FPO	Floor plate opens	0
55	FPOH	Floor plate opens hard	0
56	FSR	Fires when safe is released	0

	A	B	C
57	FT	Follower tips	0
58	GCSO	Gas cyl shot off	0
59	HBL	Heavy bolt lift	0
60	HMSC	Heading mismatch-steps on case	0
61	HPA	High pressure ammo	0
62	HUR	Hard under rail	0
63	JCS	Jumps cartridge	0
64	JM	Jumps magazine	0
65	JO	Jars off	0
66	LB	Light blow	0
67	MAH	Magazine assembles hard	0
68	MCW	Magazine capacity wrong	0
69	MFA	Misfires (ammo)	0
70	MFOP	Magazine follower out of position	0
71	ML	Magazine loose	0
72	MLH	Magazine loads hard	0
73	MRH	Magazine removes hard	0
74	OH	Opens hard	0
75	OR	Over-rides	0
76	PH	Pulls hard	0
77	PSI	Proof stamp illegible	0
78	PSM	Proof stamp missing	0
79	RBOC	Rings and bulges on case	0
80	RDVV	(Action) release doesn't work	0
81	RIC	Rings in chamber	0
82	RIS	Ring in sholder	0
83	RS	Rim srem	0
84	SBC	Stems bottom chambers	0
85	SEE	Stems bbl extension	0
86	SCB	Stock cracked or broken	0
87	SCX	Shell catches	0
88	SHI	Short indent	0
89	SI	Stems incline	0
90	SIC	Stems in chamber	0
91	SL	shaves lead	0
92	SLC	Stems left side of chamber	0
93	SMOC	Stretch marks on case	0
94	SOR	Stem over-ride	0
95	SP	Stems port	0
96	SR	Shoulder rough	0
97	SRC	Stems right side of chamber	0
98	SRIC	Specific rings in chamber	0
99	SSOC	Surface scratches on case	0
100	STC	Stems top chamber	0
101	SWE	Safety switch works too easily	0
102	SWH	Safety switch works too hard	0
103	SWW	Safety Switch won't work	0
104	TD	Tips down	0
105	TU	Tips up	0
106	TWP	Trigger won't pull	0
107	TWR	Trigger won't retract	0
108	UNCN-T	Uncoded	0
109	XH	Extracts hard	0
110			0
111	HI	High	0
112	LO	Low	0

	A	B	C
113	LEFT	Left	0
114	RIGHT	Right	0
115	DG	Doesn't Group	0
116	FSST	Front sight tipped	0
117	RSTT	Rear sight tipped	0
118	RSBR	Rear sight base raised	0
119	FSTR	Front sight raised	0
120	FSTL	Front sight loose	0
121	RSTL	Rear sight loose	0
122	MGPT-G	Missing parts at target	0
123	UNCN-G	Uncoded nonconformity at target	0
124			0
125	AI-P	Assembly incomplete at proof	0
126	BBB	Barrel bracket cracked or broken at proof	0
127	BC-P	Blows cases at proof	0
128	BEB-P	Barrel extension broken at proof	0
129	BLP-P	Blanked primer at proof	0
130	BLSO-P	Barrel lug shot off at proof	0
131	BP-P	Blown primer at proof	0
132	BS-P	Barrel split at proof	0
133	DBF-P	Damaged Bolt Face	0
134	DLOS-P	Doesn't lock over shells at proof	0
135	ESBBP-P	Ejector sticks back - Blown Primer cup	0
136	ESBEC-P	Ejector sticks back - Ejector Crescent	0
137	FCB-P	Fore-end cracked at proof	0
138	FESO-P	Fore-end shot off at proof	0
139	FF-P	Fails to fire at proof	0
140	GCSO-P	Gas cylinder shot off at proof	0
141	MSI-P	Magnaflux stamp illegible on bbl	0
142	MSM-P	Magnaflux stamp missing on bbl	0
143	PP-P	Pierced primer at proof	0
144	SCB-P	Stock cracked or broken at proof	0

	A	B	C
1	AB	Action binds	0
2	BABS	Bulge at body shoulder	0
3	BAC	Burr at chamber	0
4	BBMA	BBL-to-bolt misalignment	0
5	BB	Bolt binds/catches	0
6	BCOAB	Bolt catches on anti-bind	0
7	BCOBS	Bolt catches on bolt stop	0
8	BCOF	Bolt catches on follower	0
9	BC	Blows cases	0
10	BHR	Bolt hits receiver	0
11	BHS	Bolt plug hits safety switch	0
12	BLOP	Bar lock or disconnecter out of position	0
13	BLSO	Barrel lug shot off	0
14	BPO	Bolt pulls out	0
15	BSSM	Bolt stems shell in magazine	0
16	BWCD	Bolt won't cam down	0
17	BWCFM	Bolt won't close over full magazine	0
18	CD	Case dented	0
19	CH	Closes hard	0
20	CLM	Can't load magazine	0
21	CO	Cut-off	0
22	CR	Cuts rim	0
23	CS	Cases swell	0
24	CTOG	Chamber torn or gouged	0
25	CTP	Creepy trigger pull	0
26	CWSB	Cams wrong side of action bar	0
27	DBB	Doesn't blow back	0
28	DCS	Double click in safety switch	0
29	DCT	Double click in trigger	0
30	DCU	Doesn't close-up	0
31	DE	Doesn't eject	0
32	DEL	Doesn't eject live round	0
33	DFB	Doesn't feed back	0
34	DFU	Doesn't feed up	0
35	DLO	Doesn't lock open (after last shell)	0
36	DLU	Doesn't lock-up	0
37	DS	Dead safe	0
38	DX	Doesn't extract	0
39	DXL	Doesn't extract live round	0
40	EDS	Extractor drops shell	0
41	ESB	Ejector sticks back	0
42	ESCR	Empty shell catches receiver	0
43	ESS	Extractor stems shell	0
44	FA	Fires automatically	0
45	FB	Follower binds	0
46	FC	Fails to connect	0
47	FCB	Fore-end cracked or broken	0
48	FD	Follows-down	0
49	FF	Fails to fire	0
50	FFP	Flat firing pin	0
51	FOS	Fires on safe	0
52	FPHB	Firing pin hits bbl	0
53	FPHI	Firing pin hits inside rim	0
54	FPO	Floor plate opens	0
55	FPOH	Floor plate opens hard	0
56	FSR	Fires when safe is released	0



	A	B	C
57	FT	Follower tips	0
58	GCSO	Gas cyl shot off	0
59	HBL	Heavy bolt lift	0
60	HMSC	Heading mismatch-steps on case	0
61	HPA	High pressure ammo	0
62	HUR	Hard under rail	0
63	JCS	Jumps cartridge	0
64	JM	Jumps magazine	0
65	JO	Jars off	0
66	LB	Light blow	0
67	MAH	Magazine assembles hard	0
68	MCW	Magazine capacity wrong	0
69	MFA	Misfires (ammo)	0
70	MFOP	Magazine follower out of position	0
71	ML	Magazine loose	0
72	MLH	Magazine loads hard	0
73	MRH	Magazine removes hard	0
74	OH	Opens hard	0
75	OR	Over-rides	0
76	PH	Pulls hard	0
77	PSI	Proof stamp illegible	0
78	PSM	Proof stamp missing	0
79	RBOC	Rings and bulges on case	0
80	RDVV	(Action) release doesn't work	0
81	RIC	Rings in chamber	0
82	RIS	Ring in sholder	0
83	RS	Rim srem	0
84	SBC	Stems bottom chambers	0
85	SEE	Stems bbl extension	0
86	SCB	Stock cracked or broken	0
87	SCX	Shell catches	0
88	SHI	Short indent	0
89	SI	Stems incline	0
90	SIC	Stems in chamber	0
91	SL	shaves lead	0
92	SLC	Stems left side of chamber	0
93	SMOC	Stretch marks on case	0
94	SOR	Stem over-ride	0
95	SP	Stems port	0
96	SR	Shoulder rough	0
97	SRC	Stems right side of chamber	0
98	SRIC	Specific rings in chamber	0
99	SSOC	Surface scratches on case	0
100	STC	Stems top chamber	0
101	SWE	Safety switch works too easily	0
102	SWH	Safety switch works too hard	0
103	SWW	Safety Switch won't work	0
104	TD	Tips down	0
105	TU	Tips up	0
106	TWP	Trigger won't pull	0
107	TWR	Trigger won't retract	0
108	UNCN-T	Uncoded	0
109	XH	Extracts hard	0
110			0
111	HI	High	0
112	LO	Low	0

	A	B	C
113	LEFT	Left	0
114	RIGHT	Right	0
115	DG	Doesn't Group	0
116	FSST	Front sight tipped	0
117	RSTT	Rear sight tipped	0
118	RSBR	Rear sight base raised	0
119	FSTR	Front sight raised	0
120	FSTL	Front sight loose	0
121	RSTL	Rear sight loose	0
122	MGPT-G	Missing parts at target	0
123	UNCN-G	Uncoded nonconformity at target	0
124			0
125	AI-P	Assembly incomplete at proof	0
126	BBB	Barrel bracket cracked or broken at proof	0
127	BC-P	Blows cases at proof	0
128	BEB-P	Barrel extension broken at proof	0
129	BLP-P	Blanked primer at proof	0
130	BLSO-P	Barrel lug shot off at proof	0
131	BP-P	Blown primer at proof	0
132	BS-P	Barrel split at proof	0
133	DBF-P	Damaged Bolt Face	0
134	DLOS-P	Doesn't lock over shells at proof	0
135	ESBBP-P	Ejector sticks back - Blown Primer cup	0
136	ESBEC-P	Ejector sticks back - Ejector Crescent	0
137	FCB-P	Fore-end cracked at proof	0
138	FESO-P	Fore-end shot off at proof	0
139	FF-P	Fails to fire at proof	0
140	GCSO-P	Gas cylinder shot off at proof	0
141	MSI-P	Magnaflux stamp illegible on bbl	0
142	MSM-P	Magnaflux stamp missing on bbl	0
143	PP-P	Pierced primer at proof	0
144	SCB-P	Stock cracked or broken at proof	0

# Centerfire

	A	B	D	E	F	G	H	I	J	P	Q	
1	<b>Summary</b>		Total Tested	13254								Grand totals
2			Total Rejected:	417								
3			Overall Reject Rate:	3.15								
5		Shot:	6807	1322	1664	1500	844	872	252		13261	
6	<b>Proof</b>	Rejected:	20	12	4	10	3	0	5	0	54	
7		Percent:	0.3	0.9	0.2	0.7	0.4	0.0	2.0		0.4	
9			Shot:	6677	1392	1630	1447	816	937	249	106	13264
10	<b>Test</b>	Rejected:	211	41	33	38	14	14	4	4	359	
11		Percent:	3.2	2.9	2.0	2.6	1.7	1.5	1.6	3.8	2.7	
13			Shot:	591	109	100	135	62	871	24		1892
14	<b>Target</b>	Rejected:	0	0	0	0	0	4	0	0	4	
15		Percent:	0.0	0.0	0.0	0.0	0.0	0.5	0.0		0.2	
17	CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7	Rimfire	totals	
18												
19	AB	Action binds								1	1	
20	BABS	Bulge at body shoulder										
21	BAC	Burr at chamber	1		1						2	
22	BBMA	BBL-to-bolt misalignment										
23	BB	Bolt binds/catches	26	2	9	1	1	5		1	45	
24	BCOAB	Bolt catches on anti-bind										
25	BCOBS	Bolt catches on bolt stop										
26	BCOF	Bolt catches on follower		1							1	
27	BC	Blows cases										
28	BHR	Bolt hits receiver										
29	BHS	Bolt plug hits safety switch										
30	BLOP	Bar lock or disconnecter out of position										
31	BLSO	Barrel lug shot off										
32	BPO	Bolt pulls out	1								1	
33	BSSM	Bolt stems shell in magazine										
34	BWCD	Bolt won't cam down			1						1	
35	BWCFM	Bolt won't close over full magazine										
36	CD	Case dented										
37	CH	Closes hard	30	1	5	2			3		41	
38	CLM	Can't load magazine	14	4		4	3				25	
39	CO	Cut-off										
40	CR	Cuts rim										

# Centerfire

	A	B	D	E	F	G	H	I	J	P	Q
17	CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7	Rimfire	totals
41	CS	Cases swell									
42	CTOG	Chamber torn or gouged									
43	CTP	Creepy trigger pull									
44	CWSB	Cams wrong side of action bar									
45	DBB	Doesn't blow back									
46	DCS	Double click in safety switch									
47	DCT	Double click in trigger									
48	DCU	Doesn't close-up									
49	DE	Doesn't eject	2	2		2	1				7
50	DEL	Doesn't eject live round	3	3							6
51	DFB	Doesn't feed back									
52	DFU	Doesn't feed up									
53	DLO	Doesn't lock open (after last shell)									
54	DLU	Doesn't lock-up								1	1
55	DS	Dead safe									
56	DX	Doesn't extract	12	3	2	9	1				27
57	DXL	Doesn't extract live round					1				1
58	EDS	Extractor drops shell	12	1	4	2					19
59	ESB	Ejector sticks back	4			1		1			6
60	ESCR	Empty shell catches receiver				1					1
61	ESS	Extractor stems shell									
62	FA	Fires automatically									
63	FB	Follower binds									
64	FC	Fails to connect								1	1
65	FCB	Fore-end cracked or broken									
66	FD	Follows-down									
67	FF	Fails to fire		1		1	1				3
68	FFP	Flat firing pin									
69	FOS	Fires on safe									
70	FPHB	Firing pin hits bbl									
71	FPHI	Firing pin hits inside rim									
72	FPO	Floor plate opens	15	7	4	2	3	1			32
73	FPOH	Floor plate opens hard									

# Centerfire


	A	B	D	E	F	G	H	I	J	P	Q
17	CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7	Rimfire	totals
74	FSR	Fires when safe is released									
75	FT	Follower tips									
76	GCSO	Gas cyl shot off									
77	HBL	Heavy bolt lift									
78	HMSC	Heading mismatch-steps on case									
79	HPA	High pressure ammo									
80	HUR	Hard under rail	1	1							2
81	JCS	Jumps cartridge									
82	JM	Jumps magazine	17	1		1	1				20
83	JO	Jars off									
84	LB	Light blow									
85	MAH	Magazine assembles hard									
86	MCW	Magazine capacity wrong									
87	MFA	Misfires (ammo)									
88	MFOP	Magazine follower out of position									
89	ML	Magazine loose									
90	MLH	Magazine loads hard									
91	MRH	Magazine removes hard	1								1
92	OH	Opens hard	12	1	1		1				16
93	OR	Over-rides	27	1		9	1				38
94	PH	Pulls hard									
95	PSI	Proof stamp illegible									
96	PSM	Proof stamp missing									
97	RBOC	Rings and bulges on case									
98	RDW	(Action) release doesn't work				1		2			3
99	RIC	Rings in chamber	1								1
100	RIS	Ring in sholder									
101	RS	Rim srem									
102	SBC	Stems bottom chambers	4						1		5
103	SBE	Stems bbl extension									
104	SCB	Stock cracked or broken									
105	SCX	Shell catches									
106	SHI	Short indent									

# Centerfire

	A	B	D	E	F	G	H	I	J	P	Q
17	CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7	Rimfire	totals
107	SI	Stems incline	1					1			2
108	SIC	Stems in chamber									
109	SL	shaves lead									
110	SLC	Stems left side of chamber									
111	SMOC	Stretch marks on case									
112	SOR	Stem over-ride	6	8	1	1		1			17
113	SP	Stems port									
114	SR	Shoulder rough									
115	SRC	Stems right side of chamber									
116	SRIC	Specific rings in chamber									
117	SSOC	Surface scratches on case									
118	STC	Stems top chamber	4								4
119	SWE	Safety switch works too easily									
120	SWH	Safety switch works too hard		4							4
121	SWW	Safety Switch won't work									
122	TD	Tips down									
123	TU	Tips up									
124	TWP	Trigger won't pull									
125	TWR	Trigger won't retract									
126	UNCN-T	Uncoded	5					1			6
127	XH	Extracts hard	12		5	1		2			20
128											
129	HI	High									
130	LO	Low									
131	LEFT	Left									
132	RIGHT	Right									
133	DG	Doesn't Group						4			4
134	FSST	Front sight tipped									
135	RSTT	Rear sight tipped									
136	RSBR	Rear sight base raised									
137	FSTR	Front sight raised									
138	FSTL	Front sight loose									
139	RSTL	Rear sight loose									

# Centerfire

	A	B	D	E	F	G	H	I	J	P	Q
17	CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7	Rimfire	totals
140	MGPT-G	Missing parts at target									
141	UNCN-G	Uncoded nonconformity at target									
142											
143	AI-P	Assembly incomplete at proof									
144	BBB	Barrel bracket cracked or broken at proof									
145	BC-P	Blows cases at proof									
146	BEB-P	Barrel extension broken at proof									
147	BLP-P	Blanked primer at proof									
148	BLSO-P	Barrel lug shot off at proof									
149	BP-P	Blown primer at proof					1				1
150	BS-P	Barrel split at proof									
151	DBF-P	Damaged Bolt Face	12	9	3	3			2		29
152	DLOS-P	Doesn't lock over shells at proof									
153	ESBBP-P	Ejector sticks back -Blown Primer cup									
154	ESBEC-P	Ejector sticks back - Ejector Crescent									
155	FCB-P	Fore-end cracked at proof									
156	FESO-P	Fore-end shot off at proof									
157	FF-P	Fails to fire at proof		1							1
158	GCSO-P	Gas cylinder shot off at proof									
159	MSI-P	Magnaflux stamp illegible on bbl									
160	MSM-P	Magnaflux stamp missing on bbl									
161	PP-P	Pierced primer at proof									
162	SCB-P	Stock cracked or broken at proof									
163	UNCM-P	Uncoded proof malfunctions	8	2	1	7	2		3		23

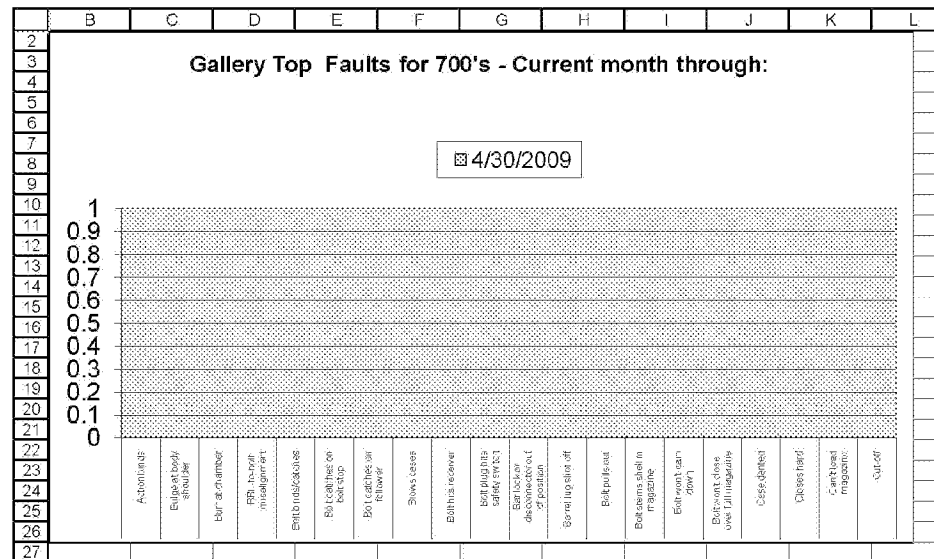



	A	B	C
1	AB	Action binds	0
2	BABS	Bulge at body shoulder	0
3	BAC	Burr at chamber	0
4	BBMA	BBL-to-bolt misalignment	0
5	BB	Bolt binds/catches	0
6	BCOBS	Bolt catches on bolt stop	0
7	BCOF	Bolt catches on follower	0
8	BC	Blows cases	0
9	BHR	Bolt hits receiver	0
10	BHS	Bolt plug hits safety switch	0
11	BLOP	Bar lock or disconnecter out of position	0
12	BLSO	Barrel lug shot off	0
13	BPO	Bolt pulls out	0
14	BSSM	Bolt stems shell in magazine	0
15	BWCD	Bolt won't cam down	0
16	BWCFM	Bolt won't close over full magazine	0
17	CD	Case dented	0
18	CH	Closes hard	0
19	CLM	Can't load magazine	0
20	CO	Cut-off	0
21	CR	Cuts rim	0
22	CS	Cases swell	0
23	CTOG	Chamber torn or gouged	0
24	CTP	Creepy trigger pull	0
25	CWSB	Cams wrong side of action bar	0
26	DBB	Doesn't blow back	0
27	DCS	Double click in safety switch	0
28	DCT	Double click in trigger	0
29	DCU	Doesn't close-up	0
30	DE	Doesn't eject	0
31	DEL	Doesn't eject live round	0
32	DFB	Doesn't feed back	0
33	DFU	Doesn't feed up	0
34	DLO	Doesn't lock open (after last shell)	0
35	DLU	Doesn't lock-up	0
36	DS	Dead safe	0
37	DX	Doesn't extract	0
38	DXL	Doesn't extract live round	0
39	EDS	Extractor drops shell	0
40	ESB	Ejector sticks back	0
41	ESCR	Empty shell catches receiver	0
42	ESS	Extractor stems shell	0
43	FA	Fires automatically	0
44	FB	Follower binds	0
45	FC	Fails to connect	0
46	FCB	Fore-end cracked or broken	0
47	FD	Follows-down	0
48	FF	Fails to fire	0
49	FFP	Flat firing pin	0
50	FOS	Fires on safe	0
51	FPHB	Firing pin hits bbl	0
52	FPHI	Firing pin hits inside rim	0
53	FPO	Floor plate opens	0
54	FPOH	Floor plate opens hard	0
55	FSR	Fires when safe is released	0
56	FT	Follower tips	0

	A	B	C
57	GCSO	Gas cyl shot off	0
58	HBL	Heavy bolt lift	0
59	HMSC	Heading mismatch-steps on case	0
60	HPA	High pressure ammo	0
61	HUR	Hard under rail	0
62	JCS	Jumps cartridge	0
63	JM	Jumps magazine	0
64	JO	Jars off	0
65	LB	Light blow	0
66	MAH	Magazine assembles hard	0
67	MCW	Magazine capacity wrong	0
68	MFA	Misfires (ammo)	0
69	MFOP	Magazine follower out of position	0
70	ML	Magazine loose	0
71	MLH	Magazine loads hard	0
72	MRH	Magazine removes hard	0
73	OH	Opens hard	0
74	OR	Over-rides	0
75	PH	Pulls hard	0
76	PSI	Proof stamp illegible	0
77	PSM	Proof stamp missing	0
78	RBOC	Rings and bulges on case	0
79	RDW	(Action) release doesn't work	0
80	RIC	Rings in chamber	0
81	RIS	Ring in sholder	0
82	RS	Rim srem	0
83	SBC	Stems bottom chambers	0
84	SBE	Stems bbl extension	0
85	SCB	Stock cracked or broken	0
86	SCX	Shell catches	0
87	SHI	Short indent	0
88	SI	Stems incline	0
89	SIC	Stems in chamber	0
90	SL	shaves lead	0
91	SIC	Stems left side of chamber	0
92	SMOC	Stretch marks on case	0
93	SOR	Stem over-ride	0
94	SP	Stems port	0
95	SR	Shoulder rough	0
96	SRC	Stems right side of chamber	0
97	SRIC	Specific rings in chamber	0
98	SSOC	Surface scratches on case	0
99	STC	Stems top chamber	0
100	SWE	Safety switch works too easily	0
101	SWH	Safety switch works too hard	0
102	SWW	Safety Switch won't work	0
103	TD	Tips down	0
104	TU	Tips up	0
105	TWP	Trigger won't pull	0
106	TWR	Trigger won't retract	0
107	UNCN-T	Uncoded	0
108	XH	Extracts hard	0
109			0
110	HI	High	0
111	LO	Low	0
112	LEFT	Left	0

	A	B	C
113	RIGHT	Right	0
114	DG	Doesn't Group	0
115	FSST	Front sight tipped	0
116	RSTT	Rear sight tipped	0
117	RSBR	Rear sight base raised	0
118	FSTR	Front sight raised	0
119	FSTL	Front sight loose	0
120	RSTL	Rear sight loose	0
121	MGPT-G	Missing parts at target	0
122	UNCN-G	Uncoded nonconformity at target	0
123			0
124	AI-P	Assembly incomplete at proof	0
125	BBB	Barrel bracket cracked or broken at proof	0
126	BC-P	Blows cases at proof	0
127	BEB-P	Barrel extension broken at proof	0
128	BLP-P	Blanked primer at proof	0
129	BLSO-P	Barrel lug shot off at proof	0
130	BP-P	Blown primer at proof	0
131	BS-P	Barrel split at proof	0
132	DBF-P	Damaged Bolt Face	0
133	DLOS-P	Doesn't lock over shells at proof	0
134	ESBBP-P	Ejector sticks back -Blown Primer cup	0
135	ESBEC-P	Ejector sticks back - Ejector Crescent	0
136	FCB-P	Fore-end cracked at proof	0
137	FESO-P	Fore-end shot off at proof	0
138	FF-P	Fails to fire at proof	0
139	GCSO-P	Gas cylinder shot off at proof	0
140	MSI-P	Magnaflux stamp illegible on bbl	0
141	MSM-P	Magnaflux stamp missing on bbl	0
142	PP-P	Pierced primer at proof	0
143	SCB-P	Stock cracked or broken at proof	0
144	BCOAB	Bolt catches on anti-bind	
145	BCOAB	Bolt catches on anti-bind	
146			
147			
148			
149			
150	4/30/2009		

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>632</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>14</b>													
3		<b>Overall Reject Rate:</b>		<b>2.22</b>													<i>totals</i>
5		Shot:		253	65		98	31		187							634
6		Rejected:		0	1	0	0	0	0	2	0	0	0	0	0	0	3
7		Percent:		0.0	1.5		0.0	0.0		1.1							0.5
9		Shot:		248	68		98	31		187							632
10		Rejected:		4	0	0	2	3	0	2	0	0	0	0	0	0	11
11		Percent:		1.6	0.0		2.0	9.7		1.1							1.7
13		Shot:		25	6		10	3		19							63
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0		0.0	0.0		0.0							0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		1													1
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard								1							1
38	CLM	Can't load magazine						2									2
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		1													1
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		1													1
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard						1									1
93	OR	Over-rides		1			2										3
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers								1							1
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face								2							2
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof			1												1
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>563</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>20</b>													
3		<b>Overall Reject Rate:</b>		<b>3.55</b>													<i>totals</i>
5		Shot:		226	45	113	101	50	90	7							632
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:		0.0	0.0	0.0	0.0	0.0	0.0	0.0							0.0
9		Shot:		226	44	97	75	50	64	7							543
10		Rejected:		14	3	0	2	0	1	0	0	0	0	0	0	0	20
11		Percent:		6.2	6.8	0.0	2.7	0.0	1.6	0.0							3.8
13		Shot:		17	5	3	7	5	64								101
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0	0.0	0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		1													1
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard		2													2
38	CLM	Can't load magazine			1												1
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cam wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract			1		2										3
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire			1												1
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens		11													11
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride							1								1
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>436</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>7</b>													
3		<b>Overall Reject Rate:</b>		<b>1.61</b>													<i>totals</i>
5		Shot:		113	104	46	29	45	56	18							411
6		Rejected:		0	1	0	0	0	0	0	0	0	0	0	0	0	1
7		Percent:		0.0	1.0	0.0	0.0	0.0	0.0	0.0							0.2
9		Shot:		113	103	46	29	45	82	18							436
10		Rejected:		1	2	0	0	1	0	2	0	0	0	0	0	0	6
11		Percent:		0.9	1.9	0.0	0.0	2.2	0.0	11.1							1.4
13		Shot:		5	1	5	3	4	66	2							86
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0	0.0	0.0	0.0							0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		1													1
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard			1					2							3
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens						1									1
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine			1												1
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face			1												1
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		<i>Shot:</i>															
6		<b>Proof</b>	<i>Rejected:</i>	0	0	0	0	0	0	0	0	0	0	0	0	0	0
7			<i>Percent:</i>														
9		<i>Shot:</i>															
10		<b>Test</b>	<i>Rejected:</i>	0	0	0	0	0	0	0	0	0	0	0	0	0	0
11			<i>Percent:</i>														
13		<i>Shot:</i>															
14		<b>Target</b>	<i>Rejected:</i>	0	0	0	0	0	0	0	0	0	0	0	0	0	0
15			<i>Percent:</i>														
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>450</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>17</b>													
3		<b>Overall Reject Rate:</b>		<b>3.78</b>													<i>totals</i>
5		Shot:		187	101	32	53	11	75	3							862
6		Rejected:		1	2	0	0	0	0	0	0	0	0	0	0	0	3
7		Percent:		0.5	2.0	0.0	0.0	0.0	0.0	0.0							0.6
9		Shot:		176	100	32	53	11	75	3							430
10		Rejected:		2	9	0	2	0	1	0	0	0	0	0	0	0	14
11		Percent:		1.1	9.0	0.0	3.8	0.0	1.3	0.0							3.1
13		Shot:		18	7		4	1	75								103
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0		0.0	0.0	0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard		2			1										3
38	CLM	Can't load magazine			1												1
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cam wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens			1		1										2
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work							1								1
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride			7												7
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		1													1
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions			2												2

**Cell:** E163  
**Comment:** lingalry;  
broken bolt handle

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>555</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>15</b>													
3		<b>Overall Reject Rate:</b>		<b>2.70</b>													<i>totals</i>
5		Shot:		376	66	63		52									557
6		Rejected:		0	1	0	0	0	0	0	0	0	0	0	0	0	1
7		Percent:		0.0	1.5	0.0		0.0									0.2
9		Shot:		350	68	63		52								22	595
10		Rejected:		12	2	0	0	0	0	0	0	0	0	0	0	0	14
11		Percent:		3.4	2.9	0.0		0.0							0.0		2.5
13		Shot:		27	7	6		5									45
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0		0.0									0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches	2														2
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine	1														1
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject		2	1												3
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPHB	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens		3													3
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail			1												1
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard		4													4
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face			1												1
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>586</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>29</b>													
3		<b>Overall Reject Rate:</b>		<b>4.95</b>													<i>totals</i>
5		Shot:		361	105		45	79									586
6		Rejected:		0	2	0	2	2	0	0	0	0	0	0	0	0	6
7		Percent:		0.0	1.9		4.4	2.5									1.0
9		Shot:		361	105		43	77									586
10		Rejected:		15	1	0	7	0	0	0	0	0	0	0	0	0	23
11		Percent:		4.2	1.0		16.3	0.0									3.9
13		Shot:		33			5	8									46
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0			0.0	0.0									0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard					1										1
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell			1												1
59	ESB	Ejector sticks back		1													1
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire					1										1
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine		2													2
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard		1													1
93	OR	Over-rides		10			5										15
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers		1													1
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face			2		2										4
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions						2									2

Cell: H163

Comment: illegal:  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>698</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>24</b>													
3		<b>Overall Reject Rate:</b>		<b>3.44</b>													<i>totals</i>
5		Shot:		445	1	80	88	84									698
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:		0.0	0.0	0.0	0.0	0.0									0.0
9		Shot:		445	1	80	88	84									698
10		Rejected:		18	0	2	1	3	0	0	0	0	0	0	0	0	24
11		Percent:		4.0	0.0	2.5	1.1	3.6									3.4
13		Shot:		45		3	7	8									63
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0		0.0	0.0	0.0									0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber				1											1
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches	1		1			1									3
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard	1														1
38	CLM	Can't load magazine					1										1
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		1													1
57	DXL	Doesn't extract live round						1									1
58	EDS	Extractor drops shell		1													1
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides		3				1									3
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber		1													1
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers		1													1
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber		1													1
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded		5													5
127	XH	Extracts hard		3													3
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

**Cell:** D126

**Comment:** illegal;  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		<i>Shot:</i>															
6		<b>Proof</b>	<i>Rejected:</i>	0	0	0	0	0	0	0	0	0	0	0	0	0	0
7			<i>Percent:</i>														
9		<i>Shot:</i>															
10		<b>Test</b>	<i>Rejected:</i>	0	0	0	0	0	0	0	0	0	0	0	0	0	0
11			<i>Percent:</i>														
13		<i>Shot:</i>															
14		<b>Target</b>	<i>Rejected:</i>	0	0	0	0	0	0	0	0	0	0	0	0	0	0
15			<i>Percent:</i>														
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>611</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>28</b>													
3		<b>Overall Reject Rate:</b>		<b>4.58</b>													<i>totals</i>
5		Shot:		439	30	25	36	37	135								702
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:		0.0	0.0	0.0	0.0	0.0	0.0								0.0
9		Shot:		296	71	25	36	47	136								811
10		Rejected:		19	2	0	0	0	3	0	0	0	0	0	0	0	24
11		Percent:		6.4	2.8	0.0	0.0	0.0	2.2								3.9
13		Shot:		28	8	3	4	5	159								207
14		Rejected:		0	0	0	0	0	4	0	0	0	0	0	0	0	4
15		Percent:		0.0	0.0	0.0	0.0	0.0	2.5								1.9
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		1	1												2
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard		1													1
38	CLM	Can't load magazine		2													2
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		1													1
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		2													2
59	ESB	Ejector sticks back		1													1
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens							1								1
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine		7													7
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard		1	1												2
93	OR	Over-rides		1													1
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber		2													2
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded							1								1
127	XH	Extracts hard							1								1
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group							4								4
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

Cell: I126

Comment: illegal:  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>684</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>18</b>													
3		<b>Overall Reject Rate:</b>		<b>2.63</b>													<i>totals</i>
5		Shot:		251	33	213	105	111	48								761
6		Rejected:		0	0	1	0	0	0	0	0	0	0	0	0	0	1
7		Percent:		0.0	0.0	0.5	0.0	0.0	0.0								0.7
9		Shot:		251	33	212	105	83									864
10		Rejected:		7	1	7	2	0	0	0	0	0	0	0	0	0	17
11		Percent:		2.8	3.0	3.3	1.9	0.0									2.5
13		Shot:		18	4	18	7	8	37								90
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0	0.0	0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches			4												4
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard		2													2
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		1													1
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back					1										1
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens				3											3
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine		2			1										3
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard		1													1
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline		1													1
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride			1												1
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face				1											1
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>768</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>18</b>													
3		<b>Overall Reject Rate:</b>		<b>2.34</b>													<i>totals</i>
5		Shot:		415	2	68	94	153	37								768
6		Rejected:		2	0	0	0	0	0	0	0	0	0	0	0	0	2
7		Percent:		0.5	0.0	0.0	0.0	0.0	0.0								0.3
9		Shot:		413	3	68	94	153	37								768
10		Rejected:		6	0	1	2	1	6	0	0	0	0	0	0	0	16
11		Percent:		1.5	0.0	1.5	2.1	0.7	16.2								2.1
13		Shot:		28		5	10	2	31								78
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	8
15		Percent:		0.0		0.0	0.0	0.0	0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches							5								5
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down				1											1
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard		2													2
38	CLM	Can't load magazine		1			1	1									3
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		2			1										3
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides		1													1
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard							1								1
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		2													2
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>648</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>25</b>													
3		<b>Overall Reject Rate:</b>		<b>3.86</b>													<i>totals</i>
5		Shot:		384	26	5	148	7	60								632
6		Rejected:		2	0	0	0	0	0	0	0	0	0	0	0	0	2
7		Percent:		0.5	0.0	0.0	0.0	0.0	0.0								0.3
9		Shot:		383	28	5	148	7	77								648
10		Rejected:		16	3	0	3	0	1	0	0	0	0	0	0	0	23
11		Percent:		4.2	10.7	0.0	2.0	0.0	1.3								3.5
13		Shot:		22	3		2										27
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0		0.0										0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		10													10
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard		2													2
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round			3												3
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract					1										1
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver					1										1
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine		1													1
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard		1													1
93	OR	Over-rides		2													2
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work					1		1								2
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		2													2
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>572</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>15</b>													
3		<b>Overall Reject Rate:</b>		<b>2.62</b>													<i>totals</i>
5		Shot:		478		20	16	37	22								573
6		Rejected:		1	0	0	0	0	0	0	0	0	0	0	0	0	1
7		Percent:		0.2		0.0	0.0	0.0	0.0								0.2
9		Shot:		477		20	16	37	22								572
10		Rejected:		10	0	0	3	1	0	0	0	0	0	0	0	0	14
11		Percent:		2.1		0.0	18.8	2.7	0.0								2.4
13		Shot:		49		1	1	4	22								77
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0		0.0	0.0	0.0	0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		2													2
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine		6													6
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject					2										2
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract					1										1
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		1													1
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire						1									1
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine		1													1
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions		1													1

Cell: D163

Comment: illegal:  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>744</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>18</b>													
3		<b>Overall Reject Rate:</b>		<b>2.42</b>													<i>totals</i>
5		Shot:		410	36	145	92	56									739
6		Rejected:		0	2	0	0	0	0	0	0	0	0	0	0	0	2
7		Percent:		0.0	5.6	0.0	0.0	0.0									0.3
9		Shot:		422	36	145	92	49									744
10		Rejected:		7	1	4	3	1	0	0	0	0	0	0	0	0	16
11		Percent:		1.7	2.8	2.8	3.3	2.0									2.2
13		Shot:		35	1	3	9	1									48
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0	0.0									0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		2													2
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard		1		3											4
38	CLM	Can't load magazine					1										1
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject			1			1									2
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell				1											1
59	ESB	Ejector sticks back		1													1
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard		2													2
93	OR	Over-rides					2										2
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber		1													1
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face			2												2
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>649</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>16</b>													
3		<b>Overall Reject Rate:</b>		<b>2.47</b>													<i>totals</i>
5		Shot:		449	56	39	17		86	13							662
6		Rejected:		2	0	1	0	0	0	3	0	0	0	0	0	0	6
7		Percent:		0.4	0.0	2.6	0.0		0.0	23.1							8.9
9		Shot:		448	58	39	34		35	13						22	649
10		Rejected:		7	0	1	1	0	0	0	0	0	0	0	0	1	19
11		Percent:		1.6	0.0	2.6	2.9		0.0	0.0						4.5	1.5
13		Shot:		43	6	4	1		35	1							90
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0		0.0	0.0							0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds														1	1
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard		1													1
38	CLM	Can't load magazine		1			1										2
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cam wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back		1													1
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens		1		1											2
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine		1													1
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides		1													1
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride		1													1
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		2													2
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions				1				3							3

**Cell:** F163

**Comment:** illegal:  
broken trigger

**Cell:** J163

**Comment:** illegal:  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>714</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>18</b>													
3		<b>Overall Reject Rate:</b>		<b>2.52</b>													<i>totals</i>
5		Shot:		171	150	161	123		80								685
6		Rejected:		1	0	0	0	0	0	0	0	0	0	0	0	0	1
7		Percent:		0.6	0.0	0.0	0.0	0.0	0.0								0.7
9		Shot:		170	150	161	123		110								714
10		Rejected:		7	5	5	0	0	0	0	0	0	0	0	0	0	17
11		Percent:		4.1	3.3	3.1	0.0		0.0								2.4
13		Shot:		16	17	12	13		110								168
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0		0.0								0.6
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber		1													1
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches				2											2
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower			1												1
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard				2											2
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract				1											1
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		1													1
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard		1													1
93	OR	Over-rides		2													2
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride		2													2
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard			4												4
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		1													1
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>723</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>12</b>													
3		<b>Overall Reject Rate:</b>		<b>1.66</b>													<i>totals</i>
5		Shot:		372	121	208	11			3							715
6		Rejected:		5	0	0	0	0	0	0	0	0	0	0	0	0	5
7		Percent:		1.3	0.0	0.0	0.0			0.0							0.7
9		Shot:		370	120	208	11									14	713
10		Rejected:		1	2	3	0	0	0	0	0	0	0	0	0	1	7
11		Percent:		0.3	1.7	1.4	0.0								7.1		1.0
13		Shot:		38	12	15	1										66
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0										0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		1													1
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract			1												1
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect														1	1
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens			1												1
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride				1											1
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard				2											2
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		1													1
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions		4													4

Cell: D163

Comment: illegal:  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>629</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>15</b>													
3		<b>Overall Reject Rate:</b>		<b>2.38</b>													<i>totals</i>
5		Shot:		96	141	129	91	51	135								643
6		Rejected:		1	3	0	0	1	0	0	0	0	0	0	0	0	5
7		Percent:		1.0	2.1	0.0	0.0	2.0	0.0								0.8
9		Shot:		96	138	129	81	50	135								839
10		Rejected:		1	1	2	2	2	2	0	0	0	0	0	0	0	10
11		Percent:		1.0	0.7	1.6	2.5	4.0	1.5								1.8
13		Shot:		9	13	4	18	4	108								156
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0	0.0	0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches			1												1
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine			1												1
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract					1	1									2
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back							1								1
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine						1									1
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard		1		1											2
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline							1								1
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard					1										1
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof						1									1
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		1	3												4
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>290</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>25</b>													
3		<b>Overall Reject Rate:</b>		<b>8.62</b>													<i>totals</i>
5		Shot:		144			30										174
6		Rejected:		2	0	0	0	0	0	0	0	0	0	0	0	0	2
7		Percent:		1.4			0.0										1.1
9		Shot:		170	30				90								260
10		Rejected:		23	0	0	0	0	0	0	0	0	0	0	0	0	23
11		Percent:		13.5	0.0				0.0								7.9
13		Shot:		17	3				90								110
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0				0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out		1													1
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard		14													14
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round		3													3
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides		5													5
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions		2													2

Cell: D163

Comment: illegal:  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>586</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>20</b>													
3		<b>Overall Reject Rate:</b>		<b>3.41</b>													<i>totals</i>
5		Shot:		277	50	37	86	19	38								507
6		Rejected:		2	0	0	2	0	0	0	0	0	0	0	0	0	8
7		Percent:		0.7	0.0	0.0	2.3	0.0	0.0								0.8
9		Shot:		303	50	37	85	19	44							48	546
10		Rejected:		9	0	3	2	0	0	0	0	0	0	0	0	2	16
11		Percent:		3.0	0.0	8.1	2.4	0.0	0.0							4.2	2.7
13		Shot:		30	5	2	9	2	44								92
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0	0.0	0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches														1	1
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard		1													1
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cam wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up														1	1
55	DS	Dead safe															
56	DX	Doesn't extract					1										1
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens					1										1
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine		2													2
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard		1													1
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride		3													3
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard		2		3											3
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		2													2
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions					2										2

Cell: G163

Comment: illegal:  
broken trigger



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>623</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>28</b>													
3		<b>Overall Reject Rate:</b>		<b>4.49</b>													<i>totals</i>
5		Shot:		296	91	116	70	21	10								604
6		Rejected:		1	0	1	5	0	0	0	0	0	0	0	0	0	7
7		Percent:		0.3	0.0	0.9	7.1	0.0	0.0								1.2
9		Shot:		296	91	115	70	21	30								623
10		Rejected:		11	6	1	1	2	0	0	0	0	0	0	0	0	21
11		Percent:		3.7	6.6	0.9	1.4	9.5	0.0								3.4
13		Shot:		30	2	6	8	2	30								78
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	8
15		Percent:		0.0	0.0	0.0	0.0	0.0	0.0								8.6
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches	2	1	1												4
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine		1													1
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		1	1												2
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		2			1										3
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens			3			2									5
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine		1													1
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard		1													1
92	OH	Opens hard		1													1
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers		1													1
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard		2													2
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face				1											1
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions		1			5										5

**Cell:** D163

**Comment:** illegal:  
broken trigger

**Cell:** G163

**Comment:** illegal:  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>530</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>16</b>													
3		<b>Overall Reject Rate:</b>		<b>3.02</b>													<i>totals</i>
5		Shot:		378		77	71			21							547
6		Rejected:		0	0	0	1	0	0	0	0	0	0	0	0	0	1
7		Percent:		0.0		0.0	1.4			0.0							0.2
9		Shot:		377		61	71			21							530
10		Rejected:		9	0	4	2	0	0	0	0	0	0	0	0	0	16
11		Percent:		2.4		6.6	2.8			0.0							2.8
13		Shot:		35		6	6			2							48
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0		0.0	0.0			0.0							0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches					1										1
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard		1													1
38	CLM	Can't load magazine		3													3
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		2		1											3
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		1		3	1										5
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides		1													1
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard		1													1
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face					1										1
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>563</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>19</b>													
3		<b>Overall Reject Rate:</b>		<b>3.37</b>													<i>totals</i>
5		Shot:		286	95	87	96										564
6		Rejected:		0	0	1	0	0	0	0	0	0	0	0	0	0	1
7		Percent:		0.0	0.0	1.1	0.0										0.2
9		Shot:		286	95	87	95										563
10		Rejected:		12	3	0	3	0	0	0	0	0	0	0	0	0	18
11		Percent:		4.2	3.2	0.0	3.2										3.2
13		Shot:		27	9	4	10										50
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0										0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		2													2
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		3			2										5
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		3													3
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens			2												2
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail		1													1
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard		2													2
93	OR	Over-rides			1												1
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers		1													1
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride					1										1
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face				1											1
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															


	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															


	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															


	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

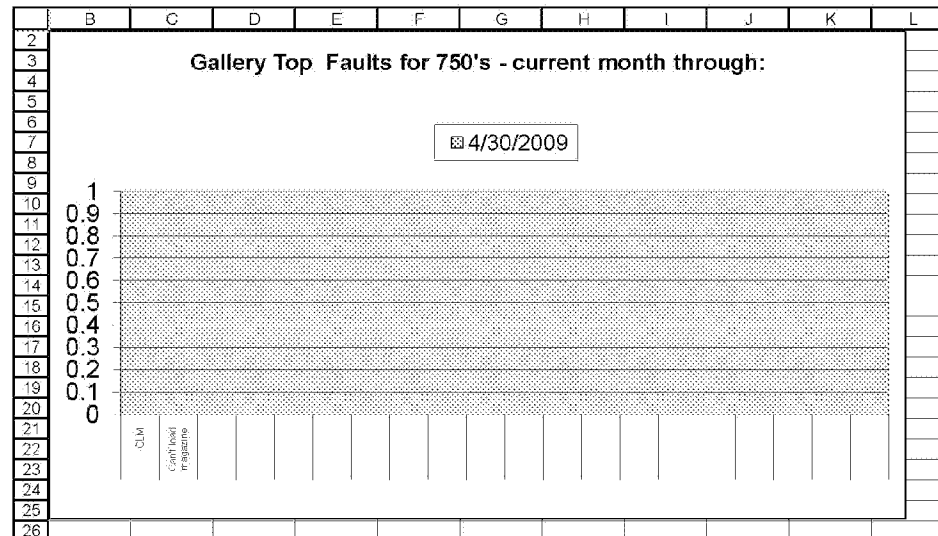

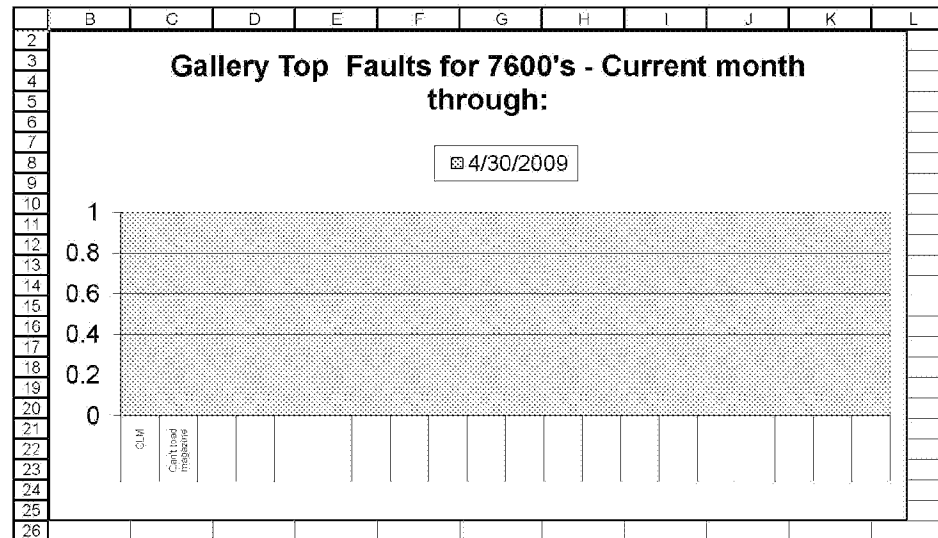

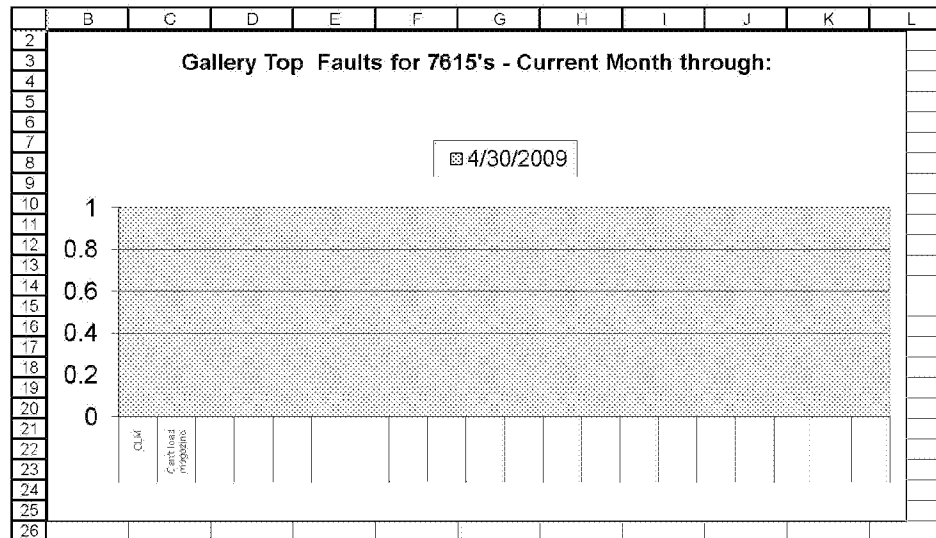

	A	B	C
1	AB	Action binds	0
2	BABS	Bulge at body shoulder	0
3	BAC	Burr at chamber	0
4	BBMA	BBL-to-bolt misalignment	0
5	BB	Bolt binds/catches	0
6	BCOAB	Bolt catches on anti-bind	0
7	BCOBS	Bolt catches on bolt stop	0
8	BCOF	Bolt catches on follower	0
9	BC	Blows cases	0
10	BHR	Bolt hits receiver	0
11	BHS	Bolt plug hits safety switch	0
12	BLOP	Bar lock or disconnecter out of position	0
13	BLSO	Barrel lug shot off	0
14	BPO	Bolt pulls out	0
15	BSSM	Bolt stems shell in magazine	0
16	BWCD	Bolt won't cam down	0
17	BWCFM	Bolt won't close over full magazine	0
18	CD	Case dented	0
19	CH	Closes hard	0
20	CLM	Can't load magazine	0
21	CO	Cut-off	0
22	CR	Cuts rim	0
23	CS	Cases swell	0
24	CTOG	Chamber torn or gouged	0
25	CTP	Creepy trigger pull	0
26	CWSB	Cams wrong side of action bar	0
27	DBB	Doesn't blow back	0
28	DCS	Double click in safety switch	0
29	DCT	Double click in trigger	0
30	DCU	Doesn't close-up	0
31	DE	Doesn't eject	0
32	DEL	Doesn't eject live round	0
33	DFB	Doesn't feed back	0
34	DFU	Doesn't feed up	0
35	DLO	Doesn't lock open (after last shell)	0
36	DLU	Doesn't lock-up	0
37	DS	Dead safe	0
38	DX	Doesn't extract	0
39	DXL	Doesn't extract live round	0
40	EDS	Extractor drops shell	0
41	ESB	Ejector sticks back	0
42	ESCR	Empty shell catches receiver	0
43	ESS	Extractor stems shell	0
44	FA	Fires automatically	0
45	FB	Follower binds	0
46	FC	Fails to connect	0
47	FCB	Fore-end cracked or broken	0
48	FD	Follows-down	0
49	FF	Fails to fire	0
50	FFP	Flat firing pin	0
51	FOS	Fires on safe	0
52	FPHB	Firing pin hits bbl	0
53	FPHI	Firing pin hits inside rim	0
54	FPO	Floor plate opens	0
55	FPOH	Floor plate opens hard	0
56	FSR	Fires when safe is released	0

	A	B	C
57	FT	Follower tips	0
58	GCSO	Gas cyl shot off	0
59	HBL	Heavy bolt lift	0
60	HMSC	Heading mismatch-steps on case	0
61	HPA	High pressure ammo	0
62	HUR	Hard under rail	0
63	JCS	Jumps cartridge	0
64	JM	Jumps magazine	0
65	JO	Jars off	0
66	LB	Light blow	0
67	MAH	Magazine assembles hard	0
68	MCW	Magazine capacity wrong	0
69	MFA	Misfires (ammo)	0
70	MFOP	Magazine follower out of position	0
71	ML	Magazine loose	0
72	MLH	Magazine loads hard	0
73	MRH	Magazine removes hard	0
74	OH	Opens hard	0
75	OR	Over-rides	0
76	PH	Pulls hard	0
77	PSI	Proof stamp illegible	0
78	PSM	Proof stamp missing	0
79	RBOC	Rings and bulges on case	0
80	RDVV	(Action) release doesn't work	0
81	RIC	Rings in chamber	0
82	RIS	Ring in sholder	0
83	RS	Rim srem	0
84	SBC	Stems bottom chambers	0
85	SEE	Stems bbl extension	0
86	SCB	Stock cracked or broken	0
87	SCX	Shell catches	0
88	SHI	Short indent	0
89	SI	Stems incline	0
90	SIC	Stems in chamber	0
91	SL	shaves lead	0
92	SLC	Stems left side of chamber	0
93	SMOC	Stretch marks on case	0
94	SOR	Stem over-ride	0
95	SP	Stems port	0
96	SR	Shoulder rough	0
97	SRC	Stems right side of chamber	0
98	SRIC	Specific rings in chamber	0
99	SSOC	Surface scratches on case	0
100	STC	Stems top chamber	0
101	SWE	Safety switch works too easily	0
102	SWH	Safety switch works too hard	0
103	SWW	Safety Switch won't work	0
104	TD	Tips down	0
105	TU	Tips up	0
106	TWP	Trigger won't pull	0
107	TWR	Trigger won't retract	0
108	UNCN-T	Uncoded	0
109	XH	Extracts hard	0
110			0
111	HI	High	0
112	LO	Low	0

	A	B	C
113	LEFT	Left	0
114	RIGHT	Right	0
115	DG	Doesn't Group	0
116	FSST	Front sight tipped	0
117	RSTT	Rear sight tipped	0
118	RSBR	Rear sight base raised	0
119	FSTR	Front sight raised	0
120	FSTL	Front sight loose	0
121	RSTL	Rear sight loose	0
122	MGPT-G	Missing parts at target	0
123	UNCN-G	Uncoded nonconformity at target	0
124			0
125	AI-P	Assembly incomplete at proof	0
126	BBB	Barrel bracket cracked or broken at proof	0
127	BC-P	Blows cases at proof	0
128	BEB-P	Barrel extension broken at proof	0
129	BLP-P	Blanked primer at proof	0
130	BLSO-P	Barrel lug shot off at proof	0
131	BP-P	Blown primer at proof	0
132	BS-P	Barrel split at proof	0
133	DBF-P	Damaged Bolt Face	0
134	DLOS-P	Doesn't lock over shells at proof	0
135	ESBBP-P	Ejector sticks back -Blown Primer cup	0
136	ESBEC-P	Ejector sticks back - Ejector Crescent	0
137	FCB-P	Fore-end cracked at proof	0
138	FESO-P	Fore-end shot off at proof	0
139	FF-P	Fails to fire at proof	0
140	GCSO-P	Gas cylinder shot off at proof	0
141	MSI-P	Magnaflux stamp illegible on bbl	0
142	MSM-P	Magnaflux stamp missing on bbl	0
143	PP-P	Pierced primer at proof	0
144	SCB-P	Stock cracked or broken at proof	0

	A	B	C
1	AB	Action binds	0
2	BABS	Bulge at body shoulder	0
3	BAC	Burr at chamber	0
4	BBMA	BBL-to-bolt misalignment	0
5	BB	Bolt binds/catches	0
6	BCOAB	Bolt catches on anti-bind	0
7	BCOBS	Bolt catches on bolt stop	0
8	BCOF	Bolt catches on follower	0
9	BC	Blows cases	0
10	BHR	Bolt hits receiver	0
11	BHS	Bolt plug hits safety switch	0
12	BLOP	Bar lock or disconnecter out of position	0
13	BLSO	Barrel lug shot off	0
14	BPO	Bolt pulls out	0
15	BSSM	Bolt stems shell in magazine	0
16	BWCD	Bolt won't cam down	0
17	BWCFM	Bolt won't close over full magazine	0
18	CD	Case dented	0
19	CH	Closes hard	0
20	CLM	Can't load magazine	0
21	CO	Cut-off	0
22	CR	Cuts rim	0
23	CS	Cases swell	0
24	CTOG	Chamber torn or gouged	0
25	CTP	Creepy trigger pull	0
26	CWSB	Cams wrong side of action bar	0
27	DBB	Doesn't blow back	0
28	DCS	Double click in safety switch	0
29	DCT	Double click in trigger	0
30	DCU	Doesn't close-up	0
31	DE	Doesn't eject	0
32	DEL	Doesn't eject live round	0
33	DFB	Doesn't feed back	0
34	DFU	Doesn't feed up	0
35	DLO	Doesn't lock open (after last shell)	0
36	DLU	Doesn't lock-up	0
37	DS	Dead safe	0
38	DX	Doesn't extract	0
39	DXL	Doesn't extract live round	0
40	EDS	Extractor drops shell	0
41	ESB	Ejector sticks back	0
42	ESCR	Empty shell catches receiver	0
43	ESS	Extractor stems shell	0
44	FA	Fires automatically	0
45	FB	Follower binds	0
46	FC	Fails to connect	0
47	FCB	Fore-end cracked or broken	0
48	FD	Follows-down	0
49	FF	Fails to fire	0
50	FFP	Flat firing pin	0
51	FOS	Fires on safe	0
52	FPHB	Firing pin hits bbl	0
53	FPHI	Firing pin hits inside rim	0
54	FPO	Floor plate opens	0
55	FPOH	Floor plate opens hard	0
56	FSR	Fires when safe is released	0



	A	B	C
57	FT	Follower tips	0
58	GCSO	Gas cyl shot off	0
59	HBL	Heavy bolt lift	0
60	HMSC	Heading mismatch-steps on case	0
61	HPA	High pressure ammo	0
62	HUR	Hard under rail	0
63	JCS	Jumps cartridge	0
64	JM	Jumps magazine	0
65	JO	Jars off	0
66	LB	Light blow	0
67	MAH	Magazine assembles hard	0
68	MCW	Magazine capacity wrong	0
69	MFA	Misfires (ammo)	0
70	MFOP	Magazine follower out of position	0
71	ML	Magazine loose	0
72	MLH	Magazine loads hard	0
73	MRH	Magazine removes hard	0
74	OH	Opens hard	0
75	OR	Over-rides	0
76	PH	Pulls hard	0
77	PSI	Proof stamp illegible	0
78	PSM	Proof stamp missing	0
79	RBOC	Rings and bulges on case	0
80	RDVV	(Action) release doesn't work	0
81	RIC	Rings in chamber	0
82	RIS	Ring in sholder	0
83	RS	Rim srem	0
84	SBC	Stems bottom chambers	0
85	SEE	Stems bbl extension	0
86	SCB	Stock cracked or broken	0
87	SCX	Shell catches	0
88	SHI	Short indent	0
89	SI	Stems incline	0
90	SIC	Stems in chamber	0
91	SL	shaves lead	0
92	SLC	Stems left side of chamber	0
93	SMOC	Stretch marks on case	0
94	SOR	Stem over-ride	0
95	SP	Stems port	0
96	SR	Shoulder rough	0
97	SRC	Stems right side of chamber	0
98	SRIC	Specific rings in chamber	0
99	SSOC	Surface scratches on case	0
100	STC	Stems top chamber	0
101	SWE	Safety switch works too easily	0
102	SWH	Safety switch works too hard	0
103	SWW	Safety Switch won't work	0
104	TD	Tips down	0
105	TU	Tips up	0
106	TWP	Trigger won't pull	0
107	TWR	Trigger won't retract	0
108	UNCN-T	Uncoded	0
109	XH	Extracts hard	0
110			0
111	HI	High	0
112	LO	Low	0

	A	B	C
113	LEFT	Left	0
114	RIGHT	Right	0
115	DG	Doesn't Group	0
116	FSST	Front sight tipped	0
117	RSTT	Rear sight tipped	0
118	RSBR	Rear sight base raised	0
119	FSTR	Front sight raised	0
120	FSTL	Front sight loose	0
121	RSTL	Rear sight loose	0
122	MGPT-G	Missing parts at target	0
123	UNCN-G	Uncoded nonconformity at target	0
124			0
125	AI-P	Assembly incomplete at proof	0
126	BBB	Barrel bracket cracked or broken at proof	0
127	BC-P	Blows cases at proof	0
128	BEB-P	Barrel extension broken at proof	0
129	BLP-P	Blanked primer at proof	0
130	BLSO-P	Barrel lug shot off at proof	0
131	BP-P	Blown primer at proof	0
132	BS-P	Barrel split at proof	0
133	DBF-P	Damaged Bolt Face	0
134	DLOS-P	Doesn't lock over shells at proof	0
135	ESBBP-P	Ejector sticks back -Blown Primer cup	0
136	ESBEC-P	Ejector sticks back - Ejector Crescent	0
137	FCB-P	Fore-end cracked at proof	0
138	FESO-P	Fore-end shot off at proof	0
139	FF-P	Fails to fire at proof	0
140	GCSO-P	Gas cylinder shot off at proof	0
141	MSI-P	Magnaflux stamp illegible on bbl	0
142	MSM-P	Magnaflux stamp missing on bbl	0
143	PP-P	Pierced primer at proof	0
144	SCB-P	Stock cracked or broken at proof	0

	A	B	C
1	AB	Action binds	0
2	BABS	Bulge at body shoulder	0
3	BAC	Burr at chamber	0
4	BBMA	BBL-to-bolt misalignment	0
5	BB	Bolt binds/catches	0
6	BCOAB	Bolt catches on anti-bind	0
7	BCOBS	Bolt catches on bolt stop	0
8	BCOF	Bolt catches on follower	0
9	BC	Blows cases	0
10	BHR	Bolt hits receiver	0
11	BHS	Bolt plug hits safety switch	0
12	BLOP	Bar lock or disconnecter out of position	0
13	BLSO	Barrel lug shot off	0
14	BPO	Bolt pulls out	0
15	BSSM	Bolt stems shell in magazine	0
16	BWCD	Bolt won't cam down	0
17	BWCFM	Bolt won't close over full magazine	0
18	CD	Case dented	0
19	CH	Closes hard	0
20	CLM	Can't load magazine	0
21	CO	Cut-off	0
22	CR	Cuts rim	0
23	CS	Cases swell	0
24	CTOG	Chamber torn or gouged	0
25	CTP	Creepy trigger pull	0
26	CWSB	Cams wrong side of action bar	0
27	DBB	Doesn't blow back	0
28	DCS	Double click in safety switch	0
29	DCT	Double click in trigger	0
30	DCU	Doesn't close-up	0
31	DE	Doesn't eject	0
32	DEL	Doesn't eject live round	0
33	DFB	Doesn't feed back	0
34	DFU	Doesn't feed up	0
35	DLO	Doesn't lock open (after last shell)	0
36	DLU	Doesn't lock-up	0
37	DS	Dead safe	0
38	DX	Doesn't extract	0
39	DXL	Doesn't extract live round	0
40	EDS	Extractor drops shell	0
41	ESB	Ejector sticks back	0
42	ESCR	Empty shell catches receiver	0
43	ESS	Extractor stems shell	0
44	FA	Fires automatically	0
45	FB	Follower binds	0
46	FC	Fails to connect	0
47	FCB	Fore-end cracked or broken	0
48	FD	Follows-down	0
49	FF	Fails to fire	0
50	FFP	Flat firing pin	0
51	FOS	Fires on safe	0
52	FPHB	Firing pin hits bbl	0
53	FPHI	Firing pin hits inside rim	0
54	FPO	Floor plate opens	0
55	FPOH	Floor plate opens hard	0
56	FSR	Fires when safe is released	0

	A	B	C
57	FT	Follower tips	0
58	GCSO	Gas cyl shot off	0
59	HBL	Heavy bolt lift	0
60	HMSC	Heading mismatch-steps on case	0
61	HPA	High pressure ammo	0
62	HUR	Hard under rail	0
63	JCS	Jumps cartridge	0
64	JM	Jumps magazine	0
65	JO	Jars off	0
66	LB	Light blow	0
67	MAH	Magazine assembles hard	0
68	MCW	Magazine capacity wrong	0
69	MFA	Misfires (ammo)	0
70	MFOP	Magazine follower out of position	0
71	ML	Magazine loose	0
72	MLH	Magazine loads hard	0
73	MRH	Magazine removes hard	0
74	OH	Opens hard	0
75	OR	Over-rides	0
76	PH	Pulls hard	0
77	PSI	Proof stamp illegible	0
78	PSM	Proof stamp missing	0
79	RBOC	Rings and bulges on case	0
80	RDVV	(Action) release doesn't work	0
81	RIC	Rings in chamber	0
82	RIS	Ring in sholder	0
83	RS	Rim srem	0
84	SBC	Stems bottom chambers	0
85	SEE	Stems bbl extension	0
86	SCB	Stock cracked or broken	0
87	SCX	Shell catches	0
88	SHI	Short indent	0
89	SI	Stems incline	0
90	SIC	Stems in chamber	0
91	SL	shaves lead	0
92	SLC	Stems left side of chamber	0
93	SMOC	Stretch marks on case	0
94	SOR	Stem over-ride	0
95	SP	Stems port	0
96	SR	Shoulder rough	0
97	SRC	Stems right side of chamber	0
98	SRIC	Specific rings in chamber	0
99	SSOC	Surface scratches on case	0
100	STC	Stems top chamber	0
101	SWE	Safety switch works too easily	0
102	SWH	Safety switch works too hard	0
103	SWW	Safety Switch won't work	0
104	TD	Tips down	0
105	TU	Tips up	0
106	TWP	Trigger won't pull	0
107	TWR	Trigger won't retract	0
108	UNCN-T	Uncoded	0
109	XH	Extracts hard	0
110			0
111	HI	High	0
112	LO	Low	0

	A	B	C
113	LEFT	Left	0
114	RIGHT	Right	0
115	DG	Doesn't Group	0
116	FSST	Front sight tipped	0
117	RSTT	Rear sight tipped	0
118	RSBR	Rear sight base raised	0
119	FSTR	Front sight raised	0
120	FSTL	Front sight loose	0
121	RSTL	Rear sight loose	0
122	MGPT-G	Missing parts at target	0
123	UNCN-G	Uncoded nonconformity at target	0
124			0
125	AI-P	Assembly incomplete at proof	0
126	BBB	Barrel bracket cracked or broken at proof	0
127	BC-P	Blows cases at proof	0
128	BEB-P	Barrel extension broken at proof	0
129	BLP-P	Blanked primer at proof	0
130	BLSO-P	Barrel lug shot off at proof	0
131	BP-P	Blown primer at proof	0
132	BS-P	Barrel split at proof	0
133	DBF-P	Damaged Bolt Face	0
134	DLOS-P	Doesn't lock over shells at proof	0
135	ESBBP-P	Ejector sticks back - Blown Primer cup	0
136	ESBEC-P	Ejector sticks back - Ejector Crescent	0
137	FCB-P	Fore-end cracked at proof	0
138	FESO-P	Fore-end shot off at proof	0
139	FF-P	Fails to fire at proof	0
140	GCSO-P	Gas cylinder shot off at proof	0
141	MSI-P	Magnaflux stamp illegible on bbl	0
142	MSM-P	Magnaflux stamp missing on bbl	0
143	PP-P	Pierced primer at proof	0
144	SCB-P	Stock cracked or broken at proof	0

	A	B	C
1	AB	Action binds	0
2	BABS	Bulge at body shoulder	0
3	BAC	Burr at chamber	0
4	BBMA	BBL-to-bolt misalignment	0
5	BB	Bolt binds/catches	0
6	BCOAB	Bolt catches on anti-bind	0
7	BCOBS	Bolt catches on bolt stop	0
8	BCOF	Bolt catches on follower	0
9	BC	Blows cases	0
10	BHR	Bolt hits receiver	0
11	BHS	Bolt plug hits safety switch	0
12	BLOP	Bar lock or disconnecter out of position	0
13	BLSO	Barrel lug shot off	0
14	BPO	Bolt pulls out	0
15	BSSM	Bolt stems shell in magazine	0
16	BWCD	Bolt won't cam down	0
17	BWCFM	Bolt won't close over full magazine	0
18	CD	Case dented	0
19	CH	Closes hard	0
20	CLM	Can't load magazine	0
21	CO	Cut-off	0
22	CR	Cuts rim	0
23	CS	Cases swell	0
24	CTOG	Chamber torn or gouged	0
25	CTP	Creepy trigger pull	0
26	CWSB	Cams wrong side of action bar	0
27	DBB	Doesn't blow back	0
28	DCS	Double click in safety switch	0
29	DCT	Double click in trigger	0
30	DCU	Doesn't close-up	0
31	DE	Doesn't eject	0
32	DEL	Doesn't eject live round	0
33	DFB	Doesn't feed back	0
34	DFU	Doesn't feed up	0
35	DLO	Doesn't lock open (after last shell)	0
36	DLU	Doesn't lock-up	0
37	DS	Dead safe	0
38	DX	Doesn't extract	0
39	DXL	Doesn't extract live round	0
40	EDS	Extractor drops shell	0
41	ESB	Ejector sticks back	0
42	ESCR	Empty shell catches receiver	0
43	ESS	Extractor stems shell	0
44	FA	Fires automatically	0
45	FB	Follower binds	0
46	FC	Fails to connect	0
47	FCB	Fore-end cracked or broken	0
48	FD	Follows-down	0
49	FF	Fails to fire	0
50	FFP	Flat firing pin	0
51	FOS	Fires on safe	0
52	FPHB	Firing pin hits bbl	0
53	FPHI	Firing pin hits inside rim	0
54	FPO	Floor plate opens	0
55	FPOH	Floor plate opens hard	0
56	FSR	Fires when safe is released	0

	A	B	C
57	FT	Follower tips	0
58	GCSO	Gas cyl shot off	0
59	HBL	Heavy bolt lift	0
60	HMSC	Heading mismatch-steps on case	0
61	HPA	High pressure ammo	0
62	HUR	Hard under rail	0
63	JCS	Jumps cartridge	0
64	JM	Jumps magazine	0
65	JO	Jars off	0
66	LB	Light blow	0
67	MAH	Magazine assembles hard	0
68	MCW	Magazine capacity wrong	0
69	MFA	Misfires (ammo)	0
70	MFOP	Magazine follower out of position	0
71	ML	Magazine loose	0
72	MLH	Magazine loads hard	0
73	MRH	Magazine removes hard	0
74	OH	Opens hard	0
75	OR	Over-rides	0
76	PH	Pulls hard	0
77	PSI	Proof stamp illegible	0
78	PSM	Proof stamp missing	0
79	RBOC	Rings and bulges on case	0
80	RDVV	(Action) release doesn't work	0
81	RIC	Rings in chamber	0
82	RIS	Ring in sholder	0
83	RS	Rim srem	0
84	SBC	Stems bottom chambers	0
85	SEE	Stems bbl extension	0
86	SCB	Stock cracked or broken	0
87	SCX	Shell catches	0
88	SHI	Short indent	0
89	SI	Stems incline	0
90	SIC	Stems in chamber	0
91	SL	shaves lead	0
92	SLC	Stems left side of chamber	0
93	SMOC	Stretch marks on case	0
94	SOR	Stem over-ride	0
95	SP	Stems port	0
96	SR	Shoulder rough	0
97	SRC	Stems right side of chamber	0
98	SRIC	Specific rings in chamber	0
99	SSOC	Surface scratches on case	0
100	STC	Stems top chamber	0
101	SWE	Safety switch works too easily	0
102	SWH	Safety switch works too hard	0
103	SWW	Safety Switch won't work	0
104	TD	Tips down	0
105	TU	Tips up	0
106	TWP	Trigger won't pull	0
107	TWR	Trigger won't retract	0
108	UNCN-T	Uncoded	0
109	XH	Extracts hard	0
110			0
111	HI	High	0
112	LO	Low	0

	A	B	C
113	LEFT	Left	0
114	RIGHT	Right	0
115	DG	Doesn't Group	0
116	FSST	Front sight tipped	0
117	RSTT	Rear sight tipped	0
118	RSBR	Rear sight base raised	0
119	FSTR	Front sight raised	0
120	FSTL	Front sight loose	0
121	RSTL	Rear sight loose	0
122	MGPT-G	Missing parts at target	0
123	UNCN-G	Uncoded nonconformity at target	0
124			0
125	AI-P	Assembly incomplete at proof	0
126	BBB	Barrel bracket cracked or broken at proof	0
127	BC-P	Blows cases at proof	0
128	BEB-P	Barrel extension broken at proof	0
129	BLP-P	Blanked primer at proof	0
130	BLSO-P	Barrel lug shot off at proof	0
131	BP-P	Blown primer at proof	0
132	BS-P	Barrel split at proof	0
133	DBF-P	Damaged Bolt Face	0
134	DLOS-P	Doesn't lock over shells at proof	0
135	ESBBP-P	Ejector sticks back - Blown Primer cup	0
136	ESBEC-P	Ejector sticks back - Ejector Crescent	0
137	FCB-P	Fore-end cracked at proof	0
138	FESO-P	Fore-end shot off at proof	0
139	FF-P	Fails to fire at proof	0
140	GCSO-P	Gas cylinder shot off at proof	0
141	MSI-P	Magnaflux stamp illegible on bbl	0
142	MSM-P	Magnaflux stamp missing on bbl	0
143	PP-P	Pierced primer at proof	0
144	SCB-P	Stock cracked or broken at proof	0



# Centerfire

	A	B	D	E	F	G	H	I	J	P	Q
1	<b>Summary</b>	Total Tested	#VALUE!								
2		Total Rejected:	495								
3		Overall Reject Rate:	#VALUE!								Grand totals
5		Shot:	6638	1096	4009	714	333	592	17		13289
6	<b>Proof</b>	Rejected:	15	4	5	2	2	4	1	0	33
7		Percent:	0.2	0.4	0.1	0.3	0.6	0.7	5.9		0.2
9											
10	<b>Test</b>	Shot:	6633	1165	#VALUE!	706	333	505	14	59	#VALUE!
11		Rejected:	184	60	150	39	11	5	0	13	462
12		Percent:	2.8	5.2	#VALUE!	5.5	3.3	1.0	0.0	22.0	#VALUE!
13	<b>Target</b>	Shot:	607	76	326	57	35	445	1		1547
14		Rejected:	0	0	0	0	0	0	0	0	0
15		Percent:	0.0	0.0	0.0	0.0	0.0	0.0	0.0		0.0
17	CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7	Rimfire	totals
18											
19	AB	Action binds								2	2
20	BABS	Bulge at body shoulder									
21	BAC	Burr at chamber		2	3						5
22	BBMA	BBL-to-bolt misalignment									
23	BB	Bolt binds/catches	30	4	44		3	4			88
24	BCOAB	Bolt catches on anti-bind									
25	BCOBS	Bolt catches on bolt stop									
26	BCOF	Bolt catches on follower	2		1						3
27	BC	Blows cases									
28	BHR	Bolt hits receiver									
29	BHS	Bolt plug hits safety switch									
30	BLOP	Bar lock or disconnecter out of position									
31	BLSO	Barrel lug shot off									
32	BPO	Bolt pulls out									
33	BSSM	Bolt stems shell in magazine									
34	BWCD	Bolt won't cam down	1								1
35	BWCFM	Bolt won't close over full magazine				1					1
36	CD	Case dented									
37	CH	Closes hard	10		4	1					15
38	CLM	Can't load magazine	8	24	7	5	5				49
39	CO	Cut-off				1					1
40	CR	Cuts rim									

# Centerfire

	A	B	D	E	F	G	H	I	J	P	Q
17	CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7	Rimfire	totals
41	CS	Cases swell									
42	CTOG	Chamber torn or gouged									
43	CTP	Creepy trigger pull									
44	CWSB	Cams wrong side of action bar									
45	DBB	Doesn't blow back									
46	DCS	Double click in safety switch									
47	DCT	Double click in trigger									
48	DCU	Doesn't close-up									
49	DE	Doesn't eject	2		5	1					8
50	DEL	Doesn't eject live round									
51	DFB	Doesn't feed back									
52	DFU	Doesn't feed up								6	6
53	DLO	Doesn't lock open (after last shell)									
54	DLU	Doesn't lock-up									
55	DS	Dead safe									
56	DX	Doesn't extract	36	10	36	4	2			1	88
57	DXL	Doesn't extract live round									
58	EDS	Extractor drops shell	32	2	15	6					55
59	ESB	Ejector sticks back	3								3
60	ESCR	Empty shell catches receiver									
61	ESS	Extractor stems shell									
62	FA	Fires automatically									
63	FB	Follower binds									
64	FC	Fails to connect								4	4
65	FCB	Fore-end cracked or broken									
66	FD	Follows-down									
67	FF	Fails to fire			1	2					3
68	FFP	Flat firing pin									
69	FOS	Fires on safe									
70	FPHB	Firing pin hits bbl									
71	FPHI	Firing pin hits inside rim									
72	FPO	Floor plate opens	9	3	4	1		1			18
73	FPOH	Floor plate opens hard									

# Centerfire


	A	B	D	E	F	G	H	I	J	P	Q
17	CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7	Rimfire	totals
74	FSR	Fires when safe is released									
75	FT	Follower tips									
76	GCSO	Gas cyl shot off									
77	HBL	Heavy bolt lift	2		4						6
78	HMSC	Heading mismatch-steps on case									
79	HPA	High pressure ammo									
80	HUR	Hard under rail									
81	JCS	Jumps cartridge									
82	JM	Jumps magazine	7	1	5	1					14
83	JO	Jars off									
84	LB	Light blow									
85	MAH	Magazine assembles hard									
86	MCW	Magazine capacity wrong									
87	MFA	Misfires (ammo)									
88	MFOP	Magazine follower out of position									
89	ML	Magazine loose									
90	MLH	Magazine loads hard									
91	MRH	Magazine removes hard									
92	OH	Opens hard	5	2	4	1	1				13
93	OR	Over-rides	5		2	2					9
94	PH	Pulls hard									
95	PSI	Proof stamp illegible									
96	PSM	Proof stamp missing									
97	RBOC	Rings and bulges on case									
98	RDW	(Action) release doesn't work	2	1							3
99	RIC	Rings in chamber	1								1
100	RIS	Ring in sholder									
101	RS	Rim srem									
102	SBC	Stems bottom chambers	14		5						19
103	SBE	Stems bbl extension									
104	SCB	Stock cracked or broken									
105	SCX	Shell catches									
106	SHI	Short indent									

# Centerfire

	A	B	D	E	F	G	H	I	J	P	Q
17	CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7	Rimfire	totals
107	SI	Stems incline	2		3	1					6
108	SIC	Stems in chamber	3	6							9
109	SL	shaves lead									
110	SLC	Stems left side of chamber									
111	SMOC	Stretch marks on case									
112	SOR	Stem over-ride	7	5	4	11					27
113	SP	Stems port									
114	SR	Shoulder rough									
115	SRC	Stems right side of chamber									
116	SRIC	Specific rings in chamber									
117	SSOC	Surface scratches on case									
118	STC	Stems top chamber	1								1
119	SWE	Safety switch works too easily									
120	SWH	Safety switch works too hard									
121	SWW	Safety Switch won't work									
122	TD	Tips down									
123	TU	Tips up									
124	TWP	Trigger won't pull									
125	TWR	Trigger won't retract									
126	UNCN-T	Uncoded									
127	XH	Extracts hard	2		3	1					6
128											
129	HI	High									
130	LO	Low									
131	LEFT	Left									
132	RIGHT	Right									
133	DG	Doesn't Group									
134	FSST	Front sight tipped									
135	RSTT	Rear sight tipped									
136	RSBR	Rear sight base raised									
137	FSTR	Front sight raised									
138	FSTL	Front sight loose									
139	RSTL	Rear sight loose									

# Centerfire

	A	B	D	E	F	G	H	I	J	P	Q
17	CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7	Rimfire	totals
140	MGPT-G	Missing parts at target									
141	UNCN-G	Uncoded nonconformity at target									
142											
143	AI-P	Assembly incomplete at proof			1						1
144	BBB	Barrel bracket cracked or broken at proof									
145	BC-P	Blows cases at proof									
146	BEB-P	Barrel extension broken at proof									
147	BLP-P	Blanked primer at proof									
148	BLSO-P	Barrel lug shot off at proof									
149	BP-P	Blown primer at proof									
150	BS-P	Barrel split at proof									
151	DBF-P	Damaged Bolt Face	8		1				1		10
152	DLOS-P	Doesn't lock over shells at proof									
153	ESBBP-P	Ejector sticks back -Blown Primer cup		1							1
154	ESBEC-P	Ejector sticks back - Ejector Crescent		1							1
155	FCB-P	Fore-end cracked at proof									
156	FESO-P	Fore-end shot off at proof									
157	FF-P	Fails to fire at proof	1		1						2
158	GCSO-P	Gas cylinder shot off at proof									
159	MSI-P	Magnaflux stamp illegible on bbl									
160	MSM-P	Magnaflux stamp missing on bbl									
161	PP-P	Pierced primer at proof									
162	SCB-P	Stock cracked or broken at proof									
163	UNCM-P	Uncoded proof malfunctions	6	2	2	2	2	4			18

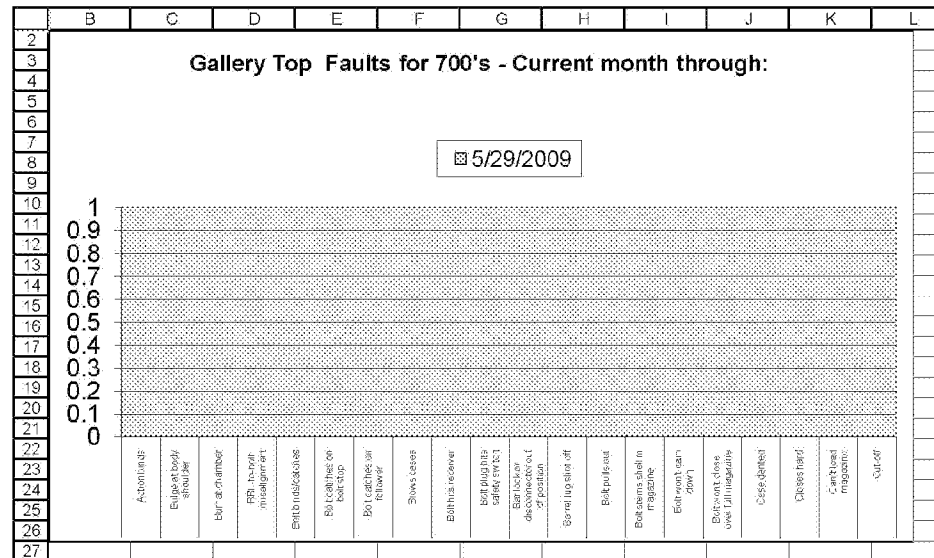

	A	B	C
1	AB	Action binds	0
2	BABS	Bulge at body shoulder	0
3	BAC	Burr at chamber	0
4	BBMA	BBL-to-bolt misalignment	0
5	BB	Bolt binds/catches	0
6	BCOBS	Bolt catches on bolt stop	0
7	BCOF	Bolt catches on follower	0
8	BC	Blows cases	0
9	BHR	Bolt hits receiver	0
10	BHS	Bolt plug hits safety switch	0
11	BLOP	Bar lock or disconnecter out of position	0
12	BLSO	Barrel lug shot off	0
13	BPO	Bolt pulls out	0
14	BSSM	Bolt stems shell in magazine	0
15	BWCD	Bolt won't cam down	0
16	BWCFM	Bolt won't close over full magazine	0
17	CD	Case dented	0
18	CH	Closes hard	0
19	CLM	Can't load magazine	0
20	CO	Cut-off	0
21	CR	Cuts rim	0
22	CS	Cases swell	0
23	CTOG	Chamber torn or gouged	0
24	CTP	Creepy trigger pull	0
25	CWSB	Cams wrong side of action bar	0
26	DBB	Doesn't blow back	0
27	DCS	Double click in safety switch	0
28	DCT	Double click in trigger	0
29	DCU	Doesn't close-up	0
30	DE	Doesn't eject	0
31	DEL	Doesn't eject live round	0
32	DFB	Doesn't feed back	0
33	DFU	Doesn't feed up	0
34	DLO	Doesn't lock open (after last shell)	0
35	DLU	Doesn't lock-up	0
36	DS	Dead safe	0
37	DX	Doesn't extract	0
38	DXL	Doesn't extract live round	0
39	EDS	Extractor drops shell	0
40	ESB	Ejector sticks back	0
41	ESCR	Empty shell catches receiver	0
42	ESS	Extractor stems shell	0
43	FA	Fires automatically	0
44	FB	Follower binds	0
45	FC	Fails to connect	0
46	FCB	Fore-end cracked or broken	0
47	FD	Follows-down	0
48	FF	Fails to fire	0
49	FFP	Flat firing pin	0
50	FOS	Fires on safe	0
51	FPHB	Firing pin hits bbl	0
52	FPHI	Firing pin hits inside rim	0
53	FPO	Floor plate opens	0
54	FPOH	Floor plate opens hard	0
55	FSR	Fires when safe is released	0
56	FT	Follower tips	0

	A	B	C
57	GCSO	Gas cyl shot off	0
58	HBL	Heavy bolt lift	0
59	HMSC	Heading mismatch-steps on case	0
60	HPA	High pressure ammo	0
61	HUR	Hard under rail	0
62	JCS	Jumps cartridge	0
63	JM	Jumps magazine	0
64	JO	Jars off	0
65	LB	Light blow	0
66	MAH	Magazine assembles hard	0
67	MCW	Magazine capacity wrong	0
68	MFA	Misfires (ammo)	0
69	MFOP	Magazine follower out of position	0
70	ML	Magazine loose	0
71	MLH	Magazine loads hard	0
72	MRH	Magazine removes hard	0
73	OH	Opens hard	0
74	OR	Over-rides	0
75	PH	Pulls hard	0
76	PSI	Proof stamp illegible	0
77	PSM	Proof stamp missing	0
78	RBOC	Rings and bulges on case	0
79	RDW	(Action) release doesn't work	0
80	RIC	Rings in chamber	0
81	RIS	Ring in sholder	0
82	RS	Rim srem	0
83	SBC	Stems bottom chambers	0
84	SBE	Stems bbl extension	0
85	SCB	Stock cracked or broken	0
86	SCX	Shell catches	0
87	SHI	Short indent	0
88	SI	Stems incline	0
89	SIC	Stems in chamber	0
90	SL	shaves lead	0
91	SIC	Stems left side of chamber	0
92	SMOC	Stretch marks on case	0
93	SOR	Stem over-ride	0
94	SP	Stems port	0
95	SR	Shoulder rough	0
96	SRC	Stems right side of chamber	0
97	SRIC	Specific rings in chamber	0
98	SSOC	Surface scratches on case	0
99	STC	Stems top chamber	0
100	SWE	Safety switch works too easily	0
101	SWH	Safety switch works too hard	0
102	SWW	Safety Switch won't work	0
103	TD	Tips down	0
104	TU	Tips up	0
105	TWP	Trigger won't pull	0
106	TWR	Trigger won't retract	0
107	UNCN-T	Uncoded	0
108	XH	Extracts hard	0
109			0
110	HI	High	0
111	LO	Low	0
112	LEFT	Left	0



	A	B	C
113	RIGHT	Right	0
114	DG	Doesn't Group	0
115	FSST	Front sight tipped	0
116	RSTT	Rear sight tipped	0
117	RSBR	Rear sight base raised	0
118	FSTR	Front sight raised	0
119	FSTL	Front sight loose	0
120	RSTL	Rear sight loose	0
121	MGPT-G	Missing parts at target	0
122	UNCN-G	Uncoded nonconformity at target	0
123			0
124	AI-P	Assembly incomplete at proof	0
125	BBB	Barrel bracket cracked or broken at proof	0
126	BC-P	Blows cases at proof	0
127	BEB-P	Barrel extension broken at proof	0
128	BLP-P	Blanked primer at proof	0
129	BLSO-P	Barrel lug shot off at proof	0
130	BP-P	Blown primer at proof	0
131	BS-P	Barrel split at proof	0
132	DBF-P	Damaged Bolt Face	0
133	DLOS-P	Doesn't lock over shells at proof	0
134	ESBBP-P	Ejector sticks back -Blown Primer cup	0
135	ESBEC-P	Ejector sticks back - Ejector Crescent	0
136	FCB-P	Fore-end cracked at proof	0
137	FESO-P	Fore-end shot off at proof	0
138	FF-P	Fails to fire at proof	0
139	GCSO-P	Gas cylinder shot off at proof	0
140	MSI-P	Magnaflux stamp illegible on bbl	0
141	MSM-P	Magnaflux stamp missing on bbl	0
142	PP-P	Pierced primer at proof	0
143	SCB-P	Stock cracked or broken at proof	0
144	BCOAB	Bolt catches on anti-bind	
145	BCOAB	Bolt catches on anti-bind	
146			
147			
148			
149			
150	5/29/2009		

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>569</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>15</b>													
3		<b>Overall Reject Rate:</b>		<b>2.64</b>													<i>totals</i>
5		Shot:		112	15	331	9	35		8							519
6		Rejected:		0	0	0	0	0	0	1	0	0	0	0	0	0	1
7		Percent:		0.0	0.0	0.0	0.0	0.0		12.5							0.2
9		Shot:		163	23	331	9	35		8							519
10		Rejected:		3	0	11	0	0	0	0	0	0	0	0	0	0	14
11		Percent:		1.8	0.0	3.3	0.0	0.0		0.0							2.5
13		Shot:		11	2	33	1	4		1							52
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0	0.0		0.0							0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches				8											8
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard				1											1
38	CLM	Can't load magazine				1											1
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject		2													2
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		1		1											2
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face								1							1
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		<i>Shot:</i>															
6		<b>Proof</b>	<i>Rejected:</i>	0	0	0	0	0	0	0	0	0	0	0	0	0	0
7			<i>Percent:</i>														
9		<i>Shot:</i>															
10		<b>Test</b>	<i>Rejected:</i>	0	0	0	0	0	0	0	0	0	0	0	0	0	0
11			<i>Percent:</i>														
13		<i>Shot:</i>															
14		<b>Target</b>	<i>Rejected:</i>	0	0	0	0	0	0	0	0	0	0	0	0	0	0
15			<i>Percent:</i>														
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>811</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>30</b>													
3		<b>Overall Reject Rate:</b>		<b>3.70</b>													<i>totals</i>
5		Shot:		494	90	126	55	5	51	1							822
6		Rejected:		1	1	1	0	0	0	0	0	0	0	0	0	0	3
7		Percent:		0.2	1.1	0.8	0.0	0.0	0.0	0.0							0.4
9		Shot:		493	90	125	47	5	51								811
10		Rejected:		14	3	6	3	0	1	0	0	0	0	0	0	0	27
11		Percent:		2.8	3.3	4.8	6.4	0.0	2.0								3.3
13		Shot:		43	10	12	5		49								124
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0		0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches				1			1								2
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine			2												2
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cam wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		8	1	3											12
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		4			3										7
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens				1											1
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard		2		1											3
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		1													1
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof				1											1
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions				1											1

Cell: E163

Comment: illegal:  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>550</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>20</b>													
3		<b>Overall Reject Rate:</b>		<b>3.64</b>													<i>totals</i>
5		Shot:		256	2	241	2	38	7								546
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:		0.0	0.0	0.0	0.0	0.0	0.0								0.0
9		Shot:		256	2	241	2	38	11								550
10		Rejected:		2	0	16	0	2	0	0	0	0	0	0	0	0	20
11		Percent:		0.8	0.0	6.6	0.0	5.3	0.0								3.6
13		Shot:		8		8		4	4								24
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0		0.0		0.0	0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber				3											3
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches						1									1
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine		1		5		1									7
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		1		3											4
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell				2											2
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine				3											3
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>682</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>14</b>													
3		<b>Overall Reject Rate:</b>		<b>2.05</b>													<i>totals</i>
5		Shot:		564	55	58			5								682
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:		0.0	0.0	0.0			0.0								0.0
9		Shot:		564	55	58			5								682
10		Rejected:		10	1	3	0	0	0	0	0	0	0	0	0	0	14
11		Percent:		1.8	1.8	5.2			0.0								2.1
13		Shot:		24	6	6											36
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0											0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower		1													1
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		4		2											6
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		3													3
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens		1													1
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard			1	1											2
93	OR	Over-rides		1													1
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		715								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		48													
3		<b>Overall Reject Rate:</b>		6.71													<i>totals</i>
5		Shot:		230	31	355	66	3	34	2							721
6		Rejected:		2	0	0	0	1	3	0	0	0	0	0	0	0	6
7		Percent:		0.9	0.0	0.0	0.0	33.3	8.8	0.0							0.8
9		Shot:		230	31	355	66	3	30								715
10		Rejected:		20	2	18	2	0	0	0	0	0	0	0	0	0	42
11		Percent:		8.7	6.5	5.1	3.0	0.0	0.0								5.9
13		Shot:		22	3	34	3		34								96
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0		0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		3		2											5
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard		1			1										2
38	CLM	Can't load magazine		1			1										2
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cam wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		4		9											13
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		2	1	2											3
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire				1											1
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPHB	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens		1													1
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine		2	1	1											4
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard		1													1
93	OR	Over-rides		3		1											3
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline		1													1
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride		1													1
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard				2											2
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		2													2
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions						1	3								3

**Cell:** H163

**Comment:** ilngalry:

screws missing in trigger plate

**Cell:** I163

**Comment:** ilngalry:

broken triggers

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>674</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>33</b>													
3		<b>Overall Reject Rate:</b>		<b>4.90</b>													<i>totals</i>
5		Shot:		473	26	68	79	1	27								676
6		Rejected:		2	0	0	0	0	0	0	0	0	0	0	0	0	2
7		Percent:		0.4	0.0	0.0	0.0	0.0	0.0								0.3
9		Shot:		471	28	68	79	1	27								674
10		Rejected:		14	0	2	13	0	2	0	0	0	0	0	0	0	31
11		Percent:		3.0	0.0	2.9	16.5	0.0	7.4								4.6
13		Shot:		46	3	8	1		1								58
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0		0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		2					2								4
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower		1													1
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine					1										1
36	CD	Case dented															
37	CH	Closes hard		1													1
38	CLM	Can't load magazine					4										4
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		1		1											2
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		1		1											2
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire					2										2
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens		1			1										2
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine		2			1										3
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard					1										1
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work		1													1
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride		2			3										5
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber		1													1
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard		1													1
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions		2													2

Cell: D163

Comment: illegal:  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>671</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>29</b>													
3		<b>Overall Reject Rate:</b>		<b>4.32</b>													<i>totals</i>
5		Shot:		67	29	508	30	12									646
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:		0.0	0.0	0.0	0.0	0.0									0.0
9		Shot:		67	29	508	30	12	25								871
10		Rejected:		1	0	28	0	0	0	0	0	0	0	0	0	0	29
11		Percent:		1.5	0.0	5.5	0.0	0.0	0.0								3.3
13		Shot:		7	2	50	2	25									86
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0	0.0									0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches				11											11
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower				1											1
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard				2											2
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		1		7											8
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell				6											9
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline				1											1
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>764</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>41</b>													
3		<b>Overall Reject Rate:</b>		<b>5.37</b>													<i>totals</i>
5		Shot:		600	9	27	81	2	44	4							767
6		Rejected:		2	0	0	0	0	0	0	0	0	0	0	0	0	2
7		Percent:		0.3	0.0	0.0	0.0	0.0	0.0	0.0							0.3
9		Shot:		597	9	27	81	2	44	4							764
10		Rejected:		37	0	2	0	0	0	0	0	0	0	0	0	0	39
11		Percent:		6.2	0.0	7.4	0.0	0.0	0.0	0.0							5.1
13		Shot:		59	3	8	37										107
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0	0.0	0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		4													4
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard		4													4
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cam wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		5													5
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		5													5
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens				1											1
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard				1											1
93	OR	Over-rides		1													1
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers		13													13
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride		4													4
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard		1													1
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions		2													2

Cell: D163

Comment: illegal:  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>561</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>7</b>													
3		<b>Overall Reject Rate:</b>		<b>1.25</b>													<i>totals</i>
5		Shot:		427	15	88	10	23	1								564
6		Rejected:		3	0	0	0	0	0	0	0	0	0	0	0	0	3
7		Percent:		0.7	0.0	0.0	0.0	0.0	0.0								0.5
9		Shot:		424	15	88	10	23	1								561
10		Rejected:		4	0	0	0	0	0	0	0	0	0	0	0	0	4
11		Percent:		0.9	0.0	0.0	0.0	0.0	0.0								0.7
13		Shot:		33	1	6	2										42
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0		0.0									0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		1													1
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		1													1
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		1													1
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work		1													1
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		3													3
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>642</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>19</b>													
3		<b>Overall Reject Rate:</b>		<b>2.96</b>													<i>totals</i>
5		Shot:		417	21	160	5	26		1							639
6		Rejected:		1	0	0	0	0	0	0	0	0	0	0	0	0	1
7		Percent:		0.2	0.0	0.0	0.0	0.0		0.0							0.2
9		Shot:		429	21	160	5	26		1							642
10		Rejected:		14	1	2	1	0	0	0	0	0	0	0	0	0	18
11		Percent:		3.3	4.8	1.3	20.0	0.0		0.0							2.8
13		Shot:		43	1	10		3									57
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0		0.0									0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard		1													1
38	CLM	Can't load magazine		1													1
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		4		1											%
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		6													%
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard		2	1												3
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers				1											1
103	SBE	Stems bbl extension															
104	SCB	Stook cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline					1										1
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		1													1
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>585</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>28</b>													
3		<b>Overall Reject Rate:</b>		<b>4.79</b>													<i>totals</i>
5		Shot:		357	91	93	38	7									586
6		Rejected:		0	1	0	0	0	0	0	0	0	0	0	0	0	1
7		Percent:		0.0	1.1	0.0	0.0	0.0									0.2
9		Shot:		357	90	93	38	7									585
10		Rejected:		5	10	4	8	0	0	0	0	0	0	0	0	0	27
11		Percent:		1.4	11.1	4.3	21.1	0.0									4.6
13		Shot:		34	4	2	3	1									44
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0	0.0									0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		1													1
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine			10												10
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject					1										1
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		2		4											4
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		2													2
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride					7										7
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup			1												1
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		<i>Shot:</i>															
6		<b>Proof</b>	<i>Rejected:</i>	0	0	0	0	0	0	0	0	0	0	0	0	0	0
7			<i>Percent:</i>														
9		<i>Shot:</i>															
10		<b>Test</b>	<i>Rejected:</i>	0	0	0	0	0	0	0	0	0	0	0	0	0	0
11			<i>Percent:</i>														
13		<i>Shot:</i>															
14		<b>Target</b>	<i>Rejected:</i>	0	0	0	0	0	0	0	0	0	0	0	0	0	0
15			<i>Percent:</i>														
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>760</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>23</b>													
3		<b>Overall Reject Rate:</b>		<b>3.03</b>													<i>totals</i>
5		Shot:		384	84	235	37		36								776
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:		0.0	0.0	0.0	0.0	0.0	0.0								0.0
9		Shot:		384	84	234	37		21								780
10		Rejected:		18	4	1	0	0	0	0	0	0	0	0	0	0	23
11		Percent:		4.7	4.8	0.4	0.0		0.0								3.2
13		Shot:		35	9	24	4		21								93
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0		0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		11													11
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard				1											1
38	CLM	Can't load magazine			1												1
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		3	2												%
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		2													2
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens			1												1
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber		1													1
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers		1													1
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>574</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>36</b>													
3		<b>Overall Reject Rate:</b>		<b>6.27</b>													<i>totals</i>
5		Shot:		227	145	156	68	18	66								688
6		Rejected:		0	0	0	0	1	0	0	0	0	0	0	0	0	1
7		Percent:		0.0	0.0	0.0	0.0	5.6	0.0								0.7
9		Shot:		227	145	15+6	68	18	86							30	574
10		Rejected:		3	13	6	0	0	2	0	0	0	0	0	0	11	36
11		Percent:		1.3	9.0	#VALUE!	0.0	0.0	2.3							36.7	6.1
13		Shot:		22	3	10	7	2	84								128
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0	0.0	0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds														2	2
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches			4	1			1								8
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine			3												3
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cam wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up														6	ñ
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract			1											1	2
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect														2	2
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens		3					1								4
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides				1											1
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stook cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride			5	4											3
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions						1									1

Cell: H163

Comment: illegal:  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>857</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>46</b>													
3		<b>Overall Reject Rate:</b>		<b>5.37</b>													<i>totals</i>
5		Shot:		323	107	376	27		37								879
6		Rejected:		0	2	0	0	0	0	0	0	0	0	0	0	0	2
7		Percent:		0.0	1.9	0.0	0.0		0.0								0.2
9		Shot:		323	106	376	27		25								857
10		Rejected:		14	15	11	4	0	0	0	0	0	0	0	0	0	44
11		Percent:		4.3	14.2	2.9	14.8		0.0								5.1
13		Shot:		21	4	19	3		25								72
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0		0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		2		3											5
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down		1													1
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard		1													1
38	CLM	Can't load magazine		5	5												10
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract			3												3
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell					2										2
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens		1	1	1											3
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift				2											2
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides					1										1
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers				4											4
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline		1													1
108	SIC	Stems in chamber		3	6												8
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard				1	1										2
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent			1												1
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P				1												1

Cell: E163

Comment: illegal:  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>721</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>25</b>													
3		<b>Overall Reject Rate:</b>		<b>3.47</b>													<i>totals</i>
5		Shot:		123	63	318	38	3	163								708
6		Rejected:		0	0	4	2	0	0	0	0	0	0	0	0	0	6
7		Percent:		0.0	0.0	1.3	5.3	0.0	0.0								0.8
9		Shot:		123	63	314	38	3	151							29	721
10		Rejected:		1	3	13	0	0	0	0	0	0	0	0	0	2	19
11		Percent:		0.8	4.8	4.1	0.0	0.0	0.0						6.9		2.6
13		Shot:		13	7	21	4		137								182
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0		0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches			5												5
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine			2												2
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cam wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract			1	5											6
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell				1											1
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect														2	2
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens				1											1
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine		1													1
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard				1											1
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof				1											1
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face				1											1
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions				2	2										4

**Cell:** F143

**Comment:** ilngalry:  
no follower

**Cell:** F163

**Comment:** ilngalry:  
broken trigger

**Cell:** G163

**Comment:** ilngalry:  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>446</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>16</b>													
3		<b>Overall Reject Rate:</b>		<b>3.59</b>													<i>totals</i>
5		Shot:		149	189	152	23	1	58	1							553
6		Rejected:		2	0	0	0	0	1	0	0	0	0	0	0	0	3
7		Percent:		1.3	0.0	0.0	0.0	0.0	1.7	0.0							0.5
9		Shot:		100	189	152	23	1		1							446
10		Rejected:		3	4	0	6	0	0	0	0	0	0	0	0	0	13
11		Percent:		3.0	2.4	0.0	26.1	0.0		0.0							2.9
13		Shot:		9	2	16	1										28
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0										0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine			1												1
39	CO	Cut-off					1										1
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cam wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		1	2		4										7
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		1			1										2
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens			1												1
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine		1													1
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions		2					1								3



**Cell:** D163

**Comment:** illegal:  
broken trigger

**Cell:** I163

**Comment:** illegal:  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>690</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>13</b>													
3		<b>Overall Reject Rate:</b>		<b>1.88</b>													<i>totals</i>
5		Shot:		409	36	185	71		17								729
6		Rejected:		1	0	0	0	0	0	0	0	0	0	0	0	0	1
7		Percent:		0.2	0.0	0.0	0.0		0.0								0.7
9		Shot:		379	38	185	71		17								890
10		Rejected:		9	1	1	1	0	0	0	0	0	0	0	0	0	12
11		Percent:		2.4	2.6	0.5	1.4		0.0								1.7
13		Shot:		38	4	18	8		17								85
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	8
15		Percent:		0.0	0.0	0.0	0.0		0.0								0.6
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		4													4
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		2													2
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift		2		1											3
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine		1													1
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work			1												1
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride					1										1
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof		1													1
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>744</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>15</b>													
3		<b>Overall Reject Rate:</b>		<b>2.02</b>													<i>totals</i>
5		Shot:		476	59	140		8									683
6		Rejected:		1	0	0	0	0	0	0	0	0	0	0	0	0	1
7		Percent:		0.2	0.0	0.0		0.0									0.7
9		Shot:		474	122	140		8									744
10		Rejected:		8	0	5	0	1	0	0	0	0	0	0	0	0	14
11		Percent:		1.7	0.0	3.6		12.5									1.8
13		Shot:		48	12	12											72
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0											0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		1		2											3
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard		2													2
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract				1		1									2
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell				1											1
59	ESB	Ejector sticks back		3													3
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens		2													2
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift				1											1
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		1													1
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>599</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>17</b>													
3		<b>Overall Reject Rate:</b>		<b>2.84</b>													<i>totals</i>
5		Shot:		303	40	132	61	55									531
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:		0.0	0.0	0.0	0.0	0.0									0.0
9		Shot:		303	40	131	61	55	9								539
10		Rejected:		3	3	7	0	4	0	0	0	0	0	0	0	0	17
11		Percent:		1.0	7.5	5.3	0.0	7.3	0.0								2.8
13		Shot:		23	3	12	7	10	9								64
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0	0.0	0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber			2												2
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches				7		1									8
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine						2									2
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		1													1
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		2	1												3
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard						1									1
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>646</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>20</b>													
3		<b>Overall Reject Rate:</b>		<b>3.10</b>													<i>totals</i>
5		Shot:		247	5	260	14	96	48								668
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:		0.0	0.0	0.0	0.0	0.0	0.0								0.0
9		Shot:		269	5	260	14	96	2								846
10		Rejected:		1	0	14	1	4	0	0	0	0	0	0	0	0	20
11		Percent:		0.4	0.0	5.4	7.1	4.2	0.0								3.1
13		Shot:		63		22		9	2								96
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0		0.0		0.0	0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		1		4		1									8
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine				1		2									3
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject				5											5
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract						1									1
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell				1											1
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine				1											1
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides					1										1
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline				2											2
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		<i>Shot:</i>															
6		<b>Proof</b>	<i>Rejected:</i>	0	0	0	0	0	0	0	0	0	0	0	0	0	0
7			<i>Percent:</i>														
9		<i>Shot:</i>															
10		<b>Test</b>	<i>Rejected:</i>	0	0	0	0	0	0	0	0	0	0	0	0	0	0
11			<i>Percent:</i>														
13		<i>Shot:</i>															
14		<b>Target</b>	<i>Rejected:</i>	0	0	0	0	0	0	0	0	0	0	0	0	0	0
15			<i>Percent:</i>														
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															




	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															


	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															


	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

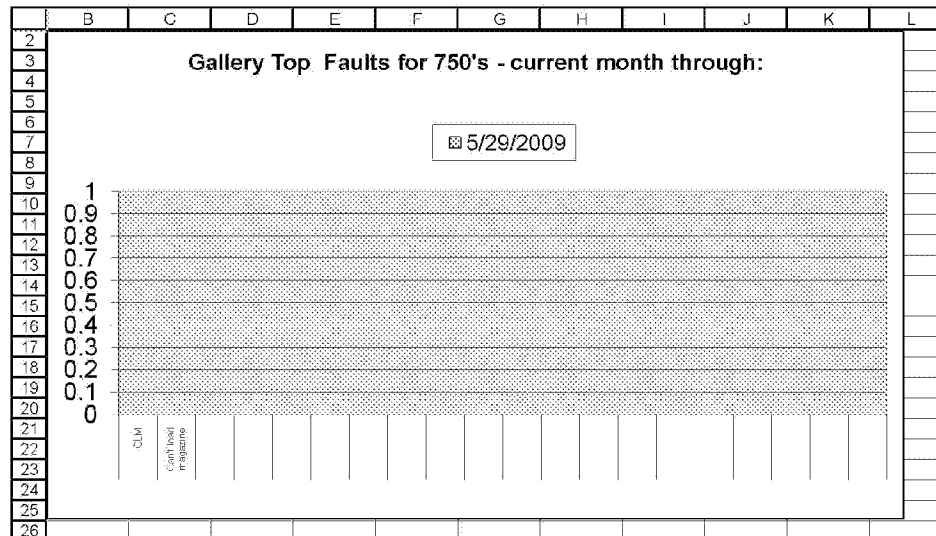

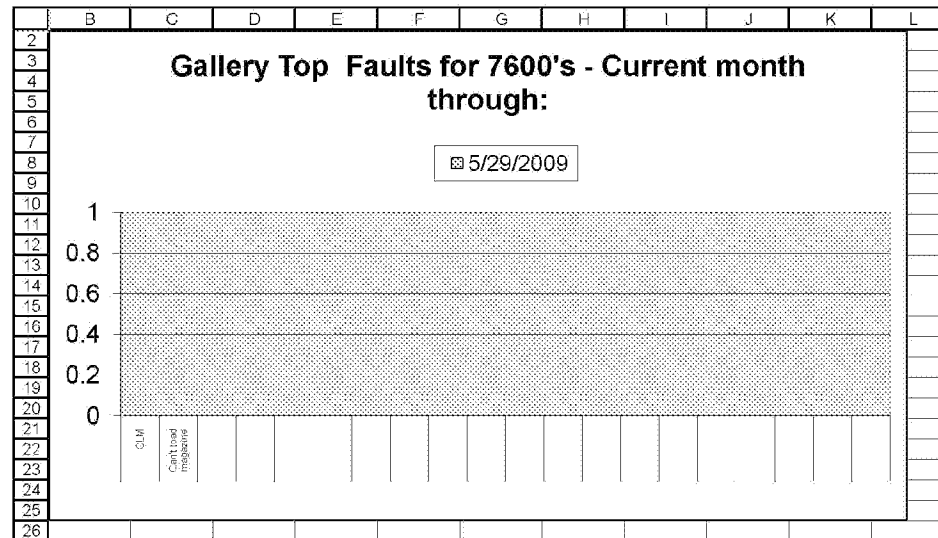

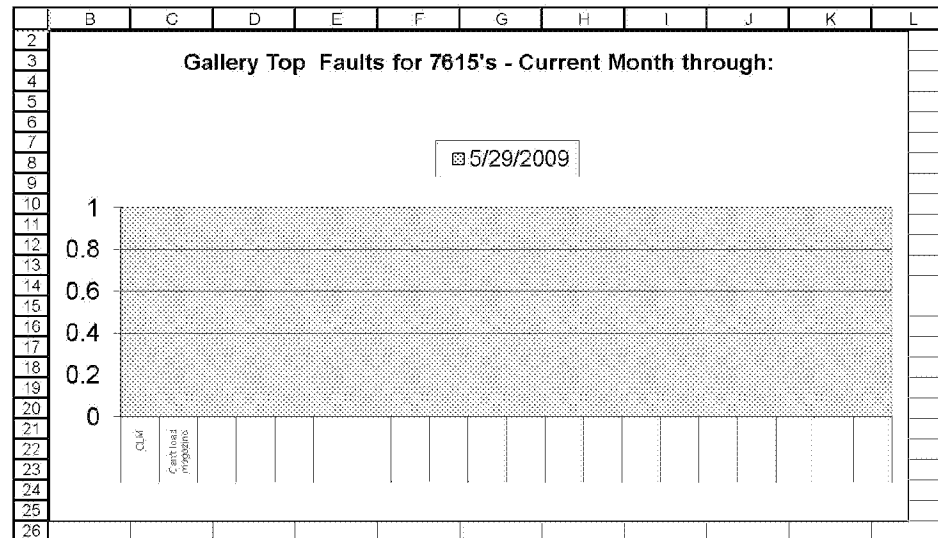



	A	B	C
1	AB	Action binds	0
2	BABS	Bulge at body shoulder	0
3	BAC	Burr at chamber	0
4	BBMA	BBL-to-bolt misalignment	0
5	BB	Bolt binds/catches	0
6	BCOAB	Bolt catches on anti-bind	0
7	BCOBS	Bolt catches on bolt stop	0
8	BCOF	Bolt catches on follower	0
9	BC	Blows cases	0
10	BHR	Bolt hits receiver	0
11	BHS	Bolt plug hits safety switch	0
12	BLOP	Bar lock or disconnecter out of position	0
13	BLSO	Barrel lug shot off	0
14	BPO	Bolt pulls out	0
15	BSSM	Bolt stems shell in magazine	0
16	BWCD	Bolt won't cam down	0
17	BWCFM	Bolt won't close over full magazine	0
18	CD	Case dented	0
19	CH	Closes hard	0
20	CLM	Can't load magazine	0
21	CO	Cut-off	0
22	CR	Cuts rim	0
23	CS	Cases swell	0
24	CTOG	Chamber torn or gouged	0
25	CTP	Creepy trigger pull	0
26	CWSB	Cams wrong side of action bar	0
27	DBB	Doesn't blow back	0
28	DCS	Double click in safety switch	0
29	DCT	Double click in trigger	0
30	DCU	Doesn't close-up	0
31	DE	Doesn't eject	0
32	DEL	Doesn't eject live round	0
33	DFB	Doesn't feed back	0
34	DFU	Doesn't feed up	0
35	DLO	Doesn't lock open (after last shell)	0
36	DLU	Doesn't lock-up	0
37	DS	Dead safe	0
38	DX	Doesn't extract	0
39	DXL	Doesn't extract live round	0
40	EDS	Extractor drops shell	0
41	ESB	Ejector sticks back	0
42	ESCR	Empty shell catches receiver	0
43	ESS	Extractor stems shell	0
44	FA	Fires automatically	0
45	FB	Follower binds	0
46	FC	Fails to connect	0
47	FCB	Fore-end cracked or broken	0
48	FD	Follows-down	0
49	FF	Fails to fire	0
50	FFP	Flat firing pin	0
51	FOS	Fires on safe	0
52	FPHB	Firing pin hits bbl	0
53	FPHI	Firing pin hits inside rim	0
54	FPO	Floor plate opens	0
55	FPOH	Floor plate opens hard	0
56	FSR	Fires when safe is released	0

	A	B	C
57	FT	Follower tips	0
58	GCSO	Gas cyl shot off	0
59	HBL	Heavy bolt lift	0
60	HMSC	Heading mismatch-steps on case	0
61	HPA	High pressure ammo	0
62	HUR	Hard under rail	0
63	JCS	Jumps cartridge	0
64	JM	Jumps magazine	0
65	JO	Jars off	0
66	LB	Light blow	0
67	MAH	Magazine assembles hard	0
68	MCW	Magazine capacity wrong	0
69	MFA	Misfires (ammo)	0
70	MFOP	Magazine follower out of position	0
71	ML	Magazine loose	0
72	MLH	Magazine loads hard	0
73	MRH	Magazine removes hard	0
74	OH	Opens hard	0
75	OR	Over-rides	0
76	PH	Pulls hard	0
77	PSI	Proof stamp illegible	0
78	PSM	Proof stamp missing	0
79	RBOC	Rings and bulges on case	0
80	RDVV	(Action) release doesn't work	0
81	RIC	Rings in chamber	0
82	RIS	Ring in sholder	0
83	RS	Rim srem	0
84	SBC	Stems bottom chambers	0
85	SEE	Stems bbl extension	0
86	SCB	Stock cracked or broken	0
87	SCX	Shell catches	0
88	SHI	Short indent	0
89	SI	Stems incline	0
90	SIC	Stems in chamber	0
91	SL	shaves lead	0
92	SLC	Stems left side of chamber	0
93	SMOC	Stretch marks on case	0
94	SOR	Stem over-ride	0
95	SP	Stems port	0
96	SR	Shoulder rough	0
97	SRC	Stems right side of chamber	0
98	SRIC	Specific rings in chamber	0
99	SSOC	Surface scratches on case	0
100	STC	Stems top chamber	0
101	SWE	Safety switch works too easily	0
102	SWH	Safety switch works too hard	0
103	SWW	Safety Switch won't work	0
104	TD	Tips down	0
105	TU	Tips up	0
106	TWP	Trigger won't pull	0
107	TWR	Trigger won't retract	0
108	UNCN-T	Uncoded	0
109	XH	Extracts hard	0
110			0
111	HI	High	0
112	LO	Low	0

	A	B	C
113	LEFT	Left	0
114	RIGHT	Right	0
115	DG	Doesn't Group	0
116	FSST	Front sight tipped	0
117	RSTT	Rear sight tipped	0
118	RSBR	Rear sight base raised	0
119	FSTR	Front sight raised	0
120	FSTL	Front sight loose	0
121	RSTL	Rear sight loose	0
122	MGPT-G	Missing parts at target	0
123	UNCN-G	Uncoded nonconformity at target	0
124			0
125	AI-P	Assembly incomplete at proof	0
126	BBB	Barrel bracket cracked or broken at proof	0
127	BC-P	Blows cases at proof	0
128	BEB-P	Barrel extension broken at proof	0
129	BLP-P	Blanked primer at proof	0
130	BLSO-P	Barrel lug shot off at proof	0
131	BP-P	Blown primer at proof	0
132	BS-P	Barrel split at proof	0
133	DBF-P	Damaged Bolt Face	0
134	DLOS-P	Doesn't lock over shells at proof	0
135	ESBBP-P	Ejector sticks back -Blown Primer cup	0
136	ESBEC-P	Ejector sticks back - Ejector Crescent	0
137	FCB-P	Fore-end cracked at proof	0
138	FESO-P	Fore-end shot off at proof	0
139	FF-P	Fails to fire at proof	0
140	GCSO-P	Gas cylinder shot off at proof	0
141	MSI-P	Magnaflux stamp illegible on bbl	0
142	MSM-P	Magnaflux stamp missing on bbl	0
143	PP-P	Pierced primer at proof	0
144	SCB-P	Stock cracked or broken at proof	0

	A	B	C
1	AB	Action binds	0
2	BABS	Bulge at body shoulder	0
3	BAC	Burr at chamber	0
4	BBMA	BBL-to-bolt misalignment	0
5	BB	Bolt binds/catches	0
6	BCOAB	Bolt catches on anti-bind	0
7	BCOBS	Bolt catches on bolt stop	0
8	BCOF	Bolt catches on follower	0
9	BC	Blows cases	0
10	BHR	Bolt hits receiver	0
11	BHS	Bolt plug hits safety switch	0
12	BLOP	Bar lock or disconnecter out of position	0
13	BLSO	Barrel lug shot off	0
14	BPO	Bolt pulls out	0
15	BSSM	Bolt stems shell in magazine	0
16	BWCD	Bolt won't cam down	0
17	BWCFM	Bolt won't close over full magazine	0
18	CD	Case dented	0
19	CH	Closes hard	0
20	CLM	Can't load magazine	0
21	CO	Cut-off	0
22	CR	Cuts rim	0
23	CS	Cases swell	0
24	CTOG	Chamber torn or gouged	0
25	CTP	Creepy trigger pull	0
26	CWSB	Cams wrong side of action bar	0
27	DBB	Doesn't blow back	0
28	DCS	Double click in safety switch	0
29	DCT	Double click in trigger	0
30	DCU	Doesn't close-up	0
31	DE	Doesn't eject	0
32	DEL	Doesn't eject live round	0
33	DFB	Doesn't feed back	0
34	DFU	Doesn't feed up	0
35	DLO	Doesn't lock open (after last shell)	0
36	DLU	Doesn't lock-up	0
37	DS	Dead safe	0
38	DX	Doesn't extract	0
39	DXL	Doesn't extract live round	0
40	EDS	Extractor drops shell	0
41	ESB	Ejector sticks back	0
42	ESCR	Empty shell catches receiver	0
43	ESS	Extractor stems shell	0
44	FA	Fires automatically	0
45	FB	Follower binds	0
46	FC	Fails to connect	0
47	FCB	Fore-end cracked or broken	0
48	FD	Follows-down	0
49	FF	Fails to fire	0
50	FFP	Flat firing pin	0
51	FOS	Fires on safe	0
52	FPHB	Firing pin hits bbl	0
53	FPHI	Firing pin hits inside rim	0
54	FPO	Floor plate opens	0
55	FPOH	Floor plate opens hard	0
56	FSR	Fires when safe is released	0

	A	B	C
57	FT	Follower tips	0
58	GCSO	Gas cyl shot off	0
59	HBL	Heavy bolt lift	0
60	HMSC	Heading mismatch-steps on case	0
61	HPA	High pressure ammo	0
62	HUR	Hard under rail	0
63	JCS	Jumps cartridge	0
64	JM	Jumps magazine	0
65	JO	Jars off	0
66	LB	Light blow	0
67	MAH	Magazine assembles hard	0
68	MCW	Magazine capacity wrong	0
69	MFA	Misfires (ammo)	0
70	MFOP	Magazine follower out of position	0
71	ML	Magazine loose	0
72	MLH	Magazine loads hard	0
73	MRH	Magazine removes hard	0
74	OH	Opens hard	0
75	OR	Over-rides	0
76	PH	Pulls hard	0
77	PSI	Proof stamp illegible	0
78	PSM	Proof stamp missing	0
79	RBOC	Rings and bulges on case	0
80	RDVV	(Action) release doesn't work	0
81	RIC	Rings in chamber	0
82	RIS	Ring in sholder	0
83	RS	Rim srem	0
84	SBC	Stems bottom chambers	0
85	SEE	Stems bbl extension	0
86	SCB	Stock cracked or broken	0
87	SCX	Shell catches	0
88	SHI	Short indent	0
89	SI	Stems incline	0
90	SIC	Stems in chamber	0
91	SL	shaves lead	0
92	SLC	Stems left side of chamber	0
93	SMOC	Stretch marks on case	0
94	SOR	Stem over-ride	0
95	SP	Stems port	0
96	SR	Shoulder rough	0
97	SRC	Stems right side of chamber	0
98	SRIC	Specific rings in chamber	0
99	SSOC	Surface scratches on case	0
100	STC	Stems top chamber	0
101	SWE	Safety switch works too easily	0
102	SWH	Safety switch works too hard	0
103	SWW	Safety Switch won't work	0
104	TD	Tips down	0
105	TU	Tips up	0
106	TWP	Trigger won't pull	0
107	TWR	Trigger won't retract	0
108	UNCN-T	Uncoded	0
109	XH	Extracts hard	0
110			0
111	HI	High	0
112	LO	Low	0

	A	B	C
113	LEFT	Left	0
114	RIGHT	Right	0
115	DG	Doesn't Group	0
116	FSST	Front sight tipped	0
117	RSTT	Rear sight tipped	0
118	RSBR	Rear sight base raised	0
119	FSTR	Front sight raised	0
120	FSTL	Front sight loose	0
121	RSTL	Rear sight loose	0
122	MGPT-G	Missing parts at target	0
123	UNCN-G	Uncoded nonconformity at target	0
124			0
125	AI-P	Assembly incomplete at proof	0
126	BBB	Barrel bracket cracked or broken at proof	0
127	BC-P	Blows cases at proof	0
128	BEB-P	Barrel extension broken at proof	0
129	BLP-P	Blanked primer at proof	0
130	BLSO-P	Barrel lug shot off at proof	0
131	BP-P	Blown primer at proof	0
132	BS-P	Barrel split at proof	0
133	DBF-P	Damaged Bolt Face	0
134	DLOS-P	Doesn't lock over shells at proof	0
135	ESBBP-P	Ejector sticks back - Blown Primer cup	0
136	ESBEC-P	Ejector sticks back - Ejector Crescent	0
137	FCB-P	Fore-end cracked at proof	0
138	FESO-P	Fore-end shot off at proof	0
139	FF-P	Fails to fire at proof	0
140	GCSO-P	Gas cylinder shot off at proof	0
141	MSI-P	Magnaflux stamp illegible on bbl	0
142	MSM-P	Magnaflux stamp missing on bbl	0
143	PP-P	Pierced primer at proof	0
144	SCB-P	Stock cracked or broken at proof	0

	A	B	C
1	AB	Action binds	0
2	BABS	Bulge at body shoulder	0
3	BAC	Burr at chamber	0
4	BBMA	BBL-to-bolt misalignment	0
5	BB	Bolt binds/catches	0
6	BCOAB	Bolt catches on anti-bind	0
7	BCOBS	Bolt catches on bolt stop	0
8	BCOF	Bolt catches on follower	0
9	BC	Blows cases	0
10	BHR	Bolt hits receiver	0
11	BHS	Bolt plug hits safety switch	0
12	BLOP	Bar lock or disconnecter out of position	0
13	BLSO	Barrel lug shot off	0
14	BPO	Bolt pulls out	0
15	BSSM	Bolt stems shell in magazine	0
16	BWCD	Bolt won't cam down	0
17	BWCFM	Bolt won't close over full magazine	0
18	CD	Case dented	0
19	CH	Closes hard	0
20	CLM	Can't load magazine	0
21	CO	Cut-off	0
22	CR	Cuts rim	0
23	CS	Cases swell	0
24	CTOG	Chamber torn or gouged	0
25	CTP	Creepy trigger pull	0
26	CWSB	Cams wrong side of action bar	0
27	DBB	Doesn't blow back	0
28	DCS	Double click in safety switch	0
29	DCT	Double click in trigger	0
30	DCU	Doesn't close-up	0
31	DE	Doesn't eject	0
32	DEL	Doesn't eject live round	0
33	DFB	Doesn't feed back	0
34	DFU	Doesn't feed up	0
35	DLO	Doesn't lock open (after last shell)	0
36	DLU	Doesn't lock-up	0
37	DS	Dead safe	0
38	DX	Doesn't extract	0
39	DXL	Doesn't extract live round	0
40	EDS	Extractor drops shell	0
41	ESB	Ejector sticks back	0
42	ESCR	Empty shell catches receiver	0
43	ESS	Extractor stems shell	0
44	FA	Fires automatically	0
45	FB	Follower binds	0
46	FC	Fails to connect	0
47	FCB	Fore-end cracked or broken	0
48	FD	Follows-down	0
49	FF	Fails to fire	0
50	FFP	Flat firing pin	0
51	FOS	Fires on safe	0
52	FPHB	Firing pin hits bbl	0
53	FPHI	Firing pin hits inside rim	0
54	FPO	Floor plate opens	0
55	FPOH	Floor plate opens hard	0
56	FSR	Fires when safe is released	0

	A	B	C
57	FT	Follower tips	0
58	GCSO	Gas cyl shot off	0
59	HBL	Heavy bolt lift	0
60	HMSC	Heading mismatch-steps on case	0
61	HPA	High pressure ammo	0
62	HUR	Hard under rail	0
63	JCS	Jumps cartridge	0
64	JM	Jumps magazine	0
65	JO	Jars off	0
66	LB	Light blow	0
67	MAH	Magazine assembles hard	0
68	MCW	Magazine capacity wrong	0
69	MFA	Misfires (ammo)	0
70	MFOP	Magazine follower out of position	0
71	ML	Magazine loose	0
72	MLH	Magazine loads hard	0
73	MRH	Magazine removes hard	0
74	OH	Opens hard	0
75	OR	Over-rides	0
76	PH	Pulls hard	0
77	PSI	Proof stamp illegible	0
78	PSM	Proof stamp missing	0
79	RBOC	Rings and bulges on case	0
80	RDVV	(Action) release doesn't work	0
81	RIC	Rings in chamber	0
82	RIS	Ring in sholder	0
83	RS	Rim srem	0
84	SBC	Stems bottom chambers	0
85	SEE	Stems bbl extension	0
86	SCB	Stock cracked or broken	0
87	SCX	Shell catches	0
88	SHI	Short indent	0
89	SI	Stems incline	0
90	SIC	Stems in chamber	0
91	SL	shaves lead	0
92	SLC	Stems left side of chamber	0
93	SMOC	Stretch marks on case	0
94	SOR	Stem over-ride	0
95	SP	Stems port	0
96	SR	Shoulder rough	0
97	SRC	Stems right side of chamber	0
98	SRIC	Specific rings in chamber	0
99	SSOC	Surface scratches on case	0
100	STC	Stems top chamber	0
101	SWE	Safety switch works too easily	0
102	SWH	Safety switch works too hard	0
103	SWW	Safety Switch won't work	0
104	TD	Tips down	0
105	TU	Tips up	0
106	TVWP	Trigger won't pull	0
107	TVWR	Trigger won't retract	0
108	UNCN-T	Uncoded	0
109	XH	Extracts hard	0
110			0
111	HI	High	0
112	LO	Low	0



	A	B	C
113	LEFT	Left	0
114	RIGHT	Right	0
115	DG	Doesn't Group	0
116	FSST	Front sight tipped	0
117	RSTT	Rear sight tipped	0
118	RSBR	Rear sight base raised	0
119	FSTR	Front sight raised	0
120	FSTL	Front sight loose	0
121	RSTL	Rear sight loose	0
122	MGPT-G	Missing parts at target	0
123	UNCN-G	Uncoded nonconformity at target	0
124			0
125	AI-P	Assembly incomplete at proof	0
126	BBB	Barrel bracket cracked or broken at proof	0
127	BC-P	Blows cases at proof	0
128	BEB-P	Barrel extension broken at proof	0
129	BLP-P	Blanked primer at proof	0
130	BLSO-P	Barrel lug shot off at proof	0
131	BP-P	Blown primer at proof	0
132	BS-P	Barrel split at proof	0
133	DBF-P	Damaged Bolt Face	0
134	DLOS-P	Doesn't lock over shells at proof	0
135	ESBBP-P	Ejector sticks back - Blown Primer cup	0
136	ESBEC-P	Ejector sticks back - Ejector Crescent	0
137	FCB-P	Fore-end cracked at proof	0
138	FESO-P	Fore-end shot off at proof	0
139	FF-P	Fails to fire at proof	0
140	GCSO-P	Gas cylinder shot off at proof	0
141	MSI-P	Magnaflux stamp illegible on bbl	0
142	MSM-P	Magnaflux stamp missing on bbl	0
143	PP-P	Pierced primer at proof	0
144	SCB-P	Stock cracked or broken at proof	0

	A	B	C
1	AB	Action binds	0
2	BABS	Bulge at body shoulder	0
3	BAC	Burr at chamber	0
4	BBMA	BBL-to-bolt misalignment	0
5	BB	Bolt binds/catches	0
6	BCOAB	Bolt catches on anti-bind	0
7	BCOBS	Bolt catches on bolt stop	0
8	BCOF	Bolt catches on follower	0
9	BC	Blows cases	0
10	BHR	Bolt hits receiver	0
11	BHS	Bolt plug hits safety switch	0
12	BLOP	Bar lock or disconnecter out of position	0
13	BLSO	Barrel lug shot off	0
14	BPO	Bolt pulls out	0
15	BSSM	Bolt stems shell in magazine	0
16	BWCD	Bolt won't cam down	0
17	BWCFM	Bolt won't close over full magazine	0
18	CD	Case dented	0
19	CH	Closes hard	0
20	CLM	Can't load magazine	0
21	CO	Cut-off	0
22	CR	Cuts rim	0
23	CS	Cases swell	0
24	CTOG	Chamber torn or gouged	0
25	CTP	Creepy trigger pull	0
26	CWSB	Cams wrong side of action bar	0
27	DBB	Doesn't blow back	0
28	DCS	Double click in safety switch	0
29	DCT	Double click in trigger	0
30	DCU	Doesn't close-up	0
31	DE	Doesn't eject	0
32	DEL	Doesn't eject live round	0
33	DFB	Doesn't feed back	0
34	DFU	Doesn't feed up	0
35	DLO	Doesn't lock open (after last shell)	0
36	DLU	Doesn't lock-up	0
37	DS	Dead safe	0
38	DX	Doesn't extract	0
39	DXL	Doesn't extract live round	0
40	EDS	Extractor drops shell	0
41	ESB	Ejector sticks back	0
42	ESCR	Empty shell catches receiver	0
43	ESS	Extractor stems shell	0
44	FA	Fires automatically	0
45	FB	Follower binds	0
46	FC	Fails to connect	0
47	FCB	Fore-end cracked or broken	0
48	FD	Follows-down	0
49	FF	Fails to fire	0
50	FFP	Flat firing pin	0
51	FOS	Fires on safe	0
52	FPHB	Firing pin hits bbl	0
53	FPHI	Firing pin hits inside rim	0
54	FPO	Floor plate opens	0
55	FPOH	Floor plate opens hard	0
56	FSR	Fires when safe is released	0

	A	B	C
57	FT	Follower tips	0
58	GCSO	Gas cyl shot off	0
59	HBL	Heavy bolt lift	0
60	HMSC	Heading mismatch-steps on case	0
61	HPA	High pressure ammo	0
62	HUR	Hard under rail	0
63	JCS	Jumps cartridge	0
64	JM	Jumps magazine	0
65	JO	Jars off	0
66	LB	Light blow	0
67	MAH	Magazine assembles hard	0
68	MCW	Magazine capacity wrong	0
69	MFA	Misfires (ammo)	0
70	MFOP	Magazine follower out of position	0
71	ML	Magazine loose	0
72	MLH	Magazine loads hard	0
73	MRH	Magazine removes hard	0
74	OH	Opens hard	0
75	OR	Over-rides	0
76	PH	Pulls hard	0
77	PSI	Proof stamp illegible	0
78	PSM	Proof stamp missing	0
79	RBOC	Rings and bulges on case	0
80	RDVV	(Action) release doesn't work	0
81	RIC	Rings in chamber	0
82	RIS	Ring in sholder	0
83	RS	Rim srem	0
84	SBC	Stems bottom chambers	0
85	SEE	Stems bbl extension	0
86	SCB	Stock cracked or broken	0
87	SCX	Shell catches	0
88	SHI	Short indent	0
89	SI	Stems incline	0
90	SIC	Stems in chamber	0
91	SL	shaves lead	0
92	SLC	Stems left side of chamber	0
93	SMOC	Stretch marks on case	0
94	SOR	Stem over-ride	0
95	SP	Stems port	0
96	SR	Shoulder rough	0
97	SRC	Stems right side of chamber	0
98	SRIC	Specific rings in chamber	0
99	SSOC	Surface scratches on case	0
100	STC	Stems top chamber	0
101	SWE	Safety switch works too easily	0
102	SWH	Safety switch works too hard	0
103	SWW	Safety Switch won't work	0
104	TD	Tips down	0
105	TU	Tips up	0
106	TWP	Trigger won't pull	0
107	TWR	Trigger won't retract	0
108	UNCN-T	Uncoded	0
109	XH	Extracts hard	0
110			0
111	HI	High	0
112	LO	Low	0

	A	B	C
113	LEFT	Left	0
114	RIGHT	Right	0
115	DG	Doesn't Group	0
116	FSST	Front sight tipped	0
117	RSTT	Rear sight tipped	0
118	RSBR	Rear sight base raised	0
119	FSTR	Front sight raised	0
120	FSTL	Front sight loose	0
121	RSTL	Rear sight loose	0
122	MGPT-G	Missing parts at target	0
123	UNCN-G	Uncoded nonconformity at target	0
124			0
125	AI-P	Assembly incomplete at proof	0
126	BBB	Barrel bracket cracked or broken at proof	0
127	BC-P	Blows cases at proof	0
128	BEB-P	Barrel extension broken at proof	0
129	BLP-P	Blanked primer at proof	0
130	BLSO-P	Barrel lug shot off at proof	0
131	BP-P	Blown primer at proof	0
132	BS-P	Barrel split at proof	0
133	DBF-P	Damaged Bolt Face	0
134	DLOS-P	Doesn't lock over shells at proof	0
135	ESBBP-P	Ejector sticks back -Blown Primer cup	0
136	ESBEC-P	Ejector sticks back - Ejector Crescent	0
137	FCB-P	Fore-end cracked at proof	0
138	FESO-P	Fore-end shot off at proof	0
139	FF-P	Fails to fire at proof	0
140	GCSO-P	Gas cylinder shot off at proof	0
141	MSI-P	Magnaflux stamp illegible on bbl	0
142	MSM-P	Magnaflux stamp missing on bbl	0
143	PP-P	Pierced primer at proof	0
144	SCB-P	Stock cracked or broken at proof	0

# Centerfire

	A	B	D	E	F	G	H	I	J	P	Q
1	<b>Summary</b>		Total Tested	12819							
2			Total Rejected:	#VALUE!							
3			Overall Reject Rate:	#VALUE!							Grand totals
5		Shot:	5888	1758	3046	1126	515	471	65		12889
6	<b>Proof</b>	Rejected:	38	17	21	#VALUE!	6	9	0	0	#VALUE!
7		Percent:	0.6	1.0	0.7	#VALUE!	1.2	1.9	0.0		#VALUE!
9											
10	<b>Test</b>	Shot:	5897	1657	2963	1104	485	592	65	56	12819
11		Rejected:	111	52	127	46	10	7	4	8	381
12		Percent:	1.9	3.1	4.3	4.2	2.1	1.2	6.2	14.3	2.8
13	<b>Target</b>	Shot:	556	159	342	110	46	535	6		1754
14		Rejected:	0	0	0	0	0	0	0	0	0
15		Percent:	0.0	0.0	0.0	0.0	0.0	0.0	0.0		0.0
17	CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7	Rimfire	totals
18											
19	AB	Action binds	2		4						6
20	BABS	Bulge at body shoulder									
21	BAC	Burr at chamber				1					1
22	BBMA	BBL-to-bolt misalignment									
23	BB	Bolt binds/catches	56	12	69	12			2		151
24	BCOAB	Bolt catches on anti-bind		1	3						
25	BCOBS	Bolt catches on bolt stop									
26	BCOF	Bolt catches on follower		2							2
27	BC	Blows cases									
28	BHR	Bolt hits receiver									
29	BHS	Bolt plug hits safety switch									
30	BLOP	Bar lock or disconnecter out of position									
31	BLSO	Barrel lug shot off									
32	BPO	Bolt pulls out									
33	BSSM	Bolt stems shell in magazine									
34	BWCD	Bolt won't cam down									
35	BWCFM	Bolt won't close over full magazine	1								1
36	CD	Case dented									
37	CH	Closes hard	2		1		1				4
38	CLM	Can't load magazine	1	5	2	8		1			17
39	CO	Cut-off									
40	CR	Cuts rim									

# Centerfire

	A	B	D	E	F	G	H	I	J	P	Q
17	CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7	Rimfire	totals
41	CS	Cases swell									
42	CTOG	Chamber torn or gouged									
43	CTP	Creepy trigger pull									
44	CWSB	Cams wrong side of action bar									
45	DBB	Doesn't blow back									
46	DCS	Double click in safety switch									
47	DCT	Double click in trigger									
48	DCU	Doesn't close-up									
49	DE	Doesn't eject		2					1		3
50	DEL	Doesn't eject live round									
51	DFB	Doesn't feed back									
52	DFU	Doesn't feed up									
53	DLO	Doesn't lock open (after last shell)									
54	DLU	Doesn't lock-up								1	1
55	DS	Dead safe	1								1
56	DX	Doesn't extract	9	3	4	1					17
57	DXL	Doesn't extract live round									
58	EDS	Extractor drops shell	12	4	14	5		1			36
59	ESB	Ejector sticks back	2		3	1					6
60	ESCR	Empty shell catches receiver									
61	ESS	Extractor stems shell									
62	FA	Fires automatically									
63	FB	Follower binds	1								1
64	FC	Fails to connect								1	1
65	FCB	Fore-end cracked or broken									
66	FD	Follows-down									
67	FF	Fails to fire		2		3					5
68	FFP	Flat firing pin									
69	FOS	Fires on safe									
70	FPHB	Firing pin hits bbl									
71	FPHI	Firing pin hits inside rim									
72	FPO	Floor plate opens	1	2	2		1				6
73	FPOH	Floor plate opens hard									

# Centerfire

	A	B	D	E	F	G	H	I	J	P	Q
17	CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7	Rimfire	totals
74	FSR	Fires when safe is released									
75	FT	Follower tips									
76	GCSO	Gas cyl shot off									
77	HBL	Heavy bolt lift			1						1
78	HMSC	Heading mismatch-steps on case									
79	HPA	High pressure ammo									
80	HUR	Hard under rail		1							1
81	JCS	Jumps cartridge									
82	JM	Jumps magazine	5				1				6
83	JO	Jars off									
84	LB	Light blow									
85	MAH	Magazine assembles hard									
86	MCW	Magazine capacity wrong									
87	MFA	Misfires (ammo)									
88	MFOP	Magazine follower out of position									
89	ML	Magazine loose									
90	MLH	Magazine loads hard									
91	MRH	Magazine removes hard		3							3
92	OH	Opens hard	5		5	2		1			13
93	OR	Over-rides	6	4	7				1		18
94	PH	Pulls hard									
95	PSI	Proof stamp illegible									
96	PSM	Proof stamp missing									
97	RBOC	Rings and bulges on case									
98	RDW	(Action) release doesn't work	1			2	6	2			11
99	RIC	Rings in chamber		1							1
100	RIS	Ring in sholder									
101	RS	Rim srem									
102	SBC	Stems bottom chambers	2	1	2					6	11
103	SBE	Stems bbl extension									
104	SCB	Stock cracked or broken									
105	SCX	Shell catches									
106	SHI	Short indent									


# Centerfire

	A	B	D	E	F	G	H	I	J	P	Q
17	CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7	Rimfire	totals
107	SI	Stems incline	1	1	5	4	1	1			13
108	SIC	Stems in chamber		1							1
109	SL	shaves lead									
110	SLC	Stems left side of chamber									
111	SMOC	Stretch marks on case									
112	SOR	Stem over-ride	2	3	2	6					13
113	SP	Stems port									
114	SR	Shoulder rough									
115	SRC	Stems right side of chamber									
116	SRIC	Specific rings in chamber									
117	SSOC	Surface scratches on case									
118	STC	Stems top chamber									
119	SWE	Safety switch works too easily									
120	SWH	Safety switch works too hard				1					1
121	SWW	Safety Switch won't work									
122	TD	Tips down									
123	TU	Tips up									
124	TWP	Trigger won't pull	1	1	1						3
125	TWR	Trigger won't retract									
126	UNCN-T	Uncoded									
127	XH	Extracts hard		3	2			1			6
128											
129	HI	High									
130	LO	Low									
131	LEFT	Left									
132	RIGHT	Right									
133	DG	Doesn't Group									
134	FSST	Front sight tipped									
135	RSTT	Rear sight tipped									
136	RSBR	Rear sight base raised									
137	FSTR	Front sight raised									
138	FSTL	Front sight loose									
139	RSTL	Rear sight loose									



# Centerfire

	A	B	D	E	F	G	H	I	J	P	Q
17	CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7	Rimfire	totals
140	MGPT-G	Missing parts at target									
141	UNCN-G	Uncoded nonconformity at target									
142											
143	AI-P	Assembly incomplete at proof									
144	BBB	Barrel bracket cracked or broken at proof									
145	BC-P	Blows cases at proof									
146	BEB-P	Barrel extension broken at proof									
147	BLP-P	Blanked primer at proof									
148	BLSO-P	Barrel lug shot off at proof									
149	BP-P	Blown primer at proof									
150	BS-P	Barrel split at proof	1								1
151	DBF-P	Damaged Bolt Face	17	6	12	2	1	1			38
152	DLOS-P	Doesn't lock over shells at proof									
153	ESBBP-P	Ejector sticks back -Blown Primer cup		1	2						3
154	ESBEC-P	Ejector sticks back - Ejector Cresent	1								1
155	FCB-P	Fore-end cracked at proof									
156	FESO-P	Fore-end shot off at proof									
157	FF-P	Fails to fire at proof	1		1						2
158	GCSO-P	Gas cylinder shot off at proof									
159	MSI-P	Magnaflux stamp illegible on bbl									
160	MSM-P	Magnaflux stamp missing on bbl									
161	PP-P	Pierced primer at proof									
162	SCB-P	Stock cracked or broken at proof									
163	UNCM-P	Uncoded proof malfunctions	18	10	6	#VALUE!	5	8			#VALUE!

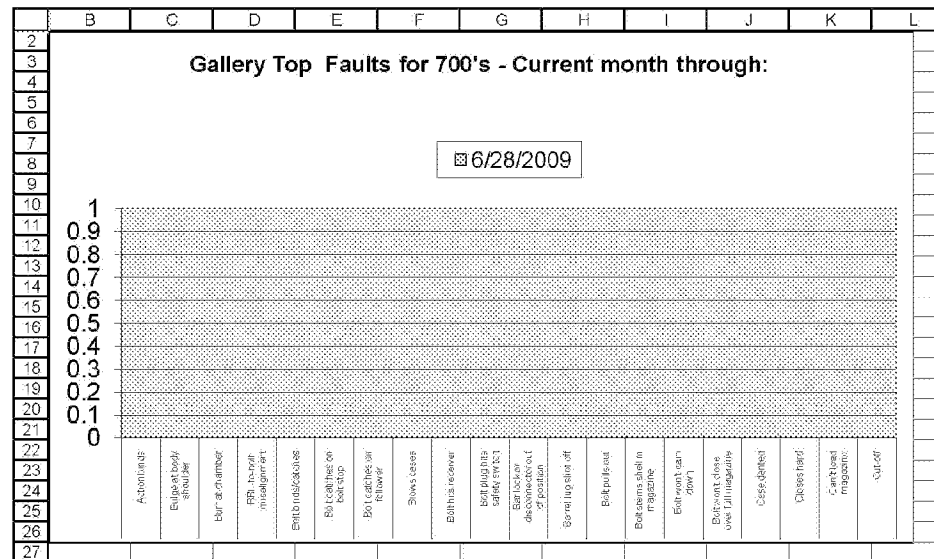

	A	B	C
1	AB	Action binds	0
2	BABS	Bulge at body shoulder	0
3	BAC	Burr at chamber	0
4	BBMA	BBL-to-bolt misalignment	0
5	BB	Bolt binds/catches	0
6	BCOBS	Bolt catches on bolt stop	0
7	BCOF	Bolt catches on follower	0
8	BC	Blows cases	0
9	BHR	Bolt hits receiver	0
10	BHS	Bolt plug hits safety switch	0
11	BLOP	Bar lock or disconnecter out of position	0
12	BLSO	Barrel lug shot off	0
13	BPO	Bolt pulls out	0
14	BSSM	Bolt stems shell in magazine	0
15	BWCD	Bolt won't cam down	0
16	BWCFM	Bolt won't close over full magazine	0
17	CD	Case dented	0
18	CH	Closes hard	0
19	CLM	Can't load magazine	0
20	CO	Cut-off	0
21	CR	Cuts rim	0
22	CS	Cases swell	0
23	CTOG	Chamber torn or gouged	0
24	CTP	Creepy trigger pull	0
25	CWSB	Cams wrong side of action bar	0
26	DBB	Doesn't blow back	0
27	DCS	Double click in safety switch	0
28	DCT	Double click in trigger	0
29	DCU	Doesn't close-up	0
30	DE	Doesn't eject	0
31	DEL	Doesn't eject live round	0
32	DFB	Doesn't feed back	0
33	DFU	Doesn't feed up	0
34	DLO	Doesn't lock open (after last shell)	0
35	DLU	Doesn't lock-up	0
36	DS	Dead safe	0
37	DX	Doesn't extract	0
38	DXL	Doesn't extract live round	0
39	EDS	Extractor drops shell	0
40	ESB	Ejector sticks back	0
41	ESCR	Empty shell catches receiver	0
42	ESS	Extractor stems shell	0
43	FA	Fires automatically	0
44	FB	Follower binds	0
45	FC	Fails to connect	0
46	FCB	Fore-end cracked or broken	0
47	FD	Follows-down	0
48	FF	Fails to fire	0
49	FFP	Flat firing pin	0
50	FOS	Fires on safe	0
51	FPHB	Firing pin hits bbl	0
52	FPHI	Firing pin hits inside rim	0
53	FPO	Floor plate opens	0
54	FPOH	Floor plate opens hard	0
55	FSR	Fires when safe is released	0
56	FT	Follower tips	0

	A	B	C
57	GCSO	Gas cyl shot off	0
58	HBL	Heavy bolt lift	0
59	HMSC	Heading mismatch-steps on case	0
60	HPA	High pressure ammo	0
61	HUR	Hard under rail	0
62	JCS	Jumps cartridge	0
63	JM	Jumps magazine	0
64	JO	Jars off	0
65	LB	Light blow	0
66	MAH	Magazine assembles hard	0
67	MCW	Magazine capacity wrong	0
68	MFA	Misfires (ammo)	0
69	MFOP	Magazine follower out of position	0
70	ML	Magazine loose	0
71	MLH	Magazine loads hard	0
72	MRH	Magazine removes hard	0
73	OH	Opens hard	0
74	OR	Over-rides	0
75	PH	Pulls hard	0
76	PSI	Proof stamp illegible	0
77	PSM	Proof stamp missing	0
78	RBOC	Rings and bulges on case	0
79	RDW	(Action) release doesn't work	0
80	RIC	Rings in chamber	0
81	RIS	Ring in sholder	0
82	RS	Rim srem	0
83	SBC	Stems bottom chambers	0
84	SBE	Stems bbl extension	0
85	SCB	Stock cracked or broken	0
86	SCX	Shell catches	0
87	SHI	Short indent	0
88	SI	Stems incline	0
89	SIC	Stems in chamber	0
90	SL	shaves lead	0
91	SIC	Stems left side of chamber	0
92	SMOC	Stretch marks on case	0
93	SOR	Stem over-ride	0
94	SP	Stems port	0
95	SR	Shoulder rough	0
96	SRC	Stems right side of chamber	0
97	SRIC	Specific rings in chamber	0
98	SSOC	Surface scratches on case	0
99	STC	Stems top chamber	0
100	SWE	Safety switch works too easily	0
101	SWH	Safety switch works too hard	0
102	SWW	Safety Switch won't work	0
103	TD	Tips down	0
104	TU	Tips up	0
105	TWP	Trigger won't pull	0
106	TWR	Trigger won't retract	0
107	UNCN-T	Uncoded	0
108	XH	Extracts hard	0
109			0
110	HI	High	0
111	LO	Low	0
112	LEFT	Left	0

	A	B	C
113	RIGHT	Right	0
114	DG	Doesn't Group	0
115	FSST	Front sight tipped	0
116	RSTT	Rear sight tipped	0
117	RSBR	Rear sight base raised	0
118	FSTR	Front sight raised	0
119	FSTL	Front sight loose	0
120	RSTL	Rear sight loose	0
121	MGPT-G	Missing parts at target	0
122	UNCN-G	Uncoded nonconformity at target	0
123			0
124	AI-P	Assembly incomplete at proof	0
125	BBB	Barrel bracket cracked or broken at proof	0
126	BC-P	Blows cases at proof	0
127	BEB-P	Barrel extension broken at proof	0
128	BLP-P	Blanked primer at proof	0
129	BLSO-P	Barrel lug shot off at proof	0
130	BP-P	Blown primer at proof	0
131	BS-P	Barrel split at proof	0
132	DBF-P	Damaged Bolt Face	0
133	DLOS-P	Doesn't lock over shells at proof	0
134	ESBBP-P	Ejector sticks back -Blown Primer cup	0
135	ESBEC-P	Ejector sticks back - Ejector Crescent	0
136	FCB-P	Fore-end cracked at proof	0
137	FESO-P	Fore-end shot off at proof	0
138	FF-P	Fails to fire at proof	0
139	GCSO-P	Gas cylinder shot off at proof	0
140	MSI-P	Magnaflux stamp illegible on bbl	0
141	MSM-P	Magnaflux stamp missing on bbl	0
142	PP-P	Pierced primer at proof	0
143	SCB-P	Stock cracked or broken at proof	0
144	BCOAB	Bolt catches on anti-bind	
145	BCOAB	Bolt catches on anti-bind	
146			
147			
148			
149			
150	6/28/2009		

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>521</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>5</b>													
3		<b>Overall Reject Rate:</b>		<b>0.96</b>													<i>totals</i>
5		Shot:		206	27	44	131	78	25								511
6		Rejected:		0	0	0	0	1	0	0	0	0	0	0	0	0	1
7		Percent:		0.0	0.0	0.0	0.0	1.3	0.0								0.2
9		Shot:		206	1	44	131	77	25							37	521
10		Rejected:		2	0	0	0	0	1	0	0	0	0	0	0	1	4
11		Percent:		1.0	0.0	0.0	0.0	0.0	4.0							2.7	0.8
13		Shot:		22		4	13	7	25								71
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0		0.0	0.0	0.0	0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine		1													1
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell							1								1
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect														1	1
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides		1													1
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face						1									1
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>592</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>9</b>													
3		<b>Overall Reject Rate:</b>		<b>1.52</b>													<i>totals</i>
5		Shot:		166		287	56	46	20								575
6		Rejected:		1	0	1	1	0	0	0	0	0	0	0	0	0	3
7		Percent:		0.6		0.3	1.8	0.0	0.0								0.5
9		Shot:		166		285	56	46	39								592
10		Rejected:		0	0	3	2	0	1	0	0	0	0	0	0	0	6
11		Percent:		0.0		1.1	3.6	0.0	2.6								1.2
13		Shot:		17		30	6	5	38								96
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0		0.0	0.0	0.0	0.0								0.6
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches					1										1
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine							1								1
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell				3	1										4
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face				1											1
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions		1			1										2

**Cell:** D163

**Comment:** illegal:  
broken trigger

**Cell:** G163

**Comment:** illegal:  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>467</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>6</b>													
3		<b>Overall Reject Rate:</b>		<b>1.28</b>													<i>totals</i>
5		Shot:		283	23	47	141										334
6		Rejected:		2	0	0	0	0	0	0	0	0	0	0	0	0	2
7		Percent:		0.7	0.0	0.0	0.0										0.4
9		Shot:		279		47	141										467
10		Rejected:		0	0	0	4	0	0	0	0	0	0	0	0	0	4
11		Percent:		0.0		0.0	2.8										0.9
13		Shot:		29		3	15										47
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0		0.0	0.0										0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber					1										1
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell					2										2
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard					1										1
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		2													2
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>756</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>33</b>													
3		<b>Overall Reject Rate:</b>		<b>4.37</b>													<i>totals</i>
5		Shot:		346	155	183	55	19									758
6		Rejected:		0	5	0	0	0	0	0	0	0	0	0	0	0	5
7		Percent:		0.0	3.2	0.0	0.0	0.0									6.7
9		Shot:		346	153	164	55	19								19	736
10		Rejected:		0	5	15	0	1	0	0	0	0	0	0	0	7	28
11		Percent:		0.0	3.3	9.1	0.0	5.3								36.8	3.7
13		Shot:		36	15	15	5	2									73
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	8
15		Percent:		0.0	0.0	0.0	0.0	0.0									8.6
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches			3	5											8
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cam wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject			1												1
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up														1	1
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell				8											8
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine						1									1
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides				1											1
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers														6	8
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline				1											1
108	SIC	Stems in chamber			1												1
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions			5												5

Cell: E163

Comment: illegal:  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>677</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>35</b>													
3		<b>Overall Reject Rate:</b>		<b>5.17</b>													<i>totals</i>
5		Shot:		457	39	159		17	25								687
6		Rejected:		2	0	2	0	0	0	0	0	0	0	0	0	0	8
7		Percent:		0.4	0.0	1.3		0.0	0.0								8.6
9		Shot:		441	39	155		17	25								687
10		Rejected:		21	0	10	0	0	0	0	0	0	0	0	0	0	31
11		Percent:		4.8	0.0	6.5		0.0	0.0								4.8
13		Shot:		45	4	15		2	25								81
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0		0.0	0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds		2		4											6
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		13													13
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		1													1
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		1													1
59	ESB	Ejector sticks back		1													1
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds		1													1
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift				1											1
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine		2													2
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides				1											1
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline				4											4
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		2		2											4
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>668</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>38</b>													
3		<b>Overall Reject Rate:</b>		<b>5.69</b>													<i>totals</i>
5		Shot:		265	113	228	90	1									687
6		Rejected:		2	0	0	1	0	0	0	0	0	0	0	0	0	3
7		Percent:		0.8	0.0	0.0	1.1	0.0									0.4
9		Shot:		262	113	218	74	1									668
10		Rejected:		7	9	10	9	0	0	0	0	0	0	0	0	0	36
11		Percent:		2.7	8.0	4.6	12.2	0.0									5.2
13		Shot:		22	13	21	8	1									65
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0	0.0									0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		2	2	8											12
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard		1													1
38	CLM	Can't load magazine			1		4										5
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cam wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		4	1	2											γ
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell			1												‡
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire			1												‡
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail			1												‡
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work					1										1
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline			1												1
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride					4										4
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard			1												1
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		1													1
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof		1													1
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions					1										1

Cell: G163

Comment: illegal:  
broken trigger



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>638</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>21</b>													
3		<b>Overall Reject Rate:</b>		<b>3.29</b>													<i>totals</i>
5		Shot:		309	93	105	108		28								645
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:		0.0	0.0	0.0	0.0		0.0								0.0
9		Shot:		307	92	105	106		28								638
10		Rejected:		7	1	5	6	0	2	0	0	0	0	0	0	0	21
11		Percent:		2.3	1.1	4.8	5.7		7.1								3.3
13		Shot:		20	6	8	9										43
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0										0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		4		4	6										14
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		2													2
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back		1													1
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard				1											1
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work							2								2
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull			1												1
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>540</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>15</b>													
3		<b>Overall Reject Rate:</b>		<b>2.78</b>													<i>totals</i>
5		Shot:		272	44	95	46		91								548
6		Rejected:		0	0	0	0	0	3	0	0	0	0	0	0	0	3
7		Percent:		0.0	0.0	0.0	0.0		3.3								0.5
9		Shot:		272	40	95	45		88								540
10		Rejected:		2	4	5	1	0	0	0	0	0	0	0	0	0	12
11		Percent:		0.7	10.0	5.3	2.2		0.0								2.2
13		Shot:		28	5	9	5		75								122
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0		0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		1	1	4											8
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower			2												2
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		1													1
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens			1												1
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides				1											1
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work					1										1
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face							1								1
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions							2								2



Cell: I163

Comment: illegal:  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>700</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>11</b>													
3		<b>Overall Reject Rate:</b>		<b>1.57</b>													<i>totals</i>
5		Shot:		505	35	86	54		10								630
6		Rejected:		1	0	0	0	0	0	0	0	0	0	0	0	0	1
7		Percent:		0.2	0.0	0.0	0.0	0.0	0.0								0.7
9		Shot:		502	35	86	54		23								710
10		Rejected:		7	3	0	0	0	0	0	0	0	0	0	0	0	10
11		Percent:		1.4	8.6	0.0	0.0		0.0								1.4
13		Shot:		49	3	9	6		23								80
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0		0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		5	1												8
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract			1												1
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell			1												1
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine		1													1
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull		1													1
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions		1													1

Cell: D163

Comment: illegal:  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>621</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>17</b>													
3		<b>Overall Reject Rate:</b>		<b>2.74</b>													<i>totals</i>
5		Shot:		296	45	270			15								626
6		Rejected:		2	0	3	0	0	0	0	0	0	0	0	0	0	5
7		Percent:		0.7	0.0	1.1			0.0								0.8
9		Shot:		294	45	267			15								621
10		Rejected:		6	0	5	0	0	1	0	0	0	0	0	0	0	12
11		Percent:		2.0	0.0	1.9			6.7								1.9
13		Shot:		32	6	27			15								50
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0			0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		2		3											5
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract				1											1
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work		1													1
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline		1													1
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride		2													2
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull				1											1
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard							1								1
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		2		1											3
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions				2											2

**Cell:** F163

**Comment:** illegalry:

broken bolt handle

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>595</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>20</b>													
3		<b>Overall Reject Rate:</b>		<b>3.36</b>													<i>totals</i>
5		Shot:		326	132	55	87		8								608
6		Rejected:		0	2	0	4	0	0	0	0	0	0	0	0	0	6
7		Percent:		0.0	1.5	0.0	4.6		0.0								1.0
9		Shot:		326	130	45	86		8								595
10		Rejected:		6	1	0	7	0	0	0	0	0	0	0	0	0	14
11		Percent:		1.8	0.8	0.0	8.1		0.0								2.4
13		Shot:		31	13	4	9		8								65
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0		0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		2			1										3
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		2			2										4
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides		2													2
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber			1												1
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline					4										4
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face					1										1
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup			1												1
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions			1		3										3

**Cell:** E163

**Comment:** ilngalry:  
broken trigger

**Cell:** G163

**Comment:** ilngalry:  
broken trigger



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>584</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>25</b>													
3		<b>Overall Reject Rate:</b>		<b>4.28</b>													<i>totals</i>
5		Shot:		144	170	180	51	40									585
6		Rejected:		0	1	0	0	0	0	0	0	0	0	0	0	0	1
7		Percent:		0.0	0.6	0.0	0.0	0.0									0.2
9		Shot:		144	169	180	51	40									584
10		Rejected:		0	7	17	0	0	0	0	0	0	0	0	0	0	24
11		Percent:		0.0	4.1	9.4	0.0	0.0									3.1
13		Shot:		14	16	18	5	4									58
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0	0.0									0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches			1	14											15
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject			1												1
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell			2												2
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard				1											1
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers			1	2											3
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride			2												2
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face			1												1
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>692</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>34</b>													
3		<b>Overall Reject Rate:</b>		<b>4.91</b>													<i>totals</i>
5		Shot:		252	62	252	84	18	38								706
6		Rejected:		3	3	2	0	0	0	0	0	0	0	0	0	0	8
7		Percent:		1.2	4.8	0.8	0.0	0.0	0.0								1.1
9		Shot:		238	59	245	83	18	49								892
10		Rejected:		3	0	9	8	6	0	0	0	0	0	0	0	0	26
11		Percent:		1.3	0.0	3.7	9.6	33.3	0.0								3.8
13		Shot:		25	6	25	7	2	37								102
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0	0.0	0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		1		6	1										8
24	BCOAB	Bolt catches on anti-bind				1											
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard		1		1											2
38	CLM	Can't load magazine					2										2
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		1													1
59	ESB	Ejector sticks back				1	1										2
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire					2										2
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work						6									6
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride					2										2
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		3	3	1											7
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup				1											1
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>612</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>12</b>													
3		<b>Overall Reject Rate:</b>		<b>1.96</b>													<i>totals</i>
5		Shot:		268	156	133		52	20								629
6		Rejected:		2	0	0	0	0	0	0	0	0	0	0	0	0	2
7		Percent:		0.7	0.0	0.0		0.0	0.0								0.3
9		Shot:		267	155	118		52	20								612
10		Rejected:		7	2	1	0	0	0	0	0	0	0	0	0	0	10
11		Percent:		2.6	1.3	0.8		0.0	0.0								1.8
13		Shot:		23	15	13		5	20								78
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0		0.0	0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		1	1												2
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		2													2
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire			1												1
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine		1													1
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard		1													1
93	OR	Over-rides		2		1											3
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions		2													2

Cell: D163

Comment: illegal:  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>611</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>12</b>													
3		<b>Overall Reject Rate:</b>		<b>1.96</b>													<i>totals</i>
5		Shot:		271	118	146	51	43	11								630
6		Rejected:		3	0	1	1	0	0	0	0	0	0	0	0	0	5
7		Percent:		1.1	0.0	0.7	2.0	0.0	0.0								0.8
9		Shot:		257	117	145	50	42									511
10		Rejected:		3	1	1	2	0	0	0	0	0	0	0	0	0	7
11		Percent:		1.2	0.9	0.7	4.0	0.0									1.1
13		Shot:		25	12	16	6	4									63
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0	0.0									0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine			1	1	2										4
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens		1													1
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine		1													1
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides		1													1
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		1		1											2
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions		2			1										3

**Cell:** D163

**Comment:** ilngalry:  
BROKEN TRIGGER

**Cell:** G163

**Comment:** ilngalry:  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>666</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>40</b>													
3		<b>Overall Reject Rate:</b>		<b>6.01</b>													<i>totals</i>
5		Shot:		246	54	190		61	120								671
6		Rejected:		11	1	0	0	1	6	0	0	0	0	0	0	0	18
7		Percent:		4.5	1.9	0.0		1.6	5.0								2.8
9		Shot:		235	53	190		60	128								886
10		Rejected:		0	5	14	0	1	1	0	0	0	0	0	0	0	21
11		Percent:		0.0	9.4	7.4		1.7	0.8								3.2
13		Shot:		25	6	16		2	128								177
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0		0.0	0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches			2	8											10
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine			1												1
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cam wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard							1								1
93	OR	Over-rides				3											3
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline						1									1
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride				1											1
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard			2	2											4
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		3													3
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent		1													1
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions		7	1			1	6								15

**Cell:** D163

**Comment:** illegal;  
broken trigger

**Cell:** H163

**Comment:** illegal;  
broken trigger

**Cell:** I163

**Comment:** illegal;  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>568</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>31</b>													
3		<b>Overall Reject Rate:</b>		<b>5.46</b>													<i>totals</i>
5		Shot:		340	41	162	10	37	3								585
6		Rejected:		6	4	5	0	2	0	0	0	0	0	0	0	0	17
7		Percent:		1.8	9.8	3.1	0.0	5.4	0.0								2.9
9		Shot:		337	37	134	10	10	40								588
10		Rejected:		2	0	10	0	2	0	0	0	0	0	0	0	0	14
11		Percent:		0.6	0.0	7.5	0.0	20.0	0.0								2.4
13		Shot:		33	4	13	1	2	37								90
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	8
15		Percent:		0.0	0.0	0.0	0.0	0.0	0.0								8.8
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		1		8											9
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard						1									1
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		1													1
59	ESB	Ejector sticks back				1											1
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens						1									1
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride				1											1
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof		1													1
151	CBF-P	Damaged Bolt Face		3	2	5											10
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions		2	2			2									6

**Cell:** D163

**Comment:** ilngalry:  
broken trigger

**Cell:** E163

**Comment:** ilngalry:  
broken trigger

**Cell:** H163

**Comment:** ilngalry:  
1broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P
1	<b>Summary</b>	<b>Total Tested</b>		<b>787</b>								<b>Test Date:</b>				
2		<b>Total Rejected:</b>		<b>40</b>												
3		<b>Overall Reject Rate:</b>		<b>5.08</b>												
5		Shot:		245	105	173	71	81								
6	<b>Proof</b>	Rejected:		1	1	1	1	0	0	0	0	0	0	0	0	0
7		Percent:		0.4	1.0	0.6	1.4	0.0								
9		Shot:		319	105	169	71	81	42							
10	<b>Test</b>	Rejected:		21	0	11	3	0	1	0	0	0	0	0	0	0
11		Percent:		6.6	0.0	6.5	4.2	0.0	2.4							
13		Shot:		30	10	68	6	8	42							
14	<b>Target</b>	Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0	0.0	0.0							
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>
18																
19	AB	Action binds														
20	BABS	Bulge at body shoulder														
21	BAC	Burr at chamber														
22	BBMA	BBL-to-bolt misalignment														
23	BB	Bolt binds/catches		17		9	2									
24	BCOAB	Bolt catches on anti-bind														
25	BCOBS	Bolt catches on bolt stop														
26	BCOF	Bolt catches on follower														
27	BC	Blows cases														
28	BHR	Bolt hits receiver														
29	BHS	Bolt plug hits safety switch														
30	BLOP	Bar lock or disconnecter out of position														
31	BLSO	Barrel lug shot off														
32	BPO	Bolt pulls out														
33	BSSM	Bolt stems shell in magazine														
34	BWCD	Bolt won't cam down														
35	BWCFM	Bolt won't close over full magazine														
36	CD	Case dented														
37	CH	Closes hard														
38	CLM	Can't load magazine														
39	CO	Cut-off														
40	CR	Cuts rim														
41	CS	Cases swell														
42	CTOG	Chamber torn or gouged														
43	CTP	Creepy trigger pull														
44	CWSB	Cams wrong side of action bar														
45	DBB	Doesn't blow back														
46	DCS	Double click in safety switch														
47	DCT	Double click in trigger														

	Q	R
1		
2		
3	totals	
4		
5	875	
6	4	
7	0.8	
8		
9	787	
10	38	
11	4.6	
12		
13	164	
14	0	
15	0.2	
16		
17	totals	
18		
19		
20		
21		
22		
23	28	
24		
25		
26		
27		
28		
29		
30		
31		
32		
33		
34		
35		
36		
37		
38		
39		
40		
41		
42		
43		
44		
45		
46		
47		

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P
48	DCU	Doesn't close-up														
49	DE	Doesn't eject														
50	DEL	Doesn't eject live round														
51	DFB	Doesn't feed back														
52	DFU	Doesn't feed up														
53	DLO	Doesn't lock open (after last shell)														
54	DLU	Doesn't lock-up														
55	DS	Dead safe		1												
56	DX	Doesn't extract														
57	DXL	Doesn't extract live round														
58	EDS	Extractor drops shell														
59	ESB	Ejector sticks back														
60	ESCR	Empty shell catches receiver														
61	ESS	Extractor stems shell														
62	FA	Fires automatically														
63	FB	Follower binds														
64	FC	Fails to connect														
65	FCB	Fore-end cracked or broken														
66	FD	Follows-down														
67	FF	Fails to fire														
68	FFP	Flat firing pin														
69	FOS	Fires on safe														
70	FPHB	Firing pin hits bbl														
71	FPHI	Firing pin hits inside rim														
72	FPO	Floor plate opens				2										
73	FPOH	Floor plate opens hard														
74	FSR	Fires when safe is released														
75	FT	Follower tips														
76	GCSO	Gas cyl shot off														
77	HBL	Heavy bolt lift														
78	HMSC	Heading mismatch-steps on case														
79	HPA	High pressure ammo														
80	HUR	Hard under rail														
81	JCS	Jumps cartridge														
82	JM	Jumps magazine														
83	JO	Jars off														
84	LB	Light blow														
85	MAH	Magazine assembles hard														
86	MCV	Magazine capacity wrong														
87	MFA	Misfires (ammo)														
88	MFOP	Magazine follower out of position														
89	ML	Magazine loose														

	Q	R
48		
49		
50		
51		
52		
53		
54		
55	1	
56		
57		
58		
59		
60		
61		
62		
63		
64		
65		
66		
67		
68		
69		
70		
71		
72	2	
73		
74		
75		
76		
77		
78		
79		
80		
81		
82		
83		
84		
85		
86		
87		
88		
89		



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P
90	MLH	Magazine loads hard														
91	MRH	Magazine removes hard														
92	OH	Opens hard		2			1									
93	OR	Over-rides														
94	PH	Pulls hard														
95	PSI	Proof stamp illegible														
96	PSM	Proof stamp missing														
97	RBOC	Rings and bulges on case														
98	RDW	(Action) release doesn't work														
99	RIC	Rings in chamber														
100	RIS	Ring in sholder														
101	RS	Rim srem														
102	SBC	Stems bottom chambers		1												
103	SBE	Stems bbl extension														
104	SCB	Stock cracked or broken														
105	SCX	Shell catches														
106	SHI	Short indent														
107	SI	Stems incline							1							
108	SIC	Stems in chamber														
109	SL	shaves lead														
110	SLC	Stems left side of chamber														
111	SMOC	Stretch marks on case														
112	SOR	Stem over-ride														
113	SP	Stems port														
114	SR	Shoulder rough														
115	SRC	Stems right side of chamber														
116	SRIC	Specific rings in chamber														
117	SSOC	Surface scratches on case														
118	STC	Stems top chamber														
119	SWE	Safety switch works too easily														
120	SWH	Safety switch works too hard														
121	SWW	Safety Switch won't work														
122	TD	Tips down														
123	TU	Tips up														
124	TWP	Trigger won't pull														
125	TWR	Trigger won't retract														
126	UNCN-T	Uncoded														
127	XH	Extracts hard														
128																
129	HI	High														
130	LO	Low														
131	LEFT	Left														

	Q	R
90		
91		
92	3	
93		
94		
95		
96		
97		
98		
99		
100		
101		
102	1	
103		
104		
105		
106		
107	1	
108		
109		
110		
111		
112		
113		
114		
115		
116		
117		
118		
119		
120		
121		
122		
123		
124		
125		
126		
127		
128		
129		
130		
131		

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P
132	RIGHT	Right														
133	DG	Doesn't Group														
134	FSST	Front sight tipped														
135	RSTT	Rear sight tipped														
136	RSBR	Rear sight base raised														
137	FSTR	Front sight raised														
138	FSTL	Front sight loose														
139	RSTL	Rear sight loose														
140	MGPT-G	Missing parts at target														
141	UNCN-G	Uncoded nonconformity at target														
142																
143	AI-P	Assembly incomplete at proof														
144	BBB	Barrel bracket cracked or broken at proof														
145	BC-P	Blows cases at proof														
146	BEB-P	Barrel extension broken at proof														
147	BLP-P	Blanked primer at proof														
148	BLSO-P	Barrel lug shot off at proof														
149	BP-P	Blown primer at proof														
150	BS-P	Barrel split at proof														
151	DBF-P	Damaged Bolt Face					1									
152	DLOS-P	Doesn't lock over shells at proof														
153	ESBBP-P	Ejector sticks back -Blown Primer cup														
154	ESBEC-P	Ejector sticks back - Ejector Crescent														
155	FCB-P	Fore-end cracked at proof														
156	FESO-P	Fore-end shot off at proof														
157	FF-P	Fails to fire at proof				1										
158	GCSO-P	Gas cylinder shot off at proof														
159	MSI-P	Magnaflux stamp illegible on bbl														
160	MSM-P	Magnaflux stamp missing on bbl														
161	PP-P	Pierced primer at proof														
162	SCB-P	Stock cracked or broken at proof														
163	UNCM-P	Uncoded proof malfunctions		1	1		2broken trigger									

	Q	R
132		
133		
134		
135		
136		
137		
138		
139		
140		
141		
142		
143		
144		
145		
146		
147		
148		
149		
150		
151	1	
152		
153		
154		
155		
156		
157	1	
158		
159		
160		
161		
162		
163	2	

**Cell:** D163

**Comment:** illegal;  
broken trigger

**Cell:** E163

**Comment:** illegal;  
broken trigger

**Cell:** H163

**Comment:** illegal;

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>833</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>39</b>													
3		<b>Overall Reject Rate:</b>		<b>4.68</b>													<i>totals</i>
5		Shot:		356	96	127	91	22	38	65							737
6		Rejected:		1	0	5	0	2	0	0	0	0	0	0	0	0	8
7		Percent:		0.3	0.0	3.9	0.0	9.1	0.0	0.0							1.0
9		Shot:		366	98	148	91	22	43	65							833
10		Rejected:		12	3	8	4	0	0	4	0	0	0	0	0	0	31
11		Percent:		3.3	3.1	5.4	4.4	0.0	0.0	6.2							3.7
13		Shot:		37	11	14	9	2	43	6							122
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0	0.0	0.0	0.0							0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		8	1		2			2							13
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine		1													1
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine				1											1
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cam's wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject								1							1
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract				1											1
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell				3											3
59	ESB	Ejector sticks back				1											1
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire					1										1
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens			1												1
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard		2		2	1										3
93	OR	Over-rides								1							1
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers		1													1
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride			1												1
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup				1											1
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions		1		4		2									7

**Cell:** D163

**Comment:** ilngalry:  
broken trigger

**Cell:** F163

**Comment:** ilngalry:  
3-broken trigger  
1- broken bolt handle

**Cell:** H163

**Comment:** ilngalry:  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>691</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>21</b>													
3		<b>Overall Reject Rate:</b>		<b>3.04</b>													<i>totals</i>
5		Shot:		335	248	124			19								726
6		Rejected:		1	0	1	0	0	0	0	0	0	0	0	0	0	2
7		Percent:		0.3	0.0	0.8			0.0								0.3
9		Shot:		333	216	123			19								891
10		Rejected:		5	11	3	0	0	0	0	0	0	0	0	0	0	16
11		Percent:		1.5	5.1	2.4			0.0								2.3
13		Shot:		13	12	14			19								58
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0			0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		1													1
24	BCOAB	Bolt catches on anti-bind			1	2											
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine			2												2
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract			1												1
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		4													4
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard			3												3
92	OH	Opens hard				1											1
93	OR	Over-rides			4												4
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face				1											1
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions		1													1

Cell: D163

Comment: illegal:  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															


	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															





	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

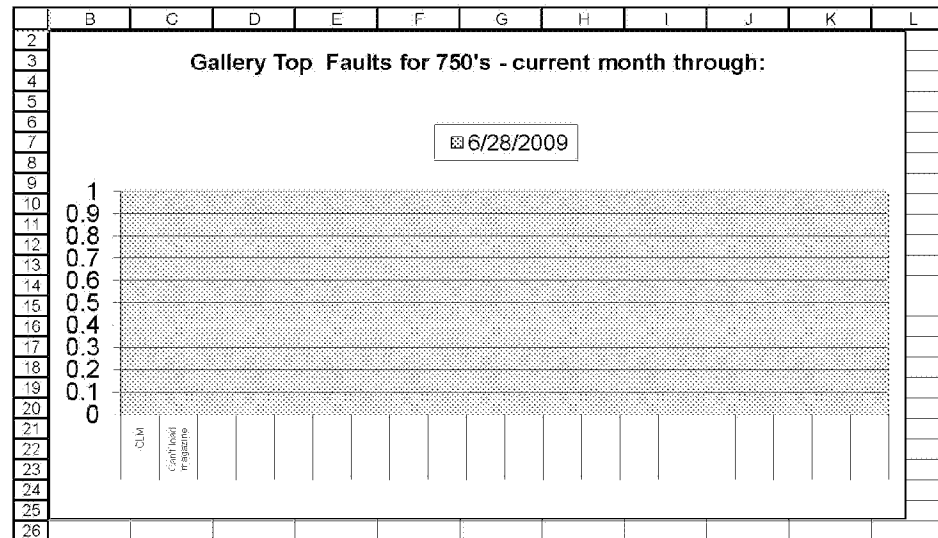

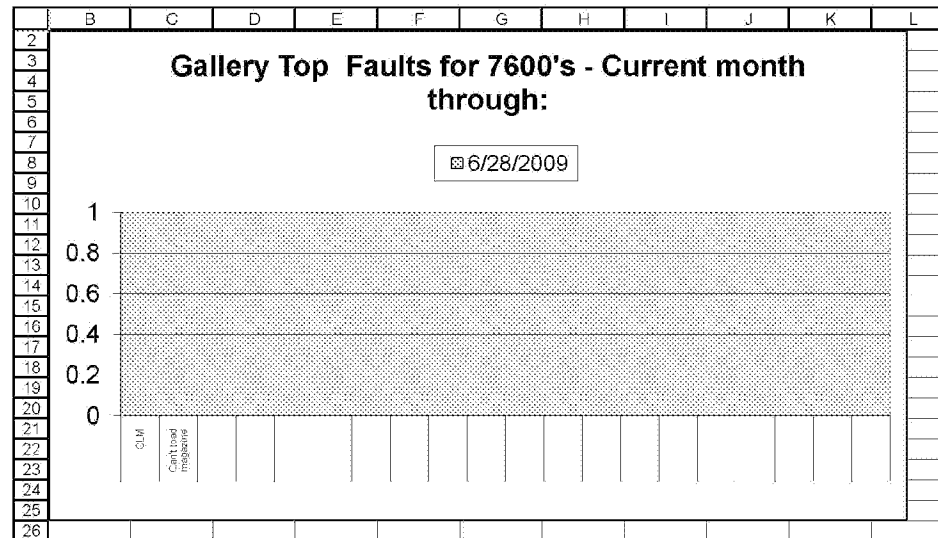

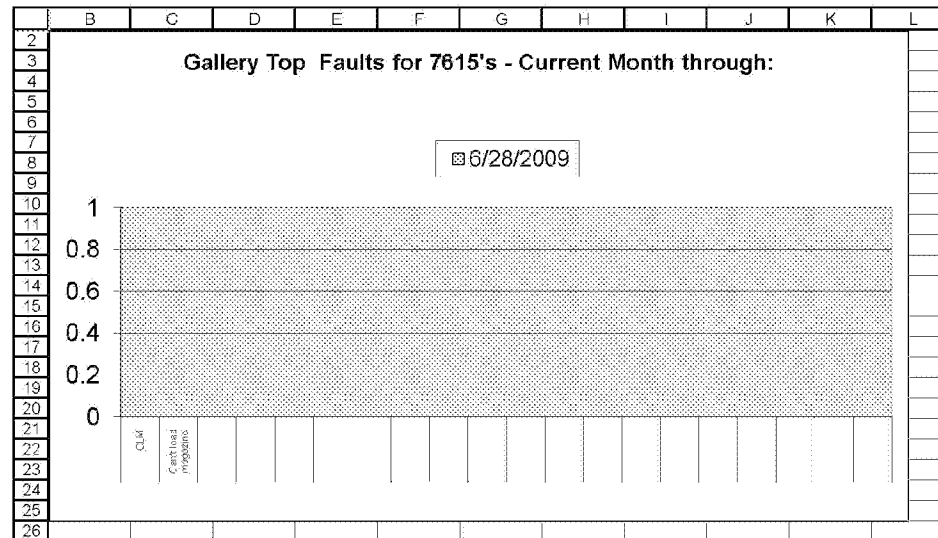

	A	B	C
1	AB	Action binds	0
2	BABS	Bulge at body shoulder	0
3	BAC	Burr at chamber	0
4	BBMA	BBL-to-bolt misalignment	0
5	BB	Bolt binds/catches	0
6	BCOAB	Bolt catches on anti-bind	0
7	BCOBS	Bolt catches on bolt stop	0
8	BCOF	Bolt catches on follower	0
9	BC	Blows cases	0
10	BHR	Bolt hits receiver	0
11	BHS	Bolt plug hits safety switch	0
12	BLOP	Bar lock or disconnecter out of position	0
13	BLSO	Barrel lug shot off	0
14	BPO	Bolt pulls out	0
15	BSSM	Bolt stems shell in magazine	0
16	BWCD	Bolt won't cam down	0
17	BWCFM	Bolt won't close over full magazine	0
18	CD	Case dented	0
19	CH	Closes hard	0
20	CLM	Can't load magazine	0
21	CO	Cut-off	0
22	CR	Cuts rim	0
23	CS	Cases swell	0
24	CTOG	Chamber torn or gouged	0
25	CTP	Creepy trigger pull	0
26	CWSB	Cams wrong side of action bar	0
27	DBB	Doesn't blow back	0
28	DCS	Double click in safety switch	0
29	DCT	Double click in trigger	0
30	DCU	Doesn't close-up	0
31	DE	Doesn't eject	0
32	DEL	Doesn't eject live round	0
33	DFB	Doesn't feed back	0
34	DFU	Doesn't feed up	0
35	DLO	Doesn't lock open (after last shell)	0
36	DLU	Doesn't lock-up	0
37	DS	Dead safe	0
38	DX	Doesn't extract	0
39	DXL	Doesn't extract live round	0
40	EDS	Extractor drops shell	0
41	ESB	Ejector sticks back	0
42	ESCR	Empty shell catches receiver	0
43	ESS	Extractor stems shell	0
44	FA	Fires automatically	0
45	FB	Follower binds	0
46	FC	Fails to connect	0
47	FCB	Fore-end cracked or broken	0
48	FD	Follows-down	0
49	FF	Fails to fire	0
50	FFP	Flat firing pin	0
51	FOS	Fires on safe	0
52	FPHB	Firing pin hits bbl	0
53	FPHI	Firing pin hits inside rim	0
54	FPO	Floor plate opens	0
55	FPOH	Floor plate opens hard	0
56	FSR	Fires when safe is released	0

	A	B	C
57	FT	Follower tips	0
58	GCSO	Gas cyl shot off	0
59	HBL	Heavy bolt lift	0
60	HMSC	Heading mismatch-steps on case	0
61	HPA	High pressure ammo	0
62	HUR	Hard under rail	0
63	JCS	Jumps cartridge	0
64	JM	Jumps magazine	0
65	JO	Jars off	0
66	LB	Light blow	0
67	MAH	Magazine assembles hard	0
68	MCW	Magazine capacity wrong	0
69	MFA	Misfires (ammo)	0
70	MFOP	Magazine follower out of position	0
71	ML	Magazine loose	0
72	MLH	Magazine loads hard	0
73	MRH	Magazine removes hard	0
74	OH	Opens hard	0
75	OR	Over-rides	0
76	PH	Pulls hard	0
77	PSI	Proof stamp illegible	0
78	PSM	Proof stamp missing	0
79	RBOC	Rings and bulges on case	0
80	RDVV	(Action) release doesn't work	0
81	RIC	Rings in chamber	0
82	RIS	Ring in sholder	0
83	RS	Rim srem	0
84	SBC	Stems bottom chambers	0
85	SEE	Stems bbl extension	0
86	SCB	Stock cracked or broken	0
87	SCX	Shell catches	0
88	SHI	Short indent	0
89	SI	Stems incline	0
90	SIC	Stems in chamber	0
91	SL	shaves lead	0
92	SLC	Stems left side of chamber	0
93	SMOC	Stretch marks on case	0
94	SOR	Stem over-ride	0
95	SP	Stems port	0
96	SR	Shoulder rough	0
97	SRC	Stems right side of chamber	0
98	SRIC	Specific rings in chamber	0
99	SSOC	Surface scratches on case	0
100	STC	Stems top chamber	0
101	SWE	Safety switch works too easily	0
102	SWH	Safety switch works too hard	0
103	SWW	Safety Switch won't work	0
104	TD	Tips down	0
105	TU	Tips up	0
106	TWP	Trigger won't pull	0
107	TWR	Trigger won't retract	0
108	UNCN-T	Uncoded	0
109	XH	Extracts hard	0
110			0
111	HI	High	0
112	LO	Low	0



	A	B	C
113	LEFT	Left	0
114	RIGHT	Right	0
115	DG	Doesn't Group	0
116	FSST	Front sight tipped	0
117	RSTT	Rear sight tipped	0
118	RSBR	Rear sight base raised	0
119	FSTR	Front sight raised	0
120	FSTL	Front sight loose	0
121	RSTL	Rear sight loose	0
122	MGPT-G	Missing parts at target	0
123	UNCN-G	Uncoded nonconformity at target	0
124			0
125	AI-P	Assembly incomplete at proof	0
126	BBB	Barrel bracket cracked or broken at proof	0
127	BC-P	Blows cases at proof	0
128	BEB-P	Barrel extension broken at proof	0
129	BLP-P	Blanked primer at proof	0
130	BLSO-P	Barrel lug shot off at proof	0
131	BP-P	Blown primer at proof	0
132	BS-P	Barrel split at proof	0
133	DBF-P	Damaged Bolt Face	0
134	DLOS-P	Doesn't lock over shells at proof	0
135	ESBBP-P	Ejector sticks back - Blown Primer cup	0
136	ESBEC-P	Ejector sticks back - Ejector Crescent	0
137	FCB-P	Fore-end cracked at proof	0
138	FESO-P	Fore-end shot off at proof	0
139	FF-P	Fails to fire at proof	0
140	GCSO-P	Gas cylinder shot off at proof	0
141	MSI-P	Magnaflux stamp illegible on bbl	0
142	MSM-P	Magnaflux stamp missing on bbl	0
143	PP-P	Pierced primer at proof	0
144	SCB-P	Stock cracked or broken at proof	0

	A	B	C
1	AB	Action binds	0
2	BABS	Bulge at body shoulder	0
3	BAC	Burr at chamber	0
4	BBMA	BBL-to-bolt misalignment	0
5	BB	Bolt binds/catches	0
6	BCOAB	Bolt catches on anti-bind	0
7	BCOBS	Bolt catches on bolt stop	0
8	BCOF	Bolt catches on follower	0
9	BC	Blows cases	0
10	BHR	Bolt hits receiver	0
11	BHS	Bolt plug hits safety switch	0
12	BLOP	Bar lock or disconnecter out of position	0
13	BLSO	Barrel lug shot off	0
14	BPO	Bolt pulls out	0
15	BSSM	Bolt stems shell in magazine	0
16	BWCD	Bolt won't cam down	0
17	BWCFM	Bolt won't close over full magazine	0
18	CD	Case dented	0
19	CH	Closes hard	0
20	CLM	Can't load magazine	0
21	CO	Cut-off	0
22	CR	Cuts rim	0
23	CS	Cases swell	0
24	CTOG	Chamber torn or gouged	0
25	CTP	Creepy trigger pull	0
26	CWSB	Cams wrong side of action bar	0
27	DBB	Doesn't blow back	0
28	DCS	Double click in safety switch	0
29	DCT	Double click in trigger	0
30	DCU	Doesn't close-up	0
31	DE	Doesn't eject	0
32	DEL	Doesn't eject live round	0
33	DFB	Doesn't feed back	0
34	DFU	Doesn't feed up	0
35	DLO	Doesn't lock open (after last shell)	0
36	DLU	Doesn't lock-up	0
37	DS	Dead safe	0
38	DX	Doesn't extract	0
39	DXL	Doesn't extract live round	0
40	EDS	Extractor drops shell	0
41	ESB	Ejector sticks back	0
42	ESCR	Empty shell catches receiver	0
43	ESS	Extractor stems shell	0
44	FA	Fires automatically	0
45	FB	Follower binds	0
46	FC	Fails to connect	0
47	FCB	Fore-end cracked or broken	0
48	FD	Follows-down	0
49	FF	Fails to fire	0
50	FFP	Flat firing pin	0
51	FOS	Fires on safe	0
52	FPHB	Firing pin hits bbl	0
53	FPHI	Firing pin hits inside rim	0
54	FPO	Floor plate opens	0
55	FPOH	Floor plate opens hard	0
56	FSR	Fires when safe is released	0

	A	B	C
57	FT	Follower tips	0
58	GCSO	Gas cyl shot off	0
59	HBL	Heavy bolt lift	0
60	HMSC	Heading mismatch-steps on case	0
61	HPA	High pressure ammo	0
62	HUR	Hard under rail	0
63	JCS	Jumps cartridge	0
64	JM	Jumps magazine	0
65	JO	Jars off	0
66	LB	Light blow	0
67	MAH	Magazine assembles hard	0
68	MCW	Magazine capacity wrong	0
69	MFA	Misfires (ammo)	0
70	MFOP	Magazine follower out of position	0
71	ML	Magazine loose	0
72	MLH	Magazine loads hard	0
73	MRH	Magazine removes hard	0
74	OH	Opens hard	0
75	OR	Over-rides	0
76	PH	Pulls hard	0
77	PSI	Proof stamp illegible	0
78	PSM	Proof stamp missing	0
79	RBOC	Rings and bulges on case	0
80	RDVV	(Action) release doesn't work	0
81	RIC	Rings in chamber	0
82	RIS	Ring in sholder	0
83	RS	Rim srem	0
84	SBC	Stems bottom chambers	0
85	SEE	Stems bbl extension	0
86	SCB	Stock cracked or broken	0
87	SCX	Shell catches	0
88	SHI	Short indent	0
89	SI	Stems incline	0
90	SIC	Stems in chamber	0
91	SL	shaves lead	0
92	SLC	Stems left side of chamber	0
93	SMOC	Stretch marks on case	0
94	SOR	Stem over-ride	0
95	SP	Stems port	0
96	SR	Shoulder rough	0
97	SRC	Stems right side of chamber	0
98	SRIC	Specific rings in chamber	0
99	SSOC	Surface scratches on case	0
100	STC	Stems top chamber	0
101	SWE	Safety switch works too easily	0
102	SWH	Safety switch works too hard	0
103	SWW	Safety Switch won't work	0
104	TD	Tips down	0
105	TU	Tips up	0
106	TWP	Trigger won't pull	0
107	TWR	Trigger won't retract	0
108	UNCN-T	Uncoded	0
109	XH	Extracts hard	0
110			0
111	HI	High	0
112	LO	Low	0

	A	B	C
113	LEFT	Left	0
114	RIGHT	Right	0
115	DG	Doesn't Group	0
116	FSST	Front sight tipped	0
117	RSTT	Rear sight tipped	0
118	RSBR	Rear sight base raised	0
119	FSTR	Front sight raised	0
120	FSTL	Front sight loose	0
121	RSTL	Rear sight loose	0
122	MGPT-G	Missing parts at target	0
123	UNCN-G	Uncoded nonconformity at target	0
124			0
125	AI-P	Assembly incomplete at proof	0
126	BBB	Barrel bracket cracked or broken at proof	0
127	BC-P	Blows cases at proof	0
128	BEB-P	Barrel extension broken at proof	0
129	BLP-P	Blanked primer at proof	0
130	BLSO-P	Barrel lug shot off at proof	0
131	BP-P	Blown primer at proof	0
132	BS-P	Barrel split at proof	0
133	DBF-P	Damaged Bolt Face	0
134	DLOS-P	Doesn't lock over shells at proof	0
135	ESBBP-P	Ejector sticks back - Blown Primer cup	0
136	ESBEC-P	Ejector sticks back - Ejector Crescent	0
137	FCB-P	Fore-end cracked at proof	0
138	FESO-P	Fore-end shot off at proof	0
139	FF-P	Fails to fire at proof	0
140	GCSO-P	Gas cylinder shot off at proof	0
141	MSI-P	Magnaflux stamp illegible on bbl	0
142	MSM-P	Magnaflux stamp missing on bbl	0
143	PP-P	Pierced primer at proof	0
144	SCB-P	Stock cracked or broken at proof	0

	A	B	C
1	AB	Action binds	0
2	BABS	Bulge at body shoulder	0
3	BAC	Burr at chamber	0
4	BBMA	BBL-to-bolt misalignment	0
5	BB	Bolt binds/catches	0
6	BCOAB	Bolt catches on anti-bind	0
7	BCOBS	Bolt catches on bolt stop	0
8	BCOF	Bolt catches on follower	0
9	BC	Blows cases	0
10	BHR	Bolt hits receiver	0
11	BHS	Bolt plug hits safety switch	0
12	BLOP	Bar lock or disconnecter out of position	0
13	BLSO	Barrel lug shot off	0
14	BPO	Bolt pulls out	0
15	BSSM	Bolt stems shell in magazine	0
16	BWCD	Bolt won't cam down	0
17	BWCFM	Bolt won't close over full magazine	0
18	CD	Case dented	0
19	CH	Closes hard	0
20	CLM	Can't load magazine	0
21	CO	Cut-off	0
22	CR	Cuts rim	0
23	CS	Cases swell	0
24	CTOG	Chamber torn or gouged	0
25	CTP	Creepy trigger pull	0
26	CWSB	Cams wrong side of action bar	0
27	DBB	Doesn't blow back	0
28	DCS	Double click in safety switch	0
29	DCT	Double click in trigger	0
30	DCU	Doesn't close-up	0
31	DE	Doesn't eject	0
32	DEL	Doesn't eject live round	0
33	DFB	Doesn't feed back	0
34	DFU	Doesn't feed up	0
35	DLO	Doesn't lock open (after last shell)	0
36	DLU	Doesn't lock-up	0
37	DS	Dead safe	0
38	DX	Doesn't extract	0
39	DXL	Doesn't extract live round	0
40	EDS	Extractor drops shell	0
41	ESB	Ejector sticks back	0
42	ESCR	Empty shell catches receiver	0
43	ESS	Extractor stems shell	0
44	FA	Fires automatically	0
45	FB	Follower binds	0
46	FC	Fails to connect	0
47	FCB	Fore-end cracked or broken	0
48	FD	Follows-down	0
49	FF	Fails to fire	0
50	FFP	Flat firing pin	0
51	FOS	Fires on safe	0
52	FPHB	Firing pin hits bbl	0
53	FPHI	Firing pin hits inside rim	0
54	FPO	Floor plate opens	0
55	FPOH	Floor plate opens hard	0
56	FSR	Fires when safe is released	0

	A	B	C
57	FT	Follower tips	0
58	GCSO	Gas cyl shot off	0
59	HBL	Heavy bolt lift	0
60	HMSC	Heading mismatch-steps on case	0
61	HPA	High pressure ammo	0
62	HUR	Hard under rail	0
63	JCS	Jumps cartridge	0
64	JM	Jumps magazine	0
65	JO	Jars off	0
66	LB	Light blow	0
67	MAH	Magazine assembles hard	0
68	MCW	Magazine capacity wrong	0
69	MFA	Misfires (ammo)	0
70	MFOP	Magazine follower out of position	0
71	ML	Magazine loose	0
72	MLH	Magazine loads hard	0
73	MRH	Magazine removes hard	0
74	OH	Opens hard	0
75	OR	Over-rides	0
76	PH	Pulls hard	0
77	PSI	Proof stamp illegible	0
78	PSM	Proof stamp missing	0
79	RBOC	Rings and bulges on case	0
80	RDVV	(Action) release doesn't work	0
81	RIC	Rings in chamber	0
82	RIS	Ring in sholder	0
83	RS	Rim srem	0
84	SBC	Stems bottom chambers	0
85	SEE	Stems bbl extension	0
86	SCB	Stock cracked or broken	0
87	SCX	Shell catches	0
88	SHI	Short indent	0
89	SI	Stems incline	0
90	SIC	Stems in chamber	0
91	SL	shaves lead	0
92	SLC	Stems left side of chamber	0
93	SMOC	Stretch marks on case	0
94	SOR	Stem over-ride	0
95	SP	Stems port	0
96	SR	Shoulder rough	0
97	SRC	Stems right side of chamber	0
98	SRIC	Specific rings in chamber	0
99	SSOC	Surface scratches on case	0
100	STC	Stems top chamber	0
101	SWE	Safety switch works too easily	0
102	SWH	Safety switch works too hard	0
103	SWW	Safety Switch won't work	0
104	TD	Tips down	0
105	TU	Tips up	0
106	TWP	Trigger won't pull	0
107	TWR	Trigger won't retract	0
108	UNCN-T	Uncoded	0
109	XH	Extracts hard	0
110			0
111	HI	High	0
112	LO	Low	0

	A	B	C
113	LEFT	Left	0
114	RIGHT	Right	0
115	DG	Doesn't Group	0
116	FSST	Front sight tipped	0
117	RSTT	Rear sight tipped	0
118	RSBR	Rear sight base raised	0
119	FSTR	Front sight raised	0
120	FSTL	Front sight loose	0
121	RSTL	Rear sight loose	0
122	MGPT-G	Missing parts at target	0
123	UNCN-G	Uncoded nonconformity at target	0
124			0
125	AI-P	Assembly incomplete at proof	0
126	BBB	Barrel bracket cracked or broken at proof	0
127	BC-P	Blows cases at proof	0
128	BEB-P	Barrel extension broken at proof	0
129	BLP-P	Blanked primer at proof	0
130	BLSO-P	Barrel lug shot off at proof	0
131	BP-P	Blown primer at proof	0
132	BS-P	Barrel split at proof	0
133	DBF-P	Damaged Bolt Face	0
134	DLOS-P	Doesn't lock over shells at proof	0
135	ESBBP-P	Ejector sticks back - Blown Primer cup	0
136	ESBEC-P	Ejector sticks back - Ejector Crescent	0
137	FCB-P	Fore-end cracked at proof	0
138	FESO-P	Fore-end shot off at proof	0
139	FF-P	Fails to fire at proof	0
140	GCSO-P	Gas cylinder shot off at proof	0
141	MSI-P	Magnaflux stamp illegible on bbl	0
142	MSM-P	Magnaflux stamp missing on bbl	0
143	PP-P	Pierced primer at proof	0
144	SCB-P	Stock cracked or broken at proof	0

	A	B	C
1	AB	Action binds	0
2	BABS	Bulge at body shoulder	0
3	BAC	Burr at chamber	0
4	BBMA	BBL-to-bolt misalignment	0
5	BB	Bolt binds/catches	0
6	BCOAB	Bolt catches on anti-bind	0
7	BCOBS	Bolt catches on bolt stop	0
8	BCOF	Bolt catches on follower	0
9	BC	Blows cases	0
10	BHR	Bolt hits receiver	0
11	BHS	Bolt plug hits safety switch	0
12	BLOP	Bar lock or disconnecter out of position	0
13	BLSO	Barrel lug shot off	0
14	BPO	Bolt pulls out	0
15	BSSM	Bolt stems shell in magazine	0
16	BWCD	Bolt won't cam down	0
17	BWCFM	Bolt won't close over full magazine	0
18	CD	Case dented	0
19	CH	Closes hard	0
20	CLM	Can't load magazine	0
21	CO	Cut-off	0
22	CR	Cuts rim	0
23	CS	Cases swell	0
24	CTOG	Chamber torn or gouged	0
25	CTP	Creepy trigger pull	0
26	CWSB	Cams wrong side of action bar	0
27	DBB	Doesn't blow back	0
28	DCS	Double click in safety switch	0
29	DCT	Double click in trigger	0
30	DCU	Doesn't close-up	0
31	DE	Doesn't eject	0
32	DEL	Doesn't eject live round	0
33	DFB	Doesn't feed back	0
34	DFU	Doesn't feed up	0
35	DLO	Doesn't lock open (after last shell)	0
36	DLU	Doesn't lock-up	0
37	DS	Dead safe	0
38	DX	Doesn't extract	0
39	DXL	Doesn't extract live round	0
40	EDS	Extractor drops shell	0
41	ESB	Ejector sticks back	0
42	ESCR	Empty shell catches receiver	0
43	ESS	Extractor stems shell	0
44	FA	Fires automatically	0
45	FB	Follower binds	0
46	FC	Fails to connect	0
47	FCB	Fore-end cracked or broken	0
48	FD	Follows-down	0
49	FF	Fails to fire	0
50	FFP	Flat firing pin	0
51	FOS	Fires on safe	0
52	FPHB	Firing pin hits bbl	0
53	FPHI	Firing pin hits inside rim	0
54	FPO	Floor plate opens	0
55	FPOH	Floor plate opens hard	0
56	FSR	Fires when safe is released	0



	A	B	C
57	FT	Follower tips	0
58	GCSO	Gas cyl shot off	0
59	HBL	Heavy bolt lift	0
60	HMSC	Heading mismatch-steps on case	0
61	HPA	High pressure ammo	0
62	HUR	Hard under rail	0
63	JCS	Jumps cartridge	0
64	JM	Jumps magazine	0
65	JO	Jars off	0
66	LB	Light blow	0
67	MAH	Magazine assembles hard	0
68	MCW	Magazine capacity wrong	0
69	MFA	Misfires (ammo)	0
70	MFOP	Magazine follower out of position	0
71	ML	Magazine loose	0
72	MLH	Magazine loads hard	0
73	MRH	Magazine removes hard	0
74	OH	Opens hard	0
75	OR	Over-rides	0
76	PH	Pulls hard	0
77	PSI	Proof stamp illegible	0
78	PSM	Proof stamp missing	0
79	RBOC	Rings and bulges on case	0
80	RDVV	(Action) release doesn't work	0
81	RIC	Rings in chamber	0
82	RIS	Ring in sholder	0
83	RS	Rim srem	0
84	SBC	Stems bottom chambers	0
85	SEE	Stems bbl extension	0
86	SCB	Stock cracked or broken	0
87	SCX	Shell catches	0
88	SHI	Short indent	0
89	SI	Stems incline	0
90	SIC	Stems in chamber	0
91	SL	shaves lead	0
92	SLC	Stems left side of chamber	0
93	SMOC	Stretch marks on case	0
94	SOR	Stem over-ride	0
95	SP	Stems port	0
96	SR	Shoulder rough	0
97	SRC	Stems right side of chamber	0
98	SRIC	Specific rings in chamber	0
99	SSOC	Surface scratches on case	0
100	STC	Stems top chamber	0
101	SWE	Safety switch works too easily	0
102	SWH	Safety switch works too hard	0
103	SWW	Safety Switch won't work	0
104	TD	Tips down	0
105	TU	Tips up	0
106	TWP	Trigger won't pull	0
107	TWR	Trigger won't retract	0
108	UNCN-T	Uncoded	0
109	XH	Extracts hard	0
110			0
111	HI	High	0
112	LO	Low	0

	A	B	C
113	LEFT	Left	0
114	RIGHT	Right	0
115	DG	Doesn't Group	0
116	FSST	Front sight tipped	0
117	RSTT	Rear sight tipped	0
118	RSBR	Rear sight base raised	0
119	FSTR	Front sight raised	0
120	FSTL	Front sight loose	0
121	RSTL	Rear sight loose	0
122	MGPT-G	Missing parts at target	0
123	UNCN-G	Uncoded nonconformity at target	0
124			0
125	AI-P	Assembly incomplete at proof	0
126	BBB	Barrel bracket cracked or broken at proof	0
127	BC-P	Blows cases at proof	0
128	BEB-P	Barrel extension broken at proof	0
129	BLP-P	Blanked primer at proof	0
130	BLSO-P	Barrel lug shot off at proof	0
131	BP-P	Blown primer at proof	0
132	BS-P	Barrel split at proof	0
133	DBF-P	Damaged Bolt Face	0
134	DLOS-P	Doesn't lock over shells at proof	0
135	ESBBP-P	Ejector sticks back - Blown Primer cup	0
136	ESBEC-P	Ejector sticks back - Ejector Crescent	0
137	FCB-P	Fore-end cracked at proof	0
138	FESO-P	Fore-end shot off at proof	0
139	FF-P	Fails to fire at proof	0
140	GCSO-P	Gas cylinder shot off at proof	0
141	MSI-P	Magnaflux stamp illegible on bbl	0
142	MSM-P	Magnaflux stamp missing on bbl	0
143	PP-P	Pierced primer at proof	0
144	SCB-P	Stock cracked or broken at proof	0

# Centerfire

	A	B	D	E	F	G	H	I	J	P	Q
1	<b>Summary</b>		Total Tested	10729							
2			Total Rejected:	433							
3			Overall Reject Rate:	4.04							Grand totals
5		Shot:	4226	1426	3380	1236	593	189	45		11085
6	<b>Proof</b>	Rejected:	12	9	4	13	16	3	0	0	57
7		Percent:	0.3	0.6	0.1	1.1	2.7	1.6	0.0		0.5
9		Shot:	4014	1278	3384	1272	542	207	20	12	10729
10	<b>Test</b>	Rejected:	114	64	95	87	11	2	2	1	378
11		Percent:	2.8	5.0	2.8	6.8	2.0	1.0	10.0	8.3	3.5
13		Shot:	326	99	254	126	48	164			1017
14	<b>Target</b>	Rejected:	0	0	0	0	0	0	0	0	0
15		Percent:	0.0	0.0	0.0	0.0	0.0	0.0			0.0
17	CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7	Rimfire	totals
18											
19	AB	Action binds	1								1
20	BABS	Bulge at body shoulder									
21	BAC	Burr at chamber	2		1						3
22	BBMA	BBL-to-bolt misalignment									
23	BB	Bolt binds/catches	35	4	39	7	2		2		89
24	BCOAB	Bolt catches on anti-bind									
25	BCOBS	Bolt catches on bolt stop									
26	BCOF	Bolt catches on follower	1		1						2
27	BC	Blows cases									
28	BHR	Bolt hits receiver									
29	BHS	Bolt plug hits safety switch									
30	BLOP	Bar lock or disconnecter out of position									
31	BLSO	Barrel lug shot off									
32	BPO	Bolt pulls out				1					1
33	BSSM	Bolt stems shell in magazine									
34	BWCD	Bolt won't cam down	1								1
35	BWCFM	Bolt won't close over full magazine		1							1
36	CD	Case dented									
37	CH	Closes hard	1			1					2
38	CLM	Can't load magazine	5	2	1	2		1			11
39	CO	Cut-off									
40	CR	Cuts rim									

# Centerfire

	A	B	D	E	F	G	H	I	J	P	Q
17	CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7	Rimfire	totals
41	CS	Cases swell									
42	CTOG	Chamber torn or gouged									
43	CTP	Creepy trigger pull									
44	CWSB	Cams wrong side of action bar									
45	DBB	Doesn't blow back									
46	DCS	Double click in safety switch									
47	DCT	Double click in trigger									
48	DCU	Doesn't close-up									
49	DE	Doesn't eject			1						1
50	DEL	Doesn't eject live round									
51	DFB	Doesn't feed back									
52	DFU	Doesn't feed up								1	1
53	DLO	Doesn't lock open (after last shell)									
54	DLU	Doesn't lock-up									
55	DS	Dead safe									
56	DX	Doesn't extract	6	8	4	9	1				28
57	DXL	Doesn't extract live round									
58	EDS	Extractor drops shell	12	3	6	4					25
59	ESB	Ejector sticks back	2	1		2	1				6
60	ESCR	Empty shell catches receiver									
61	ESS	Extractor stems shell									
62	FA	Fires automatically									
63	FB	Follower binds									
64	FC	Fails to connect									
65	FCB	Fore-end cracked or broken									
66	FD	Follows-down			2						2
67	FF	Fails to fire	1								1
68	FFP	Flat firing pin									
69	FOS	Fires on safe									
70	FPHB	Firing pin hits bbl									
71	FPHI	Firing pin hits inside rim									
72	FPO	Floor plate opens	7		8	5	2				22
73	FPOH	Floor plate opens hard									

# Centerfire


	A	B	D	E	F	G	H	I	J	P	Q
17	CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7	Rimfire	totals
74	FSR	Fires when safe is released									
75	FT	Follower tips	1								1
76	GCSO	Gas cyl shot off									
77	HBL	Heavy bolt lift	1	1	3						5
78	HMSC	Heading mismatch-steps on case									
79	HPA	High pressure ammo									
80	HUR	Hard under rail			1	1					2
81	JCS	Jumps cartridge									
82	JM	Jumps magazine	4	2	11	2		1			20
83	JO	Jars off									
84	LB	Light blow									
85	MAH	Magazine assembles hard									
86	MCW	Magazine capacity wrong									
87	MFA	Misfires (ammo)									
88	MFOP	Magazine follower out of position									
89	ML	Magazine loose	1								1
90	MLH	Magazine loads hard									
91	MRH	Magazine removes hard	2	3	1	8					14
92	OH	Opens hard	5	3	5	1	1				16
93	OR	Over-rides	9	7		9					25
94	PH	Pulls hard									
95	PSI	Proof stamp illegible									
96	PSM	Proof stamp missing									
97	RBOC	Rings and bulges on case									
98	RDW	(Action) release doesn't work			1	1					2
99	RIC	Rings in chamber	2	2							4
100	RIS	Ring in sholder									
101	RS	Rim srem									
102	SBC	Stems bottom chambers									
103	SBE	Stems bbl extension									
104	SCB	Stock cracked or broken									
105	SCX	Shell catches									
106	SHI	Short indent									

# Centerfire

	A	B	D	E	F	G	H	I	J	P	Q
17	CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7	Rimfire	totals
107	SI	Stems incline		8	5	9					22
108	SIC	Stems in chamber		2							2
109	SL	shaves lead									
110	SLC	Stems left side of chamber									
111	SMOC	Stretch marks on case									
112	SOR	Stem over-ride	12	14	3	20	3				52
113	SP	Stems port									
114	SR	Shoulder rough									
115	SRC	Stems right side of chamber									
116	SRIC	Specific rings in chamber									
117	SSOC	Surface scratches on case									
118	STC	Stems top chamber									
119	SWE	Safety switch works too easily									
120	SWH	Safety switch works too hard		2		2					4
121	SWW	Safety Switch won't work									
122	TD	Tips down									
123	TU	Tips up									
124	TWP	Trigger won't pull									
125	TWR	Trigger won't retract									
126	UNCN-T	Uncoded	1			1					2
127	XH	Extracts hard	2	1	2	2	1				8
128											
129	HI	High									
130	LO	Low									
131	LEFT	Left									
132	RIGHT	Right									
133	DG	Doesn't Group									
134	FSST	Front sight tipped									
135	RSTT	Rear sight tipped									
136	RSBR	Rear sight base raised									
137	FSTR	Front sight raised									
138	FSTL	Front sight loose									
139	RSTL	Rear sight loose									

# Centerfire

	A	B	D	E	F	G	H	I	J	P	Q
17	CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7	Rimfire	totals
140	MGPT-G	Missing parts at target									
141	UNCN-G	Uncoded nonconformity at target									
142											
143	AI-P	Assembly incomplete at proof									
144	BBB	Barrel bracket cracked or broken at proof									
145	BC-P	Blows cases at proof									
146	BEB-P	Barrel extension broken at proof									
147	BLP-P	Blanked primer at proof									
148	BLSO-P	Barrel lug shot off at proof									
149	BP-P	Blown primer at proof									
150	BS-P	Barrel split at proof									
151	DBF-P	Damaged Bolt Face	4	3	4	1					12
152	DLOS-P	Doesn't lock over shells at proof									
153	ESBBP-P	Ejector sticks back -Blown Primer cup									
154	ESBEC-P	Ejector sticks back - Ejector Crescent									
155	FCB-P	Fore-end cracked at proof									
156	FESO-P	Fore-end shot off at proof									
157	FF-P	Fails to fire at proof				1					1
158	GCSO-P	Gas cylinder shot off at proof									
159	MSI-P	Magnaflux stamp illegible on bbl									
160	MSM-P	Magnaflux stamp missing on bbl									
161	PP-P	Pierced primer at proof									
162	SCB-P	Stock cracked or broken at proof									
163	UNCM-P	Uncoded proof malfunctions	8	6		11	16	3			44

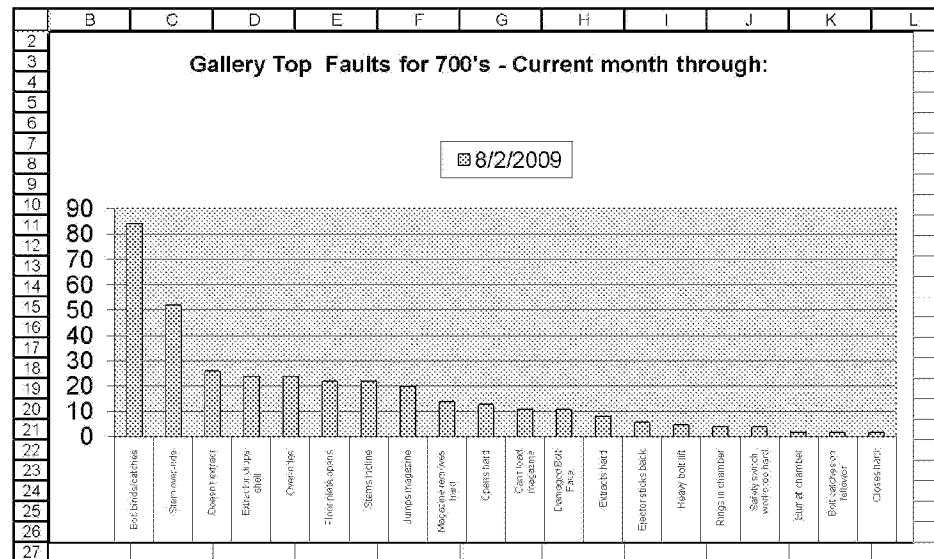



	A	B	C
1	BB	Bolt binds/catches	84
2	SOR	Stem over-ride	52
3	DX	Doesn't extract	26
4	EDS	Extractor drops shell	24
5	OR	Over-rides	24
6	FPO	Floor plate opens	22
7	SI	Stems incline	22
8	JM	Jumps magazine	20
9	MRH	Magazine removes hard	14
10	OH	Opens hard	13
11	CLM	Can't load magazine	11
12	DBF-P	Damaged Bolt Face	11
13	XH	Extracts hard	8
14	ESB	Ejector sticks back	6
15	HBL	Heavy bolt lift	5
16	RIC	Rings in chamber	4
17	SWH	Safety switch works too hard	4
18	BAC	Burr at chamber	2
19	BCCF	Bolt catches on follower	2
20	CH	Closes hard	2
21	FD	Follows-down	2
22	HUR	Hard under rail	2
23	RDW	(Action) release doesn't work	2
24	SIC	Stems in chamber	2
25	UNCN-T	Uncoded	2
26	AB	Action binds	1
27	BPO	Bolt pulls out	1
28	BWCFM	Bolt won't close over full magazine	1
29	DE	Doesn't eject	1
30	FF	Fails to fire	1
31	FT	Follower tips	1
32	ML	Magazine loose	1
33	FF-P	Fails to fire at proof	1
34	BABS	Buige at body shoulder	0
35	BBMA	BBL-to-bolt misalignment	0
36	BCOBS	Bolt catches on bolt stop	0
37	BC	Blows cases	0
38	BHR	Bolt hits receiver	0
39	BHS	Bolt plug hits safety switch	0
40	BLOP	Bar lock or disconnecter out of position	0
41	BLSO	Barrel lug shot off	0
42	BSSV	Bolt stems shell in magazine	0
43	BWCD	Bolt won't cam down	0
44	CD	Case dented	0
45	CO	Cut-off	0
46	CR	Cuts rim	0
47	CS	Cases swell	0
48	CTOG	Chamber torn or gouged	0
49	CTP	Creepy trigger pull	0
50	CWSB	Cams wrong side of action bar	0
51	DBB	Doesn't blow back	0
52	DCS	Double click in safety switch	0
53	DCT	Double click in trigger	0
54	DCU	Doesn't close-up	0
55	DEL	Doesn't eject live round	0
56	DFB	Doesn't feed back	0

	A	B	C
57	DFU	Doesn't feed up	0
58	DLO	Doesn't lock open (after last shell)	0
59	DLU	Doesn't lock-up	0
60	DS	Dead safe	0
61	DXL	Doesn't extract live round	0
62	ESCR	Empty shell catches receiver	0
63	ESS	Extractor stems shell	0
64	FA	Fires automatically	0
65	FB	Follower binds	0
66	FC	Fails to connect	0
67	FCB	Fore-end cracked or broken	0
68	FFP	Flat firing pin	0
69	FOS	Fires on safe	0
70	FPHB	Firing pin hits bbl	0
71	FPHI	Firing pin hits inside rim	0
72	FPOH	Floor plate opens hard	0
73	FSR	Fires when safe is released	0
74	GCSO	Gas cyl shot off	0
75	HMSC	Heading mismatch-steps on case	0
76	HPA	High pressure ammo	0
77	JCS	Jumps cartridge	0
78	JO	Jars off	0
79	LB	Light blow	0
80	MAH	Magazine assembles hard	0
81	MCW	Magazine capacity wrong	0
82	MFA	Misfires (ammo)	0
83	MFOP	Magazine follower out of position	0
84	MLH	Magazine loads hard	0
85	PH	Pulls hard	0
86	PSI	Proof stamp illegible	0
87	PSM	Proof stamp missing	0
88	RBOC	Rings and bulges on case	0
89	RIS	Ring in sholder	0
90	RS	Rim srem	0
91	SBC	Stems bottom chambers	0
92	SBE	Stems bbl extension	0
93	SCB	Stock cracked or broken	0
94	SCX	Shell catches	0
95	SHI	Short indent	0
96	SL	shaves lead	0
97	SLC	Stems left side of chamber	0
98	SMOC	Stretch marks on case	0
99	SP	Stems port	0
100	SR	Shoulder rough	0
101	SRC	Stems right side of chamber	0
102	SRIC	Specific rings in chamber	0
103	SSOC	Surface scratches on case	0
104	STC	Stems top chamber	0
105	SWE	Safety switch works too easily	0
106	SWW	Safety Switch won't work	0
107	TD	Tips down	0
108	TU	Tips up	0
109	TWP	Trigger won't pull	0
110	TWR	Trigger won't retract	0
111			0
112	HI	High	0

	A	B	C
113	LO	Low	0
114	LEFT	Left	0
115	RIGHT	Right	0
116	DG	Doesn't Group	0
117	FSST	Front sight tipped	0
118	RSTT	Rear sight tipped	0
119	RSBR	Rear sight base raised	0
120	FSTR	Front sight raised	0
121	FSTL	Front sight loose	0
122	RSTL	Rear sight loose	0
123	MGPT-G	Missing parts at target	0
124	UNCN-G	Uncoded nonconformity at target	0
125			0
126	AI-P	Assembly incomplete at proof	0
127	BBB	Barrel bracket cracked or broken at proof	0
128	BC-P	Blows cases at proof	0
129	BEB-P	Barrel extension broken at proof	0
130	BLP-P	Blanked primer at proof	0
131	BLSO-P	Barrel lug shot off at proof	0
132	BP-P	Blown primer at proof	0
133	BS-P	Barrel split at proof	0
134	DLOS-P	Doesn't lock over shells at proof	0
135	ESBBP-P	Ejector sticks back - Blown Primer cup	0
136	ESBEC-P	Ejector sticks back - Ejector Crescent	0
137	FCB-P	Fore-end cracked at proof	0
138	FESO-P	Fore-end shot off at proof	0
139	GCSO-P	Gas cylinder shot off at proof	0
140	MSI-P	Magnaflux stamp illegible on bbl	0
141	MSM-P	Magnaflux stamp missing on bbl	0
142	PP-P	Pierced primer at proof	0
143	SCB-P	Stock cracked or broken at proof	0
144	BCOAB	Boit catches on anti-bind	
145	BCOAB	Boit catches on anti-bind	
146			
147			
148			
149			
150	8/2/2009		

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		<i>Shot:</i>															
6		<b>Proof</b>	<i>Rejected:</i>	0	0	0	0	0	0	0	0	0	0	0	0	0	0
7			<i>Percent:</i>														
9		<i>Shot:</i>															
10		<b>Test</b>	<i>Rejected:</i>	0	0	0	0	0	0	0	0	0	0	0	0	0	0
11			<i>Percent:</i>														
13		<i>Shot:</i>															
14		<b>Target</b>	<i>Rejected:</i>	0	0	0	0	0	0	0	0	0	0	0	0	0	0
15			<i>Percent:</i>														
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>604</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>10</b>													
3		<b>Overall Reject Rate:</b>		<b>1.66</b>													<i>totals</i>
5		Shot:		204	122	210	26		4								566
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:		0.0	0.0	0.0	0.0	0.0	0.0								0.0
9		Shot:		229	128	210	33		4								804
10		Rejected:		2	3	4	1	0	0	0	0	0	0	0	0	0	10
11		Percent:		0.9	2.3	1.9	3.0		0.0								1.7
13		Shot:		24	13	3	3		4								47
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0		0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches					1										1
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine			1												1
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract			2												2
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift		1													1
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine				3											3
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride				1											1
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded		1													1
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

**Cell:** D126

**Comment:** ilngalry:

shell stuck to bolt at test

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>702</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>39</b>													
3		<b>Overall Reject Rate:</b>		<b>5.56</b>													<i>totals</i>
5		Shot:		362	162	145	8	28	1								706
6		Rejected:		5	0	1	0	0	0	0	0	0	0	0	0	0	6
7		Percent:		1.4	0.0	0.7	0.0	0.0	0.0								0.8
9		Shot:		359	162	144	8	28	1								702
10		Rejected:		18	6	6	2	1	0	0	0	0	0	0	0	0	33
11		Percent:		5.0	3.7	4.2	25.0	3.6	0.0								4.7
13		Shot:		27		15	1	3	1								47
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0		0.0	0.0	0.0	0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		8		4											12
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard					1										1
38	CLM	Can't load magazine		1													1
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cam wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract			2												2
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		3			1										4
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens				2		1									3
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard		3													3
93	OR	Over-rides		2	4												6
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber		1													1
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		2		1											3
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions		3													3



Cell: D163

Comment: illegal:  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>697</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>24</b>													
3		<b>Overall Reject Rate:</b>		<b>3.44</b>													<i>totals</i>
5		Shot:		113	7	495	59	8	19								701
6		Rejected:		0	0	0	1	2	0	0	0	0	0	0	0	0	3
7		Percent:		0.0	0.0	0.0	1.7	25.0	0.0								0.4
9		Shot:		113	7	467	58	8	32							12	897
10		Rejected:		2	0	17	1	0	0	0	0	0	0	0	0	1	21
11		Percent:		1.8	0.0	3.6	1.7	0.0	0.0						8.3		3.2
13		Shot:		11		20	7		32								70
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0		0.0	0.0		0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		2		8											10
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cam wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up														1	1
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract				1											1
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell				2	1										3
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift				1											1
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline				4											4
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard				1											1
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions					1	2									3

**Cell:** G163

**Comment:** illegal:  
broken trigger

**Cell:** H163

**Comment:** illegal:  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>606</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>39</b>													
3		<b>Overall Reject Rate:</b>		<b>6.44</b>													<i>totals</i>
5		Shot:		256	127	132	38		40	39							632
6		Rejected:		0	0	0	1	0	0	0	0	0	0	0	0	0	1
7		Percent:		0.0	0.0	0.0	2.6		0.0	0.0							0.2
9		Shot:		256	127	132	37		40	14							896
10		Rejected:		19	8	8	1	0	0	2	0	0	0	0	0	0	38
11		Percent:		7.4	6.3	6.1	2.7		0.0	14.3							6.3
13		Shot:		20	13	12	4		40								89
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0		0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber		1													1
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		15	1	4				2							22
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out					1										1
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cam wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract			1												1
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift				2											2
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine				2											2
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard			2												2
93	OR	Over-rides		1													1
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber		1													1
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline			2												2
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride			2												2
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard		1													1
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions					1										1

Cell: G163

Comment: illegal:  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>572</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>10</b>													
3		<b>Overall Reject Rate:</b>		<b>1.75</b>													<i>totals</i>
5		Shot:		372	26	86	75		15								576
6		Rejected:		1	2	0	1	0	0	0	0	0	0	0	0	0	4
7		Percent:		0.3	7.1	0.0	1.3		0.0								8.7
9		Shot:		371	26	86	74		15								572
10		Rejected:		3	1	2	0	0	0	0	0	0	0	0	0	0	6
11		Percent:		0.8	3.8	2.3	0.0		0.0								1.2
13		Shot:		34		8	6		15								63
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0		0.0	0.0		0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds		1													1
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches				2											2
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back		2													2
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine			1												1
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face			2												2
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions		1			1										2

Cell: G163

Comment: illegal:  
broken trigger



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>593</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>17</b>													
3		<b>Overall Reject Rate:</b>		<b>2.87</b>													<i>totals</i>
5		Shot:		109	82	240	164										595
6		Rejected:		2	1	0	0	0	0	0	0	0	0	0	0	0	3
7		Percent:		1.8	1.2	0.0	0.0										0.5
9		Shot:		107	82	240	164										593
10		Rejected:		3	6	2	3	0	0	0	0	0	0	0	0	0	14
11		Percent:		2.8	7.3	0.8	1.8										2.4
13		Shot:		8	8	25	21										62
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0										0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		1			1										2
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower				1											1
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard		1													1
38	CLM	Can't load magazine				1											1
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard			1												1
92	OH	Opens hard															
93	OR	Over-rides		1	1		1										3
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work					1										1
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline			4												4
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		2													2
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions			1												1

Cell: E163

Comment: illegal:  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>574</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>20</b>													
3		<b>Overall Reject Rate:</b>		<b>3.48</b>													<i>totals</i>
5		Shot:		136	208	163	26		43								576
6		Rejected:		0	1	0	1	0	0	0	0	0	0	0	0	0	2
7		Percent:		0.0	0.5	0.0	3.8		0.0								0.3
9		Shot:		136	206	163	26		43								574
10		Rejected:		0	7	9	2	0	0	0	0	0	0	0	0	0	18
11		Percent:		0.0	3.4	5.5	7.7		0.0								3.1
13		Shot:		14	16	15	3		43								91
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0		0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches				8											8
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine			1		1										2
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject				1											1
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell			1												1
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides			2		1										3
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride			2												2
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard			1												1
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face			1												1
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions					1										1

Cell: G163

Comment: illegal:  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>651</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>7</b>													
3		<b>Overall Reject Rate:</b>		<b>1.08</b>													<i>totals</i>
5		Shot:		230	73	198		149									650
6		Rejected:		0	0	0	0	6	0	0	0	0	0	0	0	0	6
7		Percent:		0.0	0.0	0.0		4.0									0.9
9		Shot:		143	73	286		149									851
10		Rejected:		0	0	1	0	0	0	0	0	0	0	0	0	0	1
11		Percent:		0.0	0.0	0.3		0.0									0.2
13		Shot:		14	7	28		15									64
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0		0.0									0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches			1												1
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions						6									6

Cell: H163

Comment: illegal:  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cam's wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>639</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>29</b>													
3		<b>Overall Reject Rate:</b>		<b>4.54</b>													<i>totals</i>
5		Shot:		38	51	161	305										555
6		Rejected:		0	0	0	2	0	0	0	0	0	0	0	0	0	2
7		Percent:		0.0	0.0	0.0	0.7										0.4
9		Shot:		94	51	171	312	11									839
10		Rejected:		0	0	2	25	0	0	0	0	0	0	0	0	0	27
11		Percent:		0.0	0.0	1.2	8.0	0.0									3.2
13		Shot:		9	6	17	31	1									64
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0	0.0									0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches				1	2										3
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine					1										1
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract					3										3
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back					1										1
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail				1	1										2
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard					1										1
92	OH	Opens hard															
93	OR	Over-rides					1										1
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride					14										14
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded					1										1
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face					1										1
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof					1										1
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

Cell: G126

Comment: illegal;  
no follower

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>693</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>40</b>													
3		<b>Overall Reject Rate:</b>		<b>5.77</b>													<i>totals</i>
5		Shot:		118	151	184	132	98	8	6							697
6		Rejected:		0	1	0	0	2	0	0	0	0	0	0	0	0	3
7		Percent:		0.0	0.7	0.0	0.0	2.0	0.0	0.0							0.4
9		Shot:		118	151	184	132	96	6	6							693
10		Rejected:		6	9	1	17	3	1	0	0	0	0	0	0	0	37
11		Percent:		5.1	6.0	0.5	12.9	3.1	16.7	0.0							5.3
13		Shot:		12	16	19	12	11	6								76
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0	0.0	0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		1	1												2
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine			1												1
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine							1								1
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		1			1	1									3
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back			1												1
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens		1			2										3
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips		1													1
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard			1												1
92	OH	Opens hard						1									1
93	OR	Over-rides					3										3
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber			1												1
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline			2	1	7										10
108	SIC	Stems in chamber			1												1
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride		2			2										4
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard					2										2
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard			1			1									2
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions			1			2									3



**Cell:** E163

**Comment:** ilngalry:  
mag box has wrong spring

**Cell:** H163

**Comment:** ilngalry:  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>564</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>32</b>													
3		<b>Overall Reject Rate:</b>		<b>5.67</b>													<i>totals</i>
5		Shot:		253	8	115	77	70	45								568
6		Rejected:		0	0	0	0	1	3	0	0	0	0	0	0	0	4
7		Percent:		0.0	0.0	0.0	0.0	1.4	6.7								0.7
9		Shot:		253	8	115	77	69	42								564
10		Rejected:		16	0	3	8	1	0	0	0	0	0	0	0	0	28
11		Percent:		6.3	0.0	2.6	10.4	1.4	0.0								5.0
13		Shot:		12		11	5										28
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0		0.0	0.0										0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		1		1											2
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		2		1											3
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		6													8
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire		1													1
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPHB	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens		5		1		1									7
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine		1													1
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard					4										3
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride					4										4
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions						1	3								3

**Cell:** H163

**Comment:** illegal:  
broken trigger

**Cell:** I163

**Comment:** illegal:  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>751</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>32</b>													
3		<b>Overall Reject Rate:</b>		<b>4.26</b>													<i>totals</i>
5		Shot:		252	105	326	65	4	1								753
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:		0.0	0.0	0.0	0.0	0.0	0.0								0.0
9		Shot:		251	105	326	65	4									753
10		Rejected:		7	5	11	9	0	0	0	0	0	0	0	0	0	32
11		Percent:		2.8	4.8	3.4	13.8	0.0									4.3
13		Shot:		25	10	24	5										64
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0										0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber				1											1
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches				3	2										5
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine		1													1
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		1	1	1	1										4
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		1		1											2
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down				1											1
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens		1		4											5
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift			1												1
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine		1			1										2
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard			1		3										3
92	OH	Opens hard															
93	OR	Over-rides					2										2
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber			1												1
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride		2	1												3
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cam's wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>599</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>17</b>													
3		<b>Overall Reject Rate:</b>		<b>2.84</b>													<i>totals</i>
5		Shot:		102	14	316	87	33									552
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:		0.0	0.0	0.0	0.0	0.0									0.0
9		Shot:		149	14	316	87	33									599
10		Rejected:		3	0	12	1	1	0	0	0	0	0	0	0	0	17
11		Percent:		2.0	0.0	3.8	1.1	3.0									2.8
13		Shot:		14		8	9	3									34
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0		0.0	0.0	0.0									0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		1		1		1									3
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell				2											2
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine				3											3
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard				2											2
93	OR	Over-rides		1													1
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work				1											1
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride		1		2											3
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard				1	1										2
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		713								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		46													
3		<b>Overall Reject Rate:</b>		6.45													<i>totals</i>
5		Shot:		228	115	320	25	77	13								778
6		Rejected:		3	4	2	2	3	0	0	0	0	0	0	0	0	14
7		Percent:		1.3	3.5	0.6	8.0	3.9	0.0								1.8
9		Shot:		247	81	304	6	51	24								713
10		Rejected:		9	8	10	0	4	1	0	0	0	0	0	0	0	32
11		Percent:		3.6	9.9	3.3	0.0	7.8	4.2								4.5
13		Shot:		25	6	26	1	5	23								86
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	8
15		Percent:		0.0	0.0	0.0	0.0	0.0	0.0								8.6
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		4		4		1									9
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine		1													1
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		1		1											2
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell			1												1
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down				1											1
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine		1		3			1								5
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard				1											1
92	OH	Opens hard		2													2
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride			6			3									3
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard			1												1
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face				2											2
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions		3	4		2	3									12

**Cell:** D163  
**Comment:** ilngalry:  
broken trigger

**Cell:** E163  
**Comment:** ilngalry:  
broken trigger

**Cell:** G163  
**Comment:** ilngalry:  
broken trigger

**Cell:** H163  
**Comment:** ilngalry:  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>653</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>24</b>													
3		<b>Overall Reject Rate:</b>		<b>3.68</b>													<i>totals</i>
5		Shot:		526	26	49	38	48									687
6		Rejected:		1	0	0	0	2	0	0	0	0	0	0	0	0	3
7		Percent:		0.2	0.0	0.0	0.0	4.2									0.4
9		Shot:		493		41	75	44									853
10		Rejected:		11	3	2	4	1	0	0	0	0	0	0	0	0	21
11		Percent:		2.2		4.9	5.3	2.3									3.2
13		Shot:		45		5	8	5									63
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0		0.0	0.0	0.0									0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine		1													1
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell					2										2
59	ESB	Ejector sticks back					1	1									2
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine		1													1
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose		1													1

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard		1													1
92	OH	Opens hard				2	1										3
93	OR	Over-rides		2													2
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride		4	3												7
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard		1													1
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions		1				2									3

**Cell:** D163

**Comment:** ilngalry:  
broken trig

**Cell:** H163

**Comment:** ilngalry:  
broken trig

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>531</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>28</b>													
3		<b>Overall Reject Rate:</b>		<b>5.27</b>													<i>totals</i>
5		Shot:		536	104	71	23	14									748
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:		0.0	0.0	0.0	0.0	0.0									0.0
9		Shot:		407	33	30	47	14									531
10		Rejected:		13	3	1	11	0	0	0	0	0	0	0	0	0	28
11		Percent:		3.2	9.1	3.3	23.4	0.0									5.3
13		Shot:		32	2	3	5	1									43
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0	0.0									0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		2													2
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower		1													1
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine		1													1
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		1			4										5
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		2	1												3
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens				1	3										4
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine			1		1										2
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard		1													1
92	OH	Opens hard															
93	OR	Over-rides		2													2
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber			1												1
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline					2										2
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride		3													3
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard					1										1
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>587</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>19</b>													
3		<b>Overall Reject Rate:</b>		<b>3.24</b>													<i>totals</i>
5		Shot:		391	43	169	88	64									755
6		Rejected:		0	0	1	5	0	0	0	0	0	0	0	0	0	6
7		Percent:		0.0	0.0	0.6	5.7	0.0									0.8
9		Shot:		288	24	169	71	35									547
10		Rejected:		2	5	4	2	0	0	0	0	0	0	0	0	0	13
11		Percent:		0.7	20.8	2.4	2.8	0.0									2.2
13		Shot:			2	15	5	4									26
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	6
15		Percent:			0.0	0.0	0.0	0.0									0.6
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber		1													1
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches			2	2	1										5
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down		1													1
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															


	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract			2												2
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell				1											1
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															


	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard			1	1											2
93	OR	Over-rides					1										1
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															


	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face				1											1
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions					5										5

Cell: G163

Comment: illegal:  
broken trigger

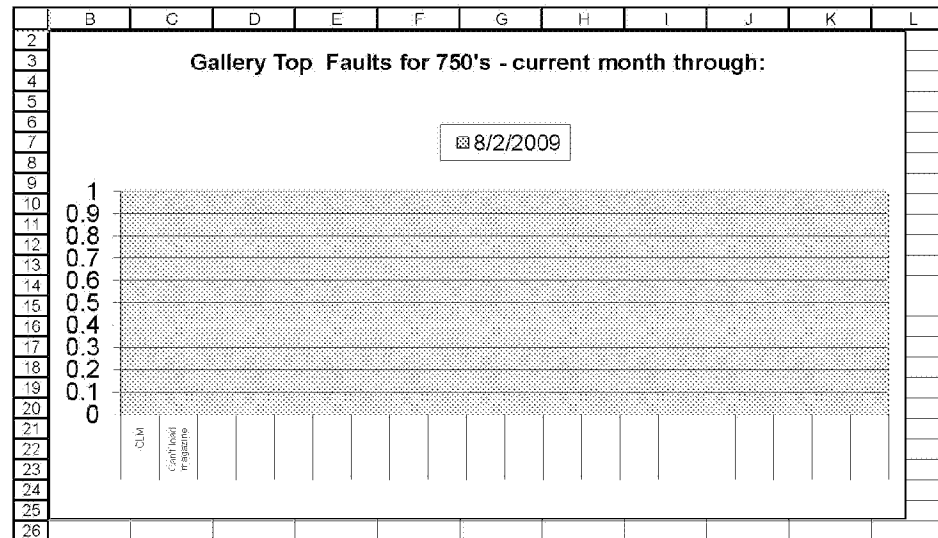

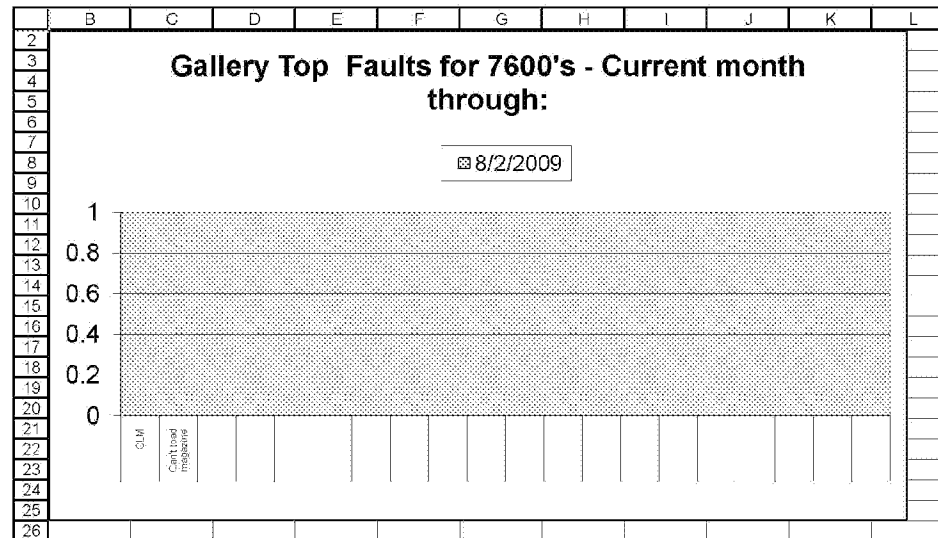

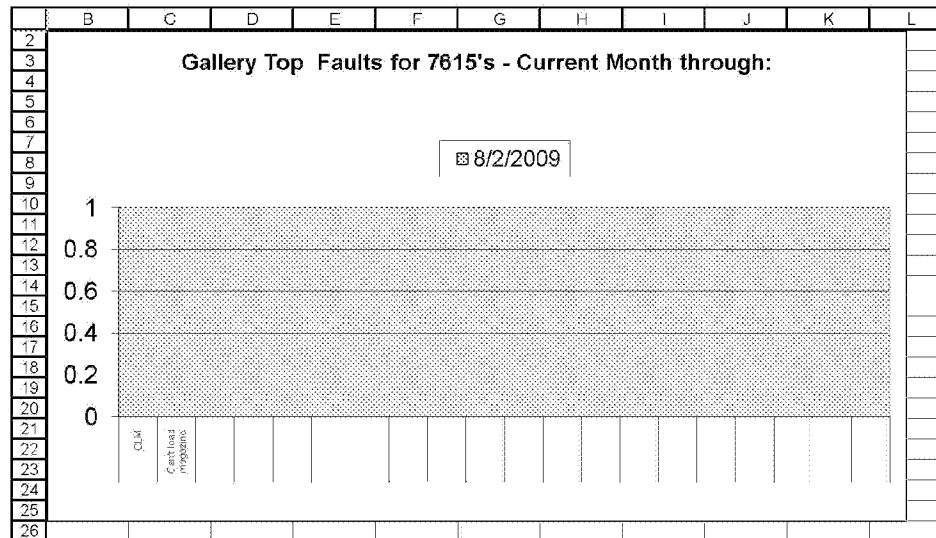



	A	B	C
1	AB	Action binds	0
2	BABS	Bulge at body shoulder	0
3	BAC	Burr at chamber	0
4	BBMA	BBL-to-bolt misalignment	0
5	BB	Bolt binds/catches	0
6	BCOAB	Bolt catches on anti-bind	0
7	BCOBS	Bolt catches on bolt stop	0
8	BCOF	Bolt catches on follower	0
9	BC	Blows cases	0
10	BHR	Bolt hits receiver	0
11	BHS	Bolt plug hits safety switch	0
12	BLOP	Bar lock or disconnecter out of position	0
13	BLSO	Barrel lug shot off	0
14	BPO	Bolt pulls out	0
15	BSSM	Bolt stems shell in magazine	0
16	BWCD	Bolt won't cam down	0
17	BWCFM	Bolt won't close over full magazine	0
18	CD	Case dented	0
19	CH	Closes hard	0
20	CLM	Can't load magazine	0
21	CO	Cut-off	0
22	CR	Cuts rim	0
23	CS	Cases swell	0
24	CTOG	Chamber torn or gouged	0
25	CTP	Creepy trigger pull	0
26	CWSB	Cams wrong side of action bar	0
27	DBB	Doesn't blow back	0
28	DCS	Double click in safety switch	0
29	DCT	Double click in trigger	0
30	DCU	Doesn't close-up	0
31	DE	Doesn't eject	0
32	DEL	Doesn't eject live round	0
33	DFB	Doesn't feed back	0
34	DFU	Doesn't feed up	0
35	DLO	Doesn't lock open (after last shell)	0
36	DLU	Doesn't lock-up	0
37	DS	Dead safe	0
38	DX	Doesn't extract	0
39	DXL	Doesn't extract live round	0
40	EDS	Extractor drops shell	0
41	ESB	Ejector sticks back	0
42	ESCR	Empty shell catches receiver	0
43	ESS	Extractor stems shell	0
44	FA	Fires automatically	0
45	FB	Follower binds	0
46	FC	Fails to connect	0
47	FCB	Fore-end cracked or broken	0
48	FD	Follows-down	0
49	FF	Fails to fire	0
50	FFP	Flat firing pin	0
51	FOS	Fires on safe	0
52	FPHB	Firing pin hits bbl	0
53	FPHI	Firing pin hits inside rim	0
54	FPO	Floor plate opens	0
55	FPOH	Floor plate opens hard	0
56	FSR	Fires when safe is released	0

	A	B	C
57	FT	Follower tips	0
58	GCSO	Gas cyl shot off	0
59	HBL	Heavy bolt lift	0
60	HMSC	Heading mismatch-steps on case	0
61	HPA	High pressure ammo	0
62	HUR	Hard under rail	0
63	JCS	Jumps cartridge	0
64	JM	Jumps magazine	0
65	JO	Jars off	0
66	LB	Light blow	0
67	MAH	Magazine assembles hard	0
68	MCW	Magazine capacity wrong	0
69	MFA	Misfires (ammo)	0
70	MFOP	Magazine follower out of position	0
71	ML	Magazine loose	0
72	MLH	Magazine loads hard	0
73	MRH	Magazine removes hard	0
74	OH	Opens hard	0
75	OR	Over-rides	0
76	PH	Pulls hard	0
77	PSI	Proof stamp illegible	0
78	PSM	Proof stamp missing	0
79	RBOC	Rings and bulges on case	0
80	RDVV	(Action) release doesn't work	0
81	RIC	Rings in chamber	0
82	RIS	Ring in sholder	0
83	RS	Rim srem	0
84	SBC	Stems bottom chambers	0
85	SEE	Stems bbl extension	0
86	SCB	Stock cracked or broken	0
87	SCX	Shell catches	0
88	SHI	Short indent	0
89	SI	Stems incline	0
90	SIC	Stems in chamber	0
91	SL	shaves lead	0
92	SLC	Stems left side of chamber	0
93	SMOC	Stretch marks on case	0
94	SOR	Stem over-ride	0
95	SP	Stems port	0
96	SR	Shoulder rough	0
97	SRC	Stems right side of chamber	0
98	SRIC	Specific rings in chamber	0
99	SSOC	Surface scratches on case	0
100	STC	Stems top chamber	0
101	SWE	Safety switch works too easily	0
102	SWH	Safety switch works too hard	0
103	SWW	Safety Switch won't work	0
104	TD	Tips down	0
105	TU	Tips up	0
106	TWP	Trigger won't pull	0
107	TWR	Trigger won't retract	0
108	UNCN-T	Uncoded	0
109	XH	Extracts hard	0
110			0
111	HI	High	0
112	LO	Low	0

	A	B	C
113	LEFT	Left	0
114	RIGHT	Right	0
115	DG	Doesn't Group	0
116	FSST	Front sight tipped	0
117	RSTT	Rear sight tipped	0
118	RSBR	Rear sight base raised	0
119	FSTR	Front sight raised	0
120	FSTL	Front sight loose	0
121	RSTL	Rear sight loose	0
122	MGPT-G	Missing parts at target	0
123	UNCN-G	Uncoded nonconformity at target	0
124			0
125	AI-P	Assembly incomplete at proof	0
126	BBB	Barrel bracket cracked or broken at proof	0
127	BC-P	Blows cases at proof	0
128	BEB-P	Barrel extension broken at proof	0
129	BLP-P	Blanked primer at proof	0
130	BLSO-P	Barrel lug shot off at proof	0
131	BP-P	Blown primer at proof	0
132	BS-P	Barrel split at proof	0
133	DBF-P	Damaged Bolt Face	0
134	DLOS-P	Doesn't lock over shells at proof	0
135	ESBBP-P	Ejector sticks back -Blown Primer cup	0
136	ESBEC-P	Ejector sticks back - Ejector Crescent	0
137	FCB-P	Fore-end cracked at proof	0
138	FESO-P	Fore-end shot off at proof	0
139	FF-P	Fails to fire at proof	0
140	GCSO-P	Gas cylinder shot off at proof	0
141	MSI-P	Magnaflux stamp illegible on bbl	0
142	MSM-P	Magnaflux stamp missing on bbl	0
143	PP-P	Pierced primer at proof	0
144	SCB-P	Stock cracked or broken at proof	0

	A	B	C
1	AB	Action binds	0
2	BABS	Bulge at body shoulder	0
3	BAC	Burr at chamber	0
4	BBMA	BBL-to-bolt misalignment	0
5	BB	Bolt binds/catches	0
6	BCOAB	Bolt catches on anti-bind	0
7	BCOBS	Bolt catches on bolt stop	0
8	BCOF	Bolt catches on follower	0
9	BC	Blows cases	0
10	BHR	Bolt hits receiver	0
11	BHS	Bolt plug hits safety switch	0
12	BLOP	Bar lock or disconnecter out of position	0
13	BLSO	Barrel lug shot off	0
14	BPO	Bolt pulls out	0
15	BSSM	Bolt stems shell in magazine	0
16	BWCD	Bolt won't cam down	0
17	BWCFM	Bolt won't close over full magazine	0
18	CD	Case dented	0
19	CH	Closes hard	0
20	CLM	Can't load magazine	0
21	CO	Cut-off	0
22	CR	Cuts rim	0
23	CS	Cases swell	0
24	CTOG	Chamber torn or gouged	0
25	CTP	Creepy trigger pull	0
26	CWSB	Cams wrong side of action bar	0
27	DBB	Doesn't blow back	0
28	DCS	Double click in safety switch	0
29	DCT	Double click in trigger	0
30	DCU	Doesn't close-up	0
31	DE	Doesn't eject	0
32	DEL	Doesn't eject live round	0
33	DFB	Doesn't feed back	0
34	DFU	Doesn't feed up	0
35	DLO	Doesn't lock open (after last shell)	0
36	DLU	Doesn't lock-up	0
37	DS	Dead safe	0
38	DX	Doesn't extract	0
39	DXL	Doesn't extract live round	0
40	EDS	Extractor drops shell	0
41	ESB	Ejector sticks back	0
42	ESCR	Empty shell catches receiver	0
43	ESS	Extractor stems shell	0
44	FA	Fires automatically	0
45	FB	Follower binds	0
46	FC	Fails to connect	0
47	FCB	Fore-end cracked or broken	0
48	FD	Follows-down	0
49	FF	Fails to fire	0
50	FFP	Flat firing pin	0
51	FOS	Fires on safe	0
52	FPHB	Firing pin hits bbl	0
53	FPHI	Firing pin hits inside rim	0
54	FPO	Floor plate opens	0
55	FPOH	Floor plate opens hard	0
56	FSR	Fires when safe is released	0

	A	B	C
57	FT	Follower tips	0
58	GCSO	Gas cyl shot off	0
59	HBL	Heavy bolt lift	0
60	HMSC	Heading mismatch-steps on case	0
61	HPA	High pressure ammo	0
62	HUR	Hard under rail	0
63	JCS	Jumps cartridge	0
64	JM	Jumps magazine	0
65	JO	Jars off	0
66	LB	Light blow	0
67	MAH	Magazine assembles hard	0
68	MCW	Magazine capacity wrong	0
69	MFA	Misfires (ammo)	0
70	MFOP	Magazine follower out of position	0
71	ML	Magazine loose	0
72	MLH	Magazine loads hard	0
73	MRH	Magazine removes hard	0
74	OH	Opens hard	0
75	OR	Over-rides	0
76	PH	Pulls hard	0
77	PSI	Proof stamp illegible	0
78	PSM	Proof stamp missing	0
79	RBOC	Rings and bulges on case	0
80	RDVV	(Action) release doesn't work	0
81	RIC	Rings in chamber	0
82	RIS	Ring in sholder	0
83	RS	Rim srem	0
84	SBC	Stems bottom chambers	0
85	SEE	Stems bbl extension	0
86	SCB	Stock cracked or broken	0
87	SCX	Shell catches	0
88	SHI	Short indent	0
89	SI	Stems incline	0
90	SIC	Stems in chamber	0
91	SL	shaves lead	0
92	SLC	Stems left side of chamber	0
93	SMOC	Stretch marks on case	0
94	SOR	Stem over-ride	0
95	SP	Stems port	0
96	SR	Shoulder rough	0
97	SRC	Stems right side of chamber	0
98	SRIC	Specific rings in chamber	0
99	SSOC	Surface scratches on case	0
100	STC	Stems top chamber	0
101	SWE	Safety switch works too easily	0
102	SWH	Safety switch works too hard	0
103	SWW	Safety Switch won't work	0
104	TD	Tips down	0
105	TU	Tips up	0
106	TWP	Trigger won't pull	0
107	TWR	Trigger won't retract	0
108	UNCN-T	Uncoded	0
109	XH	Extracts hard	0
110			0
111	HI	High	0
112	LO	Low	0

	A	B	C
113	LEFT	Left	0
114	RIGHT	Right	0
115	DG	Doesn't Group	0
116	FSST	Front sight tipped	0
117	RSTT	Rear sight tipped	0
118	RSBR	Rear sight base raised	0
119	FSTR	Front sight raised	0
120	FSTL	Front sight loose	0
121	RSTL	Rear sight loose	0
122	MGPT-G	Missing parts at target	0
123	UNCN-G	Uncoded nonconformity at target	0
124			0
125	AI-P	Assembly incomplete at proof	0
126	BBB	Barrel bracket cracked or broken at proof	0
127	BC-P	Blows cases at proof	0
128	BEB-P	Barrel extension broken at proof	0
129	BLP-P	Blanked primer at proof	0
130	BLSO-P	Barrel lug shot off at proof	0
131	BP-P	Blown primer at proof	0
132	BS-P	Barrel split at proof	0
133	DBF-P	Damaged Bolt Face	0
134	DLOS-P	Doesn't lock over shells at proof	0
135	ESBBP-P	Ejector sticks back -Blown Primer cup	0
136	ESBEC-P	Ejector sticks back - Ejector Crescent	0
137	FCB-P	Fore-end cracked at proof	0
138	FESO-P	Fore-end shot off at proof	0
139	FF-P	Fails to fire at proof	0
140	GCSO-P	Gas cylinder shot off at proof	0
141	MSI-P	Magnaflux stamp illegible on bbl	0
142	MSM-P	Magnaflux stamp missing on bbl	0
143	PP-P	Pierced primer at proof	0
144	SCB-P	Stock cracked or broken at proof	0

	A	B	C
1	AB	Action binds	0
2	BABS	Bulge at body shoulder	0
3	BAC	Burr at chamber	0
4	BBMA	BBL-to-bolt misalignment	0
5	BB	Bolt binds/catches	0
6	BCOAB	Bolt catches on anti-bind	0
7	BCOBS	Bolt catches on bolt stop	0
8	BCOF	Bolt catches on follower	0
9	BC	Blows cases	0
10	BHR	Bolt hits receiver	0
11	BHS	Bolt plug hits safety switch	0
12	BLOP	Bar lock or disconnecter out of position	0
13	BLSO	Barrel lug shot off	0
14	BPO	Bolt pulls out	0
15	BSSM	Bolt stems shell in magazine	0
16	BWCD	Bolt won't cam down	0
17	BWCFM	Bolt won't close over full magazine	0
18	CD	Case dented	0
19	CH	Closes hard	0
20	CLM	Can't load magazine	0
21	CO	Cut-off	0
22	CR	Cuts rim	0
23	CS	Cases swell	0
24	CTOG	Chamber torn or gouged	0
25	CTP	Creepy trigger pull	0
26	CWSB	Cams wrong side of action bar	0
27	DBB	Doesn't blow back	0
28	DCS	Double click in safety switch	0
29	DCT	Double click in trigger	0
30	DCU	Doesn't close-up	0
31	DE	Doesn't eject	0
32	DEL	Doesn't eject live round	0
33	DFB	Doesn't feed back	0
34	DFU	Doesn't feed up	0
35	DLO	Doesn't lock open (after last shell)	0
36	DLU	Doesn't lock-up	0
37	DS	Dead safe	0
38	DX	Doesn't extract	0
39	DXL	Doesn't extract live round	0
40	EDS	Extractor drops shell	0
41	ESB	Ejector sticks back	0
42	ESCR	Empty shell catches receiver	0
43	ESS	Extractor stems shell	0
44	FA	Fires automatically	0
45	FB	Follower binds	0
46	FC	Fails to connect	0
47	FCB	Fore-end cracked or broken	0
48	FD	Follows-down	0
49	FF	Fails to fire	0
50	FFP	Flat firing pin	0
51	FOS	Fires on safe	0
52	FPHB	Firing pin hits bbl	0
53	FPHI	Firing pin hits inside rim	0
54	FPO	Floor plate opens	0
55	FPOH	Floor plate opens hard	0
56	FSR	Fires when safe is released	0

	A	B	C
57	FT	Follower tips	0
58	GCSO	Gas cyl shot off	0
59	HBL	Heavy bolt lift	0
60	HMSC	Heading mismatch-steps on case	0
61	HPA	High pressure ammo	0
62	HUR	Hard under rail	0
63	JCS	Jumps cartridge	0
64	JM	Jumps magazine	0
65	JO	Jars off	0
66	LB	Light blow	0
67	MAH	Magazine assembles hard	0
68	MCW	Magazine capacity wrong	0
69	MFA	Misfires (ammo)	0
70	MFOP	Magazine follower out of position	0
71	ML	Magazine loose	0
72	MLH	Magazine loads hard	0
73	MRH	Magazine removes hard	0
74	OH	Opens hard	0
75	OR	Over-rides	0
76	PH	Pulls hard	0
77	PSI	Proof stamp illegible	0
78	PSM	Proof stamp missing	0
79	RBOC	Rings and bulges on case	0
80	RDVV	(Action) release doesn't work	0
81	RIC	Rings in chamber	0
82	RIS	Ring in sholder	0
83	RS	Rim srem	0
84	SBC	Stems bottom chambers	0
85	SEE	Stems bbl extension	0
86	SCB	Stock cracked or broken	0
87	SCX	Shell catches	0
88	SHI	Short indent	0
89	SI	Stems incline	0
90	SIC	Stems in chamber	0
91	SL	shaves lead	0
92	SLC	Stems left side of chamber	0
93	SMOC	Stretch marks on case	0
94	SOR	Stem over-ride	0
95	SP	Stems port	0
96	SR	Shoulder rough	0
97	SRC	Stems right side of chamber	0
98	SRIC	Specific rings in chamber	0
99	SSOC	Surface scratches on case	0
100	STC	Stems top chamber	0
101	SWE	Safety switch works too easily	0
102	SWH	Safety switch works too hard	0
103	SWW	Safety Switch won't work	0
104	TD	Tips down	0
105	TU	Tips up	0
106	TWP	Trigger won't pull	0
107	TWR	Trigger won't retract	0
108	UNCN-T	Uncoded	0
109	XH	Extracts hard	0
110			0
111	HI	High	0
112	LO	Low	0



	A	B	C
113	LEFT	Left	0
114	RIGHT	Right	0
115	DG	Doesn't Group	0
116	FSST	Front sight tipped	0
117	RSTT	Rear sight tipped	0
118	RSBR	Rear sight base raised	0
119	FSTR	Front sight raised	0
120	FSTL	Front sight loose	0
121	RSTL	Rear sight loose	0
122	MGPT-G	Missing parts at target	0
123	UNCN-G	Uncoded nonconformity at target	0
124			0
125	AI-P	Assembly incomplete at proof	0
126	BBB	Barrel bracket cracked or broken at proof	0
127	BC-P	Blows cases at proof	0
128	BEB-P	Barrel extension broken at proof	0
129	BLP-P	Blanked primer at proof	0
130	BLSO-P	Barrel lug shot off at proof	0
131	BP-P	Blown primer at proof	0
132	BS-P	Barrel split at proof	0
133	DBF-P	Damaged Bolt Face	0
134	DLOS-P	Doesn't lock over shells at proof	0
135	ESBBP-P	Ejector sticks back - Blown Primer cup	0
136	ESBEC-P	Ejector sticks back - Ejector Crescent	0
137	FCB-P	Fore-end cracked at proof	0
138	FESO-P	Fore-end shot off at proof	0
139	FF-P	Fails to fire at proof	0
140	GCSO-P	Gas cylinder shot off at proof	0
141	MSI-P	Magnaflux stamp illegible on bbl	0
142	MSM-P	Magnaflux stamp missing on bbl	0
143	PP-P	Pierced primer at proof	0
144	SCB-P	Stock cracked or broken at proof	0

	A	B	C
1	AB	Action binds	0
2	BABS	Bulge at body shoulder	0
3	BAC	Burr at chamber	0
4	BBMA	BBL-to-bolt misalignment	0
5	BB	Bolt binds/catches	0
6	BCOAB	Bolt catches on anti-bind	0
7	BCOBS	Bolt catches on bolt stop	0
8	BCOF	Bolt catches on follower	0
9	BC	Blows cases	0
10	BHR	Bolt hits receiver	0
11	BHS	Bolt plug hits safety switch	0
12	BLOP	Bar lock or disconnecter out of position	0
13	BLSO	Barrel lug shot off	0
14	BPO	Bolt pulls out	0
15	BSSM	Bolt stems shell in magazine	0
16	BWCD	Bolt won't cam down	0
17	BWCFM	Bolt won't close over full magazine	0
18	CD	Case dented	0
19	CH	Closes hard	0
20	CLM	Can't load magazine	0
21	CO	Cut-off	0
22	CR	Cuts rim	0
23	CS	Cases swell	0
24	CTOG	Chamber torn or gouged	0
25	CTP	Creepy trigger pull	0
26	CWSB	Cams wrong side of action bar	0
27	DBB	Doesn't blow back	0
28	DCS	Double click in safety switch	0
29	DCT	Double click in trigger	0
30	DCU	Doesn't close-up	0
31	DE	Doesn't eject	0
32	DEL	Doesn't eject live round	0
33	DFB	Doesn't feed back	0
34	DFU	Doesn't feed up	0
35	DLO	Doesn't lock open (after last shell)	0
36	DLU	Doesn't lock-up	0
37	DS	Dead safe	0
38	DX	Doesn't extract	0
39	DXL	Doesn't extract live round	0
40	EDS	Extractor drops shell	0
41	ESB	Ejector sticks back	0
42	ESCR	Empty shell catches receiver	0
43	ESS	Extractor stems shell	0
44	FA	Fires automatically	0
45	FB	Follower binds	0
46	FC	Fails to connect	0
47	FCB	Fore-end cracked or broken	0
48	FD	Follows-down	0
49	FF	Fails to fire	0
50	FFP	Flat firing pin	0
51	FOS	Fires on safe	0
52	FPHB	Firing pin hits bbl	0
53	FPHI	Firing pin hits inside rim	0
54	FPO	Floor plate opens	0
55	FPOH	Floor plate opens hard	0
56	FSR	Fires when safe is released	0

	A	B	C
57	FT	Follower tips	0
58	GCSO	Gas cyl shot off	0
59	HBL	Heavy bolt lift	0
60	HMSC	Heading mismatch-steps on case	0
61	HPA	High pressure ammo	0
62	HUR	Hard under rail	0
63	JCS	Jumps cartridge	0
64	JM	Jumps magazine	0
65	JO	Jars off	0
66	LB	Light blow	0
67	MAH	Magazine assembles hard	0
68	MCW	Magazine capacity wrong	0
69	MFA	Misfires (ammo)	0
70	MFOP	Magazine follower out of position	0
71	ML	Magazine loose	0
72	MLH	Magazine loads hard	0
73	MRH	Magazine removes hard	0
74	OH	Opens hard	0
75	OR	Over-rides	0
76	PH	Pulls hard	0
77	PSI	Proof stamp illegible	0
78	PSM	Proof stamp missing	0
79	RBOC	Rings and bulges on case	0
80	RDVV	(Action) release doesn't work	0
81	RIC	Rings in chamber	0
82	RIS	Ring in sholder	0
83	RS	Rim srem	0
84	SBC	Stems bottom chambers	0
85	SEE	Stems bbl extension	0
86	SCB	Stock cracked or broken	0
87	SCX	Shell catches	0
88	SHI	Short indent	0
89	SI	Stems incline	0
90	SIC	Stems in chamber	0
91	SL	shaves lead	0
92	SLC	Stems left side of chamber	0
93	SMOC	Stretch marks on case	0
94	SOR	Stem over-ride	0
95	SP	Stems port	0
96	SR	Shoulder rough	0
97	SRC	Stems right side of chamber	0
98	SRIC	Specific rings in chamber	0
99	SSOC	Surface scratches on case	0
100	STC	Stems top chamber	0
101	SWE	Safety switch works too easily	0
102	SWH	Safety switch works too hard	0
103	SWW	Safety Switch won't work	0
104	TD	Tips down	0
105	TU	Tips up	0
106	TWP	Trigger won't pull	0
107	TWR	Trigger won't retract	0
108	UNCN-T	Uncoded	0
109	XH	Extracts hard	0
110			0
111	HI	High	0
112	LO	Low	0

	A	B	C
113	LEFT	Left	0
114	RIGHT	Right	0
115	DG	Doesn't Group	0
116	FSST	Front sight tipped	0
117	RSTT	Rear sight tipped	0
118	RSBR	Rear sight base raised	0
119	FSTR	Front sight raised	0
120	FSTL	Front sight loose	0
121	RSTL	Rear sight loose	0
122	MGPT-G	Missing parts at target	0
123	UNCN-G	Uncoded nonconformity at target	0
124			0
125	AI-P	Assembly incomplete at proof	0
126	BBB	Barrel bracket cracked or broken at proof	0
127	BC-P	Blows cases at proof	0
128	BEB-P	Barrel extension broken at proof	0
129	BLP-P	Blanked primer at proof	0
130	BLSO-P	Barrel lug shot off at proof	0
131	BP-P	Blown primer at proof	0
132	BS-P	Barrel split at proof	0
133	DBF-P	Damaged Bolt Face	0
134	DLOS-P	Doesn't lock over shells at proof	0
135	ESBBP-P	Ejector sticks back - Blown Primer cup	0
136	ESBEC-P	Ejector sticks back - Ejector Crescent	0
137	FCB-P	Fore-end cracked at proof	0
138	FESO-P	Fore-end shot off at proof	0
139	FF-P	Fails to fire at proof	0
140	GCSO-P	Gas cylinder shot off at proof	0
141	MSI-P	Magnaflux stamp illegible on bbl	0
142	MSM-P	Magnaflux stamp missing on bbl	0
143	PP-P	Pierced primer at proof	0
144	SCB-P	Stock cracked or broken at proof	0

# Centerfire

	A	B	D	E	F	G	H	I	J	P	Q
1	<b>Summary</b>		Total Tested	13553							
2			Total Rejected:	729							Grand totals
3			Overall Reject Rate:	5.38							
5		Shot:	5013	2057	3116	1865	1193	255			13489
6	Proof	Rejected:	16	8	12	5	2	1	0	0	44
7		Percent:	0.3	0.4	0.4	0.3	0.2	0.4			0.3
9		Shot:	5103	2113	3026	1677	1266	335		33	13553
10	Test	Rejected:	244	126	160	78	70	4	0	3	685
11		Percent:	4.8	6.0	5.3	4.7	5.5	1.2		9.1	5.1
13		Shot:	418	193	265	148	120	285			1429
14	Target	Rejected:	0	0	0	0	0	0	0	0	0
15		Percent:	0.0	0.0	0.0	0.0	0.0	0.0			0.0
17	CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7	Rimfire	totals
18											
19	AB	Action binds								1	1
20	BABS	Bulge at body shoulder									
21	BAC	Burr at chamber	2	1	1	1					5
22	BBMA	BBL-to-bolt misalignment									
23	BB	Bolt binds/catches	27	23	37	4	10	2			103
24	BCOAB	Bolt catches on anti-bind									
25	BCOBS	Bolt catches on bolt stop									
26	BCOF	Bolt catches on follower	1								1
27	BC	Blows cases									
28	BHR	Bolt hits receiver									
29	BHS	Bolt plug hits safety switch									
30	BLOP	Bar lock or disconnecter out of position									
31	BLSO	Barrel lug shot off									
32	BPO	Bolt pulls out									
33	BSSM	Bolt stems shell in magazine									
34	BWCD	Bolt won't cam down									
35	BWCFM	Bolt won't close over full magazine	1								1
36	CD	Case dented									
37	CH	Closes hard	5	1	3		1				10
38	CLM	Can't load magazine	4	4	2	3					13
39	CO	Cut-off									
40	CR	Cuts rim									

# Centerfire

	A	B	D	E	F	G	H	I	J	P	Q
17	CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7	Rimfire	totals
41	CS	Cases swell									
42	CTOG	Chamber torn or gouged									
43	CTP	Creepy trigger pull									
44	CWSB	Cams wrong side of action bar									
45	DBB	Doesn't blow back									
46	DCS	Double click in safety switch									
47	DCT	Double click in trigger									
48	DCU	Doesn't close-up									
49	DE	Doesn't eject	4	1		1	7				13
50	DEL	Doesn't eject live round									
51	DFB	Doesn't feed back									
52	DFU	Doesn't feed up									
53	DLO	Doesn't lock open (after last shell)									
54	DLU	Doesn't lock-up								1	1
55	DS	Dead safe		1	1						2
56	DX	Doesn't extract	31	11	22	28	11	2			105
57	DXL	Doesn't extract live round		1		1					2
58	EDS	Extractor drops shell	59	19	19	11	10				118
59	ESB	Ejector sticks back	1	5	1	1					8
60	ESCR	Empty shell catches receiver									
61	ESS	Extractor stems shell									
62	FA	Fires automatically									
63	FB	Follower binds									
64	FC	Fails to connect								1	1
65	FCB	Fore-end cracked or broken									
66	FD	Follows-down			1		2				3
67	FF	Fails to fire			1						1
68	FFP	Flat firing pin									
69	FOS	Fires on safe									
70	FPHB	Firing pin hits bbl									
71	FPHI	Firing pin hits inside rim									
72	FPO	Floor plate opens	9	18	26	3	11				67
73	FPOH	Floor plate opens hard									

# Centerfire

	A	B	D	E	F	G	H	I	J	P	Q
17	CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7	Rimfire	totals
74	FSR	Fires when safe is released									
75	FT	Follower tips									
76	GCSO	Gas cyl shot off									
77	HL	Heavy bolt lift	5				1				6
78	HMSC	Heading mismatch-steps on case									
79	HPA	High pressure ammo									
80	HUR	Hard under rail			1	1					2
81	JCS	Jumps cartridge									
82	JM	Jumps magazine	26	5	5	5					41
83	JO	Jars off									
84	LB	Light blow									
85	MAH	Magazine assembles hard									
86	MCW	Magazine capacity wrong									
87	MFA	Misfires (ammo)									
88	MFOP	Magazine follower out of position									
89	ML	Magazine loose	2								2
90	MLH	Magazine loads hard									
91	MRH	Magazine removes hard	3								3
92	OH	Opens hard	16	7	13	3	1				40
93	OR	Over-rides	7	1	4						12
94	PH	Pulls hard									
95	PSI	Proof stamp illegible									
96	PSM	Proof stamp missing									
97	RBOC	Rings and bulges on case									
98	RDW	(Action) release doesn't work									
99	RIC	Rings in chamber									
100	RIS	Ring in sholder									
101	RS	Rim srem									
102	SBC	Stems bottom chambers		2	2						4
103	SBE	Stems bbl extension									
104	SCB	Stock cracked or broken									
105	SCX	Shell catches									
106	SHI	Short indent									


# Centerfire

	A	B	D	E	F	G	H	I	J	P	Q
17	CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7	Rimfire	totals
107	SI	Stems incline	14	1	2	7	3				27
108	SIC	Stems in chamber									
109	SL	shaves lead									
110	SLC	Stems left side of chamber									
111	SMOC	Stretch marks on case									
112	SOR	Stem over-ride	25	21	16	8	13				83
113	SP	Stems port									
114	SR	Shoulder rough									
115	SRC	Stems right side of chamber									
116	SRIC	Specific rings in chamber									
117	SSOC	Surface scratches on case									
118	STC	Stems top chamber									
119	SWE	Safety switch works too easily									
120	SWH	Safety switch works too hard		2							2
121	SWW	Safety Switch won't work									
122	TD	Tips down									
123	TU	Tips up									
124	TWP	Trigger won't pull									
125	TWR	Trigger won't retract									
126	UNCN-T	Uncoded									
127	XH	Extracts hard	2	2	3	1					8
128											
129	HI	High									
130	LO	Low									
131	LEFT	Left									
132	RIGHT	Right									
133	DG	Doesn't Group									
134	FSST	Front sight tipped									
135	RSTT	Rear sight tipped									
136	RSBR	Rear sight base raised									
137	FSTR	Front sight raised									
138	FSTL	Front sight loose									
139	RSTL	Rear sight loose									



# Centerfire

	A	B	D	E	F	G	H	I	J	P	Q
17	CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7	Rimfire	totals
140	MGPT-G	Missing parts at target									
141	UNCN-G	Uncoded nonconformity at target									
142											
143	AI-P	Assembly incomplete at proof									
144	BBB	Barrel bracket cracked or broken at proof									
145	BC-P	Blows cases at proof									
146	BEB-P	Barrel extension broken at proof									
147	BLP-P	Blanked primer at proof									
148	BLSO-P	Barrel lug shot off at proof									
149	BP-P	Blown primer at proof									
150	BS-P	Barrel split at proof									
151	DBF-P	Damaged Bolt Face			3			1			4
152	DLOS-P	Doesn't lock over shells at proof									
153	ESBBP-P	Ejector sticks back -Blown Primer cup									
154	ESBEC-P	Ejector sticks back - Ejector Cresent									
155	FCB-P	Fore-end cracked at proof									
156	FESO-P	Fore-end shot off at proof									
157	FF-P	Fails to fire at proof	3		1						4
158	GCSO-P	Gas cylinder shot off at proof									
159	MSI-P	Magnaflux stamp illegible on bbl									
160	MSM-P	Magnaflux stamp missing on bbl									
161	PP-P	Pierced primer at proof									
162	SCB-P	Stock cracked or broken at proof									
163	UNCM-P	Uncoded proof malfunctions	13	8	8	5	2				36

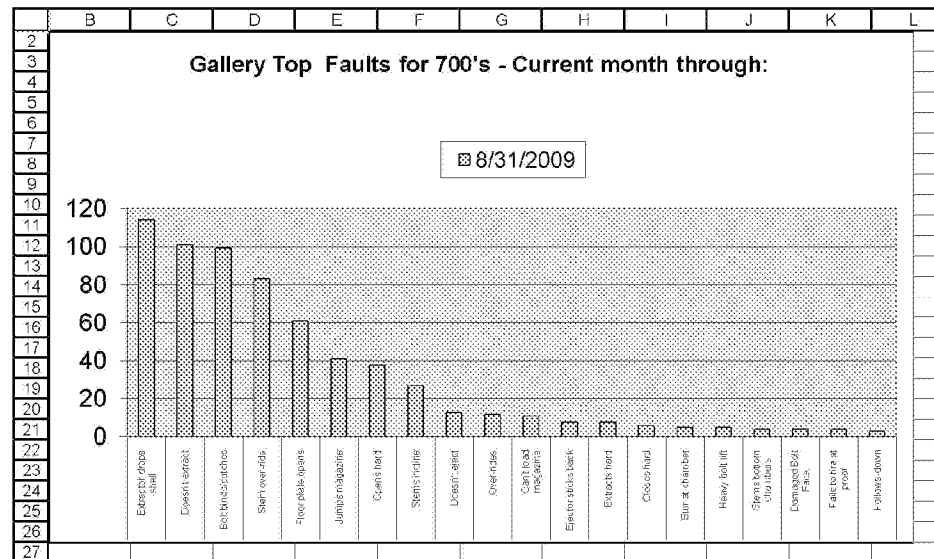

	A	B	C
1	EDS	Extractor drops shell	114
2	DX	Doesn't extract	101
3	BB	Bolt binds/catches	99
4	SOR	Stem over-ride	83
5	FPO	Floor plate opens	61
6	JM	Jumps magazine	41
7	OH	Opens hard	38
8	SI	Stems incline	27
9	DE	Doesn't eject	13
10	OR	Over-rides	12
11	CLM	Can't load magazine	11
12	ESB	Ejector sticks back	8
13	XH	Extracts hard	8
14	CH	Closes hard	6
15	BAC	Burr at chamber	5
16	HBL	Heavy bolt lift	5
17	SBC	Stems bottom chambers	4
18	DBF-P	Damaged Bolt Face	4
19	FF-P	Falls to fire at proof	4
20	FD	Follows-down	3
21	MRH	Magazine removes hard	3
22	DS	Dead safe	2
23	DXL	Doesn't extract live round	2
24	ML	Magazine loose	2
25	SWH	Safety switch works too hard	2
26	BCOF	Bolt catches on follower	1
27	BWCFM	Bolt won't close over full magazine	1
28	FF	Fails to fire	1
29	HUR	Hard under rail	1
30	AB	Action binds	0
31	BABS	Bulge at body shoulder	0
32	BBMA	BBL-to-bolt misalignment	0
33	BCOBS	Bolt catches on bolt stop	0
34	BC	Blows cases	0
35	BHR	Bolt hits receiver	0
36	BHS	Bolt plug hits safety switch	0
37	BLOP	Bar lock or disconnecter out of position	0
38	BLSO	Barrel lug shot off	0
39	BPO	Bolt pulls out	0
40	BSSM	Bolt stems shell in magazine	0
41	BWCD	Bolt won't cam down	0
42	CD	Case dented	0
43	CO	Cut-off	0
44	CR	Cuts rim	0
45	CS	Cases swell	0
46	CTOG	Chamber torn or gouged	0
47	CTP	Creepy trigger pull	0
48	CWSB	Cams wrong side of action bar	0
49	DBB	Doesn't blow back	0
50	DCS	Double click in safety switch	0
51	DCT	Double click in trigger	0
52	DCU	Doesn't close-up	0
53	DEL	Doesn't eject live round	0
54	DFB	Doesn't feed back	0
55	DFU	Doesn't feed up	0
56	DLO	Doesn't lock open (after last shell)	0

	A	B	C
57	DLU	Doesn't lock-up	0
58	ESCR	Empty shell catches receiver	0
59	ESS	Extractor stems shell	0
60	FA	Fires automatically	0
61	FB	Follower binds	0
62	FC	Fails to connect	0
63	FCB	Fore-end cracked or broken	0
64	FFP	Flat firing pin	0
65	FOS	Fires on safe	0
66	FPHB	Firing pin hits bbl	0
67	FPHI	Firing pin hits inside rim	0
68	FPOH	Floor plate opens hard	0
69	FSR	Fires when safe is released	0
70	FT	Follower tips	0
71	GCSO	Gas cyl shot off	0
72	HMSC	Heading mismatch-steps on case	0
73	HPA	High pressure ammo	0
74	JCS	Jumps cartridge	0
75	JO	Jars off	0
76	LB	Light blow	0
77	MAH	Magazine assembles hard	0
78	MCW	Magazine capacity wrong	0
79	MFA	Misfires (ammo)	0
80	MFOP	Magazine follower out of position	0
81	MLH	Magazine loads hard	0
82	PH	Pulls hard	0
83	PSI	Proof stamp illegible	0
84	PSM	Proof stamp missing	0
85	RBOC	Rings and bulges on case	0
86	RDV	(Action) release doesn't work	0
87	RIC	Rings in chamber	0
88	RIS	Ring in sholder	0
89	RS	Rim srem	0
90	SBE	Stems bbl extension	0
91	SCB	Stock cracked or broken	0
92	SCX	Shell catches	0
93	SHI	Short indent	0
94	SIC	Stems in chamber	0
95	SL	shaves lead	0
96	SLC	Stems left side of chamber	0
97	SMOC	Stretch marks on case	0
98	SP	Stems port	0
99	SR	Shoulder rough	0
100	SRC	Stems right side of chamber	0
101	SRIC	Specific rings in chamber	0
102	SSOC	Surface scratches on case	0
103	STC	Stems top chamber	0
104	SWE	Safety switch works too easily	0
105	SWW	Safety Switch won't work	0
106	TD	Tips down	0
107	TU	Tips up	0
108	TWP	Trigger won't pull	0
109	TWR	Trigger won't retract	0
110	UNCN-T	Uncoded	0
111			0
112	HI	High	0

	A	B	C
113	LO	Low	0
114	LEFT	Left	0
115	RIGHT	Right	0
116	DG	Doesn't Group	0
117	FSST	Front sight tipped	0
118	RSTT	Rear sight tipped	0
119	RGBR	Rear sight base raised	0
120	FSTR	Front sight raised	0
121	FSTL	Front sight loose	0
122	RSTL	Rear sight loose	0
123	MGPT-G	Missing parts at target	0
124	UNCN-G	Uncoded nonconformity at target	0
125			0
126	AI-P	Assembly incomplete at proof	0
127	BBB	Barrel bracket cracked or broken at proof	0
128	BC-P	Blows cases at proof	0
129	BEB-P	Barrel extension broken at proof	0
130	BLP-P	Blanked primer at proof	0
131	BLSO-P	Barrel lug shot off at proof	0
132	BP-P	Blown primer at proof	0
133	BS-P	Barrel split at proof	0
134	DLOS-P	Doesn't lock over shells at proof	0
135	ESBBP-P	Ejector sticks back - Blown Primer cup	0
136	ESBEC-P	Ejector sticks back - Ejector Crescent	0
137	FCB-P	Fore-end cracked at proof	0
138	FESO-P	Fore-end shot off at proof	0
139	GCSO-P	Gas cylinder shot off at proof	0
140	MSLP	Magnafix stamp illegible on bbl	0
141	MSM-P	Magnafix stamp missing on bbl	0
142	PP-P	Pierced primer at proof	0
143	SCB-P	Stock cracked or broken at proof	0
144	BCOAB	Bolt catches on anti-bind	
145	BCOAB	Bolt catches on anti-bind	
146			
147			
148			
149			
150	8/31/2009		

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>619</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>30</b>													
3		<b>Overall Reject Rate:</b>		<b>4.85</b>													<i>totals</i>
5		Shot:		384	184	37	11	74									630
6		Rejected:		0	1	0	0	1	0	0	0	0	0	0	0	0	2
7		Percent:		0.0	0.5	0.0	0.0	1.4									0.3
9		Shot:		365	173	34		47									519
10		Rejected:		17	9	1	0	1	0	0	0	0	0	0	0	0	28
11		Percent:		4.7	5.2	2.9		2.1									5.5
13		Shot:		32	15	3		4									54
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0		0.0									0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		1	5												8
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		1													1
57	DXL	Doesn't extract live round			1												1
58	EDS	Extractor drops shell		7				1									8
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens				1											1
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine		1	1												2
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard		3													3
92	OH	Opens hard		4	1												\$
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard			1												1
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions			1			1									2

**Cell:** E163

**Comment:** illegal:  
broken trigger

**Cell:** H163

**Comment:** illegal:  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>657</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>22</b>													
3		<b>Overall Reject Rate:</b>		<b>3.35</b>													<i>totals</i>
5		Shot:		111	56	460	25	4									658
6		Rejected:		0	0	1	0	0	0	0	0	0	0	0	0	0	1
7		Percent:		0.0	0.0	0.2	0.0	0.0									0.2
9		Shot:		98	58	472	25	4									857
10		Rejected:		4	2	14	1	0	0	0	0	0	0	0	0	0	21
11		Percent:		4.1	3.4	3.0	4.0	0.0									3.2
13		Shot:		3	5	20	1										28
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0										0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber				1											1
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches			1	7											8
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine		1													1
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		1			1										2
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire				1											1
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard		1	1	4											8
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride		1													1
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard				1											1
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions				1											1

Cell: F163

Comment: illegal:  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>697</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>47</b>													
3		<b>Overall Reject Rate:</b>		<b>6.74</b>													<i>totals</i>
5		Shot:		368	55	171	101		2								697
6		Rejected:		4	0	0	0	0	0	0	0	0	0	0	0	0	4
7		Percent:		1.1	0.0	0.0	0.0		0.0								0.6
9		Shot:		368	55	171	101		2								697
10		Rejected:		14	17	9	3	0	0	0	0	0	0	0	0	0	43
11		Percent:		3.8	30.9	5.3	3.0		0.0								6.2
13		Shot:		34	6	16	11		2								69
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0		0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber		2													2
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		2		7											9
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower		1													1
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard		1													1
38	CLM	Can't load magazine		2													2
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract			1	1	2										4
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		2		1	1										4
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens		1	9												10
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift		1													1
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard		1													1
93	OR	Over-rides		1													1
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride			5												5
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard			2												2
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions		4													\$

Cell: D163

Comment: illegal:  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>688</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>18</b>													
3		<b>Overall Reject Rate:</b>		<b>2.62</b>													<i>totals</i>
5		Shot:		294	119	101		102	22								638
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:		0.0	0.0	0.0		0.0	0.0								0.0
9		Shot:		344	119	101		102	22								688
10		Rejected:		11	4	0	0	3	0	0	0	0	0	0	0	0	18
11		Percent:		3.2	3.4	0.0		2.9	0.0								2.6
13		Shot:		34	12	9		11	22								88
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0		0.0	0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		7	1												8
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe			1												1
56	DX	Doesn't extract		1													1
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down						2									2
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens						1									1
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard		1	1												2
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard		2	1												3
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>617</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>30</b>													
3		<b>Overall Reject Rate:</b>		<b>4.86</b>													<i>totals</i>
5		Shot:		296	50	50	130	105									631
6		Rejected:		6	0	1	3	0	0	0	0	0	0	0	0	0	10
7		Percent:		2.0	0.0	2.0	2.3	0.0									1.6
9		Shot:		303	48	50	129	87									617
10		Rejected:		10	0	3	7	0	0	0	0	0	0	0	0	0	20
11		Percent:		3.3	0.0	6.0	5.4	0.0									3.2
13		Shot:		28	5	5	12	9									59
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0	0.0									0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		4		1											5
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		1			1										2
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		3													3
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens		1													1
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine					1										1
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard		1		2											3
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline					1										1
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride					4										4
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions		6		1	3										30

**Cell:** D163

**Comment:** ilngalry:  
broken trigger

**Cell:** G163

**Comment:** ilngalry:  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		<i>Shot:</i>															
6		<b>Proof</b>	<i>Rejected:</i>	0	0	0	0	0	0	0	0	0	0	0	0	0	0
7			<i>Percent:</i>														
9		<i>Shot:</i>															
10		<b>Test</b>	<i>Rejected:</i>	0	0	0	0	0	0	0	0	0	0	0	0	0	0
11			<i>Percent:</i>														
13		<i>Shot:</i>															
14		<b>Target</b>	<i>Rejected:</i>	0	0	0	0	0	0	0	0	0	0	0	0	0	0
15			<i>Percent:</i>														
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>732</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>53</b>													
3		<b>Overall Reject Rate:</b>		<b>7.24</b>													<i>totals</i>
5		Shot:		446	40	34	38	128									686
6		Rejected:		1	0	1	0	0	0	0	0	0	0	0	0	0	2
7		Percent:		0.2	0.0	2.9	0.0	0.0									0.3
9		Shot:		481	44	33	53	121									732
10		Rejected:		27	7	0	1	16	0	0	0	0	0	0	0	0	51
11		Percent:		5.6	15.9	0.0	1.9	13.2									7.2
13		Shot:		27	5	2	5	11									50
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0	0.0									0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		1			1										2
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject		2													2
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		5													5
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		5				1									5
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine		8													8
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard		2													2
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline		1	1			2									4
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride		3	6			13									22
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof		1		1											2
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>684</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>24</b>													
3		<b>Overall Reject Rate:</b>		<b>3.51</b>													<i>totals</i>
5		Shot:		166	69	232	43	175									685
6		Rejected:		0	0	1	0	0	0	0	0	0	0	0	0	0	1
7		Percent:		0.0	0.0	0.4	0.0	0.0									0.1
9		Shot:		166	69	231	43	175									684
10		Rejected:		3	1	11	1	7	0	0	0	0	0	0	0	0	23
11		Percent:		1.8	1.4	4.8	2.3	4.0									3.4
13		Shot:		16	7	24	4	16									67
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0	0.0									0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber			1												1
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches				2		2									4
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine		1													1
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract				4		2									6
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		1		2		2									3
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens		1		1											2
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine					1										1
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard				1		1									2
93	OR	Over-rides				1											1
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face				1											1
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>524</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>50</b>													
3		<b>Overall Reject Rate:</b>		<b>9.54</b>													<i>totals</i>
5		Shot:		196	76	120	42	21	22								377
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:		0.0	0.0	0.0	0.0	0.0	0.0								0.0
9		Shot:		222	85	121	39	35	22								554
10		Rejected:		27	13	6	2	0	2	0	0	0	0	0	0	0	50
11		Percent:		12.2	15.3	5.0	5.1	0.0	9.1								9.5
13		Shot:		14	4	12	4	2	20								56
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0	0.0	0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches	1	9	2	2			2								18
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cam wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		4		1											%
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		7	1												\$
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens		2													2
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine		8		1											9
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard		1													1
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride		4	3												7
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard				2											2
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>522</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>27</b>													
3		<b>Overall Reject Rate:</b>		<b>5.17</b>													<i>totals</i>
5		Shot:		148	137	105	40	26									456
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:		0.0	0.0	0.0	0.0	0.0									0.0
9		Shot:		173	152	105	40	26	26								552
10		Rejected:		0	27	0	0	0	0	0	0	0	0	0	0	0	39
11		Percent:		0.0	17.8	0.0	0.0	0.0	0.0								7.5
13		Shot:		15	10	10	4	3	26								68
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0	0.0	0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches			3												3
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine			1	1											2
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		2	1												3
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		4	4												5
59	ESB	Ejector sticks back			5												5
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens		2	4												5
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine		4		4											
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard			1												1
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers			2												2
103	SBE	Stems bbl extension															
104	SCB	Stook cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride		2	6	1											3
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>558</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>31</b>													
3		<b>Overall Reject Rate:</b>		<b>5.56</b>													<i>totals</i>
5		Shot:		158	194	16	104	50	36								558
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:		0.0	0.0	0.0	0.0	0.0	0.0								0.0
9		Shot:		158	194	16	104	50	36								558
10		Rejected:		18	5	3	4	1	0	0	0	0	0	0	0	0	31
11		Percent:		11.4	2.6	18.8	3.8	2.0	0.0								5.6
13		Shot:		14	20	2	6	5	36								83
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0	0.0	0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber					1										1
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard					1										1
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		4			1										%
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		4	1	1											%
59	ESB	Ejector sticks back				1											%
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine			3		2										\$
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard			1												1
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline		10				1									11
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>514</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>30</b>													
3		<b>Overall Reject Rate:</b>		<b>5.84</b>													<i>totals</i>
5		Shot:		262	112	94			46								514
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:		0.0	0.0	0.0			0.0								0.0
9		Shot:		262	112	94			46								514
10		Rejected:		17	5	6	0	0	2	0	0	0	0	0	0	0	30
11		Percent:		6.5	4.5	6.4			4.3								5.8
13		Shot:		9	6	9											24
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0											0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine			1												1
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cam wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject			1												1
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract			2	1			2								3
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		3		1											4
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens				1											1
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides		2													2
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride		12	1	3											16
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>547</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>17</b>													
3		<b>Overall Reject Rate:</b>		<b>3.11</b>													<i>totals</i>
5		Shot:		306	54	89	102		31								532
6		Rejected:		2	0	0	0	0	0	0	0	0	0	0	0	0	2
7		Percent:		0.7	0.0	0.0	0.0		0.0								0.3
9		Shot:		280	54	80	102		31								547
10		Rejected:		5	0	10	0	0	0	0	0	0	0	0	0	0	15
11		Percent:		1.8	0.0	12.5	0.0		0.0								2.7
13		Shot:		28	6	7	7		31								78
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0		0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		1													1
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		1													1
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift		1													1
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine		1													1
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline		1													1
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride				10											10
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions		2													2

Cell: D163

Comment: illegal:  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>729</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>37</b>													
3		<b>Overall Reject Rate:</b>		<b>5.08</b>													<i>totals</i>
5		Shot:		271	193	127	117	7	73								788
6		Rejected:		0	6	0	0	0	1	0	0	0	0	0	0	0	7
7		Percent:		0.0	3.1	0.0	0.0	0.0	1.4								8.9
9		Shot:		287	179	33	92	11	127								739
10		Rejected:		8	7	8	6	1	0	0	0	0	0	0	0	0	30
11		Percent:		2.8	3.9	24.2	6.5	9.1	0.0								3.1
13		Shot:		14	16	3	10	1	127								173
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0	0.0	0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		1	2	1											4
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard		1	1												2
38	CLM	Can't load magazine			1												1
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cam wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		1	1	1		1									4
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell			1	1	2										4
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens				2											2
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine		1													1
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard			1												1
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline		2		2											4
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride		2		1	4										7
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face							1								1
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions			6												6

Cell: E163

Comment: illegal:  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>673</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>56</b>													
3		<b>Overall Reject Rate:</b>		<b>8.32</b>													<i>totals</i>
5		Shot:		77	74	159	223	129	3								665
6		Rejected:		0	0	1	2	0	0	0	0	0	0	0	0	0	3
7		Percent:		0.0	0.0	0.6	0.9	0.0	0.0								0.5
9		Shot:		79	103	172	183	133	3								873
10		Rejected:		4	5	4	15	25	0	0	0	0	0	0	0	0	53
11		Percent:		5.1	4.9	2.3	8.2	18.8	0.0								7.9
13		Shot:		8	7	17	18	10	3								63
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0	0.0	0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		1		1		3									5
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine		1													1
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject		2			1	7									38
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract				1	4	4									9
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell			4	1	2	4									11
59	ESB	Ejector sticks back					1										1
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens						6									6
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift						1									1
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine			1												1
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard					2										2
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers				1											1
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline					5										5
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face				1											1
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions					2										2

Cell: G163

Comment: illegal:  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>636</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>37</b>													
3		<b>Overall Reject Rate:</b>		<b>5.82</b>													<i>totals</i>
5		Shot:		67	37	331	97	94	10								636
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:		0.0	0.0	0.0	0.0	0.0	0.0								0.0
9		Shot:		67	37	331	97	94	10								636
10		Rejected:		14	6	13	0	4	0	0	0	0	0	0	0	0	37
11		Percent:		20.9	16.2	3.9	0.0	4.3	0.0								5.8
13		Shot:		4	4	31	10	10	10								68
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0	0.0	0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches				2											2
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe				1											1
56	DX	Doesn't extract		2	1	3		4									10
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		7	4	3											14
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard		1		2											3
93	OR	Over-rides		3	1												4
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers				1											1
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride		1		1											2
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>709</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>26</b>													
3		<b>Overall Reject Rate:</b>		<b>3.67</b>													<i>totals</i>
5		Shot:		436	143	66	38	47									739
6		Rejected:		1	1	0	0	0	0	0	0	0	0	0	0	0	2
7		Percent:		0.2	0.7	0.0	0.0	0.0									0.3
9		Shot:		435	143	66	38	27									739
10		Rejected:		19	2	1	2	0	0	0	0	0	0	0	0	0	24
11		Percent:		4.4	1.4	1.5	5.3	0.0									3.4
13		Shot:		37	16	7	4	3									67
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0	0.0									0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine			1												1
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		7	1		2										10
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		9													8
59	ESB	Ejector sticks back		1													1
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens				1											1
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard		1													1
93	OR	Over-rides		1													1
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof		1													1
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions			1												1

Cell: E163

Comment: illegal:  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>802</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>34</b>													
3		<b>Overall Reject Rate:</b>		<b>4.24</b>													<i>totals</i>
5		Shot:		216	29	335	162	28	3								773
6		Rejected:		0	0	1	0	0	0	0	0	0	0	0	0	0	1
7		Percent:		0.0	0.0	0.3	0.0	0.0	0.0								0.7
9		Shot:		215	31	343	177	33	3								802
10		Rejected:		4	1	20	7	1	0	0	0	0	0	0	0	0	33
11		Percent:		1.9	3.2	5.8	4.0	3.0	0.0								4.1
13		Shot:		23	3	33	18	3	3								53
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0	0.0	0.0								0.6
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches				4											4
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard						1									1
38	CLM	Can't load magazine					1										1
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract				9	3										12
57	DXL	Doesn't extract live round					1										1
58	EDS	Extractor drops shell		2	1	4											7
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down				1											1
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine		1			1										2
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard		1		1											2
93	OR	Over-rides				1											1
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stook cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline					1										1
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face				1											1
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>567</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>36</b>													
3		<b>Overall Reject Rate:</b>		<b>6.35</b>													<i>totals</i>
5		Shot:		77	120	135	198	37									567
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:		0.0	0.0	0.0	0.0	0.0									0.0
9		Shot:		77	120	135	198	37									567
10		Rejected:		3	8	8	17	0	0	0	0	0	0	0	0	0	36
11		Percent:		3.9	6.7	5.9	8.6	0.0									6.3
13		Shot:		7	11	13	15	4									50
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0	0.0									0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		1	2	7											10
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cam wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract			1		11										12
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		1	2		5										8
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens			2												2
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail					1										1
81	JCS	Jumps cartridge															
82	JM	Jumps magazine		1													1
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard			1	1											2
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>668</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>23</b>													
3		<b>Overall Reject Rate:</b>		<b>3.44</b>													<i>totals</i>
5		Shot:		341	124	22	135	105	5								732
6		Rejected:		0	0	1	0	0	0	0	0	0	0	0	0	0	1
7		Percent:		0.0	0.0	4.5	0.0	0.0	0.0								0.7
9		Shot:		283	154	25	96	105	5								868
10		Rejected:		1	1	6	9	5	0	0	0	0	0	0	0	0	22
11		Percent:		0.4	0.6	24.0	9.4	4.8	0.0								3.3
13		Shot:		31	15	3	6	10	5								70
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0	0.0	0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches					1	4									5
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine					1										1
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract			1		3										4
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		1		1		1									3
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens				4	3										7
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides				1											1
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard					1										1
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions				1											1

Cell: F163

Comment: illegal:  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>531</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>45</b>													
3		<b>Overall Reject Rate:</b>		<b>8.47</b>													<i>totals</i>
5		Shot:		262	110	85	114	16									531
6		Rejected:		2	0	0	0	1	0	0	0	0	0	0	0	0	3
7		Percent:		0.8	0.0	0.0	0.0	6.3									0.5
9		Shot:		273	80	75		103									531
10		Rejected:		19	4	17	0	2	0	0	0	0	0	0	0	0	42
11		Percent:		7.0	5.0	22.7		1.9									7.9
13		Shot:		25	8	5		11									48
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0		0.0									0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		7				1									8
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard		1													1
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		1		1											2
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		1	1			1									3
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens		2	3	14											12
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift		2													1
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine		1													1
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose		2													2

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard		2		1											3
93	OR	Over-rides				1											1
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof		1													1
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions		1				1									2

**Cell:** D163

**Comment:** illegal:  
broken trigger

**Cell:** H163

**Comment:** illegal:  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		<i>Shot:</i>															
6		<b>Proof</b>	<i>Rejected:</i>	0	0	0	0	0	0	0	0	0	0	0	0	0	0
7			<i>Percent:</i>														
9		<i>Shot:</i>															
10		<b>Test</b>	<i>Rejected:</i>	0	0	0	0	0	0	0	0	0	0	0	0	0	0
11			<i>Percent:</i>														
13		<i>Shot:</i>															
14		<b>Target</b>	<i>Rejected:</i>	0	0	0	0	0	0	0	0	0	0	0	0	0	0
15			<i>Percent:</i>														
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>879</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>36</b>													
3		<b>Overall Reject Rate:</b>		<b>4.10</b>													<i>totals</i>
5		Shot:		131	79	347	145	45	2								739
6		Rejected:		0	0	5	0	0	0	0	0	0	0	0	0	0	5
7		Percent:		0.0	0.0	1.4	0.0	0.0	0.0								0.7
9		Shot:		167	103	338	160	76	2							33	879
10		Rejected:		5	2	14	3	4	0	0	0	0	0	0	0	3	31
11		Percent:		3.0	1.9	4.1	1.9	5.3	0.0							9.1	3.5
13		Shot:		15	10	34	13	7									78
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0	0.0									0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds														1	1
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		1		3											4
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard		2		2											4
38	CLM	Can't load magazine				1	1										2
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															




	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up														1	1
55	DS	Dead safe															
56	DX	Doesn't extract		1	2		1										4
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell				4											4
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect														1	1
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens				2		4									6
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift		1													1
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail				1											1
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															


	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard				1	1										2
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															


	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions				5											5

Cell: F163

Comment: illegal:  
broken triggers

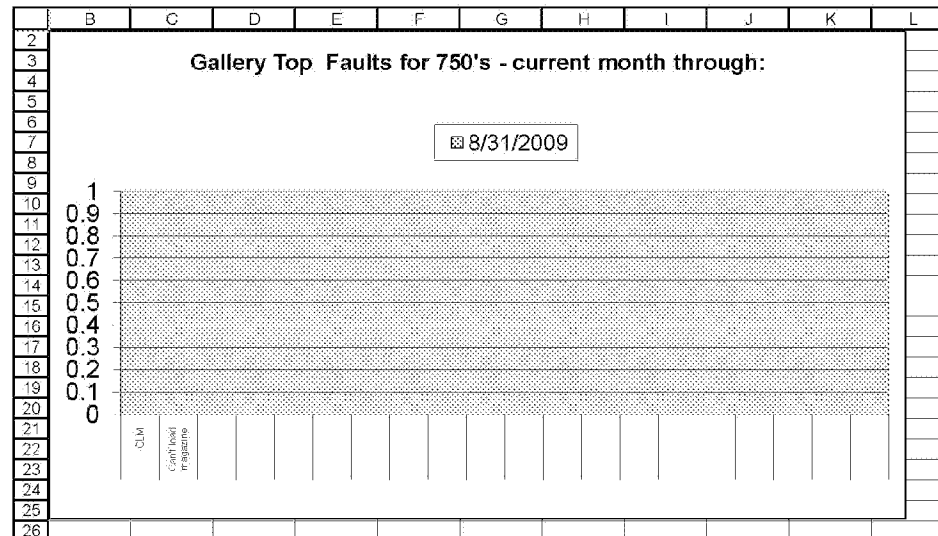

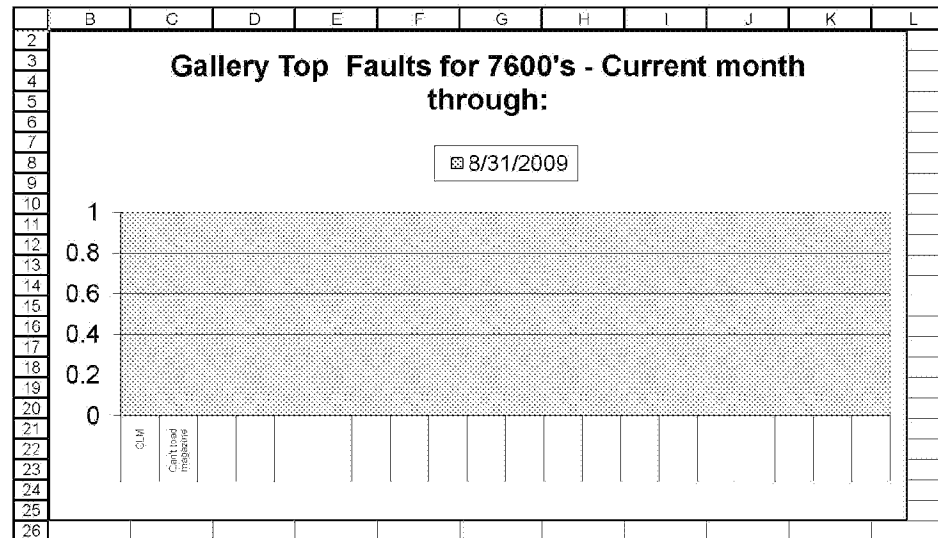

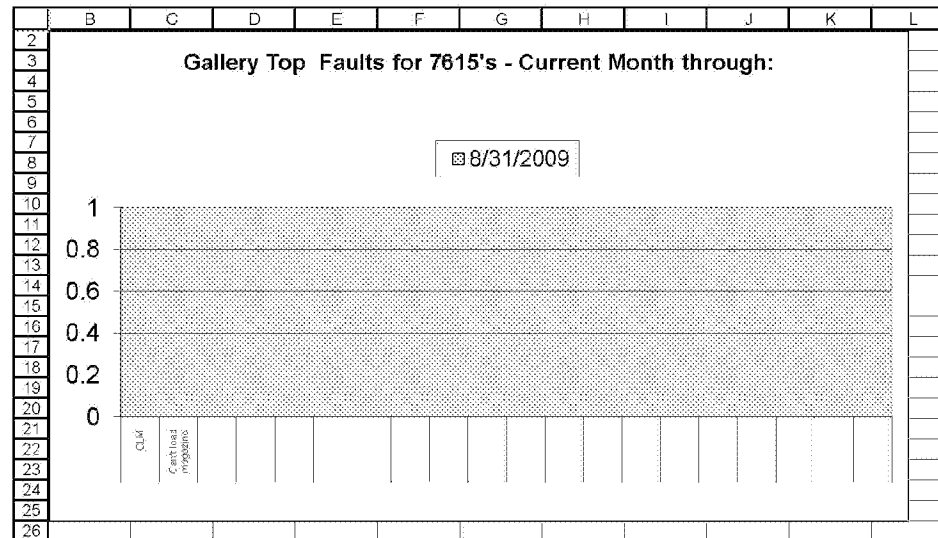

	A	B	C
1	AB	Action binds	0
2	BABS	Bulge at body shoulder	0
3	BAC	Burr at chamber	0
4	BBMA	BBL-to-bolt misalignment	0
5	BB	Bolt binds/catches	0
6	BCOAB	Bolt catches on anti-bind	0
7	BCOBS	Bolt catches on bolt stop	0
8	BCOF	Bolt catches on follower	0
9	BC	Blows cases	0
10	BHR	Bolt hits receiver	0
11	BHS	Bolt plug hits safety switch	0
12	BLOP	Bar lock or disconnecter out of position	0
13	BLSO	Barrel lug shot off	0
14	BPO	Bolt pulls out	0
15	BSSM	Bolt stems shell in magazine	0
16	BWCD	Bolt won't cam down	0
17	BWCFM	Bolt won't close over full magazine	0
18	CD	Case dented	0
19	CH	Closes hard	0
20	CLM	Can't load magazine	0
21	CO	Cut-off	0
22	CR	Cuts rim	0
23	CS	Cases swell	0
24	CTOG	Chamber torn or gouged	0
25	CTP	Creepy trigger pull	0
26	CWSB	Cams wrong side of action bar	0
27	DBB	Doesn't blow back	0
28	DCS	Double click in safety switch	0
29	DCT	Double click in trigger	0
30	DCU	Doesn't close-up	0
31	DE	Doesn't eject	0
32	DEL	Doesn't eject live round	0
33	DFB	Doesn't feed back	0
34	DFU	Doesn't feed up	0
35	DLO	Doesn't lock open (after last shell)	0
36	DLU	Doesn't lock-up	0
37	DS	Dead safe	0
38	DX	Doesn't extract	0
39	DXL	Doesn't extract live round	0
40	EDS	Extractor drops shell	0
41	ESB	Ejector sticks back	0
42	ESCR	Empty shell catches receiver	0
43	ESS	Extractor stems shell	0
44	FA	Fires automatically	0
45	FB	Follower binds	0
46	FC	Fails to connect	0
47	FCB	Fore-end cracked or broken	0
48	FD	Follows-down	0
49	FF	Fails to fire	0
50	FFP	Flat firing pin	0
51	FOS	Fires on safe	0
52	FPHB	Firing pin hits bbl	0
53	FPHI	Firing pin hits inside rim	0
54	FPO	Floor plate opens	0
55	FPOH	Floor plate opens hard	0
56	FSR	Fires when safe is released	0



	A	B	C
57	FT	Follower tips	0
58	GCSO	Gas cyl shot off	0
59	HBL	Heavy bolt lift	0
60	HMSC	Heading mismatch-steps on case	0
61	HPA	High pressure ammo	0
62	HUR	Hard under rail	0
63	JCS	Jumps cartridge	0
64	JM	Jumps magazine	0
65	JO	Jars off	0
66	LB	Light blow	0
67	MAH	Magazine assembles hard	0
68	MCW	Magazine capacity wrong	0
69	MFA	Misfires (ammo)	0
70	MFOP	Magazine follower out of position	0
71	ML	Magazine loose	0
72	MLH	Magazine loads hard	0
73	MRH	Magazine removes hard	0
74	OH	Opens hard	0
75	OR	Over-rides	0
76	PH	Pulls hard	0
77	PSI	Proof stamp illegible	0
78	PSM	Proof stamp missing	0
79	RBOC	Rings and bulges on case	0
80	RDVV	(Action) release doesn't work	0
81	RIC	Rings in chamber	0
82	RIS	Ring in sholder	0
83	RS	Rim srem	0
84	SBC	Stems bottom chambers	0
85	SEE	Stems bbl extension	0
86	SCB	Stock cracked or broken	0
87	SCX	Shell catches	0
88	SHI	Short indent	0
89	SI	Stems incline	0
90	SIC	Stems in chamber	0
91	SL	shaves lead	0
92	SLC	Stems left side of chamber	0
93	SMOC	Stretch marks on case	0
94	SOR	Stem over-ride	0
95	SP	Stems port	0
96	SR	Shoulder rough	0
97	SRC	Stems right side of chamber	0
98	SRIC	Specific rings in chamber	0
99	SSOC	Surface scratches on case	0
100	STC	Stems top chamber	0
101	SWE	Safety switch works too easily	0
102	SWH	Safety switch works too hard	0
103	SWW	Safety Switch won't work	0
104	TD	Tips down	0
105	TU	Tips up	0
106	TWP	Trigger won't pull	0
107	TWR	Trigger won't retract	0
108	UNCN-T	Uncoded	0
109	XH	Extracts hard	0
110			0
111	HI	High	0
112	LO	Low	0

	A	B	C
113	LEFT	Left	0
114	RIGHT	Right	0
115	DG	Doesn't Group	0
116	FSST	Front sight tipped	0
117	RSTT	Rear sight tipped	0
118	RSBR	Rear sight base raised	0
119	FSTR	Front sight raised	0
120	FSTL	Front sight loose	0
121	RSTL	Rear sight loose	0
122	MGPT-G	Missing parts at target	0
123	UNCN-G	Uncoded nonconformity at target	0
124			0
125	AI-P	Assembly incomplete at proof	0
126	BBB	Barrel bracket cracked or broken at proof	0
127	BC-P	Blows cases at proof	0
128	BEB-P	Barrel extension broken at proof	0
129	BLP-P	Blanked primer at proof	0
130	BLSO-P	Barrel lug shot off at proof	0
131	BP-P	Blown primer at proof	0
132	BS-P	Barrel split at proof	0
133	DBF-P	Damaged Bolt Face	0
134	DLOS-P	Doesn't lock over shells at proof	0
135	ESBBP-P	Ejector sticks back - Blown Primer cup	0
136	ESBEC-P	Ejector sticks back - Ejector Crescent	0
137	FCB-P	Fore-end cracked at proof	0
138	FESO-P	Fore-end shot off at proof	0
139	FF-P	Fails to fire at proof	0
140	GCSO-P	Gas cylinder shot off at proof	0
141	MSI-P	Magnaflux stamp illegible on bbl	0
142	MSM-P	Magnaflux stamp missing on bbl	0
143	PP-P	Pierced primer at proof	0
144	SCB-P	Stock cracked or broken at proof	0

	A	B	C
1	AB	Action binds	0
2	BABS	Bulge at body shoulder	0
3	BAC	Burr at chamber	0
4	BBMA	BBL-to-bolt misalignment	0
5	BB	Bolt binds/catches	0
6	BCOAB	Bolt catches on anti-bind	0
7	BCOBS	Bolt catches on bolt stop	0
8	BCOF	Bolt catches on follower	0
9	BC	Blows cases	0
10	BHR	Bolt hits receiver	0
11	BHS	Bolt plug hits safety switch	0
12	BLOP	Bar lock or disconnecter out of position	0
13	BLSO	Barrel lug shot off	0
14	BPO	Bolt pulls out	0
15	BSSM	Bolt stems shell in magazine	0
16	BWCD	Bolt won't cam down	0
17	BWCFM	Bolt won't close over full magazine	0
18	CD	Case dented	0
19	CH	Closes hard	0
20	CLM	Can't load magazine	0
21	CO	Cut-off	0
22	CR	Cuts rim	0
23	CS	Cases swell	0
24	CTOG	Chamber torn or gouged	0
25	CTP	Creepy trigger pull	0
26	CWSB	Cams wrong side of action bar	0
27	DBB	Doesn't blow back	0
28	DCS	Double click in safety switch	0
29	DCT	Double click in trigger	0
30	DCU	Doesn't close-up	0
31	DE	Doesn't eject	0
32	DEL	Doesn't eject live round	0
33	DFB	Doesn't feed back	0
34	DFU	Doesn't feed up	0
35	DLO	Doesn't lock open (after last shell)	0
36	DLU	Doesn't lock-up	0
37	DS	Dead safe	0
38	DX	Doesn't extract	0
39	DXL	Doesn't extract live round	0
40	EDS	Extractor drops shell	0
41	ESB	Ejector sticks back	0
42	ESCR	Empty shell catches receiver	0
43	ESS	Extractor stems shell	0
44	FA	Fires automatically	0
45	FB	Follower binds	0
46	FC	Fails to connect	0
47	FCB	Fore-end cracked or broken	0
48	FD	Follows-down	0
49	FF	Fails to fire	0
50	FFP	Flat firing pin	0
51	FOS	Fires on safe	0
52	FPHB	Firing pin hits bbl	0
53	FPHI	Firing pin hits inside rim	0
54	FPO	Floor plate opens	0
55	FPOH	Floor plate opens hard	0
56	FSR	Fires when safe is released	0

	A	B	C
57	FT	Follower tips	0
58	GCSO	Gas cyl shot off	0
59	HBL	Heavy bolt lift	0
60	HMSC	Heading mismatch-steps on case	0
61	HPA	High pressure ammo	0
62	HUR	Hard under rail	0
63	JCS	Jumps cartridge	0
64	JM	Jumps magazine	0
65	JO	Jars off	0
66	LB	Light blow	0
67	MAH	Magazine assembles hard	0
68	MCW	Magazine capacity wrong	0
69	MFA	Misfires (ammo)	0
70	MFOP	Magazine follower out of position	0
71	ML	Magazine loose	0
72	MLH	Magazine loads hard	0
73	MRH	Magazine removes hard	0
74	OH	Opens hard	0
75	OR	Over-rides	0
76	PH	Pulls hard	0
77	PSI	Proof stamp illegible	0
78	PSM	Proof stamp missing	0
79	RBOC	Rings and bulges on case	0
80	RDVV	(Action) release doesn't work	0
81	RIC	Rings in chamber	0
82	RIS	Ring in sholder	0
83	RS	Rim srem	0
84	SBC	Stems bottom chambers	0
85	SEE	Stems bbl extension	0
86	SCB	Stock cracked or broken	0
87	SCX	Shell catches	0
88	SHI	Short indent	0
89	SI	Stems incline	0
90	SIC	Stems in chamber	0
91	SL	shaves lead	0
92	SLC	Stems left side of chamber	0
93	SMOC	Stretch marks on case	0
94	SOR	Stem over-ride	0
95	SP	Stems port	0
96	SR	Shoulder rough	0
97	SRC	Stems right side of chamber	0
98	SRIC	Specific rings in chamber	0
99	SSOC	Surface scratches on case	0
100	STC	Stems top chamber	0
101	SWE	Safety switch works too easily	0
102	SWH	Safety switch works too hard	0
103	SWW	Safety Switch won't work	0
104	TD	Tips down	0
105	TU	Tips up	0
106	TWP	Trigger won't pull	0
107	TWR	Trigger won't retract	0
108	UNCN-T	Uncoded	0
109	XH	Extracts hard	0
110			0
111	HI	High	0
112	LO	Low	0

	A	B	C
113	LEFT	Left	0
114	RIGHT	Right	0
115	DG	Doesn't Group	0
116	FSST	Front sight tipped	0
117	RSTT	Rear sight tipped	0
118	RSBR	Rear sight base raised	0
119	FSTR	Front sight raised	0
120	FSTL	Front sight loose	0
121	RSTL	Rear sight loose	0
122	MGPT-G	Missing parts at target	0
123	UNCN-G	Uncoded nonconformity at target	0
124			0
125	AI-P	Assembly incomplete at proof	0
126	BBB	Barrel bracket cracked or broken at proof	0
127	BC-P	Blows cases at proof	0
128	BEB-P	Barrel extension broken at proof	0
129	BLP-P	Blanked primer at proof	0
130	BLSO-P	Barrel lug shot off at proof	0
131	BP-P	Blown primer at proof	0
132	BS-P	Barrel split at proof	0
133	DBF-P	Damaged Bolt Face	0
134	DLOS-P	Doesn't lock over shells at proof	0
135	ESBBP-P	Ejector sticks back - Blown Primer cup	0
136	ESBEC-P	Ejector sticks back - Ejector Crescent	0
137	FCB-P	Fore-end cracked at proof	0
138	FESO-P	Fore-end shot off at proof	0
139	FF-P	Fails to fire at proof	0
140	GCSO-P	Gas cylinder shot off at proof	0
141	MSI-P	Magnaflux stamp illegible on bbl	0
142	MSM-P	Magnaflux stamp missing on bbl	0
143	PP-P	Pierced primer at proof	0
144	SCB-P	Stock cracked or broken at proof	0

	A	B	C
1	AB	Action binds	0
2	BABS	Bulge at body shoulder	0
3	BAC	Burr at chamber	0
4	BBMA	BBL-to-bolt misalignment	0
5	BB	Bolt binds/catches	0
6	BCOAB	Bolt catches on anti-bind	0
7	BCOBS	Bolt catches on bolt stop	0
8	BCOF	Bolt catches on follower	0
9	BC	Blows cases	0
10	BHR	Bolt hits receiver	0
11	BHS	Bolt plug hits safety switch	0
12	BLOP	Bar lock or disconnecter out of position	0
13	BLSO	Barrel lug shot off	0
14	BPO	Bolt pulls out	0
15	BSSM	Bolt stems shell in magazine	0
16	BWCD	Bolt won't cam down	0
17	BWCFM	Bolt won't close over full magazine	0
18	CD	Case dented	0
19	CH	Closes hard	0
20	CLM	Can't load magazine	0
21	CO	Cut-off	0
22	CR	Cuts rim	0
23	CS	Cases swell	0
24	CTOG	Chamber torn or gouged	0
25	CTP	Creepy trigger pull	0
26	CWSB	Cams wrong side of action bar	0
27	DBB	Doesn't blow back	0
28	DCS	Double click in safety switch	0
29	DCT	Double click in trigger	0
30	DCU	Doesn't close-up	0
31	DE	Doesn't eject	0
32	DEL	Doesn't eject live round	0
33	DFB	Doesn't feed back	0
34	DFU	Doesn't feed up	0
35	DLO	Doesn't lock open (after last shell)	0
36	DLU	Doesn't lock-up	0
37	DS	Dead safe	0
38	DX	Doesn't extract	0
39	DXL	Doesn't extract live round	0
40	EDS	Extractor drops shell	0
41	ESB	Ejector sticks back	0
42	ESCR	Empty shell catches receiver	0
43	ESS	Extractor stems shell	0
44	FA	Fires automatically	0
45	FB	Follower binds	0
46	FC	Fails to connect	0
47	FCB	Fore-end cracked or broken	0
48	FD	Follows-down	0
49	FF	Fails to fire	0
50	FFP	Flat firing pin	0
51	FOS	Fires on safe	0
52	FPHB	Firing pin hits bbl	0
53	FPHI	Firing pin hits inside rim	0
54	FPO	Floor plate opens	0
55	FPOH	Floor plate opens hard	0
56	FSR	Fires when safe is released	0

	A	B	C
57	FT	Follower tips	0
58	GCSO	Gas cyl shot off	0
59	HBL	Heavy bolt lift	0
60	HMSC	Heading mismatch-steps on case	0
61	HPA	High pressure ammo	0
62	HUR	Hard under rail	0
63	JCS	Jumps cartridge	0
64	JM	Jumps magazine	0
65	JO	Jars off	0
66	LB	Light blow	0
67	MAH	Magazine assembles hard	0
68	MCW	Magazine capacity wrong	0
69	MFA	Misfires (ammo)	0
70	MFOP	Magazine follower out of position	0
71	ML	Magazine loose	0
72	MLH	Magazine loads hard	0
73	MRH	Magazine removes hard	0
74	OH	Opens hard	0
75	OR	Over-rides	0
76	PH	Pulls hard	0
77	PSI	Proof stamp illegible	0
78	PSM	Proof stamp missing	0
79	RBOC	Rings and bulges on case	0
80	RDVV	(Action) release doesn't work	0
81	RIC	Rings in chamber	0
82	RIS	Ring in sholder	0
83	RS	Rim srem	0
84	SBC	Stems bottom chambers	0
85	SEE	Stems bbl extension	0
86	SCB	Stock cracked or broken	0
87	SCX	Shell catches	0
88	SHI	Short indent	0
89	SI	Stems incline	0
90	SIC	Stems in chamber	0
91	SL	shaves lead	0
92	SLC	Stems left side of chamber	0
93	SMOC	Stretch marks on case	0
94	SOR	Stem over-ride	0
95	SP	Stems port	0
96	SR	Shoulder rough	0
97	SRC	Stems right side of chamber	0
98	SRIC	Specific rings in chamber	0
99	SSOC	Surface scratches on case	0
100	STC	Stems top chamber	0
101	SWE	Safety switch works too easily	0
102	SWH	Safety switch works too hard	0
103	SWW	Safety Switch won't work	0
104	TD	Tips down	0
105	TU	Tips up	0
106	TWP	Trigger won't pull	0
107	TWR	Trigger won't retract	0
108	UNCN-T	Uncoded	0
109	XH	Extracts hard	0
110			0
111	HI	High	0
112	LO	Low	0

	A	B	C
113	LEFT	Left	0
114	RIGHT	Right	0
115	DG	Doesn't Group	0
116	FSST	Front sight tipped	0
117	RSTT	Rear sight tipped	0
118	RSBR	Rear sight base raised	0
119	FSTR	Front sight raised	0
120	FSTL	Front sight loose	0
121	RSTL	Rear sight loose	0
122	MGPT-G	Missing parts at target	0
123	UNCN-G	Uncoded nonconformity at target	0
124			0
125	AI-P	Assembly incomplete at proof	0
126	BBB	Barrel bracket cracked or broken at proof	0
127	BC-P	Blows cases at proof	0
128	BEB-P	Barrel extension broken at proof	0
129	BLP-P	Blanked primer at proof	0
130	BLSO-P	Barrel lug shot off at proof	0
131	BP-P	Blown primer at proof	0
132	BS-P	Barrel split at proof	0
133	DBF-P	Damaged Bolt Face	0
134	DLOS-P	Doesn't lock over shells at proof	0
135	ESBBP-P	Ejector sticks back - Blown Primer cup	0
136	ESBEC-P	Ejector sticks back - Ejector Crescent	0
137	FCB-P	Fore-end cracked at proof	0
138	FESO-P	Fore-end shot off at proof	0
139	FF-P	Fails to fire at proof	0
140	GCSO-P	Gas cylinder shot off at proof	0
141	MSI-P	Magnaflux stamp illegible on bbl	0
142	MSM-P	Magnaflux stamp missing on bbl	0
143	PP-P	Pierced primer at proof	0
144	SCB-P	Stock cracked or broken at proof	0



	A	B	C
1	AB	Action binds	0
2	BABS	Bulge at body shoulder	0
3	BAC	Burr at chamber	0
4	BBMA	BBL-to-bolt misalignment	0
5	BB	Bolt binds/catches	0
6	BCOAB	Bolt catches on anti-bind	0
7	BCOBS	Bolt catches on bolt stop	0
8	BCOF	Bolt catches on follower	0
9	BC	Blows cases	0
10	BHR	Bolt hits receiver	0
11	BHS	Bolt plug hits safety switch	0
12	BLOP	Bar lock or disconnecter out of position	0
13	BLSO	Barrel lug shot off	0
14	BPO	Bolt pulls out	0
15	BSSM	Bolt stems shell in magazine	0
16	BWCD	Bolt won't cam down	0
17	BWCFM	Bolt won't close over full magazine	0
18	CD	Case dented	0
19	CH	Closes hard	0
20	CLM	Can't load magazine	0
21	CO	Cut-off	0
22	CR	Cuts rim	0
23	CS	Cases swell	0
24	CTOG	Chamber torn or gouged	0
25	CTP	Creepy trigger pull	0
26	CWSB	Cams wrong side of action bar	0
27	DBB	Doesn't blow back	0
28	DCS	Double click in safety switch	0
29	DCT	Double click in trigger	0
30	DCU	Doesn't close-up	0
31	DE	Doesn't eject	0
32	DEL	Doesn't eject live round	0
33	DFB	Doesn't feed back	0
34	DFU	Doesn't feed up	0
35	DLO	Doesn't lock open (after last shell)	0
36	DLU	Doesn't lock-up	0
37	DS	Dead safe	0
38	DX	Doesn't extract	0
39	DXL	Doesn't extract live round	0
40	EDS	Extractor drops shell	0
41	ESB	Ejector sticks back	0
42	ESCR	Empty shell catches receiver	0
43	ESS	Extractor stems shell	0
44	FA	Fires automatically	0
45	FB	Follower binds	0
46	FC	Fails to connect	0
47	FCB	Fore-end cracked or broken	0
48	FD	Follows-down	0
49	FF	Fails to fire	0
50	FFP	Flat firing pin	0
51	FOS	Fires on safe	0
52	FPHB	Firing pin hits bbl	0
53	FPHI	Firing pin hits inside rim	0
54	FPO	Floor plate opens	0
55	FPOH	Floor plate opens hard	0
56	FSR	Fires when safe is released	0

	A	B	C
57	FT	Follower tips	0
58	GCSO	Gas cyl shot off	0
59	HBL	Heavy bolt lift	0
60	HMSC	Heading mismatch-steps on case	0
61	HPA	High pressure ammo	0
62	HUR	Hard under rail	0
63	JCS	Jumps cartridge	0
64	JM	Jumps magazine	0
65	JO	Jars off	0
66	LB	Light blow	0
67	MAH	Magazine assembles hard	0
68	MCW	Magazine capacity wrong	0
69	MFA	Misfires (ammo)	0
70	MFOP	Magazine follower out of position	0
71	ML	Magazine loose	0
72	MLH	Magazine loads hard	0
73	MRH	Magazine removes hard	0
74	OH	Opens hard	0
75	OR	Over-rides	0
76	PH	Pulls hard	0
77	PSI	Proof stamp illegible	0
78	PSM	Proof stamp missing	0
79	RBOC	Rings and bulges on case	0
80	RDVV	(Action) release doesn't work	0
81	RIC	Rings in chamber	0
82	RIS	Ring in sholder	0
83	RS	Rim srem	0
84	SBC	Stems bottom chambers	0
85	SEE	Stems bbl extension	0
86	SCB	Stock cracked or broken	0
87	SCX	Shell catches	0
88	SHI	Short indent	0
89	SI	Stems incline	0
90	SIC	Stems in chamber	0
91	SL	shaves lead	0
92	SLC	Stems left side of chamber	0
93	SMOC	Stretch marks on case	0
94	SOR	Stem over-ride	0
95	SP	Stems port	0
96	SR	Shoulder rough	0
97	SRC	Stems right side of chamber	0
98	SRIC	Specific rings in chamber	0
99	SSOC	Surface scratches on case	0
100	STC	Stems top chamber	0
101	SWE	Safety switch works too easily	0
102	SWH	Safety switch works too hard	0
103	SWW	Safety Switch won't work	0
104	TD	Tips down	0
105	TU	Tips up	0
106	TWP	Trigger won't pull	0
107	TWR	Trigger won't retract	0
108	UNCN-T	Uncoded	0
109	XH	Extracts hard	0
110			0
111	HI	High	0
112	LO	Low	0

	A	B	C
113	LEFT	Left	0
114	RIGHT	Right	0
115	DG	Doesn't Group	0
116	FSST	Front sight tipped	0
117	RSTT	Rear sight tipped	0
118	RSBR	Rear sight base raised	0
119	FSTR	Front sight raised	0
120	FSTL	Front sight loose	0
121	RSTL	Rear sight loose	0
122	MGPT-G	Missing parts at target	0
123	UNCN-G	Uncoded nonconformity at target	0
124			0
125	AI-P	Assembly incomplete at proof	0
126	BBB	Barrel bracket cracked or broken at proof	0
127	BC-P	Blows cases at proof	0
128	BEB-P	Barrel extension broken at proof	0
129	BLP-P	Blanked primer at proof	0
130	BLSO-P	Barrel lug shot off at proof	0
131	BP-P	Blown primer at proof	0
132	BS-P	Barrel split at proof	0
133	DBF-P	Damaged Bolt Face	0
134	DLOS-P	Doesn't lock over shells at proof	0
135	ESBBP-P	Ejector sticks back - Blown Primer cup	0
136	ESBEC-P	Ejector sticks back - Ejector Crescent	0
137	FCB-P	Fore-end cracked at proof	0
138	FESO-P	Fore-end shot off at proof	0
139	FF-P	Fails to fire at proof	0
140	GCSO-P	Gas cylinder shot off at proof	0
141	MSI-P	Magnaflux stamp illegible on bbl	0
142	MSM-P	Magnaflux stamp missing on bbl	0
143	PP-P	Pierced primer at proof	0
144	SCB-P	Stock cracked or broken at proof	0

# Centerfire

	A	B	D	E	F	G	H	I	J	P	Q
1	<b>Summary</b>	<b>Total Tested</b>	<b>12912</b>								
2		<b>Total Rejected:</b>	<b>678</b>								
3		<b>Overall Reject Rate:</b>	<b>5.25</b>								<b>Grand totals</b>
5		<b>Shot:</b>	5578	1059	3441	1538	913	180	80		12789
6		<b>Rejected:</b>	26	4	27	16	10	0	6	0	89
7		<b>Percent:</b>	0.5	0.4	0.8	1.0	1.1	0.0	7.5		0.7
9		<b>Shot:</b>	5788	978	3485	1524	810	204	75	48	12812
10		<b>Rejected:</b>	262	65	141	67	47	2	2	2	588
11		<b>Percent:</b>	4.5	6.6	4.0	4.4	5.8	1.0	2.7	4.2	4.6
13		<b>Shot:</b>	550	93	324	149	75	144	6		1341
14		<b>Rejected:</b>	0	0	0	0	0	1	0	0	1
15		<b>Percent:</b>	0.0	0.0	0.0	0.0	0.0	0.7	0.0		0.1
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>	<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>Rimfire</b>	<b>totals</b>
18											
19	AB	Action binds									
20	BABS	Bulge at body shoulder									
21	BAC	Burr at chamber									
22	BBMA	BBL-to-bolt misalignment			1						1
23	BB	Bolt binds/catches	12	2	18	4	7				43
24	BCOAB	Bolt catches on anti-bind									
25	BCOBS	Bolt catches on bolt stop									
26	BCOF	Bolt catches on follower									
27	BC	Blows cases									
28	BHR	Bolt hits receiver									
29	BHS	Bolt plug hits safety switch									
30	BLOP	Bar lock or disconnecter out of position									
31	BLSO	Barrel lug shot off									
32	BPO	Bolt pulls out									
33	BSSM	Bolt stems shell in magazine									
34	BWCD	Bolt won't cam down									
35	BWCFM	Bolt won't close over full magazine									
36	CD	Case dented									
37	CH	Closes hard	23	9	2	1					35
38	CLM	Can't load magazine		1	2	1	1				5
39	CO	Cut-off									
40	CR	Cuts rim									

# Centerfire

	A	B	D	E	F	G	H	I	J	P	Q
17	CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7	Rimfire	totals
41	CS	Cases swell									
42	CTOG	Chamber torn or gouged									
43	CTP	Creepy trigger pull									
44	CWSB	Cams wrong side of action bar									
45	DBB	Doesn't blow back									
46	DCS	Double click in safety switch									
47	DCT	Double click in trigger									
48	DCU	Doesn't close-up									
49	DE	Doesn't eject	9		4	4	1				18
50	DEL	Doesn't eject live round	3		1						4
51	DFB	Doesn't feed back									
52	DFU	Doesn't feed up									
53	DLO	Doesn't lock open (after last shell)									
54	DLU	Doesn't lock-up								1	1
55	DS	Dead safe	5			11					16
56	DX	Doesn't extract	63	7	19	10	12				111
57	DXL	Doesn't extract live round									
58	EDS	Extractor drops shell	36	6	13	10	3	1			69
59	ESB	Ejector sticks back	4	2		2					8
60	ESCR	Empty shell catches receiver									
61	ESS	Extractor stems shell									
62	FA	Fires automatically									
63	FB	Follower binds									
64	FC	Fails to connect								1	1
65	FCB	Fore-end cracked or broken									
66	FD	Follows-down									
67	FF	Fails to fire				1					1
68	FFP	Flat firing pin									
69	FOS	Fires on safe									
70	FPHB	Firing pin hits bbl									
71	FPHI	Firing pin hits inside rim									
72	FPO	Floor plate opens	35	29	19	10	20				113
73	FPOH	Floor plate opens hard									

# Centerfire

	A	B	D	E	F	G	H	I	J	P	Q
17	CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7	Rimfire	totals
74	FSR	Fires when safe is released									
75	FT	Follower tips									
76	GCSO	Gas cyl shot off									
77	HBL	Heavy bolt lift			2	1					3
78	HMSC	Heading mismatch-steps on case									
79	HPA	High pressure ammo									
80	HUR	Hard under rail	5		3						8
81	JCS	Jumps cartridge									
82	JM	Jumps magazine	5		6	2		1			14
83	JO	Jars off									
84	LB	Light blow									
85	MAH	Magazine assembles hard									
86	MCW	Magazine capacity wrong									
87	MFA	Misfires (ammo)									
88	MFOP	Magazine follower out of position									
89	ML	Magazine loose	2								2
90	MLH	Magazine loads hard									
91	MRH	Magazine removes hard	2		3						5
92	OH	Opens hard	9	1	16	5	2				33
93	OR	Over-rides	12	2	14		1				29
94	PH	Pulls hard			1						1
95	PSI	Proof stamp illegible									
96	PSM	Proof stamp missing									
97	RBOC	Rings and bulges on case									
98	RDW	(Action) release doesn't work									
99	RIC	Rings in chamber	1								1
100	RIS	Ring in sholder									
101	RS	Rim srem									
102	SBC	Stems bottom chambers	3		8	3			1		15
103	SBE	Stems bbl extension									
104	SCB	Stock cracked or broken									
105	SCX	Shell catches									
106	SHI	Short indent									


# Centerfire

	A	B	D	E	F	G	H	I	J	P	Q
17	CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7	Rimfire	totals
107	SI	Stems incline	17	5	6	1			1		30
108	SIC	Stems in chamber	12								12
109	SL	shaves lead									
110	SLC	Stems left side of chamber									
111	SMOC	Stretch marks on case									
112	SOR	Stem over-ride	3	1	1						5
113	SP	Stems port									
114	SR	Shoulder rough									
115	SRC	Stems right side of chamber									
116	SRIC	Specific rings in chamber									
117	SSOC	Surface scratches on case									
118	STC	Stems top chamber									
119	SWE	Safety switch works too easily									
120	SWH	Safety switch works too hard									
121	SWW	Safety Switch won't work									
122	TD	Tips down									
123	TU	Tips up									
124	TWP	Trigger won't pull									
125	TWR	Trigger won't retract									
126	UNCN-T	Uncoded			1						1
127	XH	Extracts hard	1		1	1					3
128											
129	HI	High									
130	LO	Low									
131	LEFT	Left									
132	RIGHT	Right									
133	DG	Doesn't Group						1			1
134	FSST	Front sight tipped									
135	RSTT	Rear sight tipped									
136	RSBR	Rear sight base raised									
137	FSTR	Front sight raised									
138	FSTL	Front sight loose									
139	RSTL	Rear sight loose									

# Centerfire

	A	B	D	E	F	G	H	I	J	P	Q
17	CODE	MALFUNCTION INDEX	700 SPS	700 SPS SS	700 BDL & ADL	700 SS	700 CDL	700 POLICE	MODEL 7	Rimfire	totals
140	MGPT-G	Missing parts at target									
141	UNCN-G	Uncoded nonconformity at target									
142											
143	AI-P	Assembly incomplete at proof									
144	BBB	Barrel bracket cracked or broken at proof									
145	BC-P	Blows cases at proof									
146	BEB-P	Barrel extension broken at proof									
147	BLP-P	Blanked primer at proof									
148	BLSO-P	Barrel lug shot off at proof									
149	BP-P	Blown primer at proof									
150	BS-P	Barrel split at proof									
151	DBF-P	Damaged Bolt Face	7								7
152	DLOS-P	Doesn't lock over shells at proof									
153	ESBBP-P	Ejector sticks back -Blown Primer cup									
154	ESBEC-P	Ejector sticks back - Ejector Cresent									
155	FCB-P	Fore-end cracked at proof									
156	FESO-P	Fore-end shot off at proof									
157	FF-P	Fails to fire at proof	1		1						2
158	GCSO-P	Gas cylinder shot off at proof									
159	MSI-P	Magnaflux stamp illegible on bbl									
160	MSM-P	Magnaflux stamp missing on bbl									
161	PP-P	Pierced primer at proof									
162	SCB-P	Stock cracked or broken at proof									
163	UNCM-P	Uncoded proof malfunctions	18	4	26	16	10		6		80



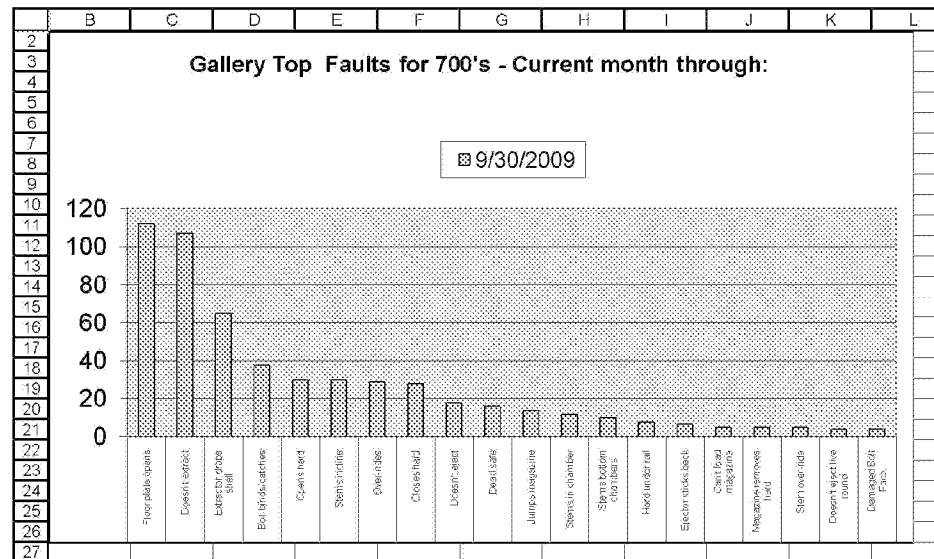

	A	B	C
1	FPO	Floor plate opens	112
2	DX	Doesn't extract	107
3	EDS	Extractor drops shell	65
4	BB	Bolt binds/catches	38
5	OH	Opens hard	30
6	SI	Stems incline	30
7	OR	Over-rides	29
8	CH	Closes hard	28
9	DE	Doesn't eject	18
10	DS	Dead safe	16
11	JM	Jumps magazine	14
12	SIC	Stems in chamber	12
13	SBC	Stems bottom chambers	10
14	HUR	Hard under rail	8
15	ESB	Ejector sticks back	7
16	CLM	Can't load magazine	5
17	MRH	Magazine removes hard	5
18	SOR	Stem over-ride	5
19	DEL	Doesn't eject live round	4
20	DBF-P	Damaged Bolt Face	4
21	HBL	Heavy bolt lift	3
22	ML	Magazine loose	2
23	XH	Extracts hard	2
24	FF-P	Fails to fire at proof	2
25	BBMA	BBL-to-bolt misalignment	1
26	FF	Fails to fire	1
27	PH	Pulls hard	1
28	RIC	Rings in chamber	1
29	UNCN-T	Uncoded	1
30	DG	Doesn't Group	1
31	AB	Action binds	0
32	BABS	Bulge at body shoulder	0
33	BAC	Burr at chamber	0
34	BCOBS	Bolt catches on bolt stop	0
35	BCOF	Bolt catches on follower	0
36	BC	Blows cases	0
37	BHR	Bolt hits receiver	0
38	BHS	Bolt plug hits safety switch	0
39	BLOP	Bar lock or disconnecter out of position	0
40	BLSO	Barrel lug shot off	0
41	BPO	Bolt pulls out	0
42	BSSM	Bolt stems shell in magazine	0
43	BWCD	Bolt won't cam down	0
44	BWCFM	Bolt won't close over full magazine	0
45	CD	Case dented	0
46	CO	Cut-off	0
47	CR	Cuts rim	0
48	CS	Cases swell	0
49	CTOG	Chamber torn or gouged	0
50	CTP	Creepy trigger pull	0
51	CWSB	Cams wrong side of action bar	0
52	DBB	Doesn't blow back	0
53	DCS	Double click in safety switch	0
54	DCT	Double click in trigger	0
55	DCU	Doesn't close-up	0
56	DFB	Doesn't feed back	0

	A	B	C
57	DFU	Doesn't feed up	0
58	DLO	Doesn't lock open (after last shell)	0
59	DLU	Doesn't lock-up	0
60	DXL	Doesn't extract live round	0
61	ESCR	Empty shell catches receiver	0
62	ESS	Extractor stems shell	0
63	FA	Fires automatically	0
64	FB	Follower binds	0
65	FC	Fails to connect	0
66	FCB	Fore-end cracked or broken	0
67	FD	Follows-down	0
68	FFP	Flat firing pin	0
69	FOS	Fires on safe	0
70	FPHB	Firing pin hits bbl	0
71	FPHI	Firing pin hits inside rim	0
72	FPOH	Floor plate opens hard	0
73	FSR	Fires when safe is released	0
74	FT	Follower tips	0
75	GCSO	Gas cyl shot off	0
76	HMSC	Heading mismatch-steps on case	0
77	HPA	High pressure ammo	0
78	JCS	Jumps cartridge	0
79	JO	Jars off	0
80	LB	Light blow	0
81	MAH	Magazine assembles hard	0
82	MCW	Magazine capacity wrong	0
83	MFA	Misfires (ammo)	0
84	MFOP	Magazine follower out of position	0
85	MLH	Magazine loads hard	0
86	PSI	Proof stamp illegible	0
87	PSM	Proof stamp missing	0
88	RBOC	Rings and bulges on case	0
89	RDW	(Action) release doesn't work	0
90	RIS	Ring in sholder	0
91	RS	Rim srem	0
92	SBE	Stems bbl extension	0
93	SCB	Stock cracked or broken	0
94	SCX	Shell catches	0
95	SHI	Short indent	0
96	SL	shaves lead	0
97	SLC	Stems left side of chamber	0
98	SMOC	Stretch marks on case	0
99	SP	Stems port	0
100	SR	Shoulder rough	0
101	SRC	Stems right side of chamber	0
102	SRIC	Specific rings in chamber	0
103	SSOC	Surface scratches on case	0
104	STC	Stems top chamber	0
105	SWE	Safety switch works too easily	0
106	SWH	Safety switch works too hard	0
107	SWW	Safety Switch won't work	0
108	TD	Tips down	0
109	TU	Tips up	0
110	TWP	Trigger won't pull	0
111	TWR	Trigger won't retract	0
112			0

	A	B	C
113	HI	High	0
114	LO	Low	0
115	LEFT	Left	0
116	RIGHT	Right	0
117	FSST	Front sight tipped	0
118	RSTT	Rear sight tipped	0
119	RGBR	Rear sight base raised	0
120	FSTR	Front sight raised	0
121	FSTL	Front sight loose	0
122	RSTL	Rear sight loose	0
123	MGPT-G	Missing parts at target	0
124	UNCN-G	Uncoded nonconformity at target	0
125			0
126	AI-P	Assembly incomplete at proof	0
127	BBB	Barrel bracket cracked or broken at proof	0
128	BC-P	Blows cases at proof	0
129	BEB-P	Barrel extension broken at proof	0
130	BLP-P	Blanked primer at proof	0
131	BLSO-P	Barrel lug shot off at proof	0
132	BP-P	Blown primer at proof	0
133	BS-P	Barrel split at proof	0
134	DLOS-P	Doesn't lock over shells at proof	0
135	ESBBP-P	Ejector sticks back - Blown Primer cup	0
136	ESBEC-P	Ejector sticks back - Ejector Crescent	0
137	FCB-P	Fore-end cracked at proof	0
138	FESO-P	Fore-end shot off at proof	0
139	GCSO-P	Gas cylinder shot off at proof	0
140	MSLP	Magnafix stamp illegible on bbl	0
141	MSM-P	Magnafix stamp missing on bbl	0
142	PP-P	Pierced primer at proof	0
143	SCB-P	Stock cracked or broken at proof	0
144	BCOAB	Bolt catches on anti-bind	
145	BCOAB	Bolt catches on anti-bind	
146			
147			
148			
149			
150	9/30/2009		

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>544</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>54</b>													
3		<b>Overall Reject Rate:</b>		<b>9.93</b>													<i>totals</i>
5		Shot:		176	55	225	37	89									532
6		Rejected:		0	0	0	1	4	0	0	0	0	0	0	0	0	5
7		Percent:		0.0	0.0	0.0	2.7	4.5									8.9
9		Shot:		176	55	223	6	84									544
10		Rejected:		6	15	10	0	18	0	0	0	0	0	0	0	0	49
11		Percent:		3.4	27.3	4.5	0.0	21.4									9.2
13		Shot:		18	5	21	6	6									48
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0	0.0									0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches				1		3									4
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard		3													3
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		1	1	1		6									\$
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		1	1	1		3									\$
59	ESB	Ejector sticks back			1												\$
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens			7	5		6									1\$
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard		1													1
92	OH	Opens hard				1											1
93	OR	Over-rides				1											1
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline			5												5
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions					1	4									5



**Cell:** G163

**Comment:** illegal:  
broken trigger

**Cell:** H163

**Comment:** illegal:  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>728</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>47</b>													
3		<b>Overall Reject Rate:</b>		<b>6.46</b>													<i>totals</i>
5		Shot:		244	86	371	8	20	1								738
6		Rejected:		0	0	2	0	0	0	0	0	0	0	0	0	0	2
7		Percent:		0.0	0.0	0.5	0.0	0.0	0.0								0.3
9		Shot:		244	86	369	8	20	1								738
10		Rejected:		15	9	21	0	0	0	0	0	0	0	0	0	0	45
11		Percent:		6.1	10.5	5.7	0.0	0.0	0.0								6.2
13		Shot:		24	8	38	1	2	1								74
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	8
15		Percent:		0.0	0.0	0.0	0.0	0.0	0.0								0.6
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches				2											2
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard		8		1											9
38	CLM	Can't load magazine				1											1
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cam wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		1		2											3
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		1		1											2
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens		1	9	1											11
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift				1											1
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail				1											1
81	JCS	Jumps cartridge															
82	JM	Jumps magazine		1		2											3
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides		3		8											11
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline				1											1
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions				2											2

Cell: F163

Comment: illegal:  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>591</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>38</b>													
3		<b>Overall Reject Rate:</b>		<b>6.43</b>													<i>totals</i>
5		Shot:		489	11	62		7									569
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:		0.0	0.0	0.0		0.0									0.0
9		Shot:		489	11	62		7								22	591
10		Rejected:		37	0	1	0	0	0	0	0	0	0	0	0	0	38
11		Percent:		7.6	0.0	1.6		0.0							0.0		6.4
13		Shot:		47	1	4		1									53
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0		0.0									0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		2													2
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		4													4
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		1		1											2
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens		30													30
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>766</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>43</b>													
3		<b>Overall Reject Rate:</b>		<b>5.61</b>													<i>totals</i>
5		Shot:		272	79	213	96	94									754
6		Rejected:		0	0	0	0	3	0	0	0	0	0	0	0	0	3
7		Percent:		0.0	0.0	0.0	0.0	3.2									0.4
9		Shot:		273	79	212	95	107									786
10		Rejected:		8	1	7	11	13	0	0	0	0	0	0	0	0	40
11		Percent:		2.9	1.3	3.3	11.6	12.1									5.2
13		Shot:		27	8	19	9	9									72
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0	0.0									0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment			1												1
23	BB	Bolt binds/catches				3											3
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject					1	1									2
50	DEL	Doesn't eject live round				1											1
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe		3													3
56	DX	Doesn't extract		2		1	1										4
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		1													1
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens			1	1	2	12									16
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail				1											1
81	JCS	Jumps cartridge															
82	JM	Jumps magazine					1										1
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard		2		2	2										ti
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers					1										1
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions						3									3

Cell: H163

Comment: illegal:  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested:</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>806</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>22</b>													
3		<b>Overall Reject Rate:</b>		<b>2.73</b>													<i>totals</i>
5		Shot:		298	22	199	70	78									667
6		Rejected:		5	0	0	0	0	0	0	0	0	0	0	0	0	5
7		Percent:		1.7	0.0	0.0	0.0	0.0									0.7
9		Shot:		415	22	193	92	84									806
10		Rejected:		3	0	9	4	1	0	0	0	0	0	0	0	0	17
11		Percent:		0.7	0.0	4.7	4.3	1.2									2.1
13		Shot:		42	3	20	9	8									82
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0	0.0									0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches						1									1
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		1		1											2
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back					1										3
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire					1										4
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens		1		5											5
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine		1		1											2
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard				1	1										2
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline				1											1
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard					1										1
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		2													2
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof		1													1
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions		2													2

Cell: D163

Comment: illegal:  
broken trigger



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>670</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>54</b>													
3		<b>Overall Reject Rate:</b>		<b>8.06</b>													<i>totals</i>
5		Shot:		367		247	104	36									734
6		Rejected:		2	0	0	2	0	0	0	0	0	0	0	0	0	8
7		Percent:		0.5		0.0	1.9	0.0									8.5
9		Shot:		284		246	104	36									870
10		Rejected:		32	0	9	6	3	0	0	0	0	0	0	0	0	80
11		Percent:		11.3		3.7	5.8	8.3									7.8
13		Shot:		23		26	8	3									60
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0		0.0	0.0	0.0									0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		1		1	1	1									4
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe		2			1										3
56	DX	Doesn't extract		9		1		1									11
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		6													8
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens				5	3										8
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift					1										1
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard				1		1									2
93	OR	Over-rides				1											1
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline		1													1
108	SIC	Stems in chamber		11													11
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride		1													1
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard		1													1
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions		2			2										\$

**Cell:** D163

**Comment:** ilngalry:  
broken trigger

**Cell:** G163

**Comment:** ilngalry:  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>796</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>63</b>													
3		<b>Overall Reject Rate:</b>		<b>7.91</b>													<i>totals</i>
5		Shot:		223	133	98	135		60								649
6		Rejected:		0	0	0	1	0	0	0	0	0	0	0	0	0	1
7		Percent:		0.0	0.0	0.0	0.7	0.0	0.0								0.2
9		Shot:		358	136	104	136	2	60								796
10		Rejected:		43	6	5	7	0	0	0	0	0	0	0	0	0	81
11		Percent:		12.0	4.4	4.8	5.1	0.0	0.0								7.7
13		Shot:		37	14	11	15		60								137
14		Rejected:		0	0	0	0	0	1	0	0	0	0	0	0	0	1
15		Percent:		0.0	0.0	0.0	0.0		1.7								0.7
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		2	1												3
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard				1											1
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject		8			1										8
50	DEL	Doesn't eject live round		2													2
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		9													9
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		11		1	1										13
59	ESB	Ejector sticks back					1										1
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens			5		4										8
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine		1													1
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose		1													1

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard		2		2											4
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline		7		1											8
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group							1								1
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions					1										1

Cell: G163

Comment: illegal:  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>708</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>17</b>													
3		<b>Overall Reject Rate:</b>		<b>2.40</b>													<i>totals</i>
5		Shot:		230	83	147	119	18									587
6		Rejected:		0	0	0	1	0	0	0	0	0	0	0	0	0	1
7		Percent:		0.0	0.0	0.0	0.8	0.0									0.2
9		Shot:		276	119	184	108	21									708
10		Rejected:		6	5	2	3	0	0	0	0	0	0	0	0	0	16
11		Percent:		2.2	4.2	1.1	2.8	0.0									2.3
13		Shot:		28	12	18	12	3									73
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0	0.0									0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches			1	1											2
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard			3												3
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		4	1	1	1										γ
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		2			2										4
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions					1										1

Cell: G163

Comment: illegal:  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>280</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>28</b>													
3		<b>Overall Reject Rate:</b>		<b>10.00</b>													<i>totals</i>
5		Shot:		50	113	235			50								445
6		Rejected:		4	0	8	0	0	0	0	0	0	0	0	0	0	12
7		Percent:		8.0	0.0	3.4			0.0								2.7
9		Shot:		33		191	3	3	50								280
10		Rejected:		3	3	10	0	0	0	0	0	0	0	0	0	0	16
11		Percent:		9.1		5.2	0.0	0.0	0.0								5.7
13		Shot:		3		17			26								46
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	8
15		Percent:		0.0		0.0			0.0								8.6
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches				1											1
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard		1													1
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract			1	3											4
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		1		2											3
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens			2												2
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose		1													1

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard				2											2
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers				1											1
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride				1											1
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions		4		8											12

**Cell:** D163

**Comment:** illegal:  
broken trigger

**Cell:** F163

**Comment:** illegal:  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>614</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>38</b>													
3		<b>Overall Reject Rate:</b>		<b>6.19</b>													<i>totals</i>
5		Shot:		290	2	288		12	31								623
6		Rejected:		4	0	10	0	0	0	0	0	0	0	0	0	0	14
7		Percent:		1.4	0.0	3.5		0.0	0.0								2.2
9		Shot:		289	2	282		10	31								314
10		Rejected:		11	0	13	0	0	0	0	0	0	0	0	0	0	24
11		Percent:		3.8	0.0	4.6		0.0	0.0								3.9
13		Shot:		30		27			17								74
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0		0.0			0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		3		3											8
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard		1													1
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cam wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject		1		4											5
50	DEL	Doesn't eject live round		1													1
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		1		1											2
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPHB	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens		2		2											4
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift				1											1
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail		1													1
81	JCS	Jumps cartridge															
82	JM	Jumps magazine				1											1
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard				1											1
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline		1													1
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof				1											1
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions		4		9											13



**Cell:** D163

**Comment:** illegal:  
broken trigger

**Cell:** F163

**Comment:** illegal:  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>661</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>21</b>													
3		<b>Overall Reject Rate:</b>		<b>3.18</b>													<i>totals</i>
5		Shot:		151	121	247	53	67		10							649
6		Rejected:		0	0	1	0	0	0	1	0	0	0	0	0	0	2
7		Percent:		0.0	0.0	0.4	0.0	0.0		10.0							0.3
9		Shot:		164	121	247	52	67		10							649
10		Rejected:		1	3	10	3	1	0	1	0	0	0	0	0	0	19
11		Percent:		0.6	2.5	4.0	5.8	1.5		10.0							2.9
13		Shot:		18	12	24	5	6		2							63
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0	0.0		0.0							0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard					1										1
38	CLM	Can't load magazine			1												1
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract				1		1									2
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell					2										2
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens			1												1
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard		1		1											2
93	OR	Over-rides				2											2
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers				2											2
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline				3				1							4
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride			1												1
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded				1											1
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions				1				1							2

**Cell:** F126

**Comment:** illegal;  
no follower

**Cell:** J163

**Comment:** illegal;  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>651</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>21</b>													
3		<b>Overall Reject Rate:</b>		<b>3.23</b>													<i>totals</i>
5		Shot:		161	118	200	88	51		26							644
6		Rejected:		0	0	3	0	0	0	5	0	0	0	0	0	0	8
7		Percent:		0.0	0.0	1.5	0.0	0.0		19.2							1.2
9		Shot:		202	92	197	88	51		21							851
10		Rejected:		4	3	5	0	0	0	1	0	0	0	0	0	0	13
11		Percent:		2.0	3.3	2.5	0.0	0.0		4.8							2.2
13		Shot:		13	9	16	8	6		2							58
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0	0.0		0.0							0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches				1											1
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		1	1	1											3
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		1													1
59	ESB	Ejector sticks back		1													1
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens			2												2
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine		1													1
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides				2											2
94	PH	Pulls hard				1											1
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers								1							1
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions				3				5							8

**Cell:** F163

**Comment:** illegal:  
broken trigger

**Cell:** J163

**Comment:** illegal:  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>342</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>27</b>													
3		<b>Overall Reject Rate:</b>		<b>7.89</b>													<i>totals</i>
5		Shot:		85	41	97	69	58	1								351
6		Rejected:		1	0	3	3	2	0	0	0	0	0	0	0	0	2
7		Percent:		1.2	0.0	3.1	4.3	3.4	0.0								2.6
9		Shot:		84	41	94	66	56	1								342
10		Rejected:		5	3	4	5	1	0	0	0	0	0	0	0	0	18
11		Percent:		6.0	7.3	4.3	7.6	1.8	0.0								5.3
13		Shot:		8	3	10	7	6	1								35
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	8
15		Percent:		0.0	0.0	0.0	0.0	0.0	0.0								8.6
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches				1		1									2
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard		1													1
38	CLM	Can't load magazine					1										1
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cam wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject					2										2
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		1	3	1	2										7
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard		1		1											2
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers				1											1
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline		1													1
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride		1													1
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions		1		3	3	2									3

**Cell:** A9  
**Comment:** ilngalry:

**Cell:** F163  
**Comment:** ilngalry:

**Cell:** G163  
**Comment:** ilngalry:  
broken trigger

**Cell:** H163  
**Comment:** ilngalry:  
broken trigger



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>736</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>32</b>													
3		<b>Overall Reject Rate:</b>		<b>4.35</b>													<i>totals</i>
5		Shot:		461	14	26	51		18								579
6		Rejected:		4	0	0	0	0	0	0	0	0	0	0	0	0	4
7		Percent:		0.9	0.0	0.0	0.0		0.0								0.7
9		Shot:		562	41	34	80	1	18								736
10		Rejected:		13	7	3	4	0	1	0	0	0	0	0	0	0	28
11		Percent:		2.3	17.1	8.8	5.0	0.0	5.6								3.8
13		Shot:		55	3	4	8										70
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0										0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard			6												6
38	CLM	Can't load magazine				1											1
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		5			1										6
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		1					1								2
59	ESB	Ejector sticks back		2													2
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens			1												1
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine					1										1
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard				2	2										4
93	OR	Over-rides		3													3
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber		1													1
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers		1													1
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		1													1
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions		3													3

Cell: D163

Comment: illegal:  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>598</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>25</b>													
3		<b>Overall Reject Rate:</b>		<b>4.18</b>													<i>totals</i>
5		Shot:		324	44	71	47	76									562
6		Rejected:		2	0	0	1	0	0	0	0	0	0	0	0	0	3
7		Percent:		0.6	0.0	0.0	2.1	0.0									0.5
9		Shot:		333	46	74	50	77	18								598
10		Rejected:		7	9	0	3	2	1	0	0	0	0	0	0	0	22
11		Percent:		2.1	19.6	0.0	6.0	2.6	5.6								3.7
13		Shot:		35	4	8	5	8	17								77
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0	0.0	0.0	0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches						1									1
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard		1													1
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		3	3		2										8
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		1	2												3
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens			1		1										2
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine							1								1
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard			1												1
93	OR	Over-rides			2			1									3
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline		1													1
108	SIC	Stems in chamber		1													1
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		1													1
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions		1			1										2

**Cell:** D163

**Comment:** ilngalry:  
follow down at proof

**Cell:** G163

**Comment:** ilngalry:  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>635</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>28</b>													
3		<b>Overall Reject Rate:</b>		<b>4.41</b>													<i>totals</i>
5		Shot:		268		88	260										846
6		Rejected:		0	0	0	7	0	0	0	0	0	0	0	0	0	7
7		Percent:		0.0		0.0	2.7										1.1
9		Shot:		272		92	271										835
10		Rejected:		15	0	0	6	0	0	0	0	0	0	0	0	0	21
11		Percent:		5.5		0.0	2.2										3.3
13		Shot:		26		9	29										64
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0		0.0	0.0										0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		7			4										11
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		2			1										3
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine		1													1
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard		1													1
92	OH	Opens hard		1													1
93	OR	Over-rides		1													1
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers		1													1
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline		1			1										2
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions					7										7

Cell: G163

Comment: illegal:  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>676</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>24</b>													
3		<b>Overall Reject Rate:</b>		<b>3.55</b>													<i>totals</i>
5		Shot:		337	14	86	202	38									677
6		Rejected:		0	0	0	0	1	0	0	0	0	0	0	0	0	1
7		Percent:		0.0	0.0	0.0	0.0	2.6									0.1
9		Shot:		337	14	86	202	37									676
10		Rejected:		5	1	1	11	5	0	0	0	0	0	0	0	0	23
11		Percent:		1.5	7.1	1.2	5.4	13.5									3.4
13		Shot:		33		9	19	3									64
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0		0.0	0.0	0.0									0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cam wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe					10										10
56	DX	Doesn't extract		3				4									7
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		1			1										2
59	ESB	Ejector sticks back			1												1
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail				1											1
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard						1									1
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers		1													1
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions						1									1

Cell: H163

Comment: illegal:  
broken trigger

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>564</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>21</b>													
3		<b>Overall Reject Rate:</b>		<b>3.72</b>													<i>totals</i>
5		Shot:		383	53	186											622
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:		0.0	0.0	0.0											0.0
9		Shot:		243	53	238	14	10	6								564
10		Rejected:		14	0	7	0	0	0	0	0	0	0	0	0	0	21
11		Percent:		5.8	0.0	2.9	0.0	0.0	0.0								3.7
13		Shot:		9	6	8			6								28
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0	0.0	0.0			0.0								0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		1													1
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		9		6											15
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell		4													4
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers				1											1
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>470</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>19</b>													
3		<b>Overall Reject Rate:</b>		<b>4.04</b>													<i>totals</i>
5		Shot:		283		57	42	11	18	36							445
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:		0.0		0.0	0.0	0.0	0.0	0.0							0.0
9		Shot:		282		57	42	11	16	36						26	470
10		Rejected:		14	0	2	0	1	0	0	0	0	0	0	0	2	19
11		Percent:		5.0		3.5	0.0	9.1	0.0	0.0					7.7		4.0
13		Shot:		23		5	4		16	2							50
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0		0.0	0.0		0.0	0.0							0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine						1									1
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up														1	1
55	DS	Dead safe															
56	DX	Doesn't extract		1													1
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell				1											1
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect														1	1
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail		4													4
81	JCS	Jumps cartridge															
82	JM	Jumps magazine				1											1
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides		3													3
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline		5													5
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride		1													1
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>494</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>17</b>													
3		<b>Overall Reject Rate:</b>		<b>3.44</b>													<i>totals</i>
5		Shot:		242		103		246	3	4							538
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:		0.0		0.0		0.0	0.0	0.0							0.0
9		Shot:		258		115		114	3	4							434
10		Rejected:		5	0	10	0	2	0	0	0	0	0	0	0	0	17
11		Percent:		1.9		8.7		1.8	0.0	0.0							3.4
13		Shot:		27		12		12									51
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:		0.0		0.0		0.0									0.0
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		1		4											5
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard		1													1
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		1													1
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell				1											1
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens						2									2
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine				1											1
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard				3											3
92	OH	Opens hard				1											1
93	OR	Over-rides		2													2
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		<b>582</b>								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		<b>39</b>													
3		<b>Overall Reject Rate:</b>		<b>6.70</b>													<i>totals</i>
5		Shot:		244	70	195	157	12		4							682
6		Rejected:		4	4	0	0	0	0	0	0	0	0	0	0	0	8
7		Percent:		1.6	5.7	0.0	0.0	0.0		0.0							1.2
9		Shot:		214	60	185	107	12		4							582
10		Rejected:		15	0	12	4	0	0	0	0	0	0	0	0	0	31
11		Percent:		7.0	0.0	6.5	3.7	0.0		0.0							5.3
13		Shot:		23	5	18	10	2									58
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	8
15		Percent:		0.0	0.0	0.0	0.0	0.0									8.6
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches		2		3											5
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard		7													7
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract		2		1	1										4
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell				3	1										4
59	ESB	Ejector sticks back		1													1
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens		1													1
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard		2		1											3
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers				3	2										3
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard				1											1
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															

	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face		3													3
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions		1	4												5

Cell: E163

Comment: illegal:  
broken trigger


	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
1	<b>Summary</b>	<b>Total Tested</b>		0								<b>Test Date:</b>					
2		<b>Total Rejected:</b>		0													
3		<b>Overall Reject Rate:</b>															<i>totals</i>
5		Shot:															
6		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
7		Percent:															
9		Shot:															
10		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
11		Percent:															
13		Shot:															
14		Rejected:		0	0	0	0	0	0	0	0	0	0	0	0	0	0
15		Percent:															
17	<b>CODE</b>	<b>MALFUNCTION INDEX</b>		<b>700 SPS</b>	<b>700 SPS SS</b>	<b>700 BDL &amp; ADL</b>	<b>700 SS</b>	<b>700 CDL</b>	<b>700 POLICE</b>	<b>MODEL 7</b>	<b>XR-100</b>	<b>750</b>	<b>7400</b>	<b>7600</b>	<b>7615</b>	<b>Rimfire</b>	<i>totals</i>
18																	
19	AB	Action binds															
20	BABS	Bulge at body shoulder															
21	BAC	Burr at chamber															
22	BBMA	BBL-to-bolt misalignment															
23	BB	Bolt binds/catches															
24	BCOAB	Bolt catches on anti-bind															
25	BCOBS	Bolt catches on bolt stop															
26	BCOF	Bolt catches on follower															
27	BC	Blows cases															
28	BHR	Bolt hits receiver															
29	BHS	Bolt plug hits safety switch															
30	BLOP	Bar lock or disconnecter out of position															
31	BLSO	Barrel lug shot off															
32	BPO	Bolt pulls out															
33	BSSM	Bolt stems shell in magazine															
34	BWCD	Bolt won't cam down															
35	BWCFM	Bolt won't close over full magazine															
36	CD	Case dented															
37	CH	Closes hard															
38	CLM	Can't load magazine															
39	CO	Cut-off															
40	CR	Cuts rim															
41	CS	Cases swell															
42	CTOG	Chamber torn or gouged															
43	CTP	Creepy trigger pull															
44	CWSB	Cams wrong side of action bar															
45	DBB	Doesn't blow back															
46	DCS	Double click in safety switch															
47	DCT	Double click in trigger															


	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
48	DCU	Doesn't close-up															
49	DE	Doesn't eject															
50	DEL	Doesn't eject live round															
51	DFB	Doesn't feed back															
52	DFU	Doesn't feed up															
53	DLO	Doesn't lock open (after last shell)															
54	DLU	Doesn't lock-up															
55	DS	Dead safe															
56	DX	Doesn't extract															
57	DXL	Doesn't extract live round															
58	EDS	Extractor drops shell															
59	ESB	Ejector sticks back															
60	ESCR	Empty shell catches receiver															
61	ESS	Extractor stems shell															
62	FA	Fires automatically															
63	FB	Follower binds															
64	FC	Fails to connect															
65	FCB	Fore-end cracked or broken															
66	FD	Follows-down															
67	FF	Fails to fire															
68	FFP	Flat firing pin															
69	FOS	Fires on safe															
70	FPH-B	Firing pin hits bbl															
71	FPHI	Firing pin hits inside rim															
72	FPO	Floor plate opens															
73	FPOH	Floor plate opens hard															
74	FSR	Fires when safe is released															
75	FT	Follower tips															
76	GCSO	Gas cyl shot off															
77	HBL	Heavy bolt lift															
78	HMSC	Heading mismatch-steps on case															
79	HPA	High pressure ammo															
80	HUR	Hard under rail															
81	JCS	Jumps cartridge															
82	JM	Jumps magazine															
83	JO	Jars off															
84	LB	Light blow															
85	MAH	Magazine assembles hard															
86	MCW	Magazine capacity wrong															
87	MFA	Misfires (ammo)															
88	MFOP	Magazine follower out of position															
89	ML	Magazine loose															


	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
90	MLH	Magazine loads hard															
91	MRH	Magazine removes hard															
92	OH	Opens hard															
93	OR	Over-rides															
94	PH	Pulls hard															
95	PSI	Proof stamp illegible															
96	PSM	Proof stamp missing															
97	RBOC	Rings and bulges on case															
98	RDW	(Action) release doesn't work															
99	RIC	Rings in chamber															
100	RIS	Ring in sholder															
101	RS	Rim srem															
102	SBC	Stems bottom chambers															
103	SBE	Stems bbl extension															
104	SCB	Stock cracked or broken															
105	SCX	Shell catches															
106	SHI	Short indent															
107	SI	Stems incline															
108	SIC	Stems in chamber															
109	SL	shaves lead															
110	SLC	Stems left side of chamber															
111	SMOC	Stretch marks on case															
112	SOR	Stem over-ride															
113	SF	Stems port															
114	SR	Shoulder rough															
115	SRC	Stems right side of chamber															
116	SRIC	Specific rings in chamber															
117	SSOC	Surface scratches on case															
118	STC	Stems top chamber															
119	SWE	Safety switch works too easily															
120	SWH	Safety switch works too hard															
121	SWW	Safety Switch won't work															
122	TD	Tips down															
123	TU	Tips up															
124	TWP	Trigger won't pull															
125	TWR	Trigger won't retract															
126	UNCN-T	Uncoded															
127	XH	Extracts hard															
128																	
129	HI	High															
130	LO	Low															
131	LEFT	Left															



	A	B	C	D	E	F	G	H	I	J	K	L	M	N	O	P	Q
132	RIGHT	Right															
133	DG	Doesn't Group															
134	FSST	Front sight tipped															
135	RSTT	Rear sight tipped															
136	RSBR	Rear sight base raised															
137	FSTR	Front sight raised															
138	FSTL	Front sight loose															
139	RSTL	Rear sight loose															
140	MGPT-G	Missing parts at target															
141	UNCN-G	Uncoded nonconformity at target															
142																	
143	AI-P	Assembly incomplete at proof															
144	BBB	Barrel bracket cracked or broken at proof															
145	BC-P	Blows cases at proof															
146	BEB-P	Barrel extension broken at proof															
147	BLP-P	Blanked primer at proof															
148	BLSO-P	Barrel lug shot off at proof															
149	BP-P	Blown primer at proof															
150	BS-P	Barrel split at proof															
151	CBF-P	Damaged Bolt Face															
152	DLOS-P	Doesn't lock over shells at proof															
153	ESBBP-P	Ejector sticks back -Blown Primer cup															
154	ESBEC-P	Ejector sticks back - Ejector Crescent															
155	FCB-P	Fore-end cracked at proof															
156	FESO-P	Fore-end shot off at proof															
157	FF-P	Fails to fire at proof															
158	GCSO-P	Gas cylinder shot off at proof															
159	MSI-P	Magnaflux stamp illegible on bbl															
160	MSM-P	Magnaflux stamp missing on bbl															
161	PP-P	Pierced primer at proof															
162	SCB-P	Stock cracked or broken at proof															
163	UNCM-P	Uncoded proof malfunctions															

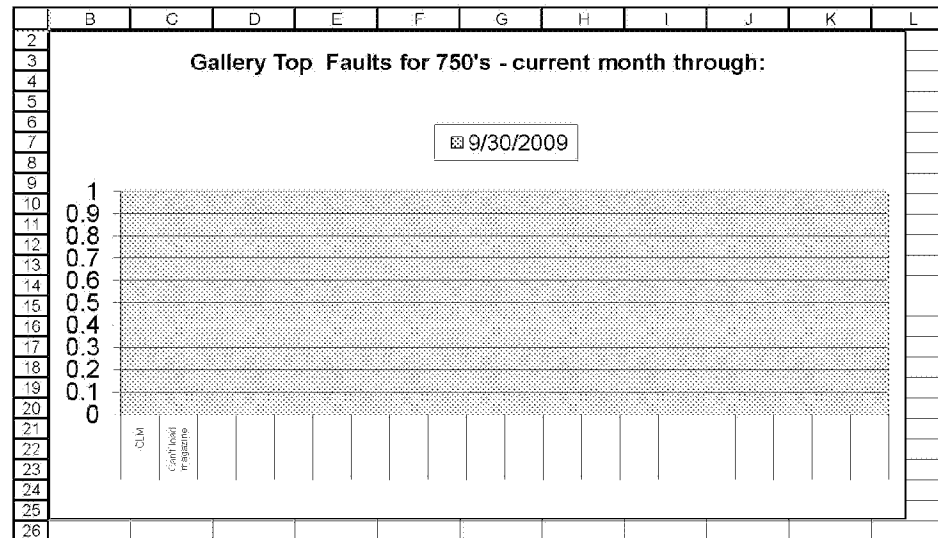

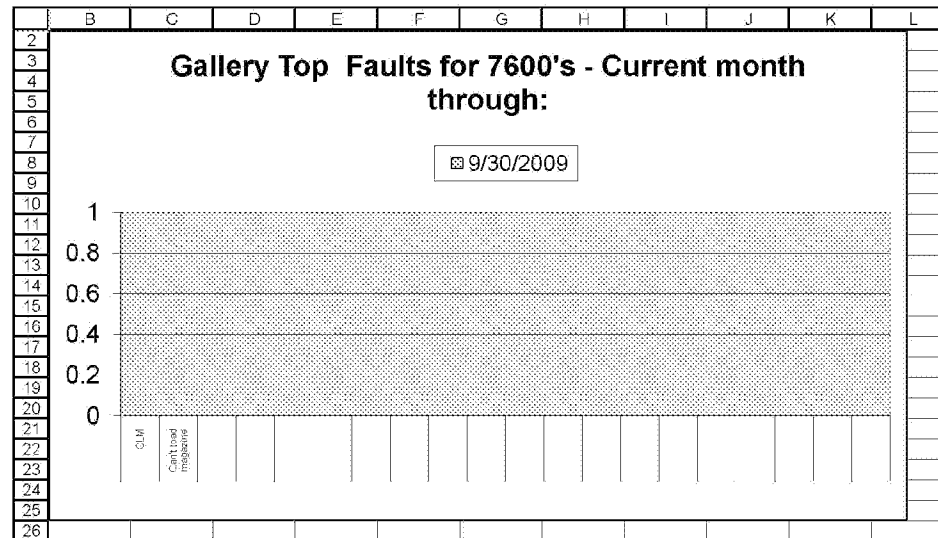

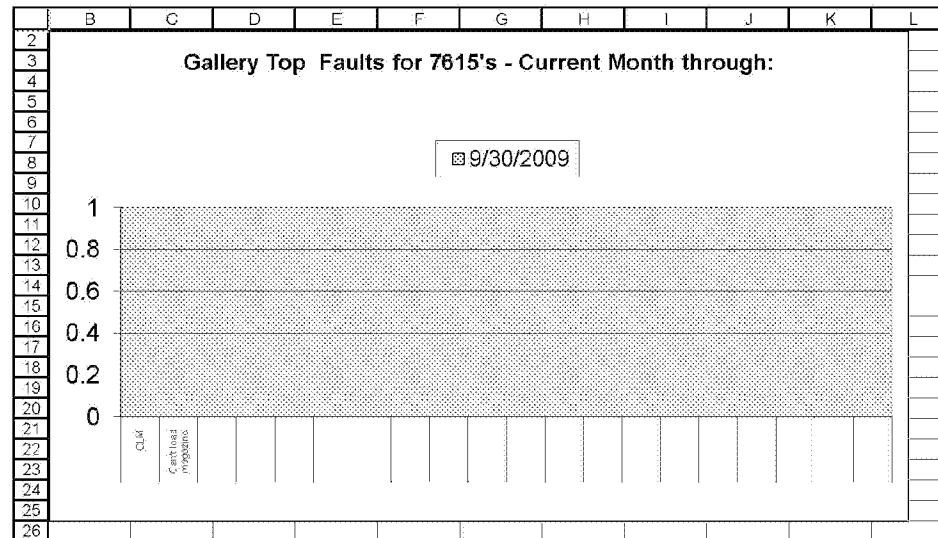

	A	B	C
1	AB	Action binds	0
2	BABS	Bulge at body shoulder	0
3	BAC	Burr at chamber	0
4	BBMA	BBL-to-bolt misalignment	0
5	BB	Bolt binds/catches	0
6	BCOAB	Bolt catches on anti-bind	0
7	BCOBS	Bolt catches on bolt stop	0
8	BCOF	Bolt catches on follower	0
9	BC	Blows cases	0
10	BHR	Bolt hits receiver	0
11	BHS	Bolt plug hits safety switch	0
12	BLOP	Bar lock or disconnecter out of position	0
13	BLSO	Barrel lug shot off	0
14	BPO	Bolt pulls out	0
15	BSSM	Bolt stems shell in magazine	0
16	BWCD	Bolt won't cam down	0
17	BWCFM	Bolt won't close over full magazine	0
18	CD	Case dented	0
19	CH	Closes hard	0
20	CLM	Can't load magazine	0
21	CO	Cut-off	0
22	CR	Cuts rim	0
23	CS	Cases swell	0
24	CTOG	Chamber torn or gouged	0
25	CTP	Creepy trigger pull	0
26	CWSB	Cams wrong side of action bar	0
27	DBB	Doesn't blow back	0
28	DCS	Double click in safety switch	0
29	DCT	Double click in trigger	0
30	DCU	Doesn't close-up	0
31	DE	Doesn't eject	0
32	DEL	Doesn't eject live round	0
33	DFB	Doesn't feed back	0
34	DFU	Doesn't feed up	0
35	DLO	Doesn't lock open (after last shell)	0
36	DLU	Doesn't lock-up	0
37	DS	Dead safe	0
38	DX	Doesn't extract	0
39	DXL	Doesn't extract live round	0
40	EDS	Extractor drops shell	0
41	ESB	Ejector sticks back	0
42	ESCR	Empty shell catches receiver	0
43	ESS	Extractor stems shell	0
44	FA	Fires automatically	0
45	FB	Follower binds	0
46	FC	Fails to connect	0
47	FCB	Fore-end cracked or broken	0
48	FD	Follows-down	0
49	FF	Fails to fire	0
50	FFP	Flat firing pin	0
51	FOS	Fires on safe	0
52	FPHB	Firing pin hits bbl	0
53	FPHI	Firing pin hits inside rim	0
54	FPO	Floor plate opens	0
55	FPOH	Floor plate opens hard	0
56	FSR	Fires when safe is released	0

	A	B	C
57	FT	Follower tips	0
58	GCSO	Gas cyl shot off	0
59	HBL	Heavy bolt lift	0
60	HMSC	Heading mismatch-steps on case	0
61	HPA	High pressure ammo	0
62	HUR	Hard under rail	0
63	JCS	Jumps cartridge	0
64	JM	Jumps magazine	0
65	JO	Jars off	0
66	LB	Light blow	0
67	MAH	Magazine assembles hard	0
68	MCW	Magazine capacity wrong	0
69	MFA	Misfires (ammo)	0
70	MFOP	Magazine follower out of position	0
71	ML	Magazine loose	0
72	MLH	Magazine loads hard	0
73	MRH	Magazine removes hard	0
74	OH	Opens hard	0
75	OR	Over-rides	0
76	PH	Pulls hard	0
77	PSI	Proof stamp illegible	0
78	PSM	Proof stamp missing	0
79	RBOC	Rings and bulges on case	0
80	RDVV	(Action) release doesn't work	0
81	RIC	Rings in chamber	0
82	RIS	Ring in sholder	0
83	RS	Rim srem	0
84	SBC	Stems bottom chambers	0
85	SEE	Stems bbl extension	0
86	SCB	Stock cracked or broken	0
87	SCX	Shell catches	0
88	SHI	Short indent	0
89	SI	Stems incline	0
90	SIC	Stems in chamber	0
91	SL	shaves lead	0
92	SLC	Stems left side of chamber	0
93	SMOC	Stretch marks on case	0
94	SOR	Stem over-ride	0
95	SP	Stems port	0
96	SR	Shoulder rough	0
97	SRC	Stems right side of chamber	0
98	SRIC	Specific rings in chamber	0
99	SSOC	Surface scratches on case	0
100	STC	Stems top chamber	0
101	SWE	Safety switch works too easily	0
102	SWH	Safety switch works too hard	0
103	SWW	Safety Switch won't work	0
104	TD	Tips down	0
105	TU	Tips up	0
106	TWP	Trigger won't pull	0
107	TWR	Trigger won't retract	0
108	UNCN-T	Uncoded	0
109	XH	Extracts hard	0
110			0
111	HI	High	0
112	LO	Low	0

	A	B	C
113	LEFT	Left	0
114	RIGHT	Right	0
115	DG	Doesn't Group	0
116	FSST	Front sight tipped	0
117	RSTT	Rear sight tipped	0
118	RSBR	Rear sight base raised	0
119	FSTR	Front sight raised	0
120	FSTL	Front sight loose	0
121	RSTL	Rear sight loose	0
122	MGPT-G	Missing parts at target	0
123	UNCN-G	Uncoded nonconformity at target	0
124			0
125	AI-P	Assembly incomplete at proof	0
126	BBB	Barrel bracket cracked or broken at proof	0
127	BC-P	Blows cases at proof	0
128	BEB-P	Barrel extension broken at proof	0
129	BLP-P	Blanked primer at proof	0
130	BLSO-P	Barrel lug shot off at proof	0
131	BP-P	Blown primer at proof	0
132	BS-P	Barrel split at proof	0
133	DBF-P	Damaged Bolt Face	0
134	DLOS-P	Doesn't lock over shells at proof	0
135	ESBBP-P	Ejector sticks back - Blown Primer cup	0
136	ESBEC-P	Ejector sticks back - Ejector Crescent	0
137	FCB-P	Fore-end cracked at proof	0
138	FESO-P	Fore-end shot off at proof	0
139	FF-P	Fails to fire at proof	0
140	GCSO-P	Gas cylinder shot off at proof	0
141	MSI-P	Magnaflux stamp illegible on bbl	0
142	MSM-P	Magnaflux stamp missing on bbl	0
143	PP-P	Pierced primer at proof	0
144	SCB-P	Stock cracked or broken at proof	0

	A	B	C
1	AB	Action binds	0
2	BABS	Bulge at body shoulder	0
3	BAC	Burr at chamber	0
4	BBMA	BBL-to-bolt misalignment	0
5	BB	Bolt binds/catches	0
6	BCOAB	Bolt catches on anti-bind	0
7	BCOBS	Bolt catches on bolt stop	0
8	BCOF	Bolt catches on follower	0
9	BC	Blows cases	0
10	BHR	Bolt hits receiver	0
11	BHS	Bolt plug hits safety switch	0
12	BLOP	Bar lock or disconnecter out of position	0
13	BLSO	Barrel lug shot off	0
14	BPO	Bolt pulls out	0
15	BSSM	Bolt stems shell in magazine	0
16	BWCD	Bolt won't cam down	0
17	BWCFM	Bolt won't close over full magazine	0
18	CD	Case dented	0
19	CH	Closes hard	0
20	CLM	Can't load magazine	0
21	CO	Cut-off	0
22	CR	Cuts rim	0
23	CS	Cases swell	0
24	CTOG	Chamber torn or gouged	0
25	CTP	Creepy trigger pull	0
26	CWSB	Cams wrong side of action bar	0
27	DBB	Doesn't blow back	0
28	DCS	Double click in safety switch	0
29	DCT	Double click in trigger	0
30	DCU	Doesn't close-up	0
31	DE	Doesn't eject	0
32	DEL	Doesn't eject live round	0
33	DFB	Doesn't feed back	0
34	DFU	Doesn't feed up	0
35	DLO	Doesn't lock open (after last shell)	0
36	DLU	Doesn't lock-up	0
37	DS	Dead safe	0
38	DX	Doesn't extract	0
39	DXL	Doesn't extract live round	0
40	EDS	Extractor drops shell	0
41	ESB	Ejector sticks back	0
42	ESCR	Empty shell catches receiver	0
43	ESS	Extractor stems shell	0
44	FA	Fires automatically	0
45	FB	Follower binds	0
46	FC	Fails to connect	0
47	FCB	Fore-end cracked or broken	0
48	FD	Follows-down	0
49	FF	Fails to fire	0
50	FFP	Flat firing pin	0
51	FOS	Fires on safe	0
52	FPHB	Firing pin hits bbl	0
53	FPHI	Firing pin hits inside rim	0
54	FPO	Floor plate opens	0
55	FPOH	Floor plate opens hard	0
56	FSR	Fires when safe is released	0



	A	B	C
57	FT	Follower tips	0
58	GCSO	Gas cyl shot off	0
59	HBL	Heavy bolt lift	0
60	HMSC	Heading mismatch-steps on case	0
61	HPA	High pressure ammo	0
62	HUR	Hard under rail	0
63	JCS	Jumps cartridge	0
64	JM	Jumps magazine	0
65	JO	Jars off	0
66	LB	Light blow	0
67	MAH	Magazine assembles hard	0
68	MCW	Magazine capacity wrong	0
69	MFA	Misfires (ammo)	0
70	MFOP	Magazine follower out of position	0
71	ML	Magazine loose	0
72	MLH	Magazine loads hard	0
73	MRH	Magazine removes hard	0
74	OH	Opens hard	0
75	OR	Over-rides	0
76	PH	Pulls hard	0
77	PSI	Proof stamp illegible	0
78	PSM	Proof stamp missing	0
79	RBOC	Rings and bulges on case	0
80	RDVV	(Action) release doesn't work	0
81	RIC	Rings in chamber	0
82	RIS	Ring in sholder	0
83	RS	Rim srem	0
84	SBC	Stems bottom chambers	0
85	SEE	Stems bbl extension	0
86	SCB	Stock cracked or broken	0
87	SCX	Shell catches	0
88	SHI	Short indent	0
89	SI	Stems incline	0
90	SIC	Stems in chamber	0
91	SL	shaves lead	0
92	SLC	Stems left side of chamber	0
93	SMOC	Stretch marks on case	0
94	SOR	Stem over-ride	0
95	SP	Stems port	0
96	SR	Shoulder rough	0
97	SRC	Stems right side of chamber	0
98	SRIC	Specific rings in chamber	0
99	SSOC	Surface scratches on case	0
100	STC	Stems top chamber	0
101	SWE	Safety switch works too easily	0
102	SWH	Safety switch works too hard	0
103	SWW	Safety Switch won't work	0
104	TD	Tips down	0
105	TU	Tips up	0
106	TWP	Trigger won't pull	0
107	TWR	Trigger won't retract	0
108	UNCN-T	Uncoded	0
109	XH	Extracts hard	0
110			0
111	HI	High	0
112	LO	Low	0

	A	B	C
113	LEFT	Left	0
114	RIGHT	Right	0
115	DG	Doesn't Group	0
116	FSST	Front sight tipped	0
117	RSTT	Rear sight tipped	0
118	RSBR	Rear sight base raised	0
119	FSTR	Front sight raised	0
120	FSTL	Front sight loose	0
121	RSTL	Rear sight loose	0
122	MGPT-G	Missing parts at target	0
123	UNCN-G	Uncoded nonconformity at target	0
124			0
125	AI-P	Assembly incomplete at proof	0
126	BBB	Barrel bracket cracked or broken at proof	0
127	BC-P	Blows cases at proof	0
128	BEB-P	Barrel extension broken at proof	0
129	BLP-P	Blanked primer at proof	0
130	BLSO-P	Barrel lug shot off at proof	0
131	BP-P	Blown primer at proof	0
132	BS-P	Barrel split at proof	0
133	DBF-P	Damaged Bolt Face	0
134	DLOS-P	Doesn't lock over shells at proof	0
135	ESBBP-P	Ejector sticks back - Blown Primer cup	0
136	ESBEC-P	Ejector sticks back - Ejector Crescent	0
137	FCB-P	Fore-end cracked at proof	0
138	FESO-P	Fore-end shot off at proof	0
139	FF-P	Fails to fire at proof	0
140	GCSO-P	Gas cylinder shot off at proof	0
141	MSI-P	Magnaflux stamp illegible on bbl	0
142	MSM-P	Magnaflux stamp missing on bbl	0
143	PP-P	Pierced primer at proof	0
144	SCB-P	Stock cracked or broken at proof	0

	A	B	C
1	AB	Action binds	0
2	BABS	Bulge at body shoulder	0
3	BAC	Burr at chamber	0
4	BBMA	BBL-to-bolt misalignment	0
5	BB	Bolt binds/catches	0
6	BCOAB	Bolt catches on anti-bind	0
7	BCOBS	Bolt catches on bolt stop	0
8	BCOF	Bolt catches on follower	0
9	BC	Blows cases	0
10	BHR	Bolt hits receiver	0
11	BHS	Bolt plug hits safety switch	0
12	BLOP	Bar lock or disconnecter out of position	0
13	BLSO	Barrel lug shot off	0
14	BPO	Bolt pulls out	0
15	BSSM	Bolt stems shell in magazine	0
16	BWCD	Bolt won't cam down	0
17	BWCFM	Bolt won't close over full magazine	0
18	CD	Case dented	0
19	CH	Closes hard	0
20	CLM	Can't load magazine	0
21	CO	Cut-off	0
22	CR	Cuts rim	0
23	CS	Cases swell	0
24	CTOG	Chamber torn or gouged	0
25	CTP	Creepy trigger pull	0
26	CWSB	Cams wrong side of action bar	0
27	DBB	Doesn't blow back	0
28	DCS	Double click in safety switch	0
29	DCT	Double click in trigger	0
30	DCU	Doesn't close-up	0
31	DE	Doesn't eject	0
32	DEL	Doesn't eject live round	0
33	DFB	Doesn't feed back	0
34	DFU	Doesn't feed up	0
35	DLO	Doesn't lock open (after last shell)	0
36	DLU	Doesn't lock-up	0
37	DS	Dead safe	0
38	DX	Doesn't extract	0
39	DXL	Doesn't extract live round	0
40	EDS	Extractor drops shell	0
41	ESB	Ejector sticks back	0
42	ESCR	Empty shell catches receiver	0
43	ESS	Extractor stems shell	0
44	FA	Fires automatically	0
45	FB	Follower binds	0
46	FC	Fails to connect	0
47	FCB	Fore-end cracked or broken	0
48	FD	Follows-down	0
49	FF	Fails to fire	0
50	FFP	Flat firing pin	0
51	FOS	Fires on safe	0
52	FPHB	Firing pin hits bbl	0
53	FPHI	Firing pin hits inside rim	0
54	FPO	Floor plate opens	0
55	FPOH	Floor plate opens hard	0
56	FSR	Fires when safe is released	0

	A	B	C
57	FT	Follower tips	0
58	GCSO	Gas cyl shot off	0
59	HBL	Heavy bolt lift	0
60	HMSC	Heading mismatch-steps on case	0
61	HPA	High pressure ammo	0
62	HUR	Hard under rail	0
63	JCS	Jumps cartridge	0
64	JM	Jumps magazine	0
65	JO	Jars off	0
66	LB	Light blow	0
67	MAH	Magazine assembles hard	0
68	MCW	Magazine capacity wrong	0
69	MFA	Misfires (ammo)	0
70	MFOP	Magazine follower out of position	0
71	ML	Magazine loose	0
72	MLH	Magazine loads hard	0
73	MRH	Magazine removes hard	0
74	OH	Opens hard	0
75	OR	Over-rides	0
76	PH	Pulls hard	0
77	PSI	Proof stamp illegible	0
78	PSM	Proof stamp missing	0
79	RBOC	Rings and bulges on case	0
80	RDVV	(Action) release doesn't work	0
81	RIC	Rings in chamber	0
82	RIS	Ring in sholder	0
83	RS	Rim srem	0
84	SBC	Stems bottom chambers	0
85	SEE	Stems bbl extension	0
86	SCB	Stock cracked or broken	0
87	SCX	Shell catches	0
88	SHI	Short indent	0
89	SI	Stems incline	0
90	SIC	Stems in chamber	0
91	SL	shaves lead	0
92	SLC	Stems left side of chamber	0
93	SMOC	Stretch marks on case	0
94	SOR	Stem over-ride	0
95	SP	Stems port	0
96	SR	Shoulder rough	0
97	SRC	Stems right side of chamber	0
98	SRIC	Specific rings in chamber	0
99	SSOC	Surface scratches on case	0
100	STC	Stems top chamber	0
101	SWE	Safety switch works too easily	0
102	SWH	Safety switch works too hard	0
103	SWW	Safety Switch won't work	0
104	TD	Tips down	0
105	TU	Tips up	0
106	TWP	Trigger won't pull	0
107	TWR	Trigger won't retract	0
108	UNCN-T	Uncoded	0
109	XH	Extracts hard	0
110			0
111	HI	High	0
112	LO	Low	0

	A	B	C
113	LEFT	Left	0
114	RIGHT	Right	0
115	DG	Doesn't Group	0
116	FSST	Front sight tipped	0
117	RSTT	Rear sight tipped	0
118	RSBR	Rear sight base raised	0
119	FSTR	Front sight raised	0
120	FSTL	Front sight loose	0
121	RSTL	Rear sight loose	0
122	MGPT-G	Missing parts at target	0
123	UNCN-G	Uncoded nonconformity at target	0
124			0
125	AI-P	Assembly incomplete at proof	0
126	BBB	Barrel bracket cracked or broken at proof	0
127	BC-P	Blows cases at proof	0
128	BEB-P	Barrel extension broken at proof	0
129	BLP-P	Blanked primer at proof	0
130	BLSO-P	Barrel lug shot off at proof	0
131	BP-P	Blown primer at proof	0
132	BS-P	Barrel split at proof	0
133	DBF-P	Damaged Bolt Face	0
134	DLOS-P	Doesn't lock over shells at proof	0
135	ESBBP-P	Ejector sticks back -Blown Primer cup	0
136	ESBEC-P	Ejector sticks back - Ejector Crescent	0
137	FCB-P	Fore-end cracked at proof	0
138	FESO-P	Fore-end shot off at proof	0
139	FF-P	Fails to fire at proof	0
140	GCSO-P	Gas cylinder shot off at proof	0
141	MSI-P	Magnaflux stamp illegible on bbl	0
142	MSM-P	Magnaflux stamp missing on bbl	0
143	PP-P	Pierced primer at proof	0
144	SCB-P	Stock cracked or broken at proof	0

	A	B	C
1	AB	Action binds	0
2	BABS	Bulge at body shoulder	0
3	BAC	Burr at chamber	0
4	BBMA	BBL-to-bolt misalignment	0
5	BB	Bolt binds/catches	0
6	BCOAB	Bolt catches on anti-bind	0
7	BCOBS	Bolt catches on bolt stop	0
8	BCOF	Bolt catches on follower	0
9	BC	Blows cases	0
10	BHR	Bolt hits receiver	0
11	BHS	Bolt plug hits safety switch	0
12	BLOP	Bar lock or disconnecter out of position	0
13	BLSO	Barrel lug shot off	0
14	BPO	Bolt pulls out	0
15	BSSM	Bolt stems shell in magazine	0
16	BWCD	Bolt won't cam down	0
17	BWCFM	Bolt won't close over full magazine	0
18	CD	Case dented	0
19	CH	Closes hard	0
20	CLM	Can't load magazine	0
21	CO	Cut-off	0
22	CR	Cuts rim	0
23	CS	Cases swell	0
24	CTOG	Chamber torn or gouged	0
25	CTP	Creepy trigger pull	0
26	CWSB	Cams wrong side of action bar	0
27	DBB	Doesn't blow back	0
28	DCS	Double click in safety switch	0
29	DCT	Double click in trigger	0
30	DCU	Doesn't close-up	0
31	DE	Doesn't eject	0
32	DEL	Doesn't eject live round	0
33	DFB	Doesn't feed back	0
34	DFU	Doesn't feed up	0
35	DLO	Doesn't lock open (after last shell)	0
36	DLU	Doesn't lock-up	0
37	DS	Dead safe	0
38	DX	Doesn't extract	0
39	DXL	Doesn't extract live round	0
40	EDS	Extractor drops shell	0
41	ESB	Ejector sticks back	0
42	ESCR	Empty shell catches receiver	0
43	ESS	Extractor stems shell	0
44	FA	Fires automatically	0
45	FB	Follower binds	0
46	FC	Fails to connect	0
47	FCB	Fore-end cracked or broken	0
48	FD	Follows-down	0
49	FF	Fails to fire	0
50	FFP	Flat firing pin	0
51	FOS	Fires on safe	0
52	FPHB	Firing pin hits bbl	0
53	FPHI	Firing pin hits inside rim	0
54	FPO	Floor plate opens	0
55	FPOH	Floor plate opens hard	0
56	FSR	Fires when safe is released	0

	A	B	C
57	FT	Follower tips	0
58	GCSO	Gas cyl shot off	0
59	HBL	Heavy bolt lift	0
60	HMSC	Heading mismatch-steps on case	0
61	HPA	High pressure ammo	0
62	HUR	Hard under rail	0
63	JCS	Jumps cartridge	0
64	JM	Jumps magazine	0
65	JO	Jars off	0
66	LB	Light blow	0
67	MAH	Magazine assembles hard	0
68	MCW	Magazine capacity wrong	0
69	MFA	Misfires (ammo)	0
70	MFOP	Magazine follower out of position	0
71	ML	Magazine loose	0
72	MLH	Magazine loads hard	0
73	MRH	Magazine removes hard	0
74	OH	Opens hard	0
75	OR	Over-rides	0
76	PH	Pulls hard	0
77	PSI	Proof stamp illegible	0
78	PSM	Proof stamp missing	0
79	RBOC	Rings and bulges on case	0
80	RDVV	(Action) release doesn't work	0
81	RIC	Rings in chamber	0
82	RIS	Ring in sholder	0
83	RS	Rim srem	0
84	SBC	Stems bottom chambers	0
85	SEE	Stems bbl extension	0
86	SCB	Stock cracked or broken	0
87	SCX	Shell catches	0
88	SHI	Short indent	0
89	SI	Stems incline	0
90	SIC	Stems in chamber	0
91	SL	shaves lead	0
92	SLC	Stems left side of chamber	0
93	SMOC	Stretch marks on case	0
94	SOR	Stem over-ride	0
95	SP	Stems port	0
96	SR	Shoulder rough	0
97	SRC	Stems right side of chamber	0
98	SRIC	Specific rings in chamber	0
99	SSOC	Surface scratches on case	0
100	STC	Stems top chamber	0
101	SWE	Safety switch works too easily	0
102	SWH	Safety switch works too hard	0
103	SWW	Safety Switch won't work	0
104	TD	Tips down	0
105	TU	Tips up	0
106	TWP	Trigger won't pull	0
107	TWR	Trigger won't retract	0
108	UNCN-T	Uncoded	0
109	XH	Extracts hard	0
110			0
111	HI	High	0
112	LO	Low	0

	A	B	C
113	LEFT	Left	0
114	RIGHT	Right	0
115	DG	Doesn't Group	0
116	FSST	Front sight tipped	0
117	RSTT	Rear sight tipped	0
118	RSBR	Rear sight base raised	0
119	FSTR	Front sight raised	0
120	FSTL	Front sight loose	0
121	RSTL	Rear sight loose	0
122	MGPT-G	Missing parts at target	0
123	UNCN-G	Uncoded nonconformity at target	0
124			0
125	AI-P	Assembly incomplete at proof	0
126	BBB	Barrel bracket cracked or broken at proof	0
127	BC-P	Blows cases at proof	0
128	BEB-P	Barrel extension broken at proof	0
129	BLP-P	Blanked primer at proof	0
130	BLSO-P	Barrel lug shot off at proof	0
131	BP-P	Blown primer at proof	0
132	BS-P	Barrel split at proof	0
133	DBF-P	Damaged Bolt Face	0
134	DLOS-P	Doesn't lock over shells at proof	0
135	ESBBP-P	Ejector sticks back - Blown Primer cup	0
136	ESBEC-P	Ejector sticks back - Ejector Crescent	0
137	FCB-P	Fore-end cracked at proof	0
138	FESO-P	Fore-end shot off at proof	0
139	FF-P	Fails to fire at proof	0
140	GCSO-P	Gas cylinder shot off at proof	0
141	MSI-P	Magnaflux stamp illegible on bbl	0
142	MSM-P	Magnaflux stamp missing on bbl	0
143	PP-P	Pierced primer at proof	0
144	SCB-P	Stock cracked or broken at proof	0