

12/82

IMPORTANT PARTS OF THE FIREARM

THE SAFETY SWITCH

The safety switch provides protection against accidental or unintentional discharge under normal usage when properly engaged.

To engage the safety switch, put the switch in the "S" position. See picture 3.

Always put the safety switch in the "S" position before handling, loading or unloading the firearm.

When you are ready to fire the firearm, put the safety switch in the "F" position. See picture 4.

Do not touch the trigger while moving the safety switch.


Never pull the trigger when the safety switch is in the "S" position.

WARNING: The firearm will fire when the trigger is pulled and the safety switch is in the "F" position.




Even when the safety switch is in the "S" position, careless handling can cause the firearm to fire.

Picture 3

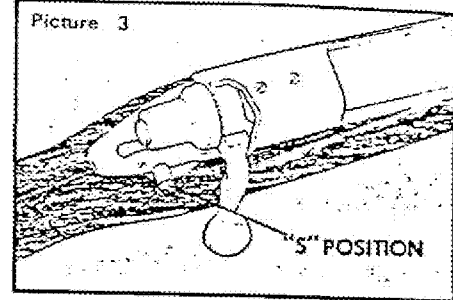

Picture 4

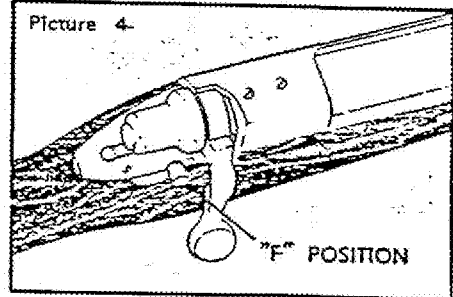

LUBRICATION AND MAINTENANCE



TO CLEAN THE BARREL


WARNING: Check the chamber and magazine to make sure there are no cartridges in the firearm.

1. Use the equipment provided in a good cleaning kit.
2. Remove the bolt assembly. See Instructions on Page 5.
3. Select the correct caliber cleaning brush and attach the brush to the cleaning rod.
4. Put the cleaning brush into the gun cleaning solvent.

NOTE: Barrel should lay horizontally with the ejection port facing down during cleaning. Always clean the barrel from the chamber end to the muzzle.

5. Push the cleaning brush through the barrel several times.
6. Remove brush from rod, attach tip with patch, and push through the bore.
7. Repeat several times, using a new cleaning patch each time, until the patch is not dirty.
8. Push a clean patch saturated with DuPont Teflon Wet Lubricant through the barrel.
9. Push a clean dry patch through the barrel to remove excess lubricant.
10. Apply a thin coat of DuPont Teflon Wet Lubricant to the outside of the barrel with a soft clean cloth.
11. After cleaning the barrel, clean the receiver and the trigger assembly.

WARNING: This firearm should be checked periodically by the Remington Arms Company, Inc. or a REMINGTON RECOMMENDED GUNSMITH. This will insure proper inspection and any necessary replacement of worn or damaged parts.



NTBOOK277