

REMINGTON ARMS COMPANY, INC.

PETERS

CONFIDENTIAL

10-E

MANUFACTURERS OF
SPORTING FIREARMS, AMMUNITION

SPORTING FIREARMS, TRAPS, RIFLES, NEW YORK
AMMUNITION, BRIDGEPORT, CONNECTICUT

IONOKE, ARKANSAS

TRAPS

TARGETS

BRIDGEPORT, CONNECTICUT 06602

CABLE—HARTLEY, BRIDGEPORT

TELE 944-201 STRATFORD, CONN.

PETERS CARTRIDGE DIVISION
BRIDGEPORT, CONNECTICUT

TARGETS, FINDLAY, OHIO

ADA, OKLAHOMA

ATHENS, GEORGIA

R. L. ST. JOHN

SUPERVISOR-FIELD SERVICE

FIREARMS

REMINGTON ARMS COMPANY, INC.

ILION, NEW YORK 13357

June 20, 1979-

TO: REMINGTON RECOMMENDED GUNSMITHS

We have been making an in depth study to determine the cause of all complaints on Remington firearms that are safety related. To make this study as complete as possible, we seek your cooperation.

In the future, would you please not attempt any repairs on a Remington firearm returned to your shop with a safety related complaint. Instead, please return, at our expense, the firearm in question to:

Arms Service Section
Remington Arms Company, Inc.
Ilion, New York 13357
Attn: Mr. Dennis J. Sanita

Please include a note with each firearm, fully explaining the customer's complaint. The type of complaint involved would be anything relative to the gun's safety, or any complaint which would bear on the shooter's or a bystander's safety, such as jar off, firing on closing, automatic firing, etc.




If there is any question as to whether or not a gun should be returned to us for examination, please call Mr. James A. Stekl on our toll free numbers:

Outside N.Y. State 1-800-448-5790
N.Y. State only 1-800-962-7211

for a final decision. When our examination has been completed, you will be advised immediately as to our findings by Mr. Stekl, and arrangements made at that time for any repair required.

Again, we ask for your fullest cooperation, and if you have any questions, please call immediately.

Cordially,

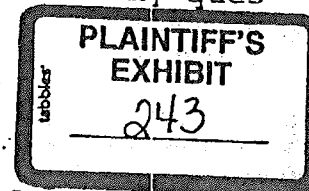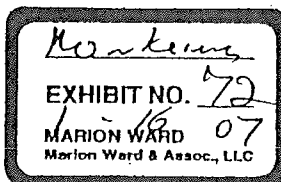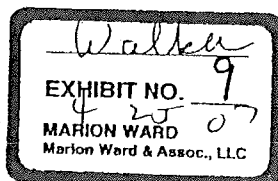

R.L. St. John, Supervisor
Field Service

IMPORTANT
READ THIS BOOK BEFORE USING THE FIREARM

INSTRUCTION BOOK

Model 700

Bolt Action

Center Fire Rifle

Remington




HOW TO ORDER PARTS AND SERVICE
CLEANING INSTRUCTIONS
HOW TO LOAD AND UNLOAD
IMPORTANT BATTLE
SAFETY RULES AND INFORMATION

1980

Rem

MODEL 700 BOLT ACTION RIFLE


PICTURE 1

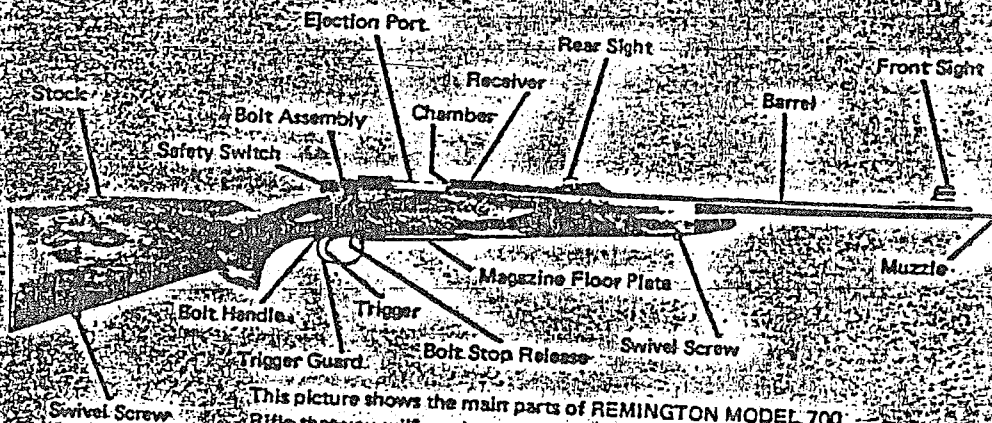

This picture shows the main parts of REMINGTON MODEL 700 Rifle that you will need to understand the instructions in this book.

This picture shows the parts of the ammunition:

PICTURE 2
AMMUNITION.

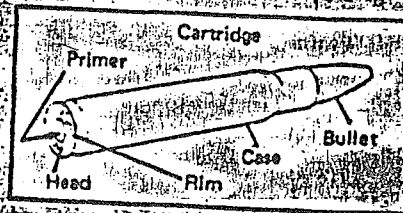

READ THESE SAFETY RULES

- To use your firearm correctly and safely, read and follow the instructions in the enclosed firearms safety booklet and this instruction book.
- Always keep the muzzle pointed in a safe direction.
- Keep the barrel clean, and free of obstructions.
- Unload firearms when not in use. Keep firearms and ammunition away from children. Lock firearms and ammunition in separate cabinets.
- Unload your firearm before climbing up or over a fallen tree, fence or slippery area.
- Before you pull the trigger, make sure you can see the target clearly, and the path of the bullet beyond the target.
- Never fire at water, rocks, or any hard surface.
- Never enter a vehicle with a loaded firearm, or put a loaded firearm in a vehicle. Unload the firearm, then put it in a gun case for safe transport.
- Never shoot and drink alcoholic beverages at the same time.
- Check your firearm periodically to make sure it is mechanically correct. Keep the firearm clean.
- Do not play with the safety switch. Use it as shown in this book.

SAFETY RULES AND INFORMATION



IMPORTANT PARTS

HOW TO LOAD AND UNLOAD

CLEANING INSTRUCTIONS

HOW TO OBTAIN PARTS AND SERVICE

SAFETY INFORMATION

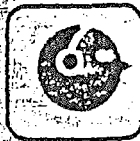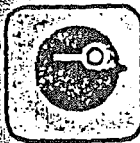

NEVER USE THE WRONG AMMUNITION:

- Only use ammunition of the correct caliber, that is in good condition.
- Before loading, check the caliber shown on the ammunition, and caliber shown on the firearm. They must be the same caliber.
- Handloads can be dangerous. Remington Arms Company, Inc., is not responsible for accidents or damage caused by badly loaded handloads.

NEVER MAKE ADJUSTMENTS:

- Do not make changes or alterations to any parts of a firearm. Use only REMINGTON parts.
- Never make an adjustment to the trigger, or change the shape or size of the sear, sear notch, or other parts.

EYE PROTECTION:

- Wear safety glasses when using a firearm.

EAR PROTECTION:

- Wear hearing protectors when firing to adjust the sights.

Re



IMPORTANT PARTS OF THE FIREARM

THE SAFETY SWITCH

The safety switch provides protection against accidental or unintentional discharge under normal usage when properly engaged.

To engage the safety switch, put the switch in the "S" position. See picture 3.

Always put the safety switch in the "S" position when the firearm is loaded and not ready for firing.

The bolt handle cannot be lifted when the safety switch is in the "S" position. See picture 3.

When you are ready to fire the firearm, put the safety switch in the "F" position. See picture 4.


Never pull the trigger when the safety switch is in the "S" position.

WARNING: The firearm will fire when the trigger is pulled and the safety switch is in the "F" position.




Even when the safety switch is in the "S" position, careless handling can cause the firearm to fire.

Picture 3

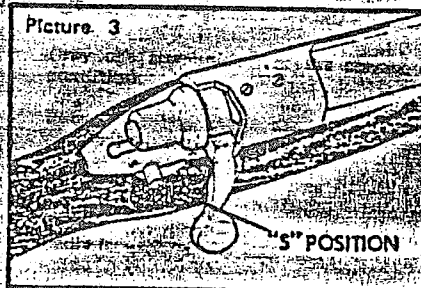

Picture 4

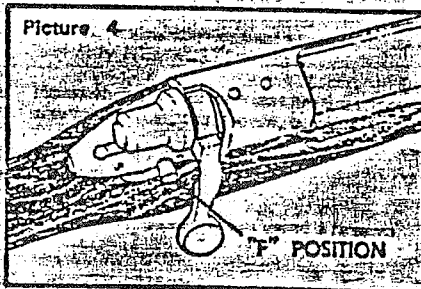

THE BOLT ASSEMBLY



The bolt assembly locks the cartridge into the chamber.


TO INSTALL THE BOLT ASSEMBLY:

1. Point the firearm in a safe direction.
2. Put the safety switch in the "F" position.
3. Align the lugs on the bolt assembly with the receiver. See picture 5.
4. Slide the bolt assembly into the receiver and push all the way in.
5. To lock the bolt assembly into position push the bolt handle down.

TO REMOVE THE BOLT ASSEMBLY:

1. Point the firearm in a safe direction.
2. Put the safety switch in the "F" position.
3. Do not touch the trigger while moving the safety switch.
4. Raise the bolt handle.
5. Put the safety switch in the "S" position.
6. Pull the bolt handle all the way back.
7. Push the bolt stop release. See picture 5.
8. As you push the bolt stop release, slide the bolt from the firearm.


5

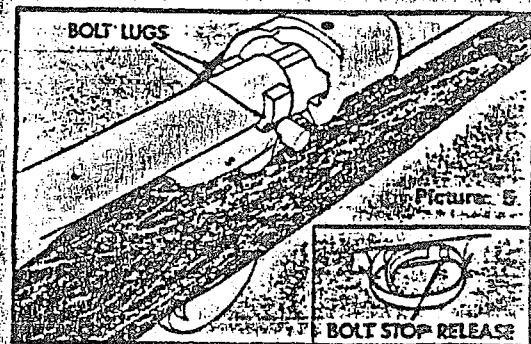

THE TRIGGER ASSEMBLY

Pulling the trigger fires the firearm.

The trigger is adjusted at the factory. All adjustments to the trigger must be made by the factory or a REMINGTON RECOMMENDED GUNSMITH.

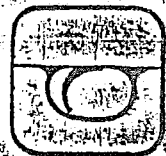

Never remove the trigger mechanism, or make adjustments to the trigger or trigger assembly.



NEVER put your finger on the trigger unless you are going to fire the firearm.

THE BARREL

The inside of the barrel must be clean and free of obstructions.

I. TO CHECK THE INSIDE OF THE BARREL:

1. Point the firearm in a safe direction.
2. Put the safety switch in the "F" position.
3. Raise the bolt handle.
4. Put the safety switch in the "S" position.
5. Pull the bolt handle all the way back.
6. Remove any ammunition from the chamber or magazine. See page 8.
7. Remove the bolt. See page 5.
8. Look through the inside of the barrel from the chamber end to the muzzle. See picture 1.

II. TO REMOVE OBJECT FROM INSIDE THE BARREL:

1. Use the correct size cleaning rod.
2. Push the cleaning rod from the chamber end all the way through the barrel, until the rod comes out the muzzle.
3. If an object cannot be easily pushed out of the barrel with a cleaning rod, return the firearm to the factory or a REMINGTON RECOMMENDED GUNSMITH.



NEVER try to remove an object from the barrel by loading another cartridge and firing.

III. TO CLEAN THE BARREL FOLLOW INSTRUCTIONS SHOWN ON PAGE 11.

Before loading the firearm make sure the inside of the barrel is free of dirt, or other objects.

HOW TO LOAD AND UNLOAD

CLEANING INSTRUCTIONS

HOW TO ORDER PARTS AND SERVICE

TO LOAD THE FIREARM

TO LOAD THE MAGAZINE AND CHAMBER:

1. Point the firearm in a safe direction.
2. Put the safety switch in the "F" position.
3. Raise the bolt handle.
4. Put the safety switch in the "S" position.
5. Pull the bolt handle all the way back.
6. Push four cartridges of the correct caliber, one at a time into the magazine. If the firearm is a magnum, you only load three cartridges. Keep the bullets aligned toward the chamber. See picture 6.
7. Put one cartridge into the chamber.
8. Use your fingers to push the cartridges in the magazine all the way down. Slowly slide the bolt assembly forward, so that the bolt slides over the top of the cartridges in the magazine.
9. Push the bolt handle down.

THE FIREARM IS NOW LOADED.

10. To fire the firearm put the safety switch in the "F" position.

THE FIREARM IS READY TO FIRE.

TO LOAD ONE CARTRIDGE ONLY:

1. Point the firearm in a safe direction.
2. Put the safety switch in the "F" position.
3. Raise the bolt handle.
4. Put the safety switch in the "S" position.


5. Pull the bolt handle all the way back.
6. Put one cartridge of the correct caliber on the magazine follower, or in the chamber. See picture 6.
7. Slide the bolt handle forward, then push the bolt handle down to lock the cartridge into the chamber.

THE FIREARM IS NOW LOADED.

8. To fire the firearm put the safety switch in the "F" position.

THE FIREARM IS READY TO FIRE.

WARNING: Always check the cartridge for the correct caliber before loading the firearm.

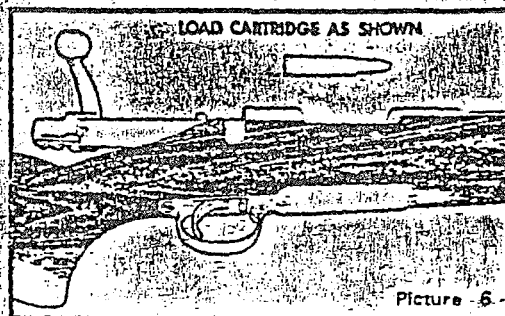

TO UNLOAD THE FIREARM

There are two types of Model 700 rifles, one with a FLOOR PLATE and one without a FLOOR PLATE.

INSTRUCTIONS FOR THE MODELS WITH A FLOOR PLATE

1. Point the muzzle in a safe direction.
2. Put the safety switch in the "F" position.
3. Raise the bolt handle.
4. Put the safety switch in the "S" position.
5. Put one hand over the top of the ejection port.
6. Slowly pull the bolt handle back with your other hand to remove the cartridge from the chamber.
7. Hold the cartridge and remove it from the firearm.
8. Put your hand under the floor plate.
9. Push the floor plate latch to release the floor plate. See picture 7.
10. The magazine spring and follower will be released from the magazine.
11. Remove released cartridges.
12. Push in the magazine follower, then close the floor plate.

WARNING: Make sure there are no cartridges in the chamber or magazine.


INSTRUCTIONS FOR THE MODELS WITHOUT A FLOOR PLATE

1. Point the muzzle in a safe direction.
2. Put the safety switch in the "F" position.
3. Raise the bolt handle.
4. Put the safety switch in the "S" position.
5. Put one hand over the top of the ejection port.
6. Slowly pull the bolt handle back with your other hand to remove the cartridge from the chamber.

7. Hold the cartridge and remove it from the firearm.
8. Keep the muzzle pointed up, push the bolt handle slowly forward until the cartridge is released from the magazine. **CAUTION:** The cartridge may slide into the chamber, if the bolt is pushed too far forward. See note below.
9. Pull the bolt handle fully back and remove the cartridge from the ejection port.
10. Repeat this action until the magazine is empty.

WARNING: Check the chamber and the magazine to make sure there are no cartridges in the firearm.

NOTE: If the bolt is pushed all the way forward, and a cartridge slides into the chamber, the gun can be fired. Normally, the cartridges will slide out of the chamber when the bolt is pulled back. If the cartridge remains in the chamber, point the muzzle in a safe direction, slide the bolt forward all the way and push the bolt handle down to lock the bolt. Then repeat steps 2 through 10 above.

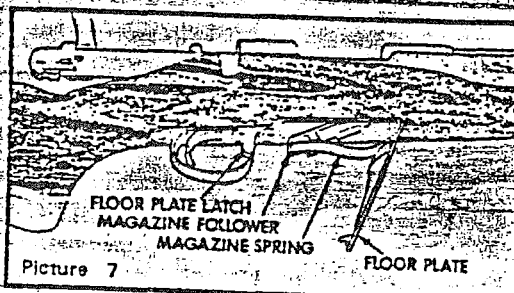

Picture 7

HOW TO ORDER PARTS AND SERVICE
 CLEANING INSTRUCTIONS
 HOW TO LOAD AND UNLOAD


TO ADJUST THE SIGHTS



The sights are adjusted at the factory to hit a target at 100 yards. NOTE: For all models except the Varmint and Classic Grade.

TO ADJUST THE REAR SIGHT

Move the rear sight in the same direction as you need to move the bullet on the target.

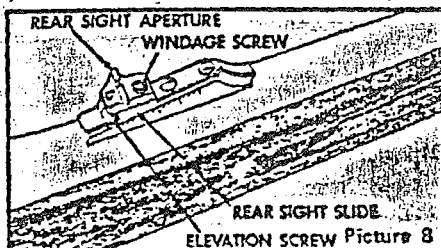

NOTE: For more information on ballistics and trajectory, see the REMINGTON catalog.

TELESCOPIC SIGHTS

The top of the receiver has holes for the installation of telescopic sights.

9

POSITION ON TARGET

ADJUSTMENTS



Bullet hits above the center.

- Loosen the elevation screw on the rear sight.
- Slide the rear sight down (backward) on the ramp.
- Tighten the elevation screw.



Bullet hits below the center.

- Loosen the elevation screw on the rear sight.
- Slide the rear sight up (forward) on the ramp.
- Tighten the elevation screw.



Bullet hits to the left.

- Loosen the windage screw on the rear sight.
- Slide the rear sight aperture to the right.
- Tighten the windage screw.



Bullet hits to the right.

- Loosen the windage screw on the rear sight.
- Slide the rear sight aperture to the left.
- Tighten the windage screw.

0 TO ASSEMBLE THE SLING STRAP

See picture 9 for the location of parts:

1. Slide the strap through the band.
2. Push the strap up through the first swivel.
3. Slide the strap back through the band.
4. Push the strap into and through the buckle.
5. Push the strap down and through the second swivel.
6. Align the slots in the strap and fasten with the brass fastener.


TO ATTACH THE SLING STRAP ASSEMBLY TO THE STOCK.

See picture 9 for location of parts:

7. Push plunger on swivel until the small plate lifts and is free of the stud.
8. Push the stud into the center of the swivel screw.
9. Close the plate on the swivel to lock the swivel to the swivel screw.
10. To adjust the length of the strap, pull the strap through the buckle.

TO REMOVE THE SLING FROM THE STOCK

To remove the sling strap assembly from the stock repeat step 7.

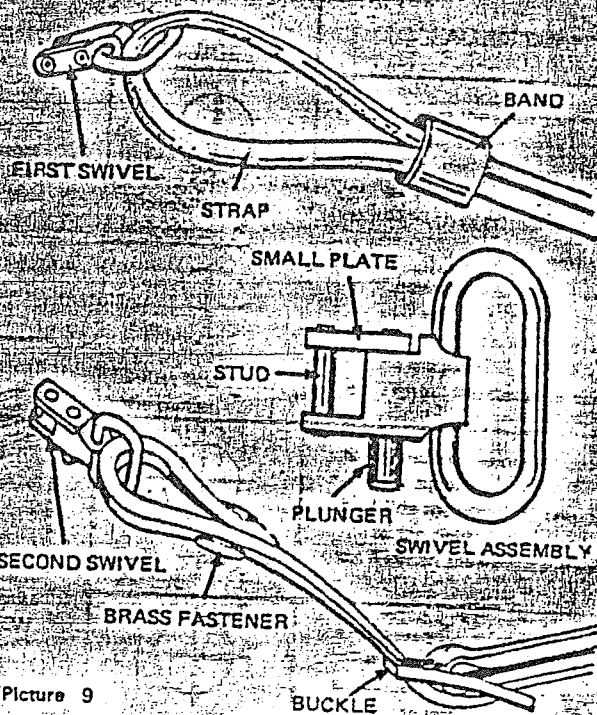

Picture 9

LUBRICATION AND MAINTENANCE



TO CLEAN THE BARREL

WARNING: Check the chamber and magazine to make sure there are no cartridges in the firearm.

1. Use the instructions and the equipment provided in a good cleaning kit.
2. Remove the bolt assembly. See page 6.
3. Select the correct caliber cleaning brush and attach the brush to the cleaning rod.
4. Put the cleaning brush into the gun cleaning solvent.
5. Push the cleaning rod through the barrel several times. **NOTE:** Always clean the barrel from the chamber end to the muzzle.
6. Push the correct cleaning patch through the bore.
7. Repeat several times using a new cleaning patch each time, until the patch is not dirty.
8. Apply a thin coat of oil to the outside of the barrel with a soft cloth.
9. Clean the varmint models with a wire brush and cleaning patches after firing 25 cartridges.


WARNING: Before you replace the bolt assembly, make sure the barrel is free of obstructions.

WARNING: This firearm should be checked periodically by The Remington Arms Company Inc. or a REMINGTON RECOMMENDED GUNSMITH. This will insure proper inspection and any necessary replacement of worn or damaged parts.

INSTRUCTIONS FOR CLEANING THE BOLT ASSEMBLY


TO DISASSEMBLE THE BOLT FOR CLEANING

1. Remove the bolt assembly from the firearm. See page 5.
2. Put the notch on the firing pin head over a metal edge. Pull the bolt assembly away from the firing pin. A coin can be put into the slot near the back edge of the firing pin head. See picture 10.
3. Hold the bolt assembly and turn the bolt plug until the firing pin assembly can be removed from the bolt assembly. CAUTION: Clean the firing pin assembly as a unit.
4. Clean all parts with gun cleaning solvent. Dry with a clean cloth.
5. Apply a thin coat of oil to prevent rusting.

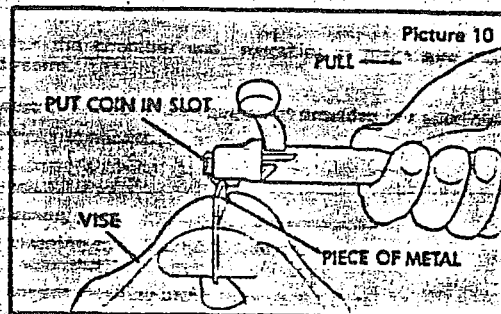

TO ASSEMBLE

1. Put the firing pin assembly into the rear of the bolt assembly.
2. Tighten the bolt plug into the bolt assembly with your hand.
3. Pull the coin from the slot in the firing pin head.
4. Turn the bolt plug until the firing pin head goes into the small notch on the rear rim of the bolt. The bolt is now cocked. See picture 11. NOTE: The bolt must be cocked to be assembled into the rifle.
5. Assemble the bolt assembly into the rifle. See page 5.

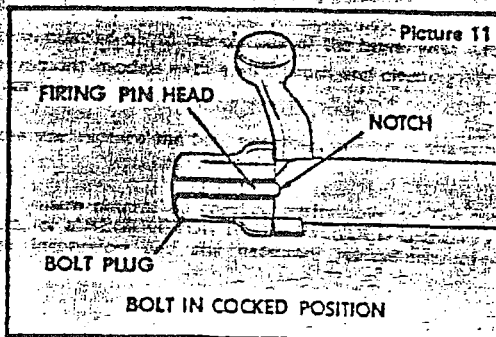

TO CLEAN THE ACTION

1. Remove the bolt assembly. See page 5.
2. Turn the rifle upside down.
3. Remove the screws from the trigger guard. See picture 12, or picture 13.
4. Lift the stock away from the action.

NOTE: MODELS WITHOUT A FLOOR PLATE:
Remove the magazine spring and follower from the magazine.

NOTE: MODELS WITH A FLOOR PLATE:
Remove the magazine spring and follower from the receiver.


5. Clean the action with a gun cleaning solvent and dry with a cloth.
6. Apply a thin coat of oil to prevent rust.

TO ASSEMBLE THE MODELS WITHOUT A FLOOR PLATE


1. Put the magazine follower and the spring into the magazine.
2. Put the stock over the action.
3. Replace and tighten the screws on the trigger guard.
4. Replace the bolt assembly.

TO ASSEMBLE THE MODELS WITH A FLOOR PLATE

1. Put the magazine all the way into the bottom of the receiver.
2. Assemble the trigger guard assembly on the stock.
3. Put the stock over the action.
4. Replace and tighten the trigger guard screws.
5. Replace the bolt assembly.

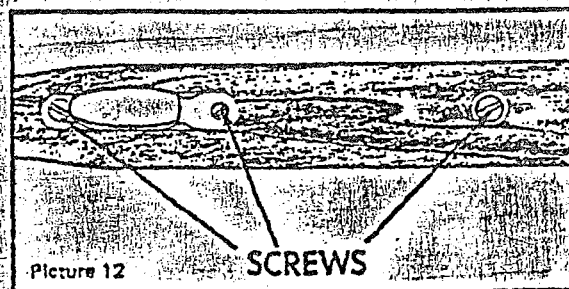

Picture 12

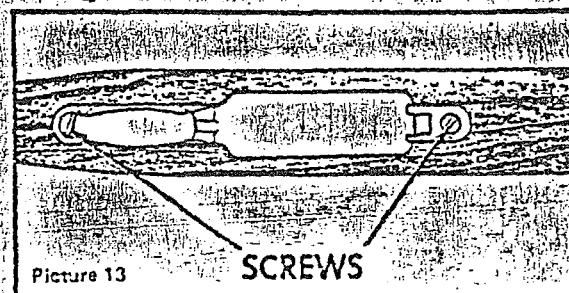

Picture 13

HOW TO ORDER PARTS FROM THE REMINGTON FACTORY

TO ORDER PARTS:

1. Use the picture on page 15 to find the correct part name and number.
2. Write the model and serial number of your firearm, and the part name and number on the parts order.
3. Send parts order to:

Arms Service Division
Remington Arms Company, Inc.
Ilion, New York 13357

4. We can ship your order on a C.O.D. basis or provide an estimate of your required remittance.

NOTE: Bolts, barrels or receivers for centerfire rifles, pistols and rimfire rifles are not sold separately. Repairs or replacements for these parts must be done by Remington Arms Company, Inc. Barrels and bolts for shotguns are available as parts.

WARNING: Use only Remington parts in Remington firearms.

TO ORDER FACTORY SERVICE:

Write a short description of the problem.

1. Give the model and serial number. Make a copy of this note. Attach the original note to the firearm, and put the copy in an envelope attached to the outside of the shipping box.

2. Make sure the gun is unloaded. Never include any ammunition in the package with the firearm.
3. Send by either United Parcel Service or Parcel Post. NOTE: Make sure the gun is unloaded, and there is no ammunition in the box.
4. Get insurance for the firearm.
5. Record serial number, it is required when calling factory to inquire if firearm has been received for repairs.

INSTRUCTION BOOKS:


To get instruction books for any Remington firearm, write to Remington Arms Company, Inc., Arms Service Division, Ilion, New York 13357. Give the model, serial number, gauge or caliber.

REMINGTON RECOMMENDED GUNSMITHS:

A listing is available from Remington Arms Company, Inc., 939 Barnum Avenue, Bridgeport, Conn. 06602.

MODEL 700
Bolt Action Center Fire Rifle

15

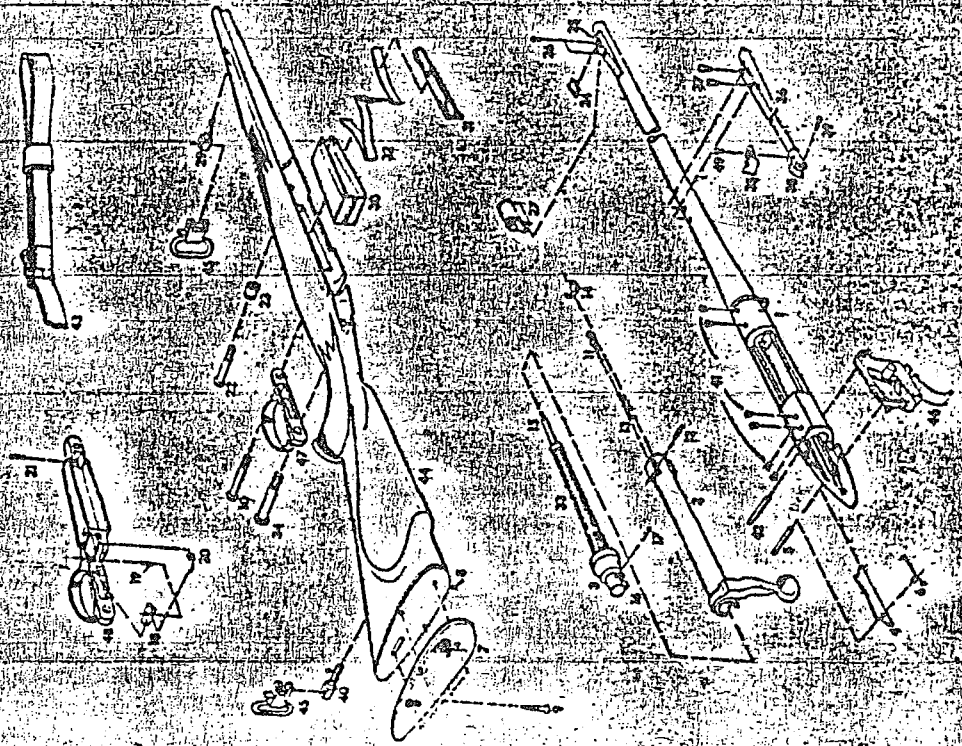

MODEL 700 - PARTS LIST

PARTS SUBJECT TO CHANGE WITHOUT NOTICE:
 FOB Ilion, N.Y.

View No.	Part No.	NAME	View No.	Part No.	NAME
		NOTE: Basic 30-06 Caliber listed below.	24	15373	Front Sight
1		Barrel Assembly		15719	Front Sight (Low)
2		Bolt Assembly	25	28510	Front Sight Ramp
		Bolt Final Assembly		15635	Front Sight Ramp, BDL Grade
3	17012	Bolt Plug	26	28505	Front Sight Ramp, Screw
4	17013	Bolt Stop	27	15363	Front Sight Hood, BDL Grade
5	24475	Bolt Stop Pin	29	15358	Front Swivel Screw, BDL Grade
6	15224	Bolt Stop Spring		90957	Grip Cap, BDL Grade (not shown)
7	90953	Butt Plate		25380	Grip Cap Screw
8	90954	Butt Plate Spacer BDL Grade		90958	Grip Cap Spacer, BDL Grade (not shown)
9	25380	Butt Plate Screw	30	15284	Magazine, ADL Grade
10	15287	Center Guard Screw, ADL Grade		16430	Magazine, BDL Grade (not shown)
11	17017	Ejector	31	90952	Magazine Follower (ADL Grade)
12	17676	Ejector Pin		15940	Magazine Tab Screw (ADL Grade)
13	17019	Ejector Spring	32	17028	Magazine Spring
14	91816	Extractor		15677	Magazine Spring, BDL Grade
	15376	Fastener, Sling Strap	33	17029	Main Spring
15	22020	Firing Pin	34	26355	Rear Guard Screw
16	22040	Firing Pin Assembly	35	32510	Rear Sight Aperture
17	17022	Firing Pin Cross Pin	36	32500	Rear Sight Base
18	15291	Floor Plate Latch, BDL Grade	37	28505	Rear Sight Base Screw (2)
19	16451	Floor Plate Latch Pin, BDL Grade	38	90905	Rear Sight Slide
20	16452	Floor Plate Latch Spring, BDL Grade	39	90906	Elevation Screw
21	16453	Floor Plate Pivot Pin, BDL Grade	40	15358	Rear Swivel Screw, BDL Grade
22	22035	Front Guard Screw	41	17034	Receiver Plug Screw
23	15161	Front Guard Screw Bushing, ADL Grade			

View No.	Part No.	NAME	View No.	Part No.	NAME
42	24476	Sear Pin	22037		Front Guard Screw, 222 Rem., 223 Rem., 243 & 308 Win., 6mm Rem., 22-250 Rem., 17 Rem.
43	30855	Sling Strap Assembly, BDL Grade	14659		Front Sight, 7mm Rem. Mag., 264 Win.
26990		Sling Strap Assembly & Mountings Comp.	28511		Front Sight Ramp, ADL Grade
44	33366	Stock Assembly, ADL Grade	16992		Front Sight Ramp, BDL Grade
33371		Stock Assembly, BDL Grade	15282		Magazine, ADL Grade, 222 Rem.
18186		Stock Reinforcing Screw (not shown)	16716		Magazine, BDL Grade, 222 Rem., 223 Rem.
16970		Stock Reinforcing Screw Dowel (not shown)	15283		Magazine, ADL Grade, 243 & 308 Win., 6mm Rem., 22-250 Rem.
45	26555	Swivel Assembly, BDL Grade (O.D.)	16715		Magazine, BDL Grade, 243 & 308 Win., 6mm Rem., 22-250 Rem.
46	26345	Trigger Assembly	90951		Magazine Follower, 222 Rem.
47	15281	Trigger Guard	90982		Magazine Follower, 243 & 308 Win., 6mm Rem., 22-250 Rem.
48	26371	Trigger Guard Assembly, BDL Grade	90951		Magazine Follower, 223, 17 Rem.
49	90904	Windage Screw	91017		Magazine Follower, 270, 25-06, 30-06 (BDL Grade)
		ADDITIONAL CALIBERS	90952		Magazine Follower, 8mm Rem. Mag.
		See 30-06 list for parts not listed below	15286		Magazine Spacer, 222 Rem., BDL Grade
		Barrel Assembly	15742		Magazine Spacer, 222 Rem., ADL Grade
	91837	Extractor, 7mm Rem., Mag., 264-300 Win. Mag., 8mm Rem. Mag.	15286		Magazine Spacer, 223 Rem., BDL Grade, 17 Rem.
	90906	Extractor, 222-223 Rem., 17 Rem.	91133		Magazine Spring, 222 Rem., 223 Rem., 17 Rem.
	22021	Firing Pin, 222 Rem., 243-308 Win., 6mm Rem. Mag., 22-250 Rem., 223 Rem., 17 Rem.			
	22041	Firing Pin Assembly, 222 Rem., 17 Rem., 243 Win., 308 Win., 6mm Rem., 22-250 Rem., 223 Rem.			
17					

View No.	Part No.	NAME	View No.	Part No.	NAME
	17891	Magazine Spring, 243 & 308 Win., 6mm Rem.			MODEL 700-VARMINT
	15698	Magazine Spring, 22-250 Rem.			See 30-06 list for parts not listed below
	15699	Magazine Spring, 22-250 Rem., 6mm Rem., 243 Win., BDL Grade.			Barrel Assembly
	17058	Main Spring, 222 Rem., 223 Rem., 243 308 Win., 17 Rem.		16204	Front Scope Base
	90949	Recoil Pad, 7mm Rem. Mag., 264 & 300 Win. Mag., 8mm Rem. Mag.		18843	Rear Scope Base
	25410	Recoil Pad Screw, 7mm Rem. Mag., 264 & 300 Win. Mag., 8mm Rem. Mag.		16205	Scope Base Screw, Front
	33380	Stock Assembly, 7mm Rem. Mag., ADL Grade.		18842	Scope Base Screw, Rear
	33365	Stock Assembly, 222 Rem., 243 Win., 308 Win., 6mm Rem., 22-250 Rem., ADL Grade.		33376	Stock Assembly, 222 Rem., 223 Rem., 243 Win., 6mm Rem., 22-250 Rem.
	33385	Stock Assembly, 7mm Rem. Mag., 264-300 Win. Mag., BDL Grade., 8mm Rem. Mag.		33375	Stock Assembly, 25-08
	33370	Stock Assembly, 222 Rem., 243 Win., 308 Win., 6mm Rem., 22-250 Rem., BDL Grade., 17 Rem.			MODEL 700 "CLASSIC"
	26370	Trigger Guard Assembly, BDL Grade, 222 Rem., 17 Rem., 223 Rem., 243 Win., 308 Win., 6mm Rem., 22-250 Rem.			See 30-06 list for parts not listed below
					Barrel Assembly
				91544	Recoil Pad, 22-250 Rem., 243 Win., 6mm Rem., 270 Win., 30-06.
				91556	Recoil Pad, 7mm Rem. Mag.
				25410	Recoil Pad Screw
				34591	Stock Assembly, 270 Win., 30-06.
				34590	Stock Assembly, 22-250 Rem., 6mm Rem., 243 Win.
				34592	Stock Assembly, 7mm Rem. Mag.