

VPD SHEET PROTECTOR PSA


B. (CON'T)

- Put the safety switch into the "OFF" position. (Bolt Actions to the "F" position)
- Slide the red indicator to "O" pounds on the trigger pull scale.
- Place the hook of the scale cuto the trigger. Let the trigger rest in the well of the hook. (Fig.#IO) Hook the trigger so that the scale runs along side of the left pannel of the stock. (Fig.#II)

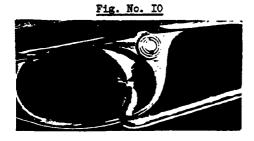

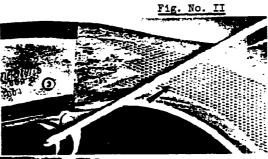

10. Profit of the part of the part of the stock. Now year the part of the stock. Now year the part of the Profit of the part o

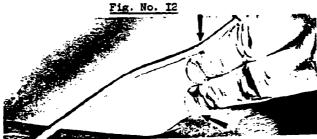

II. Now grasp the handle of the pull scale and limit pull it rearward. When you hear the hammer (or striker) fall, "STOP" pulling on the scale. Unhook the scale from the trigger. Be careful not to pull on the scale when you remove it form the trigger, this may cause the indicator to move and give you a false reading. Where the flat of the red indicator stops, is the measured trigger pull in pounds.

"4.25lbs.".

Record this on the Test Procedure Sheet, under Trigger Pill. This is the first of three Brigger pulls to be measured.

VPD SHEET, PROTECTOR I'M