

# Remington



## HIGH POWER RIFLE BOLT ACTION REPEATER FIXED BOX MAGAZINE

### MODEL 700 SNIPER

# INSTRUCTION FOLDER and PARTS LIST

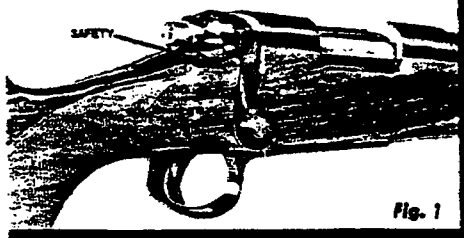


Fig. 1

magazine follower or directly into chamber. Close

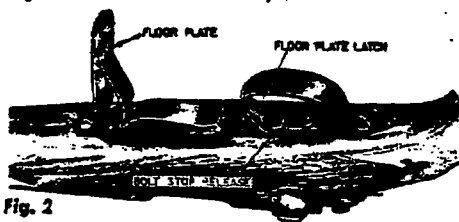


Fig. 2

telescope and receiver sights. The location and design of the rear sight holes are standard for target telescope mounts.

**BARREL CARE** — Use lightly oiled patch, cleaning from breech to muzzle. Remove bolt to make cleaning easier. Press upwards on bolt stop release (Fig. 2) and pull bolt from receiver. Scrub bore with cleaning solvent if necessary.

**ACTION CARE AND DISASSEMBLY** — Remove bolt and stock if necessary to clean action or replace parts. Unscrew, remove guard screws, and lift stock away from action and barrel. Clean bolt and action in solvent and wipe clean.

**Note:** Re-assemble trigger guard assembly (includes floor plate, guard, magazine follower and spring) to stock before placing stock over assembled magazine.

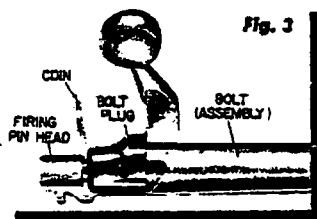


Fig. 3

**TO DISASSEMBLE BOLT PARTS** — Pull bolt from rifle. Pull firing pin head back until coin or similar piece can be inserted (Fig. 3). Hold bolt handle and turn bolt plug until entire firing pin assembly can be pulled from bolt assembly. Re-assemble in reverse order.

**TO ADJUST TRIGGER** — Remove trigger guard and stock. Cock bolt in receiver.

**IMPORTANT:** No adjustment or removal of the trigger engagement screw is recommended unless replacement is necessary.

The trigger engagement screw is set at the factory to engage the trigger and provide the correct amount of supporting trigger connector surface beneath the sear (Fig. 4).

**PULL OF TRIGGER:** Is adjusted to the desired weight by turning the trigger adjusting screw clockwise for a heavier weight adjustment and counter clockwise for a lighter weight adjustment.

**TRAVEL OF TRIGGER:** May be reduced by turning the trigger stop screw clockwise until the firing pin will not fall when the trigger is pulled. Then while keeping pressure on the trigger, back off the trigger stop screw, counter clockwise, until the firing pin falls. Continue back off about 1/16 turn. This method of adjusting will allow the least amount of trigger overtravel.

Your **REMINGTON MODEL 700 SNIPER** will remain clean longer if little or no oil is used on action parts. Lubricate cam surfaces on bolt to prevent wear. Wash action and bolt parts with a good grade of petroleum solvent, dry, and re-oil very lightly.

**HANDLING** — Wipe barrel, receiver, and all steel parts to prevent rusting. Invisible "prints" of moisture can cause rust unless removed.

**EXPOSURE** — After using in wet weather always wipe steel parts with oil to prevent rusting. Abrupt changes in temperature can cause condensation and wetness. Therefore, special care is needed to interior steel parts to prevent rust. When shooting in freezing weather, remove excess oil for best results. Use dry graphite if necessary to lubricate metal parts.

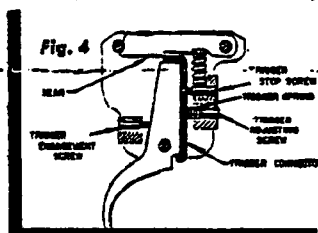


Fig. 4

REMINGTON ARMS COMPANY, INC. • Ilion, N. Y., U.S.A.

