

Remington

HIGH POWER RIFLE

BOLT ACTION REPEATER

FIXED BOX MAGAZINE

MODEL
700
SNIPER

INSTRUCTION FOLDER and PARTS LIST

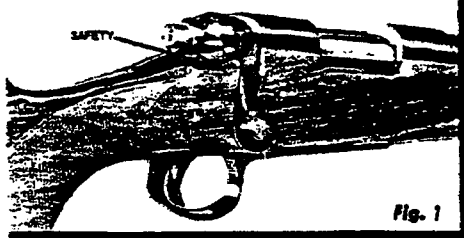


Fig. 1

magazine follower or directly into chamber. Close

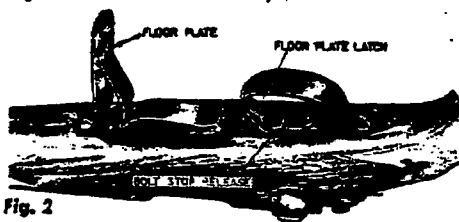


Fig. 2

telescope and receiver sights. The location and design of the rear sight holes are standard for target telescope mounts.

BARREL CARE — Use lightly oiled patch, cleaning from breech to muzzle. Remove bolt to make cleaning easier. Press upwards on bolt stop release (Fig. 2) and pull bolt from receiver. Scrub bore with cleaning solvent if necessary.

ACTION CARE AND DISASSEMBLY — Remove bolt and stock if necessary to clean action or replace parts. Unscrew, remove guard screws, and lift stock away from action and barrel. Clean bolt and action in solvent and wipe clean.

Note: Re-assemble trigger guard assembly (includes floor plate, guard, magazine follower and spring) to stock before placing stock over assembled magazine.

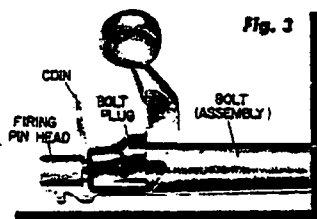


Fig. 3

TO DISASSEMBLE BOLT PARTS — Pull bolt from rifle. Pull firing pin head back until coin or similar piece can be inserted (Fig. 3). Hold bolt handle and turn bolt plug until entire firing pin assembly can be pulled from bolt assembly. Re-assemble in reverse order.

TO ADJUST TRIGGER — Remove trigger guard and stock. Cock bolt in receiver.

IMPORTANT: No adjustment or removal of the trigger engagement screw is recommended unless replacement is necessary.

The trigger engagement screw is set at the factory to engage the trigger and provide the correct amount of supporting trigger connector surface beneath the sear (Fig. 4).

PULL OF TRIGGER: Is adjusted to the desired weight by turning the trigger adjusting screw clockwise for a heavier weight adjustment and counter clockwise for a lighter weight adjustment.

TRAVEL OF TRIGGER: May be reduced by turning the trigger stop screw clockwise until the firing pin will not fall when the trigger is pulled. Then while keeping pressure on the trigger, back off the trigger stop screw, counter clockwise, until the firing pin falls. Continue back off about 1/16 turn. This method of adjusting will allow the least amount of trigger overtravel.

Your **REMINGTON MODEL 700 SNIPER** will remain clean longer if little or no oil is used on action parts. Lubricate cam surfaces on bolt to prevent wear. Wash action and bolt parts with a good grade of petroleum solvent, dry, and re-oil very lightly.

HANDLING — Wipe barrel, receiver, and all steel parts to prevent rusting. Invisible "prints" of moisture can cause rust unless removed.

EXPOSURE — After using in wet weather always wipe steel parts with oil to prevent rusting. Abrupt changes in temperature can cause condensation and wetness. Therefore, special care is needed to interior steel parts to prevent rust. When shooting in freezing weather, remove excess oil for best results. Use dry graphite if necessary to lubricate metal parts.

TO PUT BOLT IN RIFLE — Simply align bolt lugs to receiver properly, then push cocked bolt forward into rifle.

ON SAFE (Fig. 1) — Rotate side lever safety at right rear of receiver to rear stop position. Bolt handle will be locked down and trigger will not fire rifle.

FIRE — Rotate safety forward to front stop position. Trigger can be pulled to fire rifle or bolt handle raised to open action.

Caution: Before firing make sure barrel is clean, free of heavy oil, grease, or any obstruction.

TO SINGLE LOAD — Raise bolt handle to unlock bolt. Pull bolt handle back to open action. Load single cartridge upon bolt and lower bolt handle to lock action closed.

TO MAGAZINE LOAD — Open bolt and load cartridges directly into magazine.

TO UNLOAD — Pull bolt rearward carefully and take cartridge from rifle. Then push bolt forward until next cartridge is released from magazine. Continue until magazine is empty. Magazine may be unloaded from bottom with bolt closed and safety ON SAFE. Be certain also to empty chamber.

TELESCOPE OR RECEIVER SIGHTS — The all-purpose stock on the Remington 700 is adapted for use with telescope or metallic sights. The receiver is drilled and tapped also for

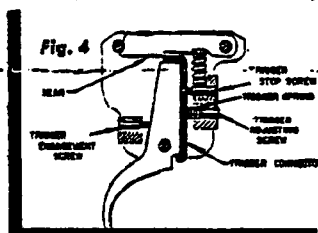


Fig. 4

REMINGTON ARMS COMPANY, INC. • Ilion, N. Y., U.S.A.