


- B. (CON'T)
 - 7. Put the safety switch to the "OFF" position. (If a double "T" or "B".
 - 8. Slide the red indicator to "0" pounds on the trigger pull
 - Place the hook of the scale onto the trigger. Let the trigger rest in the well of the hook. (Fig.#7) Hook the trigger so that the scale runs along side of the left pannel of the stock. (Fig.#8)



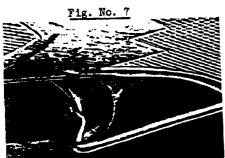

To. Position your index and middle finance on top of each other

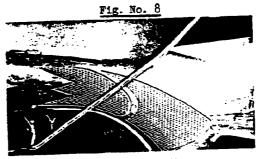

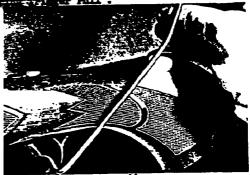

- II. Now grasp the handle of the pull scale and slowly pull it rearward. When you hear the hammer fall, "STOF" pulling on the scale. Unhook the scale from the trigger. Be careful not to pull on the scale when you remove it from the firearm, this may move the indicator and give you a false reading. Where the flat of the red indicator stops, is the measured trigger pull in pounds. The scale is graduated in .250 lbs.. In figure #IO, the trigger pull is "6.50 lbs". Record this on the Test Procedure Sheet, under Trigger Pull. This is the first of three pulls to be measured. (If a double barrel, you need to take three pulls and three indents per barrel.)
- * "T" or "B" denotes top or button berrel.